

BATTERY REPLACEMENT:

VEHICLE

1. Turn the LOCK counterclockwise with a tool like a coin or a flathead screwdriver.
2. Slide the power switch to the OFF position.
3. Slide the battery cover towards the rear of the vehicle and lift it up.
4. Remove old batteries and replace them with 4 new 1.5 V “AA” batteries.
5. Use a tool like a coin or a flathead screwdriver to fix the battery cover securely into place.

TRANSMITTER

1. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
2. Open the battery compartment door.
3. Remove old batteries and replace with 2 new 1.5 V “AA” batteries.
4. Close the battery compartment door and tighten the screw.

HOW TO OPERATE:

- Turn the vehicle switch “ON”.
- Push speed control stick forward (upwards) to drive forward.
- Push speed control stick backwards (downwards) to drive in reverse.
- Release speed control stick to neutral position to stop the vehicle.
- Steering to the left, right, or straight direction is controlled by the steering control stick.

WHEEL ALIGNMENT:

Adjust the lever under the chassis when the steering is not property aligned.



1.5V “AA” x 6


Alkaline batteries are recommended.
Batteries should be installed by adults only.

Don't Put In Trash. Recycle or Dispose
as Hazardous Waste.




Ford Motor Company Trademarks and Trade Dress used
under license to P&C International Development Limited.

VEHICLE

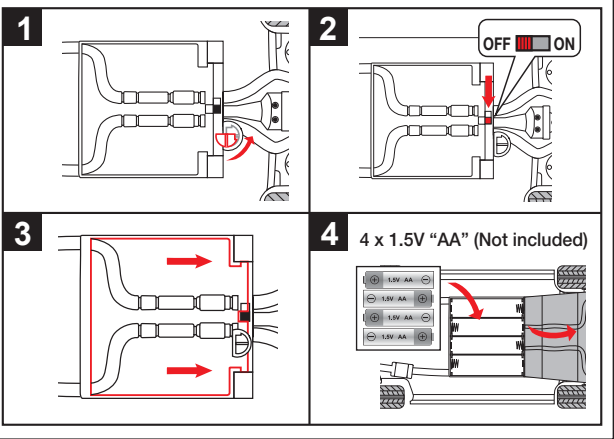

TRANSMITTER

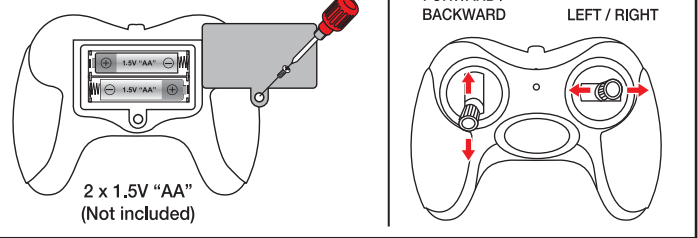

Please keep this packaging for future reference.
Colors, designs & contents may vary.

All rubber bands, plastic and wire ties, as well as tags, are not
part of this toy and should be discarded for your child's safety.
Remove wire ties before giving this toy to your child.

BATTERY CAUTION:

1. Rechargeable batteries are not recommended.
2. Alkaline batteries are recommended.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Do not mix old and new batteries.
8. Only batteries of the same or equivalent types as recommended are to be used.
9. Batteries are to be inserted with the correct polarity.
10. The supply terminals are not to be short-circuited.
11. If batteries are loose, bend out the contacts for a tight fit.
12. Exhausted batteries must be removed from the toy and be disposed of immediately.
Do not put the batteries in a fire.
13. If storing product for long periods of time, make sure to remove batteries.
14. Check the product periodically for signs of damage to electrical parts;
do not play with product until damage has been properly assessed.

If the unit malfunctions, please remove the batteries for one minute and reinstall again.

If the malfunctions persist, please replace with new batteries.

Don't forget to remove batteries from the vehicle and transmitter when you have finished operating your vehicle.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE
FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device,
pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against
harmful interference in a residential installation. This equipment generates, uses and can radiate radio
frequency energy and, if not installed and used in accordance with the instructions, may cause harmful
interference to radio communications. However, there is no guarantee that interference will not occur in a
particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined
by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more
of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference
received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.