

NOTE: MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE. THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

#### BATTERY REPLACEMENT:

##### VEHICLE

1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
3. Open the battery compartment door.
4. Remove old batteries and replace with 3 new 1.5 V "AA" batteries.
5. Close the battery compartment door and tighten the screw.

##### TRANSMITTER

 
1. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
2. Open the battery compartment door.
3. Remove old batteries and replace with 2 new 1.5 V "AA" batteries.
4. Close the battery compartment door and tighten the screw.

##### HOW TO OPERATE:


- Turn the vehicle switch "ON".
- Push speed control stick forward (upwards) to drive forward.
- Push speed control stick backwards (downwards) to drive in reverse.
- Release speed control stick to neutral position to stop the vehicle.
- Steering to the left, right, or straight direction is controlled by the steering control stick.

##### WHEEL ALIGNMENT:

Adjust the lever under the chassis when the steering is not properly aligned.

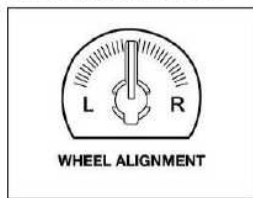


WHEEL ALIGNMENT

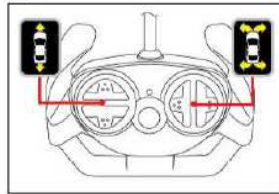 

Please keep this packaging for future reference. Colors, designs & contents may vary. All rubber bands, plastic and wire ties, as well as tags, are not part of this toy and should be discarded for your child's safety. Remove wire ties before giving this toy to your child.

 Mitsubishi, Lancer Evolution names, emblems and body designs are trademarks and/or intellectual property rights of Mitsubishi Motors Corporation and used under license to Grandex International Development Limited.

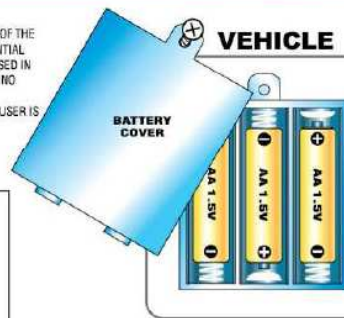


## VEHICLE

#### BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 3 "AA" (1.5V) BATTERIES (NOT INCLUDED). ALWAYS REPLACE ALL THREE BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. DISPOSE OF BATTERIES SAFELY. DO NOT DISPOSE OF THIS PRODUCT IN A FIRE. THE BATTERIES INSIDE MAY EXPLODE OR LEAK. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE. ADULT SUPERVISION IS RECOMMENDED. DO NOT MIX BATTERIES WITH DIFFERENT BRANDS. MIXED BATTERIES MAY ADVERSELY AFFECT PERFORMANCE, LEAK OR OVERHEAT.


 
## TRANSMITTER

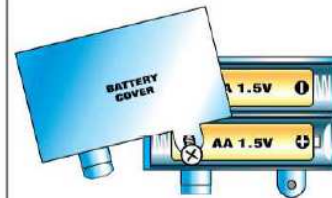

#### BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 2 "AA" (1.5V) BATTERIES (NOT INCLUDED). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. DISPOSE OF BATTERIES SAFELY. DO NOT DISPOSE OF THIS PRODUCT IN A FIRE. THE BATTERIES INSIDE MAY EXPLODE OR LEAK. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE. ADULT SUPERVISION IS RECOMMENDED. DO NOT MIX BATTERIES WITH DIFFERENT BRANDS. MIXED BATTERIES MAY ADVERSELY AFFECT PERFORMANCE, LEAK OR OVERHEAT.