

# Wireless 8" Digital Photo Frame



8 Inch  
4:3 High Resolution Screen

## FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution  
Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

## IMPORTANT NOTE:

### FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### RF Exposure Statement:

The equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

## Care of the PhotoFrame

- 1 Do not drop**  
Photo Frame is a complicated electronic device and cannot withstand shock from being dropped.
- 2 Do not expose to moisture**  
Photo Frame is neither moisture proof nor moisture resistant. Exposing it to moisture or liquid of any kind will very likely damage your Photo Frame.
- 3 Do not hit or scratch**  
The LCD panel of Photo Frame is made of glass and is therefore sensitive to abnormal force and sharp edges.
- 4 Screen cleaning**  
Use only a dry soft cloth to clean your screen.
- 5 Keep the stand clear from cables**  
Make sure the stand of your Photo Frame is clear from cables as cables could pull the stand out of Photo Frame to the floor.
- 6 Do not touch the power plug with wet hands, as this may cause electric shock.**
- 7 Do not connect more than one appliance to a single outlet, as an overheated outlet may cause fire.**
- 8 Do not use force to pull the power cord. Don't place anything heavy on the power cord, as this may cause electric shock or fire.**
- 9 Make sure to turn the power off and disconnect the power plug from the outlet before moving the product. Make sure to disconnect the connection cables from other devices as well. Moving the product without disconnecting the power cord may damage it while moving, and may cause electric shock or fire.**
- 10 Do not install the product near any heating appliance. There is a risk of fire.**

## Features

- **Music Player**  
MP3, WMA, OGG
- **Photo**  
JPEG, BMP, GIF, PNG
- **Internet Service**
  - Radio**
    - Instant music broadcasting
    - Browse channel by genre
    - Back-up mode if network disconnect (to internal memory)
  - Picasa (Google)** Picasa:
    - Slide show with effect
    - Public & Private albums.
  - Flickr (Yahoo) flickr**
    - Slide show with effect
    - Public & Private albums
  - RSS Feed**
    - Yahoo, BBC, CNN, MSN, Weather info. Supported.
- **Others DLNA(UPNP)**
  - Music, Photo Support
  - Clock, Alarm, Automatic Power On/Off

## What's in the box



Digital Photo Frame



Touch Pen



Remote Control



USB Cable to PC



Quick Start Guide

## Remote Control



KEY	FUNCTIONS		
	Slideshow Mode	MP3 Mode	Radio Mode
POWER		Toggle power on/off	
VOL+		Increase audio volume	
VOL-		Decrease audio volume	
MUTE		Toggle audio on/off	
	Pause/resume slideshow	Pause/resume audio	
■	Stop current activity and go to menu		
⏮	Jump to previous photo	Previous track	N/A
⏭	Jump to next photo	Next track	N/A
⏪	Slow down	Rewind 10 seconds	N/A
⏩	Speed up	Fast forward 10 seconds	N/A

## Specification

Classified	Descriptions	Remarks	
Processor & Memory	CPU :	ARM9 300MHz	
	System Memory :	DDR SDRAM 64MB	
	Internal Memory :	Flash 1GB	
Panel	Display :	8" TFT LCD	
		800 x 600	Touch screen
Interfaces	Network Interface :	802.11 b/g	Static / DHCP IP Setting
	Peripherals :	USB 2.0 (Host / Client) x 2	
	User Interface :	Touch screen	
	Audio Out :	2W x 2 Internal speaker	
Media File Play		Stereo Jack	
	Photo :	JPEG, BMP, GIF, PNG	
	Music :	MP3, WMA, OGG	
	Dimension :	250mm x 200mm x 35mm	
	Power :	DC 12V	
	OS :	Nucleus OS	
	Language :	Korean / English	

## How to Upgrade the Firmware

- 1** Download the Firmware.  
We have two files.  
**1) HDDFile.TCC"**  
**2) Player.rom**
- 2** Using USB Cable, connect the Photo Frame to the USB Port on your PC.
- 3** The Photo Frame will be automatically connected in seconds and you may see "POPUP Window". Also you check the "Connected Mode" of the Screen of the Photo Frame.



- 4** Now, Save the files as below,  
1) "HDDFile.TCC" – Save to "CONFIG" Folder of Photo Frame.  
2) "Player.rom" – Save to "Root Directory" of Photo Frame.



- 5** Power on/off and then the upgrading is automatically operated. It takes about 3~4minutes.



- 6** Check the Version in the Setup-General.



## Quick Starter Guide <Model No. DPF-801W>

**1** Assembly a "Stand" on the Photo Frame.

**2** Connect the Power Cable onto the Photo Frame. Booting will be automatically executed and "Main Menu" will be shown.



<Main Menu Screen>

**3** Access to the Internet through the "Network" Setting. It's for Internet Photo Album(Flickr, Picasa), Internet Radio (Shoutcast, Windows Media) & RSS FEED.

**\*Setting** : Setup-Network-Connect-DHCP or Static-Select & Connect- Return to "Main Menu".



<Setup Menu>




<Select DHCP or Static>

**4** Enjoy the "Main Menu"  
**1) Photos** : To enjoy the pictures and you can access to the "Yahoo Flickr & Google Picasa".

**\*Note** : you should join these Web Sights in advance. Because the access infos("ID & Password") are required for enjoying.



<Photo Menu>

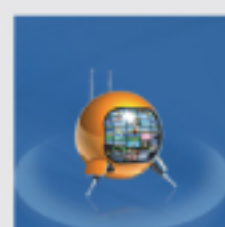

<Meebox>



<MeeChannel>



<flickr & picasa add>



**\*Check points for keyboard use.**  
 If you want to input any Capital letter or Special letters, like "@", "!", "%" please click "Caps" button on the Keyboard.

**2) Music** : To listen to the music.



<Music Menu>



<Music Playing>

**3) Weather** : To check the weather Information. It's real-time information from CNN Source.



<Weather>

**4) Internet Radio** : To enjoy the Internet Radio following Web Sight - www.Shoutcast.com, Windows Media. And you can add your own IP Address into "Favorites" Folder.



<Internet Radio>



**\*Check points for keyboard use.**  
 If you want to input any Capital letter or Special letters, like "@", "!", "%" please click "Caps" button on the Keyboard.

**5) News & Info** : To check the Headline News of Yahoo, BBC, CNN, MSN, Health, The Weather Channel, and New York Times.



<News & Info>

**6) Utilities** : To check the Memory & File Manager (file & folder checking and moving & deleting)



<Utilities>

**7) Set Alarm Clock** : In the Main Menu, select "Clock" - and then you may see three light icons at the bottom-Please select for Alarm Setting. To check the "Day", select and activate!



**8) Setup**

- **General** : Check the Firmware Version, Select Backlight degree & Languages.
- **Slideshow** : Slideshow time setting.
- **Network** : Searching Wireless Router for accessing to the Internet.
- **Weather** : Select "Country & City" and "Temperature scale".
- **Time** : Time & Date Setting.
- **Date, Time & Timer setting** : If you want to set the Date, Month and Year, firstly please activate the check box "Use manual time setting".



- **Touch** : Touch Sensitivity Setting.



<Setup Menu>

## Product View



FRONT

High Resolution Screen



BACK


Stand



SIDE

USB Host

SD Card Slot

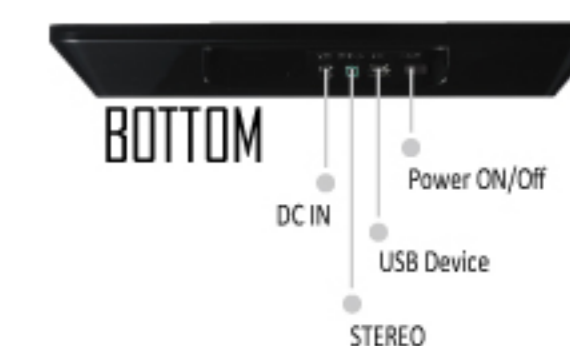

BOTTOM

DC IN

Power ON/Off

USB Device

STEREO