



Razor Slim Shooter COMM with Bluetooth® 4.0

Installing the Batteries


- The battery compartment is located under the casing of the outside of the right ear muff.
- Remove the batteries from compartment and replace with two new Size AAA Alkaline batteries. ****WARNING**** Do not mix new and old batteries.
- Note the direction of the positive (+) and negative (-)

Adjusting the Headband

- The Razor muffs come with independent headband and ear cup adjustments.
- Size the muffs to comfortably fit your head by sliding the ear cups in or out of the headband. The ear cups should fit comfortably, completely surrounding your ear to get a good acoustic seal.

ON/ OFF - Volume Adjustment

- The muffs are equipped with independent volume control for the external ambient microphones and the Bluetooth® signal.
- The larger volume knob functions as the power ON & controls the external volume. The inset taller knob controls the volume of the Bluetooth® signal.

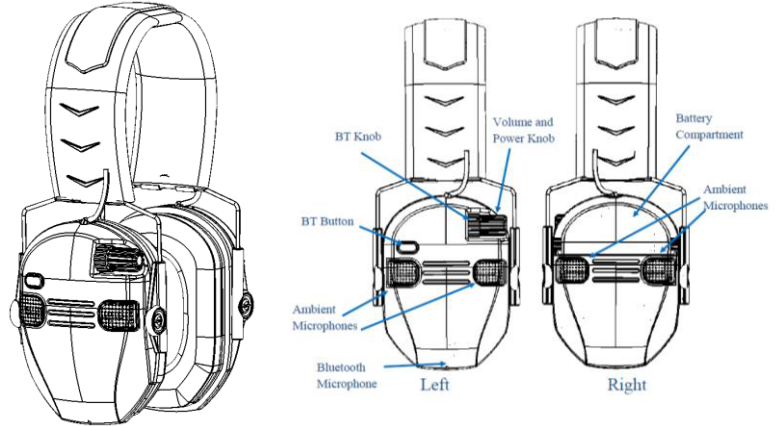

BLUETOOTH Operation

Bluetooth ON

Short press the BT button to turn ON the Bluetooth and enter pairing mode

Bluetooth OFF

Press and hold the BT button for 3 seconds to turn OFF the Bluetooth

Pairing

- Press and hold the BT button for 1 second to enter pairing mode.
- Blue LED will flash (1 second intervals) while in pairing mode.
- Search and select name: "Walker's BT" in your devices Bluetooth menu to connect
- After paired, blue LED will be flashing every 10 seconds
- Bluetooth device will be turned off after 60 seconds if the device does not pair successfully

Phone Call

- To answer a call, short press the BT button
- To reject a call, press and hold the BT button for 1sec
- To end a call, short press the BT button
- During a phone call, if another call is received, double press the BT button to switch from first call to the second call.
- To switch back to the first call, short press the BT button to end the second call and it will be switched back to the previous call.
- Double press the BT button to redial the last phone number

Trouble-Shooting Your Razor Muffs

If you experience problems, see possible cures below.

Does Not Power On	Batteries are dead	Replace batteries
Not Loud Enough	Batteries are dead	Replace batteries
Intermittent (goes on and off)	Batteries are defective	Replace batteries
Not Clear, Distorted	Low battery	Replace batteries
Motor-boating Sound	Low battery	Replace batteries

If Your Razor Muffs Whistle

Whistling (feedback) generally occurs if the volume level is set too high and if there is something such as a hand near or covering the external mics. Turn the volume level down or remove any thing in front of the mics until the whistling stops.

Caring For Your Razor Muffs

Remember that your Razor Muffs are a quality instrument and should be treated in the same careful manner as any other precision-engineered device.

1. Never allow any liquid to enter the muffs as this may damage the components within the device.
2. Do not store your muffs in any location which would expose it to excessive heat (for example, in direct sunlight, near car dashboards, heaters or radiators).
3. Be careful not to drop your muffs as this may damage its components.
4. Never insert any foreign objects into your muffs. This could result in serious damage to the instrument.
5. Never permit solvents to come into contact with your muffs this can damage the units.
6. Clean your muffs by wiping with a damp cloth moistened with a mild cleanser.

LIMITED WARRANTY

Walker's warrants this product to the original purchaser to be free from defects in materials and workmanship, under normal use and conditions for a period of One Year from the date of the original purchase. Under this warranty, this unit will be replaced or repaired at our option, without charge for parts or labor, excluding batteries, for this period

This warranty is void if any of the following occur:

1. The warranty card was not sent in at the time of purchase
2. The unit is not owned by the original purchaser at the time of the warranty claim
3. The unit has been tampered with, opened or punctured
4. The unit has been immersed in water or other liquids, allowed to be filled with dirt or dust, or otherwise physically abused

This shall be the exclusive written warranty of the original purchaser and neither this warranty or any other warranty, expressed or implied, shall extend beyond the 12-month period listed above. In no event shall Walker's be liable for consequential damages, consequential property damage, or consequential personal injury. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

TOLL-FREE CUSTOMER SUPPORT (877) 269-8490

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter