


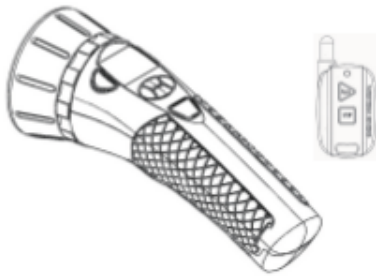


## Mantis 75 Manual

Remote for Mantis 75R Manual



### FUNCTIONS & FEATURES

This unit comes preloaded with 75 different animal sound files to play from, plus a remote control unit that allows for remote use up to 300' direct line of sight.

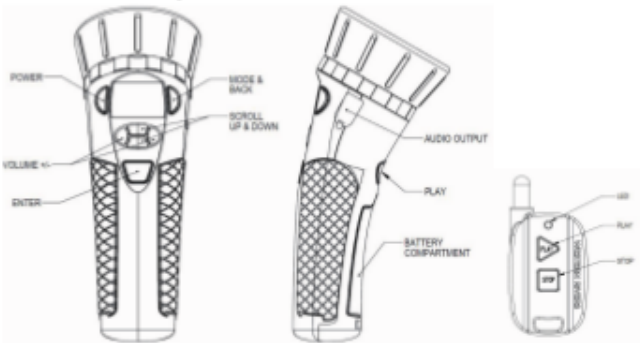

### OVERVIEW

#### BATTERIES

- **Game Caller - (4) AAA – not included**
  - Unscrew the battery compartment cover off.
  - Install/Remove batteries from compartment.
  - Place batteries in the proper order to avoid damaging the unit.
  - Screw the battery compartment cover on.
- **Remote Control – (1) CR2025 Lithium – not included**
  - Remove the four screws from the back of the remote.
  - Carefully removed cover.
  - Replace battery correctly "+" Up / "-" Down to avoid damaging the remote.
  - Carefully replace cover and replace the screws.

#### BUTTONS

- **Power button**
  - Hold for 1.5 seconds to turn caller ON.
  - Hold for 1.5 seconds to turn caller OFF.
- **Mode/Back button**
  - Press "Mode" to toggle to the Main Screen, Sound Selection and Settings.
- **Volume – Left & Right Arrows (Default – 50%)**
  - The volume buttons will allow the user to adjust the volume in playback/normal mode.
- **Scroll – Up & Down Arrows**
  - The scroll buttons will allow the user to scroll through items shown on the screen.

- **Enter Button**
  - The enter button is used to confirm a selection when scrolling through animal categories or sounds. It is also used to select or toggle ON/OFF the "Repeat", "Auto-Backlight", and "Remote" functions.
- **Play/Stop Button**
  - Located on the underside of the unit.
  - In "Play Back" mode, when pressed, the currently selected sound will be played one time.
  - If the "Repeat" setting is turned on, the caller will continuously playback the selected sound when the Play/Stop button has been pressed.
  - Press again to stop the play back.
- **Play Button (Remote)**
  - In "Play Back" mode, when pressed the currently selected sound will be played one time.
  - If the "Repeat" setting is turned on, the caller will continuously playback the selected sound when the Play button has been pressed.
- **Stop Button (Remote)**
  - To stop the playback.

### MAIN SCREEN

This is the main screen of the unit that the user will use most of the time. In this screen the user can:

- Play a sound file – Play Button
- Adjust the volume – Volume Buttons
- Select a sound to play – Scroll Buttons
- Change to a different screen – Mode Button

There will be four icons in the bottom of the screen. Those icons are used to display the state of the settings:

- Battery level
- Remote
- Repeat and repeat delay
- Sound level

### CATEGORY SCREEN

In this screen the user can select the category group of sound files that will be displayed & played in the main screen.

- When this screen is entered from the Main Screen, the heading "CATEGORY" will display on the screen followed by the categories of sound files.
- The Scroll buttons are used to scroll up and down between the different categories and sounds.
- Pressing the Enter button will take you into that category of sounds.
- Pressing the Mode/Back button will take the user to the Settings.

### SETTING SCREEN

- **Repeat (Default – OFF)**
  - When turned ON, it will repeat the call over and over again.
  - When the unit plays while the repeat is turned OFF, the game call will play 1 time only.
- **Repeat Delay (Default – NONE)**

This function sets the length of delay between the calls being repeated.

  - The options are:
    - None
    - 2 seconds
    - 5 seconds
    - Random

Note: (Random will be either 2 or 5 seconds picked randomly.)

- **Auto-Backlight (Default – ON)**
  - When turned ON, the backlight will activate when a button is pressed (except for the Play/Stop button and remote control).
  - When turned off, the backlight won't be active.
- **Remote (Default – ON)**  
This will toggle the remote function on and off.
  - Toggling off the remote function is meant to save battery life.
- **Handheld (Default – OFF)**  
This will toggle the handheld function on and off.
  - Toggling off the handheld function is meant to save battery life.

#### **ADDITIONAL FEATURES**

- **Start up**
  - The unit will remember the last settings used; and will start up with these settings.
  - Otherwise it will use the default settings.
- **LCD Backlight**
  - If auto-backlight is set to "On", the green LED backlight will turn on for 10 seconds any time a button is pressed (except the Play/Stop button).
  - If a button (except the Play/Stop button and remote button) is pressed while the green LED backlight is on, the 10 second clock will reset.
  - The backlight will turn off 10 seconds after the last button press.
  - The Play/Stop button will never activate the LCD backlight.
- **Auto Power Off**
  - If the remote function is set to ON, after 5 hours of no activity, the unit will automatically power OFF. The user must press the power button to play a sound.
  - If the remote function is set to OFF, after 30 minutes with no buttons being pressed, the unit will automatically power OFF. The user must press the power button to play a sound.
- **Audio Jack (For external speaker)**
  - The 3.5mm jack will auto detect if the jack is being used or not.
  - When the 3.5mm jack is being used, there is NO audio playing from the internal speaker.

#### **SPECIFICATIONS**

- **Game Caller**
  - **LCD screen:**
    - Monochromatic dot matrix LCD screen
    - Green LED backlight
  - **Speaker:**
    - 2" Mylar speaker
  - **Batteries:**
    - (4) AAA batteries (not included)
  - **External speaker jack:**
    - 3.5mm
- **Remote Control**
  - **Battery:**
    - CR2025 Lithium Battery

#### **CUSTOMER WARRANTY**

GSM OUTDOORS guarantees the satisfactory operation of our Mantis 75 for one year from the date of purchase. If one should ever fail to operate, we will repair or replace it at no cost.

Upon inspection of the caller, GSM OUTDOORS will either repair or replace any unit or part found to be defective. The decision to repair or replace material is solely at our discretion. If product is obsolete and beyond repair at the time of return, we will replace it with the closest similar product available.

GSM OUTDOORS is not responsible for incoming freight charges. Components damaged by any use of the product other than for its intended function, or by the owner's failure to maintain the unit in the manner and frequency prescribed by the instructions supplied at the time of purchase are not covered. Repair or replacement costs associated with such issues of the product will be based on GSM OUTDOORS net prices at the time of the work performed.

GSM OUTDOORS will not be held responsible, or assume any liability, for product damaged in transit, caused by acts of God; rework or repairs performed on product without our prior, written consent; damage to associated equipment; loss of profit; or any other damages and claims.

#### **EXCEPTIONS**

##### **Battery Holder (1 Year)**

Unit is not warranted for defects or damages incurred from the leakage of batteries. If the cause of damage or if a defect is determined to have been caused by a battery leakage, the one year warranty is voided. If unit is submerged underwater warranty will be voided. All repairs will be billed at GSM OUTDOORS net prices for labor and repair items. Batteries must be removed when unit is stored and not in use.

#### **CUSTOMER SERVICE**

Should a malfunction occur, first check to see that some simple, obvious, or routine step in the normal operating procedure has not been overlooked – remote battery, main unit battery, sounds loaded properly, etc.

If problems continue, please feel free to contact our Customer Service dept. at (877-269-8490).

#### **FCC COMPLIANCE**

#### **GSM WR-GC75**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.