INSTRUCTION MANUAL

MICROWAVE OVEN

EC0P042SV-S

Please review this instruction manual before operating.



CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy EN	I-01
SpecificationsEN	I-02
Important safety instructions EN	1-03
Grounding instructions EN	I-07
Radio interferenceEN	1-09
Utensils EN	I-10
Materials you can use in microwave ovenEN	J-11
Materials can not be used in microwave ovenEN	I-13

PRODUCT SETTING

Setting up your oven EN-14

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19
Control panel and features	EN-19
1. Setting the clock	EN-20
2. Setting the kitchen timer	EN-20
3. Mute mode	EN-21
4. Lock function for children	EN-21
5. Eco function	EN-22
6. Grill cooking	EN-22
7. Microwave cooking	EN-23
8. Combination cooking	EN-24
9. Speedy cooking	
10. Convection cooking without preheat function	EN-25

11.	Convection cooking with preheat function	EN-26
12.	Defrost by weight	EN-27
13.	Defrost by time	EN-28
14.	Auto menu	EN-29
15.	Home fry menu	EN-32

CLEANING AND MAINTENANCE

Cleaning EN-	-33
Trouble shooting EN-	-35



BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

 (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

(b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.



- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	EC0P042SV-S
RATED VOLTAGE	120VAC 60Hz
RATED INPUT POWER (MICROWAVE)	1600 W
RATED OUTPUT POWER (MICROWAVE)	1000 W
GRILL	1000 W
CONVECTION	1800 W



All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.



When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

Read all instructions before using the appliance.

Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.

This appliance must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 7.

Install or locate this appliance only in accordance with the provided installation instructions.

HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.

When cleaning surfaces /!\ of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.




Keep cord away from heated surface.


- Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:
 - 1. Do not overheat the liquid.
 - 2. Stir the liquid both before and halfway through heating it.
 - 3. Do not use straightsided containers with narrow necks.
 - 4. After heating, allow

the container to stand in the microwave oven for a short time before removing the container.

5. Use extreme care when inserting a spoon or other utensil into the container.

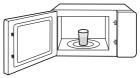

Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.

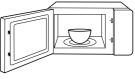


This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

To reduce the risk of fire in the oven cavity:

- Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- 2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
- 3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

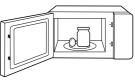

Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.



Do not immerse cord or plug in water or any other liquid.



Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock. Do not cover or block any openings on the appliance.

Sedge of table or counter.

Do not use paper products when appliance is operated in the toaster mode.



Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

Do not cover racks or any other part of the oven with metal foil. This will cause over-heating of the oven.



SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY(NOT FOR COMMERCIAL USE)

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.


GROUNDING INSTRUCTIONS

WARNING	 Electric Shock Hazard: Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded. 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. 2. Longer cord sets or extension cords are available and may be used if care is exercised in their use. 3. If a long cord or extension cord is used: (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. (2). The extension cord must be a grounding-type 3-wire cord. (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.
---------	--


RADIO INTERFERENCE

- 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
- 2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1). Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4). Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
- 3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - (1) Reorient or relocate the receiving antenna.
 - (2) Increase the separation between the equipment and receiver.
 - (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - (4) Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 18 of the FCC Rules.

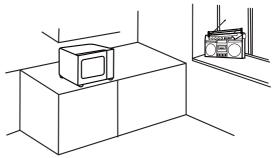

UTENSILS

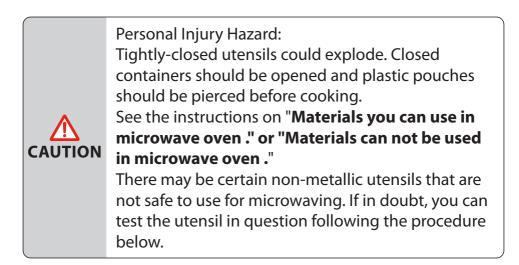


Utensil Test:

- 1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- 2. Cook on maximum power for 1 min.
- 3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- 4. Do not exceed 1 min cooking time.



KEEP THE CAVITY AND WAVEGUIDE AREA CLEAN

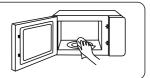

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	\bigotimes
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	\bigotimes
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	\bigotimes
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	\bigotimes
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	\bigotimes
Paper plates and cups	Use for short–term cooking/warming only. Do not leave oven unattended while cooking.	\bigotimes
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	\bigotimes
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	\bigotimes

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS

REMARKS



Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.



Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.



Microwave-safe only (meat and candy thermometers).





Use as a cover to prevent splattering and retain moisture.

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS REMARKS May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing. Metal or metal trimmed utensils May cause arcing and could cause a fire in the oven. Metal twist ties May cause a fire in the oven. Paper bags Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. Plastic foam



Wood will dry out when used in the microwave oven and may split or crack.



PRODUCT SETTING

SETTING UP YOUR OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity.



Glass Tray



Turntable Ring Assembly




Instruction Manual



Lower Wire Rack (For the microwave and for baking and roasting in the oven.)



Higher Wire Rack(For grilling, e.g. steaks, sausages and for toasting bread. As a support for shallow dishes.)

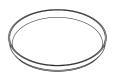


Bake Tray (Cannot be used in conjunction with microwave function and can be placed on the wire rack.)



In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

SETTING UP YOUR OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

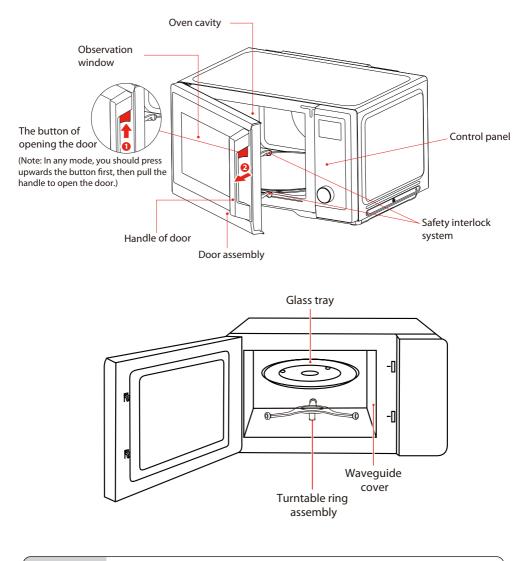



In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION


Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.


How to put the turntable in place:

- 1. Place the turntable ring assembly (2) into the recess in the cooking compartment.
- 2. Place the glass tray (1) on the turntable ring assemblies (2) .

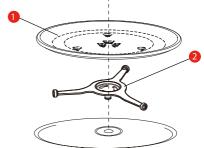

Glass Tray
 Turntable Ring Assembly

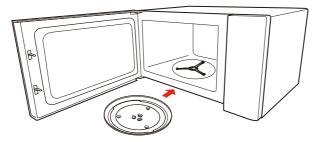

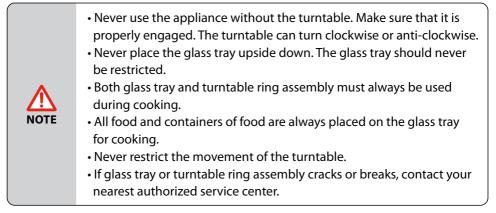

COUNTERTOP INSTALLATION


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

- 1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 36 inches.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
- c. Do not remove the legs from the bottom of the oven.
- d. Blocking the intake and/or outlet openings can damage the oven.
- e. Operation of microwave oven may cause interference to your radio or TV reception.

Please place the oven as far away from radios and TV as possible.

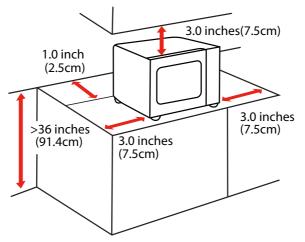

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



• Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the

If installed near or over a heat source, the oven could be damaged and the warranty would be avoid.





The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled **"PRODUCT SAFETY"** beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




• Never use the appliance without the turntable.

 Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES -

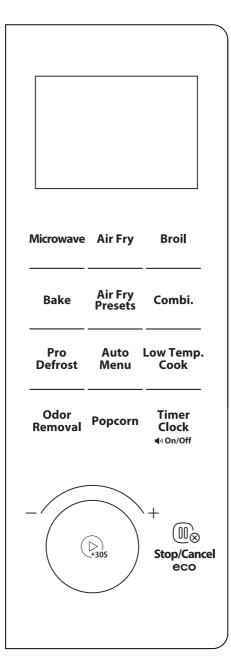

1. SETTING THE CLOCK

 In standby mode, press " Kit. Timer Clock "twice "00:00" will display. 	ce, 🔶	Kit. Timer Clock			
2 Turn the parameter knob to set the hour figures.	→	((P)) +			
Bress " Kit. Timer " to confirm.	→	Kit. Timer Clock			
4 Turn the parameter knob to set the minute figures.	→	(- (P ₃₀₅)+			
5 Press " Kit. Timer _{" to} confirm. Clock	→	Kit. Timer Clock			
 • The clock is a 12-hour display. If the clock is not set, it will not work when powered. • To reset the clock, please repeat step 1 to step 5. 					

2. SETTING THE KITCHEN TIMER

	andby mode, press " Kit. Timer _" once, Clock — 00" displays.	Kit. Timer Clock			
2	n the parameter knob to set the desired time. 🔶 maximum time value is "95:00".	(- () () () () () () () () () ()			
 3 Press " (₽,305) " to confirm. The timer starts → counting down. 					
NOTE	NOTE • The kitchen timer is a timer.				

3. MUTE MODE

 To activate the mute mode: In standby mode, press " Sound On/Off " once. – A beep will sound and "oFF" will display.
 When you press the key, it does not make a sound.

Sound On/Off Lock 3s


Sound On/Off

Lock 3s

2 To deactivate the mute mode: In mute mode, press " Sound On/Off " once. A beep sounds and "on" will display.

4. LOCK FUNCTION FOR CHILDREN

You can use this function to prevent children from accidentally turning the oven on.

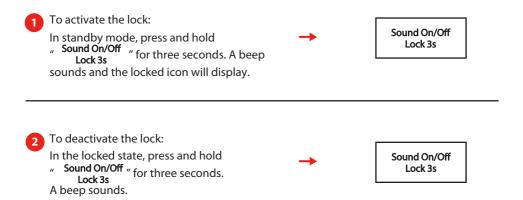

5. ECO FUNCTION

To enter ECO mode: In standby mode, press " " once. The screen will turn off.







2 To cancel ECO mode: In ECO mode, pressing any key, or opening and closing the door will cancel it.

6. GRILL COOKING


 In standby mode, press " Broil " once, "G-1" will display. 	→	Broil
2 Press " (b_{1305}) " to confirm.	→	
3 Turn the parameter knob to set the cooking time. The maximum time value is "95:00".	→	(- ()) ())
4 Press " $(b)_{+305}$ " to start cooking.	→	(P385)

NOTE
The buzzer will sound to remind you to turn over the food during grilling. If there is no operation, it will keep on working.
In the grilling state, each more press on " (D₃₀₅" can increase the cooking time by 30 seconds.


7. MICROWAVE COOKING

Microwave Power Chart

Level	10	9	8	7	6	5	4	3	2	1
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	P100	P90	P80	P70	P60	P50	P40	P30	P20	P10

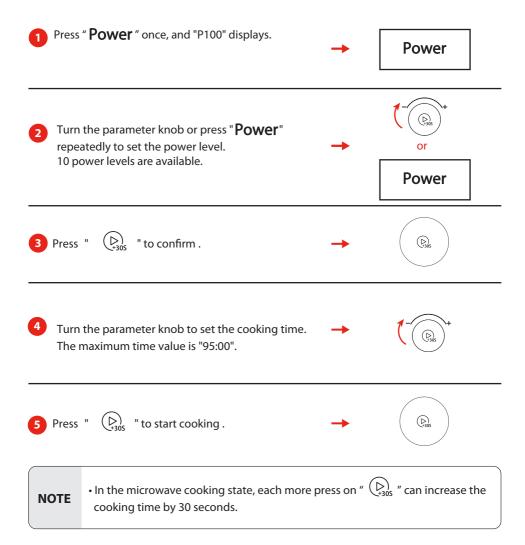

8. COMBINATION COOKING

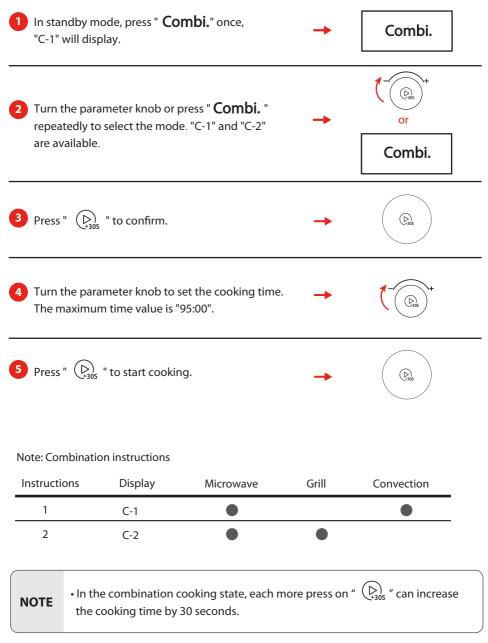

9. SPEEDY COOKING

NOTE

- In standby mode, turn the knob left to set a cooking time with 100% power. And then continue to turn the knob to adjust the cooking time. Then press " () 10 start cooking.
- In standby mode, press " () standby mode, press " () standby mode, press " () standby mode, press " to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "95:00".

10. CONVECTION COOKING WITHOUT PREHEAT FUNCTION

1 In standby mode, press " Bake " once, and "350F" will display.	→	Bake
2 Turn the parameter knob to set the temperature, "100F, 150F, 250F, 275F, 300F, 325F, 350F, 375F, 400F, 425F" will display in turn.	+	(- () () () () () () () () () () () () ()
3 Press " $(rac{1}{2})_{305}$ " to confirm.	→	() Bass
4 Turn the parameter knob to set the cooking time. The maximum time value is "95:00".	→	1 − (P ₃₆₅) +
5 Press " $\left(\bigcup_{305} \right)$ " to start cooking.	→	(E) Bass
• In the convection cooking state, each more	press on "(\sum_{305} " can increase the

cooking time by 30 seconds.

11. CONVECTION COOKING WITH PREHEAT FUNCTION

<u> </u>	standby mode, press " Bake " once, nd "350F" will display.	→	Bake
"1	urn the parameter knob to set the temperature, 00F, 150F, 250F, 275F, 300F, 325F, 350F, 375F, 00F, 425F" will display in turn.	→	
W b	ress " $\left(\bigcup_{305} \right)$ " twice to start preheating. /hen preheating is completed, the oven will eep. Open the door and place food in the oven. nd then close the door.	→	(E)Jes
	urn the parameter knob to set the cooking time. he maximum time value is "95:00".	→	
5 P	ress " $\left(\begin{array}{c} \searrow\\ \neg_{305} \end{array} \right)$ " to start cooking.	→	(E)
NOT	• In the convection cooking state, each more cooking time by 30 seconds (except for prel	-	$(rac{l}{k})_{4305}$ " can increase the

12. DEFROST BY WEIGHT

1 In standby mode, press " Pro Defrost " once, and "dEF1" will display.	→	Pro Defrost
2 Turn the parameter knob to set the menu, "dEF1-dEF6" are available.	→	(
3 Press " (♀) " to confirm.	→	
4 Turn the parameter knob to set the weight of the food. The range of weight is 4 to 100 Oz.	→	(
5 Press " $(rac{rac}{rac{rac}{rac{rac}{rac}}}$ " to start defrosting.	→	(Rass
Defrosting menu:		

Defrosting	menu:
------------	-------

Display	dEF1	dEF2	dEF3	dEF4	dEF5	dEF6
Menu	Vegetables	Fruit	Chicken	Fish	Meat	Broth

NOTE • The buzzer will sound to remind of turning over the food during de If there is no operation, it will keep on working.

13. DEFROST BY TIME



14. AUTO MENU

For A01-A07 and A10-A11:				
In standby mode, turn the parameter knob right, "A01" will display. And then turn the parameter knob repeatedly to select the menu.	→	(- ()))))))))))))))))))))))))))))))))))		
2 Press " $\left(\bigoplus_{\pm 305} \right)$ " to confirm the menu.	→			
3 Turn the parameter knob to set the weight of the food.	→	(- (P)) +		
Press " $\bigoplus_{\pm 305}$ " to start cooking.	→	(R) 395		

	For menus "A06" and "A10", the buzzer will sound to remind of turning over	Ĺ
NOTE	the food during cooking. If there is no operation, it will keep on working.	
	For menu "A06", please skip the step 3.	

For A08-A09:

In standby mode, turn the parameter knob right, "A01" will display. And then turn the parameter knob repeatedly to select the menu "A08" or "A09".

2 Press " () to confirm the menu.

Press " (P₃₀₅ " again to start preheating.
 When preheating is completed, the oven will beep. Open the door and place food in the oven. And then close the door.


4 Press " $(rac{P}{+}_{30S})$ " to start cooking.

(P305

Auto menu chart

DISPLAY	MENU	WEIGHT	POWER
A01	Beverage	40z 80z 120z	P100
A02	Dinner Plate	5 Oz 8 Oz 12 Oz 15 Oz 21 Oz	P100
A03	Soup	8 Oz 16 Oz 24 Oz	P100
A04	Potato	80z 160z 240z	P100
A05	Vegetables	4 Oz 8 Oz 16 Oz	P100
A06	Oatmeal	28 Oz	P100+P30
A07	Pizza	10 Oz 14 Oz	Conv.400F
A08	Cake	16 Oz	Conv.325F
A09	Cookie	7.5Oz	Conv.375F
A10	Chicken	16 Oz 24 Oz 32 Oz 40 Oz 48 Oz	P100/Conv.400F
A11	Popcorn	2.75 Oz 3.20z 3.50z	P100

15. HOME FRY MENU

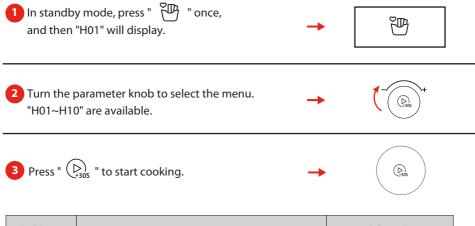


DISPLAY	MENU	POWER
H01	Frozen French Fries	Conv.425F
H02	Frozen Onion Rings	Conv.425F
H03	Frozen Chicken Nuggets	Conv.425F
H04	Fresh Chicken Wings	Conv.425F
H05	Frozen Chicken Legs	Conv.425F
H06	Escalope	Conv.425F
H07	Frozen Shrimps	Conv.425F
H08	Fish Sticks	Conv.425F
H09	Spring Rolls	Conv.425F
H10	Mozzarella Sticks	Conv.425F

NOTE	• For menus "H02" to "H10", the buzzer will sound to remind of turning over the food during cooking. If there is no operation, it will keep on working.	

CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.

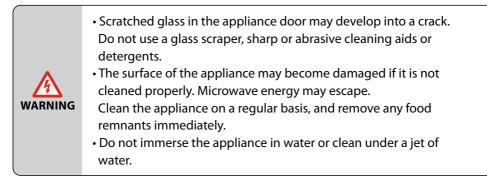

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Hard scouring pads or sponges

APPLIANCE FRONT



Metal or glass scrapers to clean the door panels




Cleaning agents with a high alcohol content



Metal or glass scrapers to clean the door seal



Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

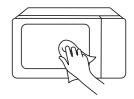

Glass cleaner: Clean with a dish cloth. Do not use glass scrapers.

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:

Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

RECESS IN THE COOKING COMPARTMENT

Damp cloth:


DOOR PANELS

Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

TURNTABLE AND ROLLER RING

Hot soapy water: When placing the turntable back into its recess, it must engage properly.

M

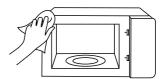





TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used.b. The oven is operated when empty.c. Spilled food remains in the cavity.	 a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with soft damp cloth.
Unevenly cooked foods	 a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred. 	 a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	 a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable. 	 a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven venti- lation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	 a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred. 	 a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

#DetailsMatter