

## Operational Description of the equipment

### ● Getting Started

#### 1. Battery Installation

Step 1: Remove the battery compartment cover from the back of the Bluetooth Remote Control.

Step 2: Insert 2 AAA batteries, matching the polarity symbols ( and ) marked inside.

Step 3: Push the cover back till you hear a click.

#### Battery Notes:

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type (AAA, Alkaline 1.5V).
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Batteries can leak chemicals that may destroy electronic parts. If you do not plan to use the Bluetooth Remote Control for more than two weeks, remove the batteries.

#### 2. Pairing The Device to Your PC or Notebook

Step 1: Turn on the Bluetooth function of PC or notebook. If the PC or notebook does not support Bluetooth, you need a Bluetooth USB adapter. Please follow the on-screen instruction for software installation before plug in the Bluetooth USB adapter.

Step 2: Open the Bluetooth program from the control panel.

<b>PRODUCT</b>	Bluetooth Vista Remote Control
<b>MODEL NO.</b>	VR-1000
<b>POWER SUPPLY</b>	DC 3.0 V, 0.18A
<b>FREQUENCY BAND</b>	2400MHz ~2483MHz
<b>CARRIER FREQUENCY</b>	2402MHz ~2480MHz
<b>NUMBER OF CHANNEL</b>	79
<b>CHANNEL SPACING</b>	1 MHz
<b>RATED RF OUTPUT POWER</b>	0dBm
<b>MODULATION TYPE</b>	GFSK, II/4DQPSK, 8DPSK
<b>DUTY CYCLE</b>	50%
<b>MODE OF OPERATION</b>	duplex
<b>BIT RATE OF TRANSMISSION</b>	2.1 Mbps
<b>ANTENNA TYPE</b>	PCB ANT
<b>ANTENNA GAIN</b>	-2 dBi
<b>OPERATING TEMPERATURE</b>	-10~55℃
<b>CHANNEL BANDWIDTH</b>	1MHz