

JUICE RELAY BLUETOOTH ADAPTER

Owner's Manual



RELAY by Alexa

Seemlessly passing the sound around

Elexa Consumer Products, Inc.
2275 Half Day Rd, Suite 333
Bannockburn, IL 60015

Revision: B

NEED HELP?

CONTACTING JUICE CUSTOMER SERVICE

 
If you have questions, our trained Customer Service Department is happy to assist you 24 hours a day, 7 days a week, every day of the year. Contact Juice Customer Service as follows:

- In North America dial: 1-888-229-1459
- Email Juice at www.customer.support@elexausa.com


DO NOT RETURN THIS PRODUCT TO THE STORE OR WEBSITE FROM WHICH IT WAS PURCHASED

If you believe the product is defective, has a missing or broken part or are having difficulty with it, please contact Juice directly, 24 hours a day, 7 days a week, 365 days a year as listed above, for a quick and efficient solution to the problem.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the RELAY; the RELAY has been submerged in liquids, does not operate normally, or has been dropped. Do not attempt to service the RELAY yourself. Opening or removing covers may expose you to dangerous voltages or other hazards and will void the manufacturer's warranty.

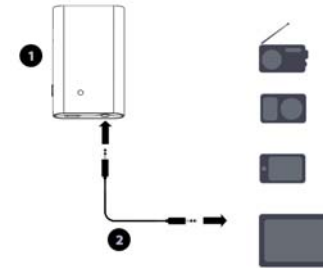

Option 2 - Attach audio using aux cable and RCA adapter to TV's or other audio devices with RCA outputs on them.

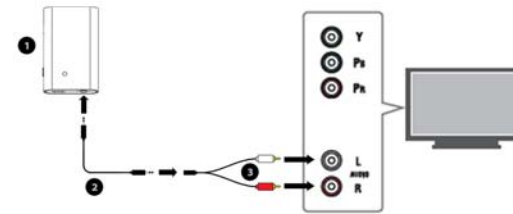 

Volume levels are controlled from the device (Phone, TV, iPod, Etc.)

PAIR THE UNIT WITH BLUETOOTH PLAYBACK DEVICE

- 1 - Press and hold the power button until the LED flashes blue and red.
- 2 - Place the speaker or headphone you want to pair with in pairing mode
- 3 - The adapter and speaker/headphone should automatically pair and the Status LED on the adapter should turn blue. If it does not turn blue, please try the pairing procedure again.

CHARGE THE ADAPTER

 
Plug the adapter (1) into the power adapter (3) using the USB cable (2) supplied. Plug Power Adapter (3) into the wall. You can keep the adapter plugged into the wall or full charge it and use the battery.

With the power off

- Status LED should flash red while charging
- Status LED will be solid red when fully charged

With the power on

- LED status will only flash red when battery is less than 10% of full charge

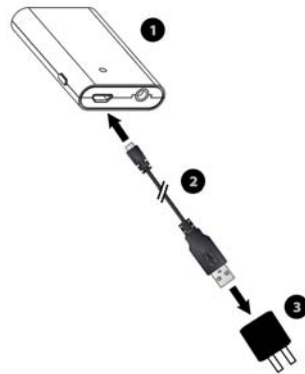

ATTACH UNIT TO AUDIO

Option 1 - Attach audio using aux cable to any 3.5mm stereo source as shown below:

WARNINGS & CAUTIONS

To reduce the risk of fire or electric shock due to accidental submersion, do not use the Relay Adapter near bathtubs, washbowls, kitchen sinks, laundry tubs, in a wet basement, near a swimming pool, or anywhere else that water is present that can cover the unit. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.

The wall power supply must be used indoors only. It is neither designed nor tested for charging outdoors, in recreation vehicles, or on boats. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and will void the warranty.

Do not place any flame sources, such as lighted candles, on or near the Relay Adapter. The Relay adapter contains small parts that may be a choking hazard and is not suitable for children under age 3.

Before use, fully charge the battery using the supplied power adapter. Do not continue charging the battery if it does not reach full charge within the specified charging time. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery. Do not attempt to charge the battery in temperatures outside the range of 32°-104°F (0°-40°C). If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical attention immediately.

Do not expose the product or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 115°F (60°C). Doing so may cause the battery and power supply to generate heat, rupture, or ignite. Using the product in this manner also may result in a loss of performance and a shortened product life expectancy.

Extended exposure to direct sunlight may damage the external appearance and material qualities.

Legal Notices

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CONGRATULATIONS


Congratulations on purchasing the Relay Bluetooth Adapter for your home, office or portable use. You can now connect any audio device, without integrated bluetooth capability to your Relay Speakers (sold separately). When you travel you can take it with you and use it at the beach, when you camp or in your living room. The adapter easily connects to any audio device and works with any bluetooth speaker or headphone.

This document will familiarize you with the product, how to set up and connect it to your bluetooth speaker or headphone.

Here is what is included in the system:

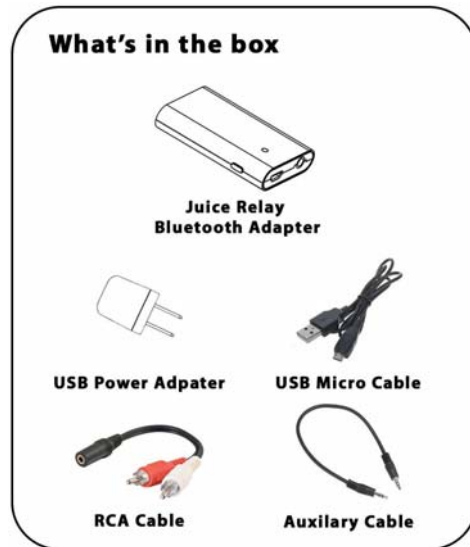

GET TO KNOW THE ADAPTER

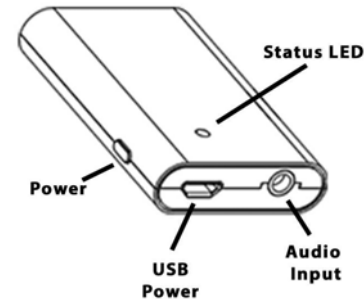 

POWER BUTTON - Press and hold power button for 3 seconds to turn unit on
- Press and hold power button for 5 seconds to place unit in pairing mode
- When unit is on, press power button once to turn off adapter

STATUS LED -
With Power ON (USB charging or no USB charging)
Flashing Blue indicates Power is on but unit is not paired
Solid Blue indicates Power is on and unit is paired
Flashing Red indicates battery has only 10% or less charge, please recharge the unit.
With Power OFF and USB plugged into wall
Flashing Red - indicates unit is charging
Solid Red - indicates unit is fully charged

USB POWER - Plug in USB Mini Jack to charge the device

AUDIO INPUT - Stereo 3.5 mm female plug for inputting audio