

What's in the box?

- (1) Dreamweaver Sound Soother Speaker
- (1) Charging Cable

 
Getting started

1. CHARGE THE DREAMWEAVER


Before you start using the Dreamweaver for the first time, it's a good idea to charge it completely.

To charge the Dreamweaver:


Open the DC IN flap on the back of the Dreamweaver. Plug the included charging cable into the jack behind this flap. Plug the other end into a power source, like a computer or a USB charging adapter. The indicator above this jack turns red to show the Dreamweaver is charging.

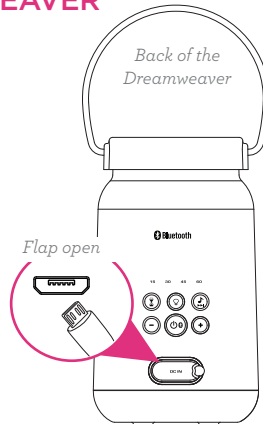

2. TURN ON THE DREAMWEAVER

Press and hold the  button on the back of the Dreamweaver.

 Back of the Dreamweaver

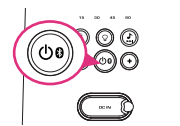



Everyday use


PLAYING SOUNDS

The Project Nursery Dreamweaver offers a variety of soothing lullabies and nature sounds, as well as white noise, to calm baby.

 
To cycle through these sounds:

Press the  button on the back of the Dreamweaver. Each press goes to a different selection.

To adjust the volume: Press the  or  button.


To turn sounds off: Press and hold the  button on the back of the Dreamweaver. (If lights are on, they remain on.)

Back of the Dreamweaver

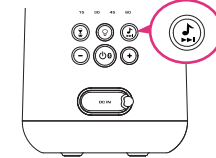


PAIRING WITH YOUR PHONE (BLUETOOTH)

The Project Nursery Dreamweaver can also play music from your smartphone or other Bluetooth device. Here's how to set it up.

With the Dreamweaver on, give a short press to the  button on the back of the Dreamweaver. The blue indicator light on the back of the Dreamweaver starts blinking.

 Back of the Dreamweaver

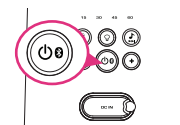

Enable Bluetooth on your smartphone or other device (if it isn't already enabled).

Choose "**PN Dreamweaver**" from the list of pairing options on your smartphone. (If it's not in the list, choose "**Scan**" from your phone's Bluetooth menu.)

The Dreamweaver gives an audio signal when it's finished pairing and connecting to your smartphone. The indicator turns solid blue.

Note: The process of enabling Bluetooth and connecting varies from device to device. See your device's owners manual for more information and specific instructions.

Bluetooth Wireless Connection Tips

- Make sure the Bluetooth capability of your device is turned on.
- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to this speaker, move closer to it.
- If your device asks you for a password to connect, use "0000".

USING THE TIMER

 
The timer shuts the lights and sound off automatically after a set amount of time.

To set the timer: Press the ⌚ button on the back of the Dreamweaver.

The minutes indicator on the back of the Dreamweaver shows the amount of time on the timer: **15, 30, 45, or 60** minutes.

Press ⌚ to cycle through these options or turn the timer off.

Back of the Dreamweaver

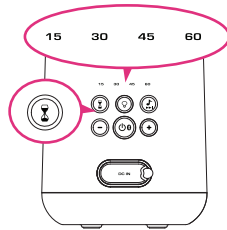


USING THE NIGHTLIGHT

The Dreamweaver offers four kinds of fun, firefly light modes.

To turn the light on: Press the 💡 button on the back of the projector.

To change light modes or turn off the light: Press the 💡 button repeatedly to cycle through the modes (fade, sparkle, dance, and rhythm) and to turn the light off.

 Back of the Dreamweaver

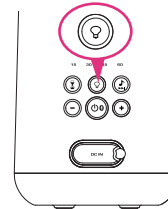

Questions?

Just call 1-844-393-7338 or visit ProjectNursery.com

©2017 Voxx Accessories Corp.
3502 Woodview Trace, Suite 220
Indianapolis, IN 46268

PNJ50 QSG 01

project nursery® 

DREAMWEAVER
SMART LIGHT & SOUND SOOTHER

Quick Start Guide