

project nursery®

# VIDEO BABY MONITOR

*with digital zoom camera*

## User Guide

### What's inside

 
Welcome! .....	2
Getting started.....	3
Tour of the system .....	7
Everyday use.....	13
<i>Cameras</i> .....	14
<i>Motion/Alerts</i> .....	18
<i>Recording</i> .....	21
<i>Playing Back Pictures and Videos</i> .....	22
<i>Sleep Mode</i> .....	23
<i>Lullabies</i> .....	24
<i>Contrast</i> .....	25
<i>Settings</i> .....	26
Troubleshooting / FAQs .....	28

# WELCOME!


---

This baby monitoring system makes it simple to keep your eyes and ears on your little one! This guide takes you through the steps to get started!

## Step 1: Unpack

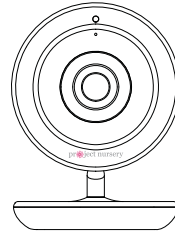

Wireless camera

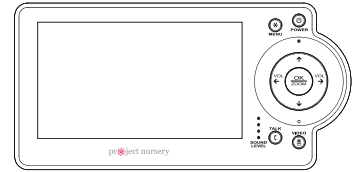 

Parent monitor

### See our setup videos

Go to [ProjectNursery.com/Electronics](https://ProjectNursery.com/Electronics) or scan the QR code here.



### Before you start...

 
Make sure you read the Important Information sheet included in this package.

### The accessories:

- (2) 10-foot charging cables
- (2) power adapters


# GETTING STARTED

## Step 2: Charge the monitor

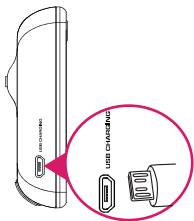

Find one of the charging cables included in this package.

 
Plug one end of this cable into the **USB CHARGING** jack on the side of the parent monitor.

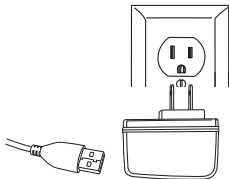

Plug the other end of the charging cable into one of the included charging adapters. Then plug the adapter into an outlet or surge protector.

## Step 3: Position the camera(s)

 Find a location for the camera that gives you the best view of your baby in his or her crib.

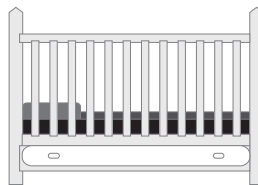

Place the camera on a flat surface, like a dresser or shelf, or mount the camera to a wall using the keyhole slots on its bottom.

**IMPORTANT:** NEVER place the camera or cords of any kind inside the crib. NEVER place the camera or cords within reach of the baby.


## **⚠** WARNING

 **Strangulation Hazard:** Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (0.9m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.




## Step 4: Plug in the camera(s)

Find the other charging cable(s) included in this package.

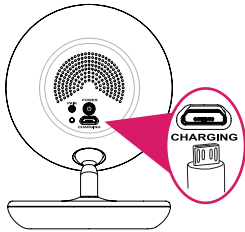

 Plug one end into the **CHARGING** jack on the back of the camera(s).

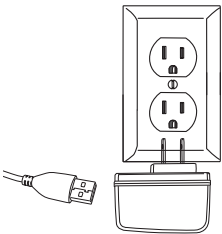

Plug the other end into a charging adapter. Then plug the adapter into an outlet or surge protector.

The camera turns on automatically when it's plugged in (the indicator light on the base below the camera lens turns blue).

## Step 5: Turn on the monitor



Press and hold the **POWER** button on the parent monitor to turn it on.

 
### Congratulations!

Your system is ready to use! The camera(s) comes pre-paired with your parent monitor. However, it's a good idea to go ahead and set the time on your parent monitor now, before you start using it.


For information on how to use your new system, see the next chapter of this owner's manual.

## Step 6: Set the time on the monitor


- 1 Press the **MENU** button on the parent monitor. The menu appears on screen.

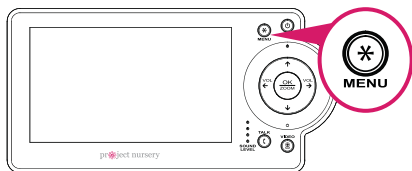

 
- 2 Use the arrows to highlight **SETTINGS**. Press **OK/ZOOM** to select it. The Settings menu appears on screen.

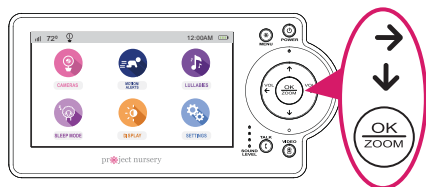

 - 3 Press the down arrow to highlight **Time Set**. Press **OK/ZOOM** to select it.

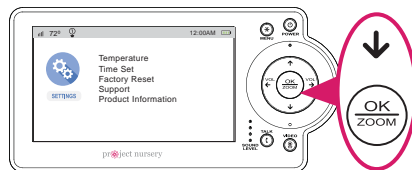


 
- 4 Use the up/down arrow buttons to set the hours, minutes, and AM/PM. Press **OK/ZOOM** when you're finished.

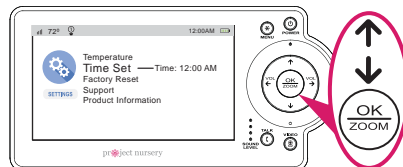

# TOUR OF THE SYSTEM
 
## Parent Monitor

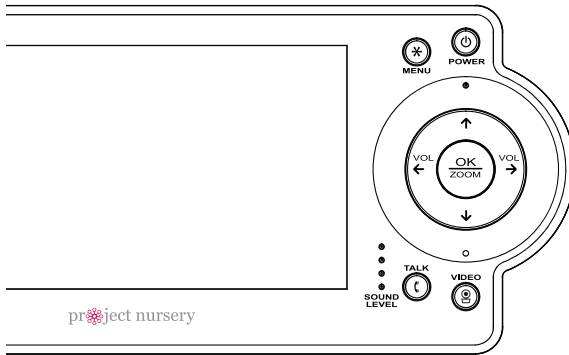

 **MENU** accesses the system's menu screens.


 **POWER** turns the monitor on and off (press and hold).


**VOL** ← and → **VOL** turn the volume down/up. In menu screens, these navigate left/right.

 **OK ZOOM** zooms the camera in/out.

↑ and ↓ navigate up/down in menu screens.

**SOUND LEVEL indicators** show you the level of sound from your baby's room.

 **TALK** lets you talk through the camera's speaker. Press and hold while talking.


 **VIDEO** turns the screen on and off. Press and hold to switch cameras.

### Watching baby

 You can turn the display on and off without turning the monitor off. You'll still hear your baby, but the display will be asleep until you awaken it.

**To turn the display on or off:** Press the **VIDEO ON/OFF** button on the parent monitor.

Built-in easel stand



## Parent monitor side and back panels

**USB CHARGING jack** plugs into your charging cable to recharge or power the parent monitor.

**Built-in easel stand** lets you stand the unit on a flat surface.

### Zoom

**To zoom the active camera:** Press the **OK/ZOOM** button on the parent monitor.

### Talking to baby

**To talk through the speaker on the active camera:** Press and hold the **TALK** button on the parent monitor.

Talk normally to the parent monitor while you're pressing the **TALK** button—your voice will come out on the camera's speaker.

Release the **TALK** button when you're done talking.

### Listening to baby

 
The **SOUND LEVEL** indicators on the parent monitor show you at a glance the sound level in your baby's room, regardless of how loud the audio is on the parent monitor.

**To increase or decrease the volume of the audio monitor:** Press the **VOL+** or **VOL-** buttons on the parent monitor.




# Status Bar Indicators


Parent monitor

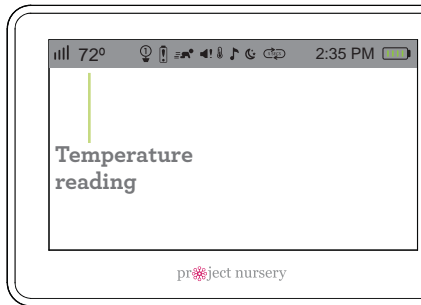



 shows the strength of the current camera's signal.


**Temperature reading** shows the temperature in Fahrenheit at the active camera. If you want to change this to Celsius, see page 27 for instructions.

 shows the camera that the monitor is currently displaying.

 indicates that the Low Battery Noise alert is on. This means the monitor gives an audio signal when it needs to be recharged. See page 18 for instructions on turning this on and off.

 indicates that Motion Activated Video Alert is on. This means the monitor automatically switches on whenever the camera detects motion. See page 18 for instructions on turning this on and off.

 indicates that Sound Activated Video Alert is on. This means the monitor automatically switches on whenever the camera detects sound. See page 18 for instructions on turning this on and off.

 indicates that Temperature Alert is on. This means the monitor shows an alert message if the temperature at a camera gets too high or too low. See page 19 for instructions on setting temperature alerts.



🎵 indicates the Lullabies are playing through one of the cameras. See page 24 for instructions on playing lullabies.

🌙 indicates that the camera is using night vision. The cameras automatically switch to night vision when they detect that the room has gotten dark.

🔄 5 SECS 🔄 10 SECS 🔄 15 SECS indicate that the monitor is scanning through the available cameras. The number indicates how quickly the monitor switches cameras. See page 17 for information on turning camera scanning on and off.

🔋 indicates the level of the monitor's rechargeable battery. If you see 🔋 or 🔋❌ in this space, it's time to recharge. See page 3 for more information.

## On-Screen Indicators



appears when you've pressed the TALK button and are talking through the camera's speaker. See page 8 for more information.



appears when the monitor cannot get the signal from the active camera or when another monitor is in use. See page 27 for more information.

 


appears when a Temperature Alert has been triggered because your baby's room is too hot or cold.



appears when the monitor's rechargeable battery has less than 10% charge.

## Camera (front, back, and side)

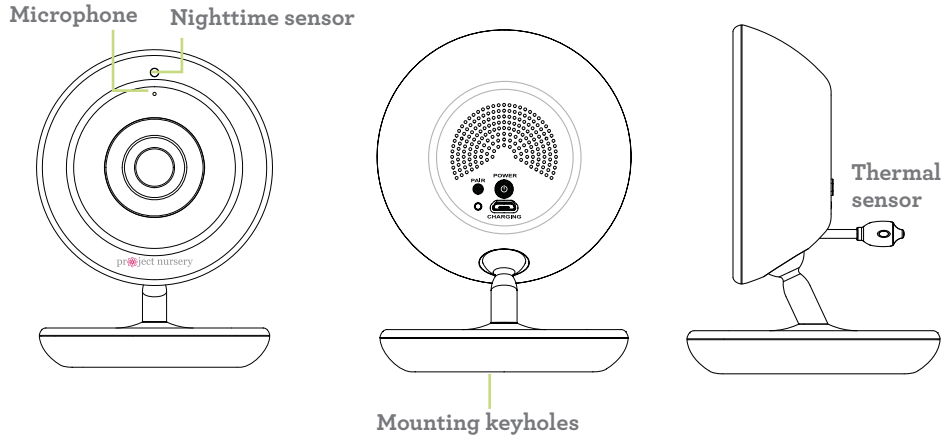

**POWER (back)** turns the camera on and off (press and hold).

**PAIR (back)** links the camera securely with the monitor (press and hold).


**CHARGING (back)** plugs into your charging cable to recharge or power the camera.

**Mounting keyholes (bottom)** let you mount the camera on a wall (mounting hardware not included).

**Thermal sensor** detects the temperature around the camera.

# 3. EVERYDAY USE

 This system's menus let you set up more cameras, set motion and temperature alerts, and much more. This section takes you through each menu.

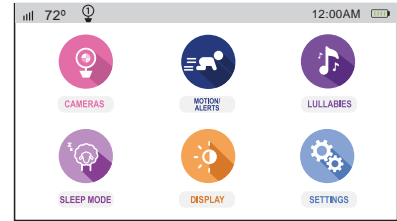


*Parent Monitor Menu*

## GETTING AROUND IN THE MENUS



 Press **MENU** to access the menus.

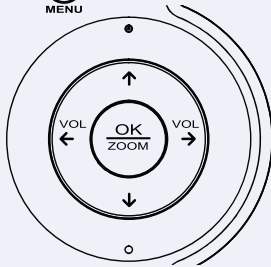

Use the arrows to highlight items.

Press **OK/ZOOM** to select.





## Cameras

  The **Cameras** menu lets you pair additional cameras or remove them from your list of cameras. If you have multiple cameras, this menu also lets you scan through them one by one.

### ACCESSING THE CAMERAS MENU


- 1 Press **MENU** on the parent monitor.
- 2 Use the arrow buttons to highlight the **Cameras** icon, and press **OK/ZOOM** to select it.

Parent Monitor  
Front

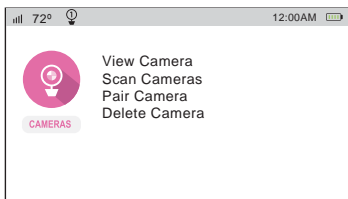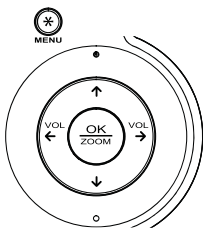


### PAIRING AN ADDITIONAL CAMERA

 - 1 Before you start pairing the monitor with your new camera, bring the camera into the same room so that you have it handy. You can put it back in the baby's room once you've finished pairing. Make sure the camera is plugged in and turned on before you start.
- 2 In the **Cameras** menu, press the down arrow to highlight **Pair Camera**. Press **OK/ZOOM** to select it.

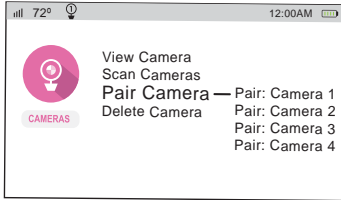

 - 3 Press the **Pair** button on the bottom of the new camera.
- 4 Use the up/down arrows to select **Pair: Camera 2**, **Pair: Camera 3**, or **Pair: Camera 4**. Press **OK/ZOOM** to select it.
- 5 If the monitor screen shows a green checkmark next to **Pair: Camera**, you're all set to use the monitor and the camera! (If it shows a red X, put the camera closer to the monitor and try again.)

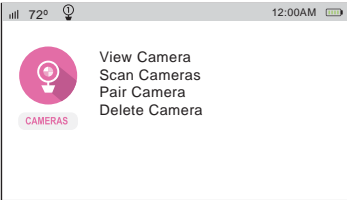


## VIEWING AND SCANNING CAMERAS


You can customize how you view your cameras on screen.

### To view a different camera:

  
- 1 In the **Cameras** menu, highlight **View Camera**. Press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to select the camera you want to view. Press **OK/ZOOM** to select it. The screen switches to that camera, and the status bar at the top of the screen indicates the camera you're viewing: ①, ②, ③, or ④.

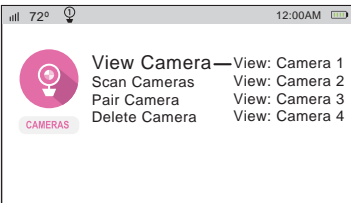

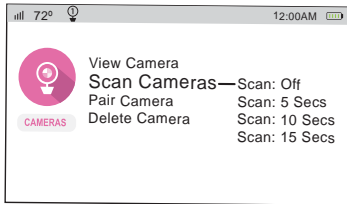

 
**TIP:** You can also switch cameras by pressing and holding the **VIDEO ON/OFF** button on the parent monitor.

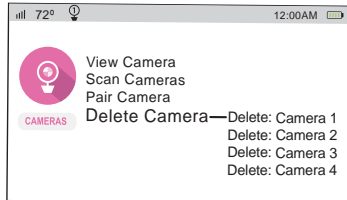

**NOTE:** You must have more than one camera paired with a monitor in order to scan cameras.



## To scan through the cameras automatically:

- 1 In the **Cameras** menu, highlight **Scan Cameras**. Press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to select how quickly you want to switch cameras: every 5, 10, or 15 seconds. Press **OK/ZOOM** to select that option. The screen switches to the first camera, and the status bar at the top of the screen shows an indicator for scanning: , , or . It also shows the camera you're viewing.

**To stop scanning cameras:** select **Scan Cameras** in the **Cameras** menu. Then select **Scan: Off**.

## REMOVING A CAMERA FROM THE LIST

 
 
- 1 In the **Cameras** menu, highlight **Delete Camera**. Press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to select the camera you want to remove from the list. Press **OK/ZOOM** to select it. The screen confirms that the camera has been deleted.  
**IMPORTANT:** In order to use this camera with the system, you'll need to pair it with this monitor again.



## Motion/Alerts

The Motion/Alerts menu lets you set up alerts that are activated by motion, sound, or temperature in your baby's room. It also lets you set up an alert for when the monitor's rechargeable battery needs to be recharged.

Parent Monitor  
Front

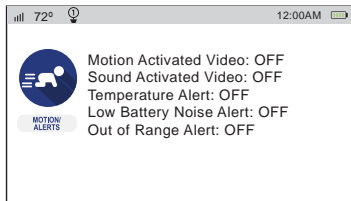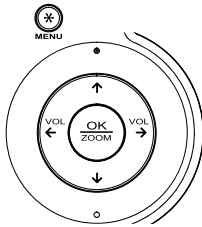


## ACCESSING THE MOTION/ALERTS MENU


- 1 Press **MENU** on the parent monitor.
- 2 Use the arrow buttons highlight the **Motion/Alerts** icon, and press **OK/ZOOM** to select it.

## SETTING UP MOTION ACTIVATION

You can set up the monitor so that it automatically shows video when the camera detects that your baby is moving.

 - 1 In the **Motion/Alerts** menu, press **OK/ZOOM** to select **Motion Activated Video**.

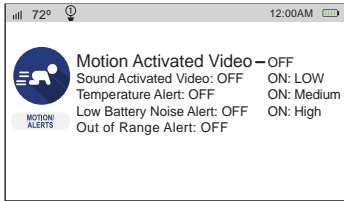



- Use the up/down arrows to select the amount of sensitivity you want for the motion sensor: **ON: Low**, **ON: Medium**, or **ON: High**. The status bar at the top of the screen shows an indicator for motion activation: .

**Note:** You might want to test different levels of sensitivity for this alert, to find the best fit for your environment and preference.

## SETTING UP SOUND ACTIVATION

 
You can set up the monitor so that it automatically shows video when the camera detects sound from your baby.

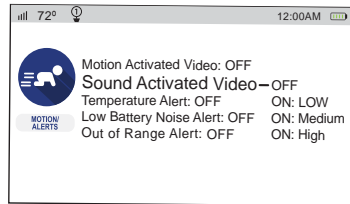

- In the **Motion/Alerts** menu, press **OK/ZOOM** to select **Sound Activated Video**.
- Use the up/down arrows to select the amount of sensitivity you want for the sound sensor: **ON: Low**, **ON: Medium**, or **ON: High**. The status bar at the top of the screen shows an indicator for sound activation: .

 
**Note:** You might want to test different levels of sensitivity for this alert, to find the best fit for your environment and preference.



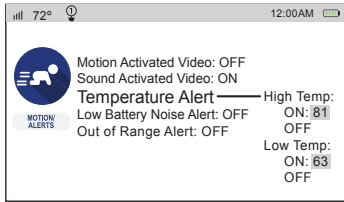

## SETTING TEMPERATURE ALERTS

 
These alerts tell you when your baby's room is too hot or too cold.

- 1 In the **Motion/Alerts** menu, select **Temperature Alert**.
- 2 Activate the temperature alert you want to use, then set it. The status bar at the top of the screen will show an indicator for temperature alerts: .

**To set a high temperature alert:** Highlight **High Temp: ON** and press **OK/ZOOM**. Use the up/down arrows to set the temperature you want to set for the high temperature alert. Press **OK/ZOOM** to set it.


**To set a low temperature alert:** Highlight **Low Temp: ON** and press **OK/ZOOM**. Use the up/down arrows to set the temperature you want to set for the high temperature alert. Press **OK/ZOOM** to set it.

If the temperature in your baby's room goes beyond the limit(s) you set, the parent monitor displays an alert.

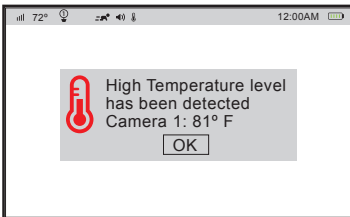

## SETTING A LOW-BATTERY ALERT

This alert tells you when the monitor needs to be recharged.

- 1 In the **Motion/Alerts** menu, highlight **Low Battery Noise** and press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to turn the low-battery alert on or off. The status bar at the top of the screen shows an indicator for the low-battery alert: .



## SETTING AN OUT-OF-RANGE ALERT

This alert tells you when the monitor is out of range of the camera.

- 1 In the **Motion/Alerts** menu, highlight **Out of Range Alert** and press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to turn the out-of-range alert on or off. The status bar at the top of the screen shows an indicator for the out-of-range alert: **!**.

 
 


## Sleep Mode

You can set up your monitor to turn off the display automatically after a set amount of time.

Parent Monitor

Front

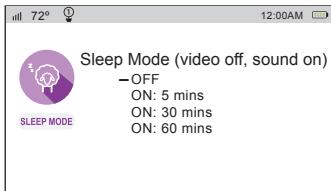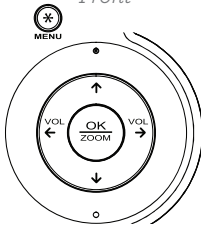

## ACCESSING THE SLEEP MODE MENU

- 1 Press **MENU** on the parent monitor.
- 2 Use the arrow buttons to highlight the **Sleep Mode** icon, and press **OK/ZOOM** to select it.

## SETTING SLEEP MODE

- 1 In the **Sleep Mode** menu, press **OK/ZOOM** to turn sleep mode on.
- 2 Use the up and down arrows to select the delay before the display turns off automatically: 5, 30, or 60 minutes. (The audio from your camera will stay on even when the display is off.)

 


## Lullabies

This Project Nursery system comes with 3 lullabies, a nature sound, and white noise ready to play—simply choose the one you want, and the camera you're on will play it back.

Parent Monitor

Front

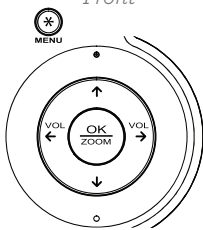

## PLAYING LULLABIES OR WHITE NOISE

- 1 Make sure the monitor is displaying the camera you want to play the lullaby on. If you want to play on a different camera, press the **MENU** button and select **CAMERAS**. Then press **OK/ZOOM** to select **View Camera** and choose the camera you want.
- 2 Press the **MENU** button to access the main menu.
- 3 Highlight **LULLABIES** and press **OK/ZOOM** to choose it.
- 4 Highlight the option you want to play and press **OK/ZOOM** to start playing it. The status bar at the top of the screen shows an indicator for lullabies: 🎵.

 
 
**NOTE:** *If there's a lullaby currently playing on a camera, a green arrow icon appears next to it.*



# Display

You can adjust the brightness of the display, and set it to automatically dim after a set amount of time.

Parent Monitor  
Front

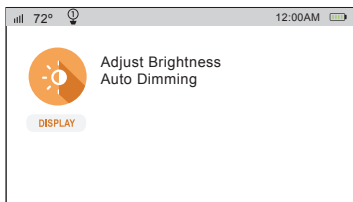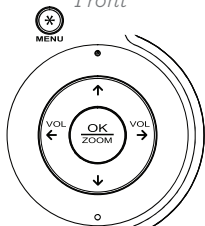

## ADJUSTING BRIGHTNESS

- 1 Press **MENU** on the parent monitor.
- 2 Use the arrow buttons to highlight the **Display** icon, and press **OK/ZOOM** to select it.
- 3 In the **Display** menu, highlight **Adjust Brightness**, and press **OK/ZOOM** to select it.
- 4 Use the up and down arrows to adjust the brightness. Press **OK/ZOOM** when you've finished.

## SETTING AUTO DIMMING

- 1 In the **Display** menu, highlight **Auto Dimming**. Press **OK/ZOOM** to select it.
- 2 Use the up and down arrows to choose the delay for auto dimming the display: 5, 10, or 30 minutes. Press **OK/ZOOM** to select.



 
## Settings

The Settings menu lets you customize the monitor to match your preferences. It also gives you technical information about the monitor and support.

### ACCESSING THE SETTINGS MENU


- 1 Press **MENU** on the parent monitor.
- 2 Use the arrow buttons to highlight the **Settings** icon, and press **OK/ZOOM** to select it.

Parent Monitor  
Front

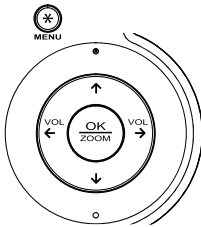


### SETTING YOUR TEMPERATURE PREFERENCE

 - 1 In the **Settings** menu, press **OK/ZOOM** to select **Temperature**.
- 2 Use the up and down arrows to select how you'd like temperature to be displayed: in degrees **Fahrenheit** or **Celsius**. Press **OK/ZOOM** when you've finished.

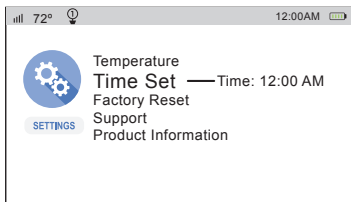

## SETTING THE TIME

 - 1 In the **Settings** menu, press the down arrow to highlight **Time Set**. Press **OK/ZOOM** to select it.
- 2 Use the up/down arrows to set the time. Press **OK/ZOOM** when you're finished.

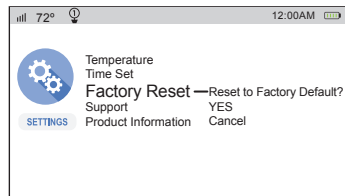

## RESETTING TO FACTORY SETTINGS

If you've tried all of the troubleshooting solutions to solve a problem, and nothing seems to work, you might need to reset the monitor to its factory settings and start setup again.

**WARNING: Resetting to factory settings erases all of your custom settings. You will have to set up the monitor from scratch.**

## GETTING SUPPORT AND TECHNICAL INFORMATION

- 1 In the **Settings** menu, press the down arrow to highlight one of the support or technical information options: **Support** or **Product Information**. Press **OK/ZOOM** to select it.
- 2 Press **OK/ZOOM** to exit.

## 4. TROUBLESHOOTING / FAQs

---

Most issues with the Project Nursery baby monitoring system can be solved by following one of the troubleshooting tips below. For additional assistance, please call 1-844-393-7338.

### I don't see video from the camera on my monitor.

- + Make sure your monitor is turned on (press the Power button). If it is, press the **VIDEO ON/OFF** button to make sure the monitor's display is awake. Make sure the camera is plugged in to a working outlet and turned on.

### I see the icon on the screen.

- + Make sure the camera you're trying to view is plugged in to a working outlet and turned on.
- + Make sure the monitor is within range (maximum 800 ft) of the camera you're trying to display (certain kinds of signal obstacles, like large metal objects, might shorten the range somewhat).
- + The monitor you're using might have become un-paired with the camera. See page 15 for instructions on pairing a monitor and camera.

### I can't hear sounds from baby's room.

- + Make sure the monitor is turned up. Press the **VOL+** button until you hear sounds from your baby's room.
- + Make sure the microphone on the camera is not blocked. The microphone is just above the lens.

### The lullabies aren't playing.

- + If you have multiple cameras, make sure you've chosen the one you want the lullabies to play on before you start the lullaby. Go to **Cameras > Select Camera** and choose the camera you want. Then go to **Lullabies** and select an option to play.



## The temperature alerts don't work.

- + Make sure you've set the temperature preference to the system you use, Fahrenheit (standard in the US) or Celsius (standard outside the US). To switch your temperature preference, go to **Settings > Temperature**.
- + Make sure you've set the right kind of temperature alert—for example, if you want to make sure your baby's room does not get below 68 degrees Fahrenheit, set the **Low Temp Temperature Alert** to **68**. If you want to make sure your baby's room doesn't get above a certain temperature, set the **High Temp Temperature Alert** to that temperature.

## Motion alerts don't work.

- + You might need to adjust the sensitivity of the alerts—for example, if **Motion Activated Video** is set to **ON: Low**, the monitor will not come on as often as when **Motion Activated Video** is set to **ON: Medium** or **ON: High**. To adjust this setting, go to **Motion/Alerts > Motion Activated Video**.
- + If you have multiple cameras, you might need to change the active camera—motion alerts work for the active camera only. Press **VIDEO ON/OFF** to make sure the camera you want to use for motion alerts—the one with the clearest view of your baby, for example—is the one displayed.

## Sound alerts don't work.

- + You might need to adjust the sensitivity of the alerts—for example, if **Sound Activated Video** is set to **ON: Low**, the monitor will not come on as often as when **Sound Activated Video** is set to **ON: Medium** or **ON: High**. To adjust this setting, go to **Motion/Alerts > Sound Activated Video**.
- + If you have multiple cameras, you might need to change the active camera—sound alerts work for the active camera only. Press **VIDEO ON/OFF** to make sure the camera you want to use for sound alerts—the one closest to your baby, for example—is the one displayed.

©2017 Voxx Accessories Corp.  
3502 Woodview Trace, Suite 220  
Indianapolis, IN 46268

PNM4N11 UG 00

## IMPORTANT INFORMATION

for Project Nursery PNM4N11



 
### CAUTION

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN.

**Caution:** To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

## ⚠️ WARNING:

**Strangulation Hazard: Children have STRANGLERD in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.**

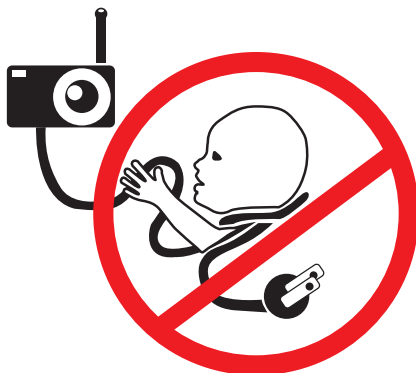

### Baby Unit SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the Baby Unit on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slots under the stand.
- NEVER place the Baby Unit or cords within the crib.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away).

For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.

The power unit for this device should be plugged in so that it stays vertical or lies flat.

This product contains a non-removeable Lithium Ion rechargeable battery.

### WARNING

This digital Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away)
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor near water.
- Do not install the Baby Monitor near a heat source.

- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

### CAUTION

The Unit shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

The camera should be installed and operated with a minimum distance of 20cm between the radiator and your body.

The USB Port is for charging only.

### Ecology

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.

Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area. Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

### Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

### Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals -- this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself -- contact Customer Service for assistance.

### FCC and IC regulations

#### FCC Part 15

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

**FCC Caution:** To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

**FCC Radiation Exposure Statement**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

**IC Radiation Exposure Statement**

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

**Déclaration d'exposition à la radiation**

Cet équipement respecte les limites d'exposition aux rayonnements IC RSS-102 définies pour un environnement non contrôlé. Cet équipement doit être installé et mis en marche à une distance minimale de 20 cm qui sépare l'élément rayonnant de votre corps.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

**WARNING**

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

**Industry Canada**

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**12 Month Limited Warranty**

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-844-393-7338.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static, noise, or loss of range or audio/video quality due to external factors, to costs incurred for the installation, removal or reinstallation of the product, or to damage to digital media devices or memory.

The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product or by removal or defacement of factory serial number/barcode labels.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

©2017 Voxx Accessories Corp.

3502 Woodview Trace, Suite 220

Indianapolis, IN 46268

**For customer service, call 1-844-393-7338**

**Product Information**

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_