


# THE RATTLER™

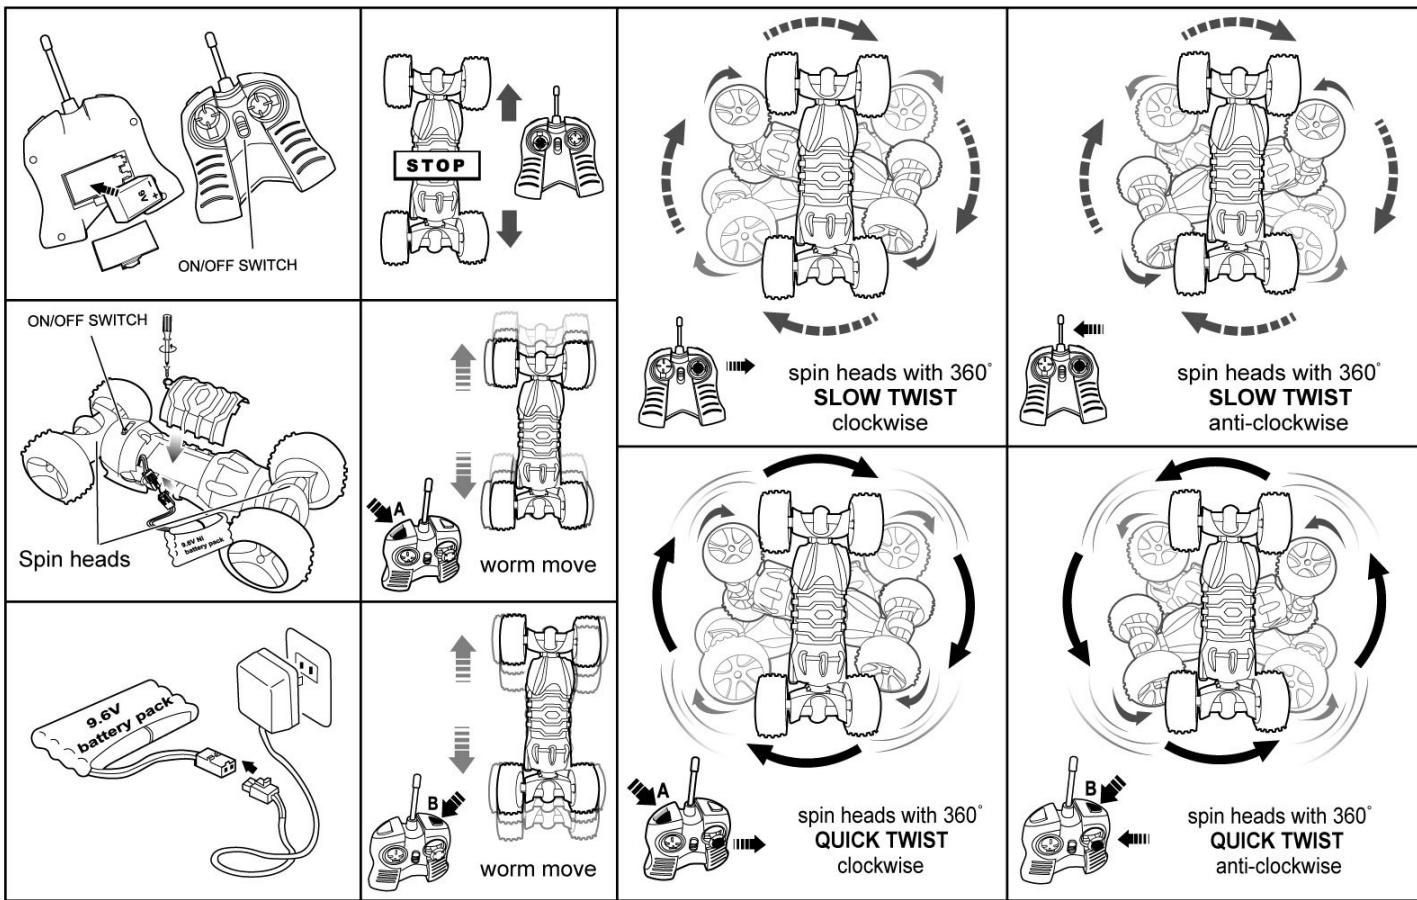

## OPERATING INSTRUCTIONS

Your vehicle performs best on hard, flat, uncarpeted surface. Please read carefully before starting to operate. Recommended to operate under adult supervision. Not recommended for children under 8 years of age. Keep the instruction manual for future reference. **Note:** Vehicles with the same frequency cannot be played together.

## BATTERY REQUIREMENT

- One "9V" battery for transmitter.
- One "9.6V" battery pack for vehicle.
- One battery pack charger.

## BATTERY INSTALLATION

### (A) TRANSMITTER

- 1) Slide ON/OFF switch to OFF.
- 2) Open the battery door.
- 3) Install one "9V" battery into the battery compartment according to the polarity symbols (+) and (-) marked inside.
- 4) Replace the battery door.

### (B) VEHICLE

- 1) Slide ON/OFF switch to OFF.
- 2) Loosen the battery door screw by a Phillips screwdriver and remove the battery door. Connect the 9.6V battery pack to the battery pack connector. Don't force them together, they fit only one way.
- 3) Replace the battery door and tighten the screw.

## HOW TO OPERATE

- 1) Slide ON/OFF switch on the transmitter to ON.
- 2) Slide ON/OFF switch on the RATTLER to ON. The red, yellow and green LED illuminate and blink.
- 3) Use the transmitter's control levers and buttons to operate the RATTLER.

### Left Control Lever

- Push forward to move high speed "↑" or "↓".
- Pull backward to move high speed "↓" or "↑".
- Release to stop.

### Right Control Lever

- Push left to spin the heads with 360° slow twist anti-clockwise.
- Push right to spin the heads with 360° slow twist clockwise.
- Release to stop spin heads and twist.

### Control Buttons

- Press button A to move like a worm "↓" or "↑".
- Press button B to move like a worm "↑" or "↓".

### 4) ADVANCE DRIVING

- Use two (2) of the control levers and buttons to achieve exciting actions from the RATTLER.
- Press button A and push right control lever to right ... spin heads with 360° quick twist clockwise.
- Press button B and push right control lever to left ... spin heads with 360° quick twist anti-clockwise.

### CAUTION

- The RATTLER is an extremely powerful RC vehicle. Don't hold and operate the unit in air, the spinning heads may hurt your fingers.
- The vehicle has a built-in high temperature protective device and will be activated when the battery pack gets hot. It might stop function for about 2 minutes after 5 to 10 minutes continuous running. It will recover when the temperature of the battery pack decreases.

### BATTERY CAUTION

- Do not mix battery types.
- Remove batteries when not in use.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.

**Note:** Dispose of old batteries promptly and properly; do not burn or bury them.

### CHARGING THE 9.6V BATTERY PACK

- The 9.6V battery pack must be fully charged before use.
- Connect the charger connector with the 9.6V battery pack, then plug the charger into a household AC outlet.
- Four hours is required for fully charging the battery pack. Charging the battery pack for more than 4 hours will not give you longer running time.
- When your vehicle starts to move slowly, it is time to recharge the battery pack.
- After use, the battery pack will be hot. Wait at least 10 minutes until

the battery pack cools down before charging. Recharging a hot battery pack will greatly reduce the recharging life of your battery pack.

### BATTERY WARNING INFORMATION

- The battery pack must be charged by adult.
- Do not charge battery pack that shows leakage and corrosion.
- Do not charge battery pack if it is hot.
- Do not dispose of battery in fire.
- Do not attempt to disassemble the battery pack.
- Never leave dead or exhausted battery pack in the battery compartment.

**Note:** Do not insert the antenna of transmitter into the hole of electrical outlet.

### THE FCC WANTS YOU TO KNOW:

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

### FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.