



# User Manual

## **FX-805P**

**CDMA 1X Fixed Wireless Phone**

---

(Back cover)

Motorola, the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the U.S. Patent & Trademark Office. All other products or service names are the property of their respective owners. © Motorola, Inc2007. All rights reserved.

The information contained in the FX-805P user guide is believed to be correct at the time of printing. We reserve the right to change or modify any information, product specifications, features or functionality without notice. The contents of the FX-805P user guide are provided “as is.” Certain features may not be activated by your service provider, and/or their network settings may limit the feature’s functionality. Additionally, certain features may require a subscription. Contact your service provider for details.

---

USER'S GUIDE

This page is intentionally left blank

---

## **WELCOME**

Congratulations on the purchase of your Motorola FX805P product!

Please retain your original dated sales receipt for your records.

For warranty service of your Motorola FX805P product, you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

**Please read important safety instructions before use.**

**Read and understand all instructions before use.**

**Please retain this guide for future reference.**

---

## INDEX

<b>1</b>	<b>PREPARING YOU PHONE FOR USE</b> .....	<b>3</b>
1.1	Charging your battery .....	3
1.2	Procedure for battery charging.....	3
<b>2</b>	<b>FEATURE HIGHLIGHTS</b> .....	<b>4</b>
<b>3</b>	<b>ABOUT THE PHONE</b> .....	<b>5</b>
3.1	Front view of the Motorola FX-805P .....	5
3.2	LCD Display.....	5
3.3	Installation.....	5
<b>4</b>	<b>BASIC OPERATIONS</b> .....	<b>7</b>
4.1	Switching the phone ON and OFF .....	7
4.2	Making a call .....	7
4.3	Saving a number by dialing.....	7
4.4	Adjusting the volume of earpiece.....	8
4.5	Answering a call .....	8
4.6	Switch in working status .....	8
4.7	Recent dialed-out numbers .....	8
4.8	Missed call.....	8
4.9	Signal Strength .....	9
<b>5</b>	<b>USING PHONE MENUS</b> .....	<b>10</b>
5.1	Navigate menus .....	10
5.1.1	Scrolling through menus.....	10
5.1.2	Using a shortcut .....	10
5.1.3	Exiting menu levels.....	10
5.2	Menu Tree.....	10
<b>6</b>	<b>ENTERING LETTERS AND NUMBERS</b> .....	<b>12</b>
6.1	Entering Letters .....	12
6.1.1	Editing name or phone number .....	12
6.1.2	Changing the case of letters and numbers .....	12
<b>7</b>	<b>USING THE PHONEBOOK</b> .....	<b>14</b>
7.1	About the phone book .....	14
<b>8</b>	<b>SMS</b> .....	<b>17</b>
<b>9</b>	<b>RECENT CALLS</b> .....	<b>20</b>
<b>10</b>	<b>SETTINGS</b> .....	<b>23</b>
<b>11</b>	<b>TOOLS</b> .....	<b>26</b>
<b>12</b>	<b>SOUND</b> .....	<b>27</b>
<b>13</b>	<b>CHNICAL INFORMATION</b> .....	<b>29</b>
<b>14</b>	<b>SAFETY INFORMATION</b> .....	<b>30</b>
<b>15</b>	<b>WARRANTY</b> .....	<b>31</b>
15.1	PRODUCTS COVERED.....	31
15.2	EXCLUSIONS .....	31
<b>16</b>	<b>RF EXPOSURE INFORMATION</b> .....	<b>34</b>

---

# 1 PREPARING YOUR PHONE FOR USE

## 1.1 Charging your battery


- The battery used in the phone is rechargeable. New batteries must be fully charged before they are used for the first time. Only after several times of charging and discharging can the battery's efficiency be made the best of.
- To ensure the battery is in optimal state, we recommend you discharge the battery fully at least once every month by consuming the power until the phone is switched off automatically.
- During the course of charging, it is normal to find the battery and the phone slightly hot. The phone will automatically protect itself when battery temperature rises so as to control temperature variation.
- The phone will display alerts as the battery starts running out. When the power has run out the phone will be switched off automatically.

**Note:** Actual time of usage of the battery varies according to different operation modes and settings of network base station. If you use the phone when battery is rather low, the phone may restart or switch off automatically. Please recharge on time.

## 1.2 Procedure for battery charging

1. Connect the charger to a main socket, and insert the charging plug into the bottom jack of the phone.
2. At this time the phone starts charging. The battery symbol will be gradually lengthened from right to left.

You may choose to charge the battery under power-off or standby state.

If the phone is charged under power-off state, the display will light up and it will display "Charging". To start, please press power key . When the battery is fully charged, charging operation stops automatically. The battery symbol on the screen will maintain four-grid. At this time please unplug the charging plug.

To ensure safety, neither change the parts and fitments of the battery by yourself nor take off the battery of the outer case.

Please use charger of original make and model. Using charger of your choice may cause your phone to damage.

---

## 2 FEATURE HIGHLIGHTS

The Motorola FX-805P provides the following features:

- 128x64 LCD display with status indicators
- Whip antenna
- Speaker phone
- AC power supply
- Rechargeable battery pack
- A choice of 10 ring tones
- Last number redial
- Speed dialing
- Dial tone
- Adjustable ring and voice volume
- Calculator and alarm functions
- Phonebook with capacity for 200 names (each name can save 5 numbers)
- Storage of SMS for up to 100 messages (Inbox 50 SMS, Outbox 50 SMS)
- Caller ID Service
- Multi Language support

---

## 3 ABOUT THE PHONE

### 3.1 Front view of the Motorola FX-805P



### 3.2 LCD Display

The LCD shows icons on the top of the LCD screen. Different icons appear based on the phone's operating mode.



Indicates the signal strength in the service area.



Displayed when wake up alarm time is set.



Indicates charged battery level.



Displayed when a text message is received.



Indicates no network in the area.

### 3.3 Installation

You should follow each step carefully in order to guarantee proper operation of the Fixed Wireless Phone.

#### **STEP1. Check Components**

- Fixed Wireless Phone is supplied with the following standard unit and accessories:
  1. FX-805P Main unit with handset
  2. Dipole antenna
  3. Rechargeable battery pack
  4. User Manual
  5. AC/DC power adapter



- 
- Please make sure that these components are present before you begin the unit installation. If components are missing or damaged, contact the store where you purchased the unit immediately.

### **STEP2. Place the Phone**

- Place the phone on a stable flat secure surface area (desk, table, etc.). Serious damage may result if the unit falls. Do not place the unit on, or within 1 meter of heaters or radiators. This unit is designed for desktop usage. Avoid direct exposure to sunlight and damp area.
- Read the SAFETY INFORMATION located at the end of this manual you place the phone.

### **STEP3. Connect Components (See the figures in "Installation Steps".)**

- Connect antenna to the antenna connector located at the right side of the phone. If you have placed the phone on the flat surface, bend the antenna up right.
- Connect curl cord of handset to the RJ-11 port located at the left side of the phone.
- Open the battery case and install the batteries, then close the case.
- Connect the AC/DC Adapter cable to the DC port located at the back of the phone.
- Please follow steps below to get better voice quality:
  1. Keep the phone away from electrical appliances such as TV, computer, radio and so on.
  2. Keep the phone in a high and central location with no obstructions, such as metal walls.
  3. Raise the integral antenna of phone to get maximum strength of receive signal as shown in the figure in the next page.

### **STEP4 Check the LCD Display**


- After you follow the installation instruction STEP 3, please check the LCD for normal operation
- If you do not see the status of service, please repeat the instruction of STEP 3 and confirm the fixed wireless phone to have the proper signal strength from the carrier.

---

## 4 BASIC OPERATIONS


### 4.1 Switching the phone ON and OFF

**To turn on your phone:**

1. Make sure the switch in the back of the phone is moved to the ON side
2. Press and hold “End key”  for a few seconds or until the display turns on.

After the phone is registered in network, the signal will be displayed at the top left corner of the screen. The phone is now in the standby state and you can make or answer a call. Your phone remains in a searching state if it fails to find the available network.


**To turn off your phone,**

1. Press and hold “End key”  for three seconds until the phone turns OFF
2. Slide the power switch in the back of the phone to the OFF side.


**Note: If you switch off the phone by taking off the battery, some information stored in the phone may possibly get lost, which may be an inconvenience.**

### 4.2 Making a call

1. Raise your receiver or press the “Hands free Key” |
2. Input phone number which you want to call.

The key  is used for deleting the last digit of the number. Press and hold it to clear all the entry and return to standby screen.

If the dialed number is stored in the phonebook, then the name of the called party will be displayed on the screen.

To end a call, you can press the “End Call” . After a call is ended, the call timer stops and the text “Call ends” is displayed on the screen.

### 4.3 Saving a number by dialing

You may save the other party's number with phonebook, or by dialing under standby state. The number saving procedure of the former method is described in details in the phonebook section.

Specific steps for saving a number by dialing under standby state are as follows:

1. Input the other party's phone number under standby state.
2. Press the left and right-direction key to perform function selection.
3. You may save this number as:

- 
- a) New contact (the number is saved as a new entry in the phone), or
  - b) Existing contact (add this number to an existing contact already in the phone)


#### 4.4 Adjusting the volume of earpiece

During a conversation, you may press the up and down-direction key to adjust the volume of earpiece.



#### 4.5 Answering a call

When a call is incoming, the phone will alert you according to the incoming call alert mode you selected.

To answer a call,

1. Press the key  to answer the call directly.
2. Lift the handset of the phone to answer.

To reject a call,

1. Press the key  and the other party will hear a busy tone.
2. To end a conversation, press the key .



**Note:** *If you have subscribed to the caller ID service, then during the conversation the caller's number will be displayed on the screen. If this number is already saved in the phonebook, then the caller's name will also be displayed on the screen.*

#### 4.6 Switch in working status

If you are dialing or calling, you can switch between using the handset and using the Speaker phone key.

#### 4.7 Recent dialed-out numbers

This handset can store 10 recent dialed-out numbers.

1. On standby screen, press the key  to display recent dialed-out numbers.
2. You can press the up and down-direction key to view the called numbers.
3. Press the key  to directly dial the selected number.

**Note:** *You may also access the call record menu to view the recent dialed-out numbers.*

#### 4.8 Missed call

If there is missed call(s), "Missed N Call(s)" will be displayed on the main screen. You can access the call record menu to view the record of the calls missed.

---

## **4.9 Signal Strength**

The quality of calls depends on the signal strength in your area. The stronger the signal is, the better the quality of the call. The signal strength icon indicates the current strength as a number of bars. You can see bars according to the strength of received signal in the upper-left part of the LCD.

## 5 USING PHONE MENUS

### 5.1 Navigate menus

A menu is a list of choices you can make. Your phone menu has 7 sub-menus. Each sub-menu contains options that allow you to use the Phone Book, change the ring tone, etc. You can use menus and sub-menus in two ways: by scrolling or by using shortcuts.

#### 5.1.1 Scrolling through menus


- From the Start screen, press Menu, and then scroll through the menus using the **UP** or **Down** key.
- Use the scroll and selection keys to navigate the submenus and to return to the Start screen.

#### 5.1.2 Using a shortcut

- From the start screen, press the down arrow on the arrow key **UP** or **Down** and scroll through the shortcuts.

You can use a shortcut to get to Options directly without scrolling through lists. To change one of the shortcuts, press the left soft key and select from a list of different options, once you select the option desired, press the left soft key Ok to assign the new shortcut.

#### 5.1.3. Exiting menu levels

- To return to the previous menu level, press Back or Cancel.
- To return to the Start screen, press . No menu setting changes will be saved.

### 5.2 Menu Tree

Your phone's menu may differ from the following list, depending on the network services to which you have subscribed and the accessories you are using. If you have any questions, please call your service provider.

#### Menu Structure:

Option	Function description		
SMS	Text Messages	Write Message	The new message can start with Preformats or The Last Written
		Inbox	Message in phone Up to 50 pieces of messages can be stored in the phone.
		UIM	Messages in UIM Number of messages that can be stored in the UIM card depends on its type.
		Outbox	Up to 50 pieces of messages can be stored.
		Erase Messages	Entire Outbox, Entire Inbox, Entire UIM, All Messages
		Message Settings	Storage Location
		Check Capacity	Check the memory status of UIM card and the phone.
	Voice Messages	Voice Mail	Indicate how many voice messages in the Voice Mail box.
		Call Voice Mailbox	Dial voice mail box to listen to the voice message.
		Voice Mail Number	Set Voice Mail box number.
Recent Calls	Missed Calls	Up to 20 missed calls can be displayed.	
	Received Calls	Up to 20 received calls can be displayed.	
	Dialed Calls	Up to 20 dialed calls can be displayed.	

	Call Times	Received Calls, Dialed Calls, All Calls, Reset Timer		
	Delete All	Delete Missed Calls, Delete Received Calls, Delete Dialed Calls, Delete All		
Settings	Display Settings	Backlight Time, Brightness, Language		
	Phone Settings	Miss Call Alert, 50 Seconds Alert		
	VoIP Number	Set IP Number		
	Call Settings	Divert Calls, Call Waiting		
	Security Settings	Phone Lock	Password Request, Change Password	
		PIN Setting(if with UIM card)	PIN Check, Change PIN	
		Call Barrings	All, Restrict International and Domestic Outgoing, Out of Phone book, No restricting	
Reset Settings	OK, Cancel			
Sound Settings	Volume, Ring Tone, SMS Tone, Alarm Tone, Call Alert Mode, SMS Alert Mode			
Tools	Alarm			
	Calculator			
Contact	Detail			
	Find			
	Grouping View	No Partition Group, VIP Group, Home Group, Work Group, Friends Group, Personal Group, Business Group		
	Delete			
	Add New Record	Phone, UIM		
	Edit	Edit Name, Add Number, Add E-Mail, Add URL, Select Groups, Add Notes		
	Copy/Move	Copy To UIM , Move To UIM (Records are stored in the phone) Copy To Phone, Move To Phone (Records are stored in the UIM card)		
	Copy All	Copy To UIM, Copy To Phone		
	Check Capacity			
	Setting	Save Mode, View Mode, Set Lock		
	Speed Dial	One Dial		

How to access the Menu:

1. Enter the Main Menu:

Press the “**LEFT SOFTKEY**” in the idle screen to enter Main Menu, and you can use the “**UP**” or “**Down**” key to enter the Sub-Title.

2. Enter Sub-Title directly:











 
 
Following the Icon on the Soft Key, press them, then you can enter these Menu directly.


## 6 ENTERING LETTERS AND NUMBERS

You can enter letters, as well as numbers, when storing information in your phone by using your phone's keypad. To enter letters, press the key associated with the letter you wish to enter until it appears on the screen (numbers will also appear).

### 6.1 Entering Letters



When you want to add new names or when you view names in the Phone Book, your phone automatically switches to the ABC mode and displays the ABC icon.

Key	Characters	Key	Characters
	. , ? ! ' " : ; @ _ & 1		P Q R S 7
	A B C 2		T U V 8
	D E F 3		W X Y Z 9
	G H I 4		0
	J K L 5		Change input ways
	M N O 6		\ / ~ < > f\$ ¥§ £ [ ] ( ) + \$space

Press a key once or several times to enter the letter(s) you want. For example, press  three times to enter the letter C. The selection displays.

#### 6.1.1. Editing name or phone number

To edit a name already stored in the Phone Book:

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Edit** and Press **OK**
- 3) you can modify the name, the number ordinally.
- 4) Press  to correct when you input the wrong letter or number

#### 6.1.2. Changing the case of letters and numbers

##### Operation instructions of input methods

This handset supports full English. Input methods can be applied to many text input areas such as short message input, name input in the phonebook, standby greetings etc. This handset provides many input methods: Numbers, Multitap, EzText, Symbol etc. Multitap and EzText input method are used for inputting English; Numbers input method is used for inputting numbers; Symbol input method is used for inputting various symbols and special characters. Press the key < \* > to switch between these input methods and press the key < # > to enter into symbol input interface.

##### Numbers input method

---

Number input method is used for inputting numbers. Press the 0-9 keys on the keypad to input any numbers you want.

#### **Multitap input method**

Multitap input method is to input letters by pressing corresponding keys with letters on the keypad. Normally it is used to input English. Wait a second after inputting a letter for the black strip on the letter to disappear and then you can continue to input the next letter. Press the key < Clear > once to delete the last letter and press and hold the key < Clear > to delete all input.

Each key corresponds to 3 to 4 letters and press the same key quickly for several times to switch between these letters.

#### **EzText input method**

EzText input method is used to input English. The system will give the most possible word you require according to your key strokes, which is for your convenient use.

Application case:

If you want to input "all", you only need to press the keys 2, 5, 5 in sequence and an "all" with black background will appear on the screen. Then you only need to press the key < OK > to confirm and continue to input the next word.

#### **Symbol input method**

Symbol input method is used for inputting some special symbols and punctuations. Under text editing state, press the key < # > to enter into symbol input method. There are 9 special symbols on the screen for your selection. Press the numeric key before the symbol to select the symbol and return to text editing state. If the symbol you need is not displayed on the screen, please press the up and down-direction key on the keypad to scroll the page until you find the symbol you need.



---




## 7 USING THE PHONEBOOK

### 7.1 About the phone book

The maximum length for the name record in the phone is 16 characters and the length for name record in UIM card depends on the UIM card. When you Copy/Move records to UIM card, some names may be cut off due to shorter length of name record that can be stored in UIM card. Such phenomenon will only be incarnated after the phone is restarted. We are sorry for the inconvenience!

### 7.2 Using PHONEBOOK Menus


Under standby state interface

- 1) Press  in the idle screen.
- 2) Scroll to **Contact** then press **OK** or Press the button  to go into sub-menus
- 3) When the cursor stops at a certain record, press the Button "" to access the menu of various operations for this record.


And if you have some records already, you can get these following options; else you could only get Add New Record, Copy All, Check Capacity and Setting four options.

#### 7.2.1 Detail


you can see the detail information of this record.

- 1) Press  in the idle screen->**Contact**->**OK**
- 2) Select one record and Scroll to **detail** and Press **OK**
- 3) Get the detail information of this record which you want to see


#### 7.2.2 Find

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Find** and Press **OK**
- 3) Input the correct name and press **OK** to search the detail which you wish

#### 7.2.3 Grouping View

 
- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Grouping View** and Press **OK**
- 3) you can know which group your record is existed

#### 7.2.4 Delete


- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Delete** and Press **OK**

- 
- 3) you can delete the chosen record.

 
#### 7.2.5 Add New Record

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Add New Record** and Press **OK**
- 3) you can add a new record to UIM or Phone.

 
#### 7.2.6 Edit

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Edit** and Press **OK**
- 3) you can view the following options:
  - **Edit Name:** to edit the saved name
  - **Add Number:** add a new number to save
  - **Add E-Mail:** to save the E-Mail address
  - **Select Groups:** to select a group to save which you wish

 
#### 7.2.7 Copy/Move

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Copy/Move** and Press **OK**
- 3) you can copy the chosen record to UIM or Phone.

 
#### 7.2.8 Copy All

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Copy All** and Press **OK**
- 3) you can copy the whole records to UIM or Phone.

#### 7.2.9 Check Capacity


- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Check Capacity** and Press **OK**
- 3) you can check the memory status of the phonebook in UIM card and the phone.

#### 7.2.10 Setting

- 1) Press  in the idle screen-> **Contact** ->**OK**
- 2) Select one record and Scroll to **Setting** and Press **OK**
- 3) you can see these options:

- 
- **Save Mode:** Set the storage mode of records
  - **View Mode:** Set the browsing mode after accessing "Contact" menu
  - **Set Lock:** When "Set Lock" is enabled, you are required to input the correct password before accessing "Contact" menu.

#### 7.2.11 Speed Dial

- 1) Press  in the idle screen-> **Contact** -> **OK**
- 2) Select one record and Scroll to **Speed Dial** and Press **OK**
- 3) you can config the present number to one key Speed Dial

---


## 8 SMS

Message function is a network service. You may be required to subscribe to the service from your network operator prior to sending and receiving short messages. One message can hold up to 160 characters. A message is sent to the SMS center of the network, then to the targeted user by the network. If the targeted user does not switch on his phone, the network will store the message temporarily.

### 8.1 Text Messages

#### 8.1.1 Write Message

You can send the message composed to one or more users specified, as well as save it to Outbox.

- 1) Press Main Menu->**SMS**->Press  **OK**
- 2) Choose **Text Messages**
- 3) Scroll to **Write Messages**->**OK**
- 4) It includes the following 3 short message editing modes
  - **Nothing** : Select the input method you required to edit your short message.
  - **Preformat**: 10 commonly used short messages are available for your selection.
  - **The Last Written**: Continue to edit the recently edited short message.
- 5) Press **OK** to get the following options:
  - **Send**: send the message only
  - **Multi-Send**: send the message to more members
  - **Save**: not to send but save it to outbox

#### 8.1.2 Inbox

It is used for reading short messages received. In the inbox, the phone can store up to 50 short messages. The capacity of UIM card depends on its type. You may press up and down-direction key to browse the short message list. Press the left and right-direction key to scroll over the list. Under short message reading state the following options are available. You may perform different operations according to your own requirements.

- 1) Press Main Menu->**SMS**->**OK**
- 2) Choose **Text Messages**->**OK**
- 3) Scroll to **Inbox**->one chosen message
- 4) It includes the following options:
  - **Erase**: Delete the short message you are currently reading.
  - **Reply**: Reply the short message you are currently reading.
  - **Forward**: Forward the short message you are currently reading to others.

- 
- **Call Sender:** Call the number of the short message.
  - **VoIP:** To set IP number to call.
  - **Move To UIM (Phone):** Move the short message you are currently reading to UIM card (phone).
  - **Save Number:** ->Phone: Save the number of the short message to phone.

->UIM : Save the number of the short message to UIM card.

### 8.1.3 UIM

It records how many messages you have received and read. When you enter into this menu, you can do the same operation as in **Inbox** Menu.

### 8.1.4 Outbox

It is used for storing the short messages you have saved or sent. It can store up to 50 short messages.

- 1) Press Menu-> **Short Messages**->**Text Messages**.
- 2) Scroll to the **Outbox** and press **OK**.
- 3) From the list, highlight the one you need and press **OK**.
- 4) You can choose four options:
  - **Forward:** You can send the chosen message.
  - **Edit:** You can edit the chosen message.
  - **Delete:** You can delete the chosen one.
  - **Delete All:** You can empty the Out box

### 8.1.5 Clear Messages

- 1) Press Menu-> **Short Messages**->**Text Messages**.
- 2) Scroll to the **Clear Messages** and press **OK**.
- 3) You can choose four options:
  - **Clear OutBox:** Delete all short messages stored in the outbox.
  - **Clear Inbox:** Delete all short messages in the inbox in the phone.
  - **Clear UIM:** Delete all short messages in the inbox in the UIM card.
  - **Clear All Messages:** Delete all short messages stored in the outbox and inbox.

### 8.1.6 Message Settings

- 1) Press Menu-> **Short Messages**->**Text Messages**.
- 2) Scroll to the **Message Settings** and press **OK**.
- 3) You can Save the received short message to the phone, UIM card or Default.

### 8.1.7 Check Capacity

- 1) Press Menu-> **Short Messages**->**Text Messages**.
- 3) Scroll to the **Check Capacity** and press **OK**.

---

4) You can view the number of various kinds of existing messages in the phone and UIM card and the maximum number of storage.

## **8.2 Voice Messages**

### **8.2.1 Voice Mail**

Display total number of all voicemails stored in your Voice Mail Box.

- 1) Press Menu-> **Short Messages**->**Voice Messages**.
- 2) Scroll to the **Voice Mail (N)** and press **OK**.

If you have Voice Mail, you can read, else there is a "No Voice Mail" hint.

### **8.2.2 Call Voice Mailbox**

- 1) Press Menu-> **Short Messages**->**Voice Messages**.
- 2) Scroll to the **Call Voice Mailbox** and press **OK**.
- 3) Call the voice mail number that has been set.

### **8.2.3 Voice Mail Number**




- 1) Press Menu-> **Short Messages**->**Voice Messages**.
- 2) Scroll to the **Voice Mail Number** and press **OK**.
- 3) Display the voicemail number you have set. You may also press **OK** modify this number.

---


## 9 RECENT CALLS

If there is (are) missed call (s), a prompt "Missed N Call(s)" will be displayed on the standby screen. At this time you can view the detailed information of the missed calls in the "recent calls /missed calls" menu. Each record contains number or name (if number is already in the phonebook), date, time etc.

### 9.1 Missed Calls


- 1) Press Menu, then scroll to **Recent Calls**
- 2) Press the key  -> **Missed Calls**-> **OK**
- 3) Press the up and down-direction key to view the information of other missed calls.
- 4) Press the key  to dial out this number
- 5) press the key  to return to higher-level menu.
- 6) Missed calls are divided into the following two situations:

If the number is not stored in the phone or UIM card, the phone number will be displayed in the missed call list.


Select one of the numbers and press the key  to access the sub-menu of this missed call, which has the following 5 items:



- **VoIP:** Call the current number you are browsing.
- **Save To New Location:** Save this missed call number as a new record to the phone.
- **Save To UIM:** Save this missed call number to the UIM card.
- **Save To Existing Location:** Save this missed call number to an existing record.
- **Send Message:** Send short message to this missed call number.
- **Delete Entry:** Delete this missed call number record.

If this number is already stored in the phone or UIM card, the caller's name will be displayed in the missed call list.

Select one of the names and press the key  to access the sub-menu of this missed call, which has the following 2 functions: Send Message and Delete Entry.




### 9.2 Received Calls

- 1) Press Menu, then scroll to **Recent Calls**
- 2) Press the key , Scroll to **Received Calls**-> **OK**
- 3) Press the up and down-direction key to view the information of other received calls.

- 
- 4) Press the key  to dial out this number
  - 5) press the key  to return to higher-level menu.
  - 6) Functional operation and display mode is the same as those of missed calls.


Save 20 recent received calls automatically.

### 9.3 Dialed Calls


- 1) Press Menu, then scroll to **Recent Calls**
- 2) Press the key , Scroll to **Dialed Calls**->**OK**
- 3) Press the up and down-direction key to view the information of other dialed calls.
- 4) Press the key  to dial out this number
- 5) press the key  to return to higher-level menu.
- 6) Functional operation and display mode is the same as those of missed calls.

Save 20 recent dialed calls automatically.

### 9.4 Call Times

- 1) Press Menu, then scroll to **Recent Calls**
- 2) Press the key , Scroll to **Call Times**->**OK**
- 3) Press the up and down-direction key to view the information of each call time.
  - **Received Calls:**Totalize all received calls time since the timer was reset last time.
  - **Dialed Calls:** Totalize all dialed calls time since the timer was reset last time.
  - **All Calls:** Totalize all dialed calls time since the timer was reset last time.
  - **Reset Timer:** Reset all the above-mentioned timers.

### 9.5 Delete All

- 1) Press Menu, then scroll to **Recent Calls**
- 2) Press the key , Scroll to **Delete All**->**OK**
- 3) There are 4 ways to delete the call records:
  - **Delete Missed Calls:** Delete all records of missed calls.




- 
- **Delete Received Calls:** Delete all records of received calls.
  - **Delete Dialed Calls:** Delete all records of dialed calls.
  - **Delete All:** Delete all records of recent calls.


---

## 10 SETTINGS


### 10.1 Display Settings

- 1) Press Menu, then scroll to **Settings**
- 2) Press the key  ->**Display Settings**->**OK**
- 3) **Display Settings** are divided into the following three settings:
  - **Banner:** After switched on, the phone will display this banner on the screen. You may input the greetings you like.
  - **Backlight Time:** This option provides you different time periods for your selection as the backlight duration time.
  - **Language:** You can choose the suitable language to display.


### 10.2 Phone Settings

- 1) Press Menu, then scroll to **Settings**
- 2) Press the key  ->**Phone Settings**->**OK**
- 3) **Phone Settings** include the following two settings:
  - **Missed call Alert:** If the 'Miss call reminding' is set "On", when there is miss call the phone will give off a "tick" tone, or no tone will be present.
  - **50 Seconds Alert:** If the 50 Seconds Alert is set "On", during conversation, the phone will give off a "tick" tone to prompt you 10 seconds before one full minute is reached; or no tone will be present.



### 10.3 VoIP Number

- 1) Press Menu, then scroll to **Settings**
- 2) Press the key  ->**VoIP Number**->**OK**
- 3) To set the IP number

### 10.4 Call Settings

- 1) Press Menu, then scroll to **Settings**
- 2) Press the key  ->**Call Settings**->**OK**
- 3) **Call Settings** include the following two settings:

---

- **Divert Calls:** Divert Calls is an additional service of the network, which may divert incoming calls that meet requirements to other number specified. Users must subscribe to this service from your network operator prior to the following operations. Press the up or down-direction key to select the proper condition in the list and then press the key  to confirm, or press the key  to cancel and return to higher-level menu.

(Busy): When somebody is calling you and you are in a conversation.

(No Answer): When someone is calling you and you did not answer the call.

(Unreachable): When someone is calling you and it was not connected, including your phone is power-off or out of service range, the call will be diverted.

(All Calls): Divert all incoming calls.

(Cancel All): Cancel all call diverting.

- **Call Waiting:** If call waiting function is enabled, when someone is making a call to your phone and you are in a conversation, the third party will be on held.

## 10.5 Security Settings



1) Press Menu, then scroll to **Settings**

2) Press the key  ->**Security Settings**->**OK**

3) You should input the right Security Code, if you have set already. Then you will get the following options:

- **Phone Lock:**



(Password Request): If "Password request" is set on, from then on the system will prompt you to enter the phone's password when switched on and only when the password is correctly entered can you use the phone.

(Change Password): Change the phone's password via this option. Enter the same new password for two times and press the key  to confirm. The new password will become effective. During this course you may press the key  to discard the change at any time and return to higher-level menu.

- **PIN Setting:**

PIN code is a security password to protect the UIM card, which is provided by the network operator. You must take good care of it and not disclose it. You may set the PIN code verification on to prevent illegal user to use your UIM card. You may also change the PIN code.

(PIN Check): If "PIN Check" is set on, from then on the system will prompt you to enter the phone's password when switched on and only when the password is correctly entered can you use the phone.

(Change PIN): Change the phone's PIN code via this option. Enter the new PIN code for two time and press the key  to confirm. The new PIN code will become effective. During this course you may press the key  to discard the change at any time and return to higher-level menu.

---

- **Call Barrings:**


You may restrict calling range and call receiving range via call barring function.

Restirct Outgoing: If Restirct Outgoing is enabled, you will not be able to call the numbers in the user group you selected.

Note: In order to protect your benefits, if the PIN code is entered incorrectly for three consecutive times, the UIM will be locked. At this time the card will not work normally. Only after the PUK code provided by the network provider is entered can the PIN code be decoded.

## **10.6 Reset Settings**

This function is used for restoring to the default factory setting.


- 1) Press Menu, then scroll to **Settings**
- 2) Press the key  ->**Reset Settings**->**OK**
- 3) You can confirm whether to reset.

---

## 11 TOOLS

### 11.1 Alarm


You may set the alarm clocks as required.

- 1) Press Menu, then scroll to **Tools**
- 2) Press the key  ->**Alarm**->**OK**
- 3) Press the up and down-direction key in the tools main menu and select alarm. Press the left soft key to access the alarm list.
- 4) Press the up and down-direction key to select one of the alarms and press the left soft key to access the alarm setting.
- 5) Press the left and right-direction key in the alarm clock setting interface to select alarm clock setting content. You may set the alarm clock's State, Time, Mode.

6) When you have selected state, press the up and down-direction key to select on or off; when you have selected time, you can input the time directly; when you have selected mode, press the up and down-direction key to select the mode of the alarm.

### 11.2 Calculator

Calculator can perform four fundamental operations (plus, minus, multiply, divide).




- 1) Press Menu, then scroll to **Tools**
- 2) Press the key  ->**Calculator**->**OK**
- 3) Use 0-9 keys to input a value. Press the key '\*' to input minus symbol. Press direction keys to select one of the four operations: plus, minus, multiply and divide. Press numeric keys to input the second operation value and then select equal mark. The result will be displayed on the screen.

---


## 12 SOUND

This set of menu provides users with various functions relevant to sound.


### 12.1 Ring Tone

- 1) Press Menu, then scroll to **Sound**
- 2) Press the key  ->**Ring Tone**->**OK**
- 3) You may select from the various ringing tones provided by this handset as your incoming call ringing tone.
- 4) Press the up and down-direction key to select proper ringing tone in the list. Press the key  to confirm or the key  to cancel.

### 12.2 SMS Tone


- 1) Press Menu, then scroll to **Sound**
- 2) Press the key  ->**SMS Tone**->**OK**
- 3) This handset is equipped with several short message ringing tones itself for user's selection as short message prompt tone. Usage method is like that of "Ring Tone".

### 12.3 Alarm Tone


- 1) Press Menu, then scroll to **Sound**
- 2) Press the key  ->**Alarm Tone**->**OK**
- 3) This handset provides several alarm clock ringing tones for user's selection as alarm clock prompt tone. Usage method is like that of "Ring Tone".

### 12.4 Call Alert Mode

If you have missed calls which you didn't read, you will be alert one time every min.

- 1) Press Menu, then scroll to **Sound**
- 2) Press the key  ->**Call Alert Mode**->**OK**
- 3) To select whether you need this function

### 12.5 SMS Alert Mode

If you have messages which you didn't read, the icon  will be display in the icon line.

- 1) Press Menu, then scroll to **Sound**

---

2) Press the key  ->SMS Alert Mode->OK

3) To select whether you need this function



## 12.6 Volume

1) Press Menu, then scroll to **Sound**

2) Press the key  ->Volume->OK

3) You can choose thses two options:

- Ring: You can adjust the volume of Ring
- Key Sound: You can adjust the volume of Key Sound

Press the up and down-direction key to select proper volume level. Press the key  to confirm or press the key  to cancel.

---

## 13 TECHNICAL INFORMATION

FX805P, one Fixed Wireless Phone which is based on Qualcomm's QSC6010 RF CMOS chipset, can support all kinds of CDMA 1X 800MHz networks. Its practicality and high integration reduces the cost and make it easy to come to the market. Congratulations on your purchase of this Phone, because it has greatly enhanced voice quality and can provide various advanced features.

This Phone provides the following features:

- 128x64 LCD display with status indicators
- Whip antenna
- Speaker phone
- AC power supply
- Chargeable battery group
- A choice of 10 ring tones
- Last number redial
- Speed dialing
- Dial tone
- Adjustable ring and voice volume
- Calculator and alarm functions
- A big amount of phonebook: 200 columns (can save 5 numbers per column)
- A big amount of SMS: 100 columns (Inbox 50 columns, Outbox 50 columns)
- Display the incoming call number
- Support other language



---

## 14 SAFETY INFORMATION

- Do not use with car battery. It may cause an electric shock, fire, breakdown or transformation.
- Avoid exposure to high temperature or humidity. Avoid wetting the unit with any liquid. If the unit gets wet, turn the power off immediately and remove the backup batteries and AC power supply.
- Keep it dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and wrap or melt certain plastics. We need to mention temperatures here, as this is subjective.
- Do not store it in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which could damage the phone's electronic circuit boards. We need to mention temperatures here, as this is subjective.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help. It may cause fire, electric shock and breakdown.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install the unit in places where there is direct sunlight. Also do not put the unit on carpets or cushions. It may cause fire or breakdown.
- Before using plug, check with home power voltage. Inaccurate power voltage may cause fire and damage.
- Do not plug many power cords in outlet. It may cause fire or electric shock.
- Do not remodel the power cord or disassemble. If power cord or plug is impaired, do not use it. It may cause fire or electric shock.
- Do not install in an ill-ventilated place. It may cause fire or electric shock.
- Do not touch the plug with wet hands. When disconnecting the power cord of any accessory, grasp and pull the plug, not the cord. Not doing so may cause fire or electric shock.
- Do not put heavy things on the power cord. Do not bend power cord too much. It may cause fire or electric shock.
- Do not peel off battery. Do not short-circuit. You may get hurt or it may start fire by generation of heat or explosion.
- Do not throw and impact battery. Do not dispose of batteries by putting them in fire. It may explode.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. It may be a cause the adapter to breakdown.
- This phone has been tested and meets FCC RF exposure guidelines when the antenna is positioned a minimum of 1.5cm from the body.

---

## 15 WARRANTY

Limited Warranty for Personal Communication Products, Accessories and Software.

What Does this Warranty Cover? Subject to the exclusions contained below,

BRIGHTSTAR warrants the Motorola branded products that BRIGHTSTAR manufactures ("Products"), to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy and applies as follows to new Products which are accompanied by this written warranty:

### 15.1 PRODUCTS COVERED

1. The Fixed Wireless Telephone.
2. The accessories included with the Fixed Wireless Telephone.

### LENGTH OF COVERAGE

- A. One (1) year from the date of purchase by the original consumer/purchaser of the product.

### 15.2 EXCLUSIONS

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that results from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions; or (d) other acts which are not the fault of BRIGHTSTAR, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that results from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

---

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than BRIGHTSTAR or its authorized service centers are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed altered or obliterated; (b) Seals or those that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of products, due to any communication service or signal you may subscribe to or use with the Products is excluded from coverage.

**Who is covered?** This warranty extends only to the first consumer/purchaser, and is not transferable.

**What will BRIGHTSTAR Do? BRIGHTSTAR,** at its option, will at no charge repair, replace or refund the purchase price of any Product that does not conform to this warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

**How to Obtain Warranty Service or Other Information**

For information on how to obtain service, contact the place where the product was purchased or a BRIGHTSTAR Service Center in your country.

In order for this Warranty to take effect, take your unit, along with this policy, to the place of purchase or to a BRIGHTSTAR Authorized Service Center.

You will receive instructions on how to ship the Products, at your expense, to a BRIGHTSTAR Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

---

**What Other Limitations Are There?** ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL BRIGHTSTAR BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

---

## 16 RF EXPOSURE INFORMATION

To maintain compliance with FCC RF exposure requirements, use handset that maintain a 20cm separation distance between the user's body and the host.

MPE limit for RF exposure at prediction frequency is  $0.558\text{mW}/\text{cm}^2$  for CDMA 800MHz. The MPE for this device is  $0.158\text{ mW}/\text{cm}^2$ . It satisfy RF exposure compliance.