



motorola



---

# User's Guide

5" Digital Video Baby Monitor With Wi-Fi® Internet Viewing

Models: MBP855CONNECT, MBP855CONNECT-2,  
MBP855CONNECT-3, MBP855CONNECT-4

*The features described in this User's Guide are subject to modifications without prior notice.*

# Welcome...

## *to your new Motorola Digital Video Baby Monitor!*

Thank you for purchasing the Digital Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their play room.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

**US and Canada 1-888-331-3383**

**Email: [support@motorolahome.com](mailto:support@motorolahome.com)**

**On the Web: [www.motorolahome.com/support](http://www.motorolahome.com/support)**

---

This User's Guide provides you with all the information you need to get the most from your product.


Before you use the Digital Video Baby Monitor, we recommend that you fully charge the battery that is pre-installed in the Parent Unit, so that it continues to work if you disconnect it from the power supply. Please read the Safety Instructions on pages 8 - 10 before you install the Units.

## **Got everything?**

- 1 x Parent Unit
- 1 x Baby Unit (Camera)
- 1 x Power adapter for Parent Unit
- 1 x Power adapter for Baby Unit
- 1 x Stargrip



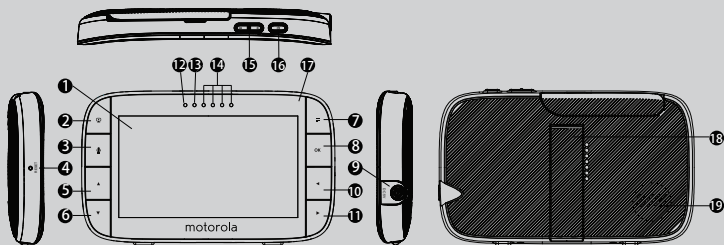


In multi-camera packs, you will find one or more additional Camera Units with power adapters.

# Overview of the Parent Unit




1. Display (LCD screen)
2. VIDEO ON/OFF button Press to turn the LCD screen ON/ OFF (Note: audio is maintained.)
3. TALK button Press and hold to speak to your baby
4. RESET button (recessed - use small pin)
5. UP button Normal Mode: Tilt camera Up  
Menu Mode: Move Up menu options
6. DOWN button Normal Mode: Tilt camera Down  
Menu Mode: Move Down menu options
7. MENU button Press to open / close the Menu options
8. OK button **OK**
9. Micro USB power adapter outlet
10. LEFT button Normal Mode: Pan camera Left  
Menu Mode: Move Left along menu options
11. RIGHT button Normal Mode: Pan camera Right  
Menu Mode: Move Right along menu options
12. Charging LED:  
BLUE when mains power connected.
13. Parent Unit ON/OFF LED (Green)
14. Audio Level LEDs (Green, Amber, Red, Red)
15. Volume buttons  
Press -/+ to decrease/increase Volume level on Parent Unit
16. Power button Press and Hold to turn the Parent Unit ON/OFF
17. Microphone
18. Stand
19. Speaker

## Parent Unit menu icons

	Signal Level Indication (5 Levels)
	Night Vision Mode (Video also changes to Black/White)
	Talk Mode On
	Volume Level Indication (4 Levels)
	Panning Camera Left
	Panning Camera Right
	Tilting Camera Up
	Tilting Camera Down
	Zoom Level Control (1X, 2X)
	Brightness Level Control (8 Levels)
	Lullaby Control (5 Sound Selections)
	Alarm Setting (6h, 4h, 2h, OFF) On status bar, indicates alarm set, and when flashing, that alarm time has been reached or missed.
	Temperature scale select (°C / °F) Readings display in BLUE, but turn RED if > 29°C / 84°F, or < 14°C / 57°F Displays HH °C / °F if > 36°C / 97°F. Displays LL °C / °F if < 1°C / 34°F.
	Camera Control (scan  , view  , add  , delete  )
	Set Screen Off Timer (Off  , 5 min, 30 min, 60 min)
	Indicates the screen off timer is set
	Volume Level Control (8 Levels + Off)
	Indicates volume is off
	No Baby Unit detected
	View multiple cameras on screen. Available when you have more than 1 Baby Unit (Camera).

# Overview of Your Baby Unit (Camera)

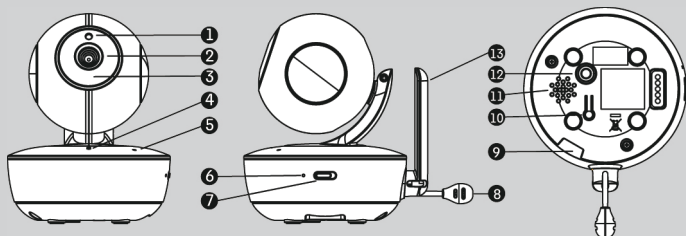

- |   |                               |
|---|-------------------------------|
| 1. Photo Sensor (Night Vision Mode)   | 7. POWER ON/OFF switch        |
| 2. Camera Lens  | 8. Temperature Sensor         |
| 3. Infrared LEDs (x 8, for night vision)  | 9. Micro-USB Power Socket     |
| 4. Power LED (Blue when on)<br>On when linked to Parent Unit<br>Flashes when searching for Parent Unit                    | 10. PAIR Button               |
| 5. Microphone   | 11. Speaker                   |
| 6. Camera Battery LED<br>On when AC power is connected to camera.<br>Flashes when the battery level of the camera is low. | 12. Star Grip or Tripod Mount |
|   | 13. Antenna                   |

## Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product, so keep the Baby Monitor at least 5 feet away from these types of products, or turn them off if they appear to be causing interference
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the room(s).




## Table of contents


<b>1. Safety Instructions</b>	<b>8</b>
<b>2. Getting Started</b>	<b>11</b>
2.1 Baby Unit Power Supply	11
2.2 Parent Unit Power Supply	12
2.3 Registration (Pairing)	14
<b>3. Using the Baby Monitor</b>	<b>15</b>
3.1 Setting Up	15
3.2 Pan and Tilt	15
3.3 Night Vision Mode	15
3.4 Talk Mode	15
3.5 Video ON/OFF	15
3.6 Temperature Display (HH °C / °F or LL °C / °F)	16
<b>4. Parent Unit Menu Options</b>	<b>17</b>
4.1 Volume	17
4.2 Brightness	17
4.3 Lullaby	17
4.4 Zoom	17
4.5 Alarm	17
4.6 Camera Control	18
4.6.1 Add (pair) a camera	18
4.6.2 View a camera	18
4.6.3 Delete a camera	19
4.6.4 Scan camera	19
4.7 Temperature	19
4.8 Power Saving Mode	20
4.9 View multiple cameras on screen	20
<b>5. Wi-Fi® Internet Viewing</b>	<b>21</b>
5.1 Minimum System Requirements	21
5.2 Getting Started - Connecting Devices	22
5.2.1 Setup	22
5.3 User Account and Camera Setup on Android™ Devices	23
5.3.1 Power ON and Connect the Camera	23
5.3.2 Download Hubble for Motorola Monitors App	23
5.3.3 Run Hubble for Motorola Monitors App on Android™ device	23
5.3.4 Add the Camera to your account	24
5.4 User Account and Camera Setup on iPhone®/iPad®	27
5.4.1 Power ON and Connect the Camera	27



5.4.2	Download Hubble for Motorola Monitors App .....	27
5.4.3	Run Hubble for Motorola Monitors App on iPhone®/iPad® ...	27
5.4.4	Add the Camera to your account.....	28
5.5	Camera Functions: .....	33
5.5.1	Connecting the Camera Unit to power .....	33
5.5.2	Overview of the Features on Hubble App .....	33
5.6	Working with PC/Notebook .....	36
5.7	Procedure for Resetting the Camera .....	36
6.	<b>Disposal of the Device (Environment) .....</b>	<b>37</b>
7.	<b>Cleaning .....</b>	<b>38</b>
8.	<b>Help .....</b>	<b>39</b>
9.	<b>General Information .....</b>	<b>47</b>
10.	<b>Technical Specifications .....</b>	<b>52</b>

## 1. Safety Instructions

 **WARNING:**  
Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

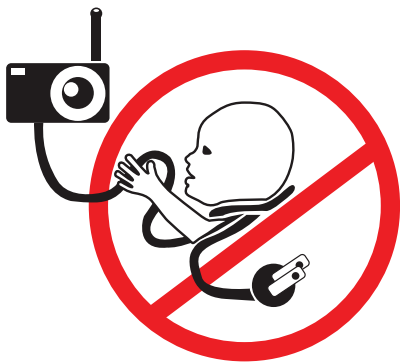



## CAMERA SET UP & USE:

- Choose a location for the Baby Unit that will provide the best view of your baby in their crib.
- Place the Baby Unit on a flat surface, such as a dresser, desk, or shelf or mount the Unit on a suitable Tripod or Stargrip using the screw mount on the underside of the stand.
- **NEVER** place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away).

### WARNING

*This digital video Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.*

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away)
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor near water.
- Do not place the Baby Monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

- Do not touch the plug contacts with sharp or metal objects.

### **CAUTION**

*The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which is not a user-accessible item. If you think the battery needs replacing, please contact the helpline. Do not try to replace it yourself.*

*Risk of explosion if battery is replaced by an unapproved battery type.*


*Dispose of used batteries according to their instructions.*

FCC/IC RF Radiation Exposure Statement Caution: This Transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

IC Radiation Déclaration d'exposition Attention: Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20 cm de toute personne.

## 2. Getting Started

### 2.1 Baby Unit Power Supply

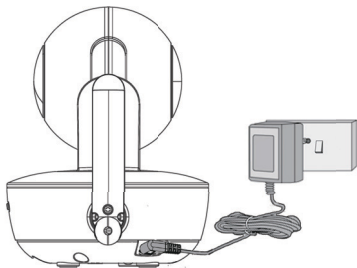

1. Connect the micro USB plug of the power adapter to the Baby Unit (camera) and the other end to a suitable electrical outlet.

#### **NOTE**


*Only use the enclosed Power Adapter (5V DC / 1500mA).*

2. Slide the POWER ON/OFF switch to the ON position to turn the Baby Unit on.
3. Slide the POWER ON/OFF switch to the OFF position to turn the Baby Unit off.

#### **IMPORTANT**



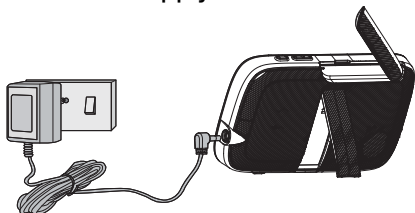

*The Baby Unit is able to operate without AC power for up to 3 hours with the support of the built-in rechargeable battery (Ni-MH battery 3.6V, 900mAh). Please charge the unit for at least 16 hours before first time use. The battery is not a user-accessible item. Please contact the helpline if you think it needs replacing.*

## 2.2 Parent Unit Power Supply




### IMPORTANT

*The Parent Unit is assembled with a built-in rechargeable battery pack (Lithium ion battery 2000mAh, to give up to 5 hours monitor operation), please charge it for 16 hours before initial use. The battery is not a user-accessible item. Please contact the helpline if you think it needs replacing.*

1. Connect the micro USB plug of the power adapter to the Parent Unit and the other end to a suitable electrical outlet. Only use the enclosed power adapter (5V DC / 1000mA) with the DC plug.
2. Press and hold the  POWER ON/OFF button for 3 seconds to switch ON the Parent Unit, if it has not turned on automatically.
3. Once the Baby and Parent Units are switched on, the display on the Parent Unit will show the color video captured by the Baby Unit. If the baby's room is dark, the video will display in black and white, with a  icon showing, due to the infra-red illumination by the Baby Unit.
4. If there is no connection or you are out of range, the video display will go off, a  symbol will appear on the screen, and the Parent Unit will beep repeatedly. Move the Parent Unit closer to the Baby Unit until the link is re-established.
5. Press and hold the  POWER ON/OFF button, until the progress bar finishes scrolling, to turn OFF the Parent Unit.

### NOTE

*The battery icon  turns RED to indicate the battery is low and the parent unit will beep every 15 seconds. This alert user that the battery needs to be charged. The parent unit will take 16 hours to charge fully.*

***When charging***

1. If the Parent Unit is turned OFF with the adapter plugged in, a 2-pin plug logo will appear on-screen for about 5 seconds, and then a flashing battery logo will display for 15 seconds. The Blue LED at the top left will light up; indicating that the adapter is plugged in and charging is continuing.
2. While the power is ON and the adapter is plugged in, the battery icon at the top right corner of the screen will show that the battery is charging. The Charging LED at the top left of the Parent Unit will light up blue to indicate that the adapter is plugged in.

## 2.3 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedures below:

1. Press the **≡** button of the Parent Unit and the menu bar will pop up.
2. Press the **◀** LEFT button or **▶** RIGHT button until **👤** is highlighted, and the **✕ del/ + add/ 👁 view/ ↻ scan** menu will pop up.
3. Press the **▲** UP button or **▼** DOWN button to select **+ add**, and press the **OK** button to confirm.
4. Camera **\*1/2/3/4** will pop up, press the **▲** UP button or **▼** DOWN button to select the desired Camera, and press the **OK** button to start searching for a camera unit, with **"press PAIR on cam"** shown.  
***Note:** If a camera is currently paired with the Parent Unit, its camera location (with a \* against it) cannot be selected for a new registration.*
5. Press and hold the **PAIR** button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

### NOTE

*If a particular Baby Unit was registered previously, registering this current Baby Unit again will cancel its old registration.*

## 3. Using the Baby Monitor

### 3.1 Setting Up

- Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.
- Adjust the angle of the Baby Unit's camera by using the pan and tilt function (the arrows on the right and left side of the Parent Unit) to move up, down, left, and right until you are satisfied with the image shown on the Parent Unit

#### NOTE

*Do not place the Baby Unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.*

### 3.2 Pan and Tilt

The camera can be remotely controlled from the Parent Unit when in a camera viewing mode.

1. Press the ▲ UP button or ▼ DOWN button on the left side of the Parent Unit to tilt the camera up or down.
2. Press the ◀ LEFT button or ▶ RIGHT button on the right side of the Parent Unit to pan the camera left or right.


### 3.3 Night Vision Mode

The Baby Unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor on the top of the Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The 🌙 icon will be displayed at the top of the Parent Unit screen.

### 3.4 Talk Mode

Press and hold the TALK button 🗣️ on the Parent Unit to talk to your baby through the Baby Unit's loudspeaker. The 🗣️ will be displayed at the top center of the Parent Unit screen.

### **3.5 Video ON/OFF**

Press  VIDEO On/Off button to turn the LCD screen on or off, while still leaving the audio monitor on.

### **3.6 Temperature Display (HH °C / °F or LL °C / °F)**



The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top left of the LCD screen in °C or °F (see 4.7 “Temperature scale” for how to change). The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F. The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F. The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.

The temperature reading updates about every minute.



## 4. Parent Unit Menu Options






 

### 4.1 Volume

1. Press the Volume button - or + to adjust the volume level. The  icon will pop up and you can select the desired volume from level 0 - 8. (The default volume level setting is level 5, and level 0 is OFF .)





### 4.2 Brightness

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired brightness from level 1 - 8. (The default brightness is level 4.)
4. Press the  button to close the menu bar.



 




### 4.3 Lullaby


1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select from the 5 sounds available. If a sound is selected, it will repeat continuously until it is deselected or the TALK button is pressed. (The default setting is lullaby OFF.)
4. Press the  button to close the menu bar.

### 4.4 Zoom

1. Press the  button and the menu bar will pop up with  highlighted.
2. Press the  UP button or  DOWN button to select **1X** or **2X** zoom. (The default setting is **1X**.)


















### 4.5 Alarm

 1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select the alarm time (**6h**, **4h**, **2h**). The  icon will appear on the upper right of the Parent Unit screen when alarm is on. (The default setting is Alarm **OFF**.)

4. If an alarm time is selected, the Parent Unit will beep for about 1 minute after every 6, 4 or 2 hour period, and the  will flash. Press any button to stop the alarm.

## 4.6 Camera Control

### 4.6.1 Add (pair) a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  delete/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  add, and press the **OK** button to confirm.
4. Camera     will pop up, press the  UP button or  DOWN button to select the desired Camera, and press the **OK** button to start searching for a camera unit.


















**Note:** Models with more than one camera will have \* next to each paired camera. If a camera is currently paired with the Parent Unit, its camera location (with a \* against it) cannot be selected for a new registration.

5. Press and hold the **PAIR** button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

### NOTE



 


A camera can only be registered to one Parent Unit at any one time.

### 4.6.2 View a camera





















1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  delete/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  view, and press the **OK** button to confirm.
4. Camera     will pop up. Press the  UP button or  DOWN button to select the desired camera, and press the **OK** button to view the picture from that camera.

**Note:** Only camera locations with a \* can be selected.

**TIP**

Quick method to view cameras instead of entering into the menu bar. Directly press the **OK** button to toggle between the available Camera options from , , , , . The selected option will appear in the upper right of the Parent Unit screen.

### 4.6.3 Delete a camera
















1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  delete/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  delete, and press the **OK** button to confirm.
4. Camera     will pop up, press the  UP button or  DOWN button to select the desired Camera, and press the **OK** button.
5. Press the  UP button or  DOWN button to select , then press the **OK** button to delete that registration.

**NOTE**






You are not allowed to delete the camera if there is only one registered camera in the system.

### 4.6.4 Scan cameras




This function is only available when you have more than 1 Baby Unit (Camera).

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  delete/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  scan, and press the **OK** button to confirm.
4. The screen will then display images from different registered cameras in a loop of Camera    , changing about every 12 seconds.



**TIP**

Quick method to view cameras instead of entering into the menu bar. Directly press the **OK** button to toggle between the available Camera options from , , , , . The selected option will appear in the upper right of the Parent Unit screen.

## 4.7 Temperature scale

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
3. Press the ▲ UP button or ▼ DOWN button to select °C or °F.
4. Press the  button to close the menu screen after selection has been made.

## 4.8 Power Saving Mode





1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
3. Press the ▲ UP button or ▼ DOWN button to select auto video off after 5 mins, 30 mins or 60 mins if operating on batteries only.
4. Press **OK** to select option and close menu screen.

### NOTE

*The audio will remain and you can press any key to switch the video back on.*

## 4.9 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Split Screen function is on, you can view multiple cameras on the screen, although only hear audio from one screen at a time.

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
3. Press the ▲ UP button or ▼ DOWN button to select Split Screen On  / Split Screen Off .
4. When the Split Screen function is On, you can press the ◀ LEFT button or ▶ RIGHT button/ ▲ UP button or ▼ DOWN button to switch between cameras to hear the audio from the selected camera, indicated by the red frame.

### Note:

*When in multi-screen mode the TALK button operates with the selected camera. If you want to play a lullaby sound through a camera, you must set this before selecting the multi-screen mode.*

*Zoom does not work in multi-screen mode.*

## 5. *Wi-Fi® Internet Viewing*

### 5.1 Minimum System Requirements

#### Web Portal

- Windows® 7
- Mac OS® 10.7
- Chrome™ 24
- Internet Explorer® 9
- Safari® 6
- Java™ 7
- Firefox® 18.0
- Adobe® Flash® Player 15.0

#### Android™ System

- Version 4.2 or above

#### iPhone®/iPad® iOS

- Version 7.0 or above

#### High Speed (Wi-Fi®) Internet

- At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <http://www.speedtest.net>)

## 5.2 Getting Started - Connecting Devices

How does it work?



When a user tries to access the Camera, the Hubble server will authenticate the user's identity before it grants access to the Camera.

### 5.2.1 Setup

- Connect the power adapter to a suitable electrical outlet and insert the plug into the micro USB socket on the back of the Camera Unit.
- Slide the ON/OFF switch to the ON position.
- The Camera Unit must be within range of the Wi-Fi® router with which you want to connect. Make sure that you have the password of the router for the setup process.

**Behavior of the status Indicator LED:**

Pairing and setting up	Flashes slowly in red and blue
Connected	Flashes slowly in blue
Paired but not connected	Lights up in blue
Ready for connection	Flashes slowly in blue

#### Note

*You can only setup via a compatible smartphone or tablet, and not via a PC.*

## 5.3 User Account and Camera Setup on Android™ Devices

### What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- Device with Android™ system version 4.2 and above

### 5.3.1 Power ON and Connect the Camera

- Connect the power adapter to a suitable electrical outlet and insert the plug into the micro USB socket on the back of the Camera Unit.
- Make sure that the ON/OFF switch is in the ON position.
- The Camera's Red LED flashes after the Camera has finished booting. When you hear one beep, this means that the Camera is ready for setup.

### 5.3.2 Download Hubble for Motorola Monitors App


- Go to Google Play™ Store to search for "Hubble for Motorola Monitors".
- Download "Hubble for Motorola Monitors" App from Google Play™ Store and install it on your Android™ device

### 5.3.3 Run Hubble for Motorola Monitors App on Android™ device

- Ensure that your Android™ device is connected to your Wi-Fi® router.
- Run the "Hubble for Motorola Monitors" App, select create an account and enter account information. Read through the Terms of Service, then select "I agree to the Terms of Use" before you tap **Create**. (Picture A1)

### Note


*If you already have a Hubble App account, please select Already have an Account? to go to the next step.*

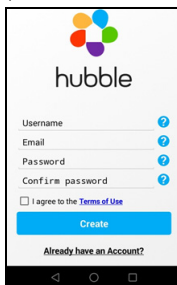

A1

### 5.3.4 Add the Camera to your account

- Tap **+** on the top right corner of the screen to add camera. (Picture A2)

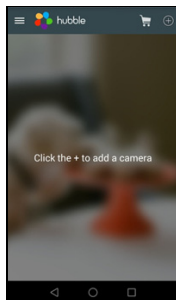

A2

- The following setup instructions will appear on the screen. (Picture A3)




A3

- Plug in and switch on the camera, and wait for a couple of minutes for it to warm up.
- Tap **Continue** when the Camera LED starts to blink.




- The following setup instructions will appear on the screen. (Picture A4)

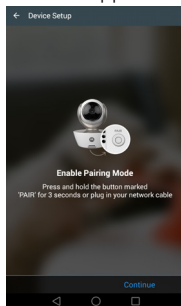


A4

- Press and hold the **PAIR** button on the underside of the Camera Unit for 3 seconds. You will then hear a beep tone, followed by a voice prompt indicating that the Camera is ready for pairing.
- Tap **Continue**.
- The App will automatically search for and connect to your Camera as shown in the pictures below. (Pictures A5, A6)
- The blue/red color LED on the Camera Unit will flash.

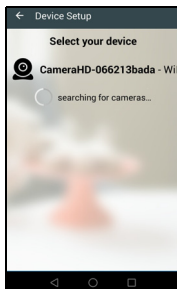


A5

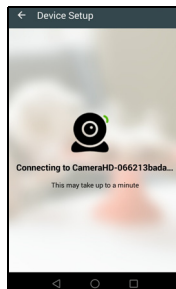


A6

- Select your Wi-Fi® Network, enter your password and then tap **Connect**. (Pictures A7, A8)

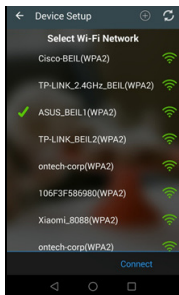


A7

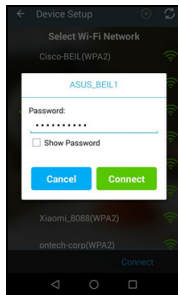


A8

- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status. (Pictures A9, A10)
- If connection fails, please tap **Retry** and repeat the steps starting from 5.3.4.

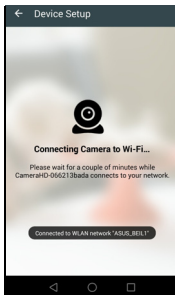

A9

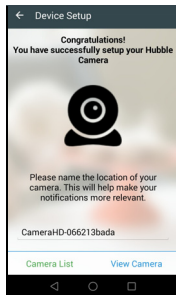

A10

- Tap **View Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will flash in blue.

## 5.4 User Account and Camera Setup on iPhone®/iPad®

### What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- iPhone® / iPad® with iOS version 7.0 and above

### 5.4.1 Power ON and Connect the Camera

- Connect the power adapter to a suitable electrical outlet and insert the plug into the micro USB socket at the back of the Camera.
- Make sure that the ON/OFF switch is in the ON position.
- The Camera's red LED flashes after the Camera has finished booting. When you hear one beep, this means that the Camera is ready for setup.

### 5.4.2 Download Hubble for Motorola Monitors App


- Go to App Store to search for "Hubble for Motorola Monitors".
- Download "Hubble for Motorola Monitors" App and install it on your iPhone®/iPad®.

### 5.4.3 Run Hubble for Motorola Monitors App on iPhone®/iPad®

- Ensure that your iPhone®/iPad® is connected to your Wi-Fi® Router.
- Run the "Hubble for Motorola Monitors" App, select create an account and enter account information. Read through the Terms of Service, and then select "I agree to the Terms of Service" before you tap **Create**. (Picture i1)

### NOTE


If you already have a Hubble App account, please select *Already have an Account?* to go to the next step (Picture i1).

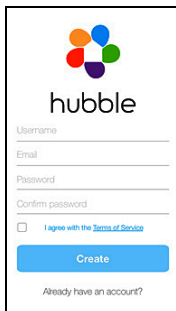

i1


## 5.4.4 Add the Camera to your account

- Tap **+** on the top right corner of the screen to add camera. (Picture i2)

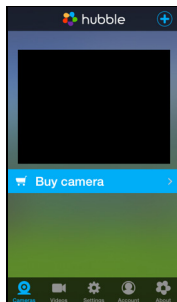


i2

- The following Bluetooth setup instructions will appear on the screen if your Bluetooth is not on. (Picture i3)

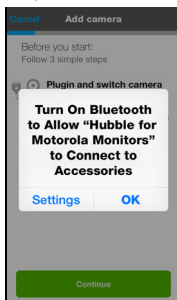


i3

- Tap **Settings** and activate Bluetooth on your iPhone®/iPad®. (Pictures i4,i5)

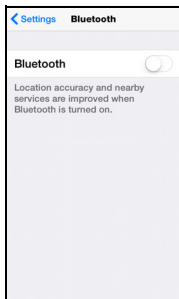


i4

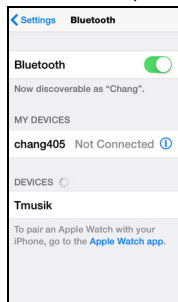

i5


- Press the **HOME** key to return to the home screen, then tap on "Hubble for Motorola Monitors" App to resume setup.
- The following setup instructions will appear on the screen. (Picture i6)  
Note that if Bluetooth is on, you will be brought to this step directly.

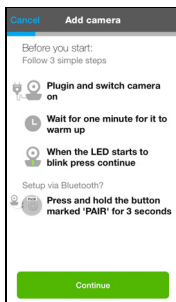


i6

- Wait for a couple of minutes for the Camera Unit to initialise and when the Camera LED indicator starts to blink, press and hold the **PAIR** button on the underside of the camera, then tap **Continue**.

- The following will appear on the screen. Select the Camera ID detected on your iOS® device and tap **Connect**. (Pictures i7, i8)

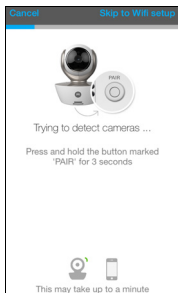


i7

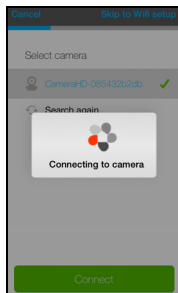


i8

- Name the location of your Camera Unit and tap **Continue**. (Pictures i9, i10)

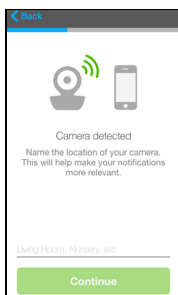


i9

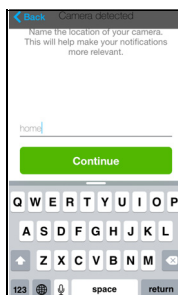


i10

- The Camera Unit will search for the Wi-Fi® network (Picture i11) and display a list of available networks. (Picture i12)

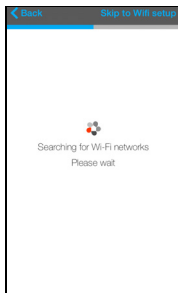


i11

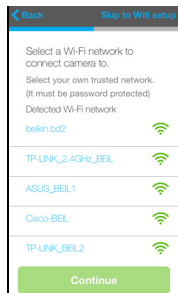


i12

- Select your Wi-Fi® network and tap **Continue**. (Picture i13)
- Enter your Wi-Fi® password and tap **Next**. (Picture i14)

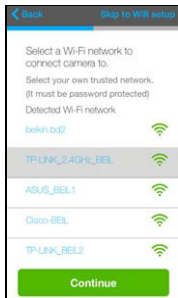


i13

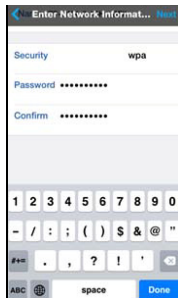


i14

- It will take a few minutes for the Camera Unit to connect to the Wi-Fi® network before showing the connection status. (Pictures i15, i16)

- If connection fails, tap **Retry** and repeat the steps starting from 5.4.4.

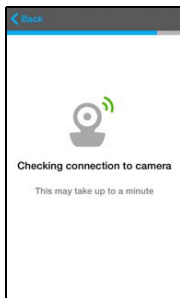

i15

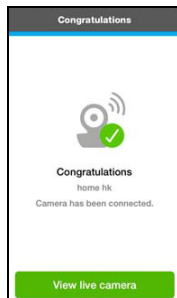

i16

- Tap **View Live Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will flash in blue.

















## 5.5 Camera Functions:








### 5.5.1 Connecting the Camera Unit to power

- Connect the power adapter to a suitable electrical outlet and insert the plug into the micro USB socket on the back of the Camera Unit.
- Slide the ON/OFF switch to the ON position. The power indicator LED will light up in green. (**Note:** To switch off the device, slide the ON/OFF switch to OFF.)
- Run the Hubble App on your smart device.

### 5.5.2 Overview of the Features on Hubble App

	<b>Menu</b>	<ul style="list-style-type: none"> <li>• Tap <b>Cameras</b>  to access the camera list.</li> <li>• Tap <b>Event Log</b>  to access the video record list that is triggered by Motion or Sound detection.</li> <li>• Tap <b>Account</b>  to access user <b>Profile</b>, subscription <b>Plan</b>, <b>Notifications</b> setting, <b>Remote Connection Setting</b> and <b>About Hubble</b></li> </ul>
	<b>Photo/Video</b>	<ul style="list-style-type: none"> <li>• Take a photo or record a video from your Camera.</li> <li>• Tap the Video icon  to activate Video function. Tap and hold the red button  to start recording and release to stop.</li> <li>• Tap the Camera icon  to switch to Camera mode. You can capture photos from Camera view.</li> </ul> <p><b>NOTE</b>  <i>Photos and videos will be stored in the internal flash memory of your smart device, and can be accessed via the Gallery or Media Player (Android™ Device). To play videos, please use the Hubble App.</i></p>

	<b>Lullaby</b>	Tap to access the <b>Melody</b> menu and select one of the 5 pre-set melodies you wish to play on your Camera Unit.
	<b>Temperature Measure</b>	The temperature reading from the temperature sensor at the back of the Camera Unit will display on the screen of your Android™ device. The readings will turn RED if the temperature goes beyond the High/Low temperature that was set in your Account.
	<b>Two-way communication</b>	Tap to activate the function. Press the round button  once to speak through the Camera Unit. Toggle the button again to listen to the audio feedback from the Camera Unit.
	<b>Speaker</b>	Tap to toggle speaker on or off.
	<b>Zoom</b>	Slide the scroll bar on the right hand side of the screen to zoom in or zoom out. You can also use the pinch-in and pinch-out gestures to zoom out or zoom in a picture. To use pinch-to-zoom gesture, your device must support multi-touch technology.

	<b>Camera Setting</b>	<p>You can change the Camera settings by tapping on the  <b>Settings</b> icon.</p> <ul style="list-style-type: none"> <li>• Tap <b>Details</b> to review Camera Name, Cloud Subscription, Change Image, Timezone, Camera Model, Firmware Version and Delete All Events.</li> <li>• Tap <b>Notifications</b> to set the sensitivity of Sound Detection, Motion Detection and to set Alerts for High temperature (Up to 33 °C or 91 °F) / Low temperature (down to 10° C or 50 °F).</li> <li>• Tap <b>Settings</b> to set Ceiling mount, Brightness and Volume.</li> </ul>
	<b>Add Camera</b>	Enter Add Camera procedures.
	<b>Delete All Events</b>	Tap to delete all events.
	<b>Select Events</b>	Check the box to select recorded event(s).
	<b>Edit Events</b>	Tap to select and delete event(s).
	<b>Delete Events</b>	Tap to delete selected event(s).

## 5.6 Working with PC/Notebook

- Go to <https://app.hubbleconnected.com/#login>

Enter your **User Name** and **Password**, and then click **Login** if you have already created an account. If you have not created an account, click the "**Create an Account**" link at the bottom of the webpage.

- Click on the Camera list paired in your account via Android™ device or iPhone®/iPad®, and the Camera view will appear on screen. You can easily stay connected with your favorite people, places and pets with live video streaming.
- On the website, you can change the **Settings** by following the menu instructions.

## 5.7 Procedure for Resetting the Camera

**Note:** *If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset. Please reset the Camera with the following procedures:*

1. Slide the ON/OFF switch to OFF.
2. Press and hold the **PAIR** button. While continuing to hold the **PAIR** button, slide the ON/OFF switch to ON.
3. Release the **PAIR** button when you hear a confirmation beep and wait for the Camera Unit to complete an internal reset procedure. The LED indicator will turn red and flash slowly when the Camera Unit is reset successfully.
4. You can add your Camera again by following the steps in section 5.3.4 for Android™ devices or in section 5.4.4 for iOS® devices.

## 6. Disposal of the Device (Environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

## 7. Cleaning

Clean your Digital Video Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

### Cleaning and care

- Do not clean any part of the Digital Video Baby Monitor with thinners or other solvents and chemicals. This may cause permanent damage to the product which is not covered by the warranty.
- Keep your Digital Video Baby Monitor away from hot, humid areas or strong sunlight. Do not let the Digital Baby Monitor get wet.
- Every effort has been made to ensure high standards of reliability of your Digital Video Baby Monitor. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.



### **IMPORTANT**

*Always switch off and disconnect the power adapter before cleaning your Digital Video Baby Monitor.*

## 8. Help

### Display

#### *No display*

- Try recharging or replacing the battery pack.
- Reset the Units. Unplug both the Units' electrical power, then plug them back in.
- Is the Unit switched on?  
Press and hold the ON/OFF button  on the Parent Unit for 3 seconds to switch it ON.
- Is the correct camera selected? Change the camera number, if necessary.
- Is the video display turned on? Press the VIDEO ON/OFF button  to turn it ON.
- When operating using batteries only, the display will go blank after 5 minutes or 30 minutes or 60 minutes to save power (depending on video settings). The Unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

### Registration

#### *If the Baby Unit has lost its link with the Parent Unit*

- Try recharging or replacing the battery pack on both the Parent Unit and Baby Unit.
- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset both the Parent Unit and Baby Unit by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 2.3 Registration (Pairing), if there is a need to re-register the Units.

### Interference

#### *Noise interference on your Parent Unit*

- Your Baby and Parent Units may be too close. Move them further apart.
- Make sure there is at least 1 to 2m between the 2 Units to avoid audio feedback.

- If the Baby Unit is too far away, it may be out of range. Move the Baby Unit closer to the Parent Unit.
- Make sure that the Baby and Parent Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone. Move the Baby Unit or Parent Unit 5 feet away from other electrical equipment.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product. Keep the Baby Unit or Parent Unit at least 5 feet away from these types of products, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

### Noise interference on your device

- To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.
- Use of other 2.4 GHz products, such as Bluetooth™ systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 5 feet away from these types of products, or switch them off if they appear to be causing interference.

### Lost connection

- Check your Wi-Fi® settings. If necessary, reconnect your Wi-Fi®. Ensure that the Wi-Fi® Camera Unit is switched ON. Wait a few minutes to make the connection with the Wi-Fi® system.

### If you forgot your password

- If you do not remember your password, tap **Forgot Password** and submit your e-mail address. A new password will be sent to your e-mail address immediately.



## Troubleshooting for Wi-Fi® Internet Viewing

Category	Problem Description / Error	Solution
Account	I am unable to login even after registration.	Please check your user name and password.
Account	I receive an error message saying: "Email ID is not registered".	Please ensure that you have registered with us. Tap <b>Create Account</b> to create an account.
Account	What do I do if I forget my password?	Click on the "Forgot Password" link on <a href="https://app.hubbleconnected.com/#lostpassword">https://app.hubbleconnected.com/#lostpassword</a> OR on your Android™ or iOS application. An email will be sent to your registered email address.
Account	I am unable to receive a new password although I have used the "Forgot password" option.	<ol style="list-style-type: none"> <li>1. The e-mail might have been sent to your Junk Mail Folder. Please check your Junk Mail Folder.</li> <li>2. There might be a delay in getting your e-mail. Please wait a few minutes and refresh your email account.</li> </ol>
Connectivity Issues	I get a message: We are having problems accessing your Camera. This could be due to the lack of an internet connection. Please wait and try again later.	<ol style="list-style-type: none"> <li>1. Please try again in a few minutes. This could be because of any issue with your internet connection.</li> <li>2. If the problem remains, please restart your Camera to check if this fixes the problem.</li> <li>3. Please restart your Wireless Router.</li> </ol>

Viewing Camera	When I am in "remote mode", the video stops after 5 minutes. How do I view for longer?	<p>When you are accessing your Camera via a network different from your home network (over the internet) your video times out after 5 minutes.</p> <p>You can click on the Camera again from the Android™/iOS application to start streaming again.</p> <p>If you are accessing from your web-browser, then you can press on the <b>Reload</b> button to start viewing your Camera video stream again.</p>
Features	The sound alert setting threshold is not right.	You can Adjust Sound Sensitivity to trigger notifications under Camera Setting menu.
Setting Up	While I am adding a new Camera to my account, I am not able to find any Cameras to add.	If you are trying to add a Camera which has previously been added into your account or another account, you will first have to reset the Camera. This can be done by pressing and holding the PAIR button at the bottom of the Camera for 5 seconds.
General	What are the supported browsers for accessing from my PC/Mac?	We recommend using Google Chrome 24 or above. However the following browsers are also supported: Internet Explorer 9.0 or above (for PC), Safari 6.0 or above (for Mac) or Firefox 18.0 or above (both PC or Mac).

General	What is the significance of LED flashing?	<p>A flashing LED indicates the following status:</p> <p><u>Slow flashing:</u> 1. Your Camera is in setup mode. You can add the Camera to your account in this mode. Out of the box, the Camera is in Setup mode. To reset to Setup mode, press and hold the PAIR button on the bottom of the Camera until you hear a beep.</p> <p><u>Slow flashing:</u> 2. The Camera is either linked to the Parent Unit monitor or a Wi-Fi® connected device.</p> <p><u>LED is stable:</u> The Camera is paired with the Parent Unit monitor or a Wi-Fi® connected device, but is not currently linked with any of them.</p>
Connectivity Issues	I am not able to access my Camera.	Please check if the Camera is within Wi-Fi® range. If the LED on your Camera is flashing slowly, please try to move the Camera closer to the router for better Wi-Fi® connectivity and try again.
Setting Up	During setup on devices for Android™ and iOS, I am not able to find my Camera during the last step and the setup fails.	Please reset the Camera to setup mode and try again. Press and hold the PAIR button on the bottom of the Camera until you hear a beep. Wait for a minute for the Camera to restart. When the Camera LED is flashing, this indicates that it is in setup mode. Now restart the setup from your smartphone again.

Connectivity Issues	Even though I am accessing my Camera from the same Wi-Fi <sup>®</sup> network, I still find my Camera is shown as remote. I can only access it for 5 minutes at a time.	Please check your wireless router settings. For example, for Buffalo brand routers there is an option called Wireless Isolation. Please disable this option.
Camera	When I try to view the Camera, I get a prompt for Camera firmware upgrade. What should I do?	Please upgrade your firmware. This takes around 5 minutes. We push upgrades from time to time to improve Camera features.
General	Which platforms are supported for accessing my Camera?	Minimum requirement: Windows <sup>®</sup> 7* *Java browser plug-in needed Mac OS <sup>®</sup> version 10.7 Chrome <sup>™</sup> version 24 Internet Explorer <sup>®</sup> version 9 Safari <sup>®</sup> version 6 Java <sup>™</sup> version 7 Firefox <sup>®</sup> version 18.0 Adobe <sup>®</sup> Flash <sup>®</sup> Player 15.0 Android <sup>™</sup> 4.2 iPhone <sup>®</sup> /iPad <sup>®</sup> iOS version 7.0
General	I do not hear any sound when I am accessing a remote Camera.	You can tap on the speaker icon in the video stream screen to hear audio. By default the audio is not ON when you are accessing a remote Camera.
General	There is a long delay in the video on my Smartphone compared to the Parent Unit monitor.	The delay will depend on your Wi-Fi network and its link to the Hubble server, compared to the direct radio link between the Parent Unit and the camera.

General	What is the meaning of "Local Camera" and "Remote Camera"?	When you are accessing your Camera from the same wireless network (Home) in which it is configured, it is a Local Camera. When you are accessing your Camera away from your home it is a Remote Camera. You may be using 3G, 4G or 4G LTE or a Wi-Fi® connection outside of your home.
General	How do I download the App for Android™ and iOS devices?	<p><b>Android™:</b></p> <ul style="list-style-type: none"> <li>- Open the <b>Google Play Store</b> on your Android™ device.</li> <li>- Select <b>Search</b></li> <li>- Type in <b>"Hubble for Motorola Monitors"</b></li> <li>- The results will show the Hubble App</li> <li>- Select to install it</li> </ul> <p><b>iOS Device:</b></p> <ul style="list-style-type: none"> <li>- Open the <b>App Store<sup>SM</sup></b></li> <li>- Select <b>Search</b></li> <li>- Type in <b>"Hubble for Motorola Monitors"</b></li> <li>- The results will show the Hubble App</li> <li>- Select to install it</li> </ul>
Setting up	When the video is cut off, the application attempts to reconnect and this results in lost sound and choppy video.	You will need to turn off the Auto Lock function of your device to ensure continuous video/audio streaming.

Features	How many users can access the Camera at one time?	If you are accessing in Local Mode, two users are supported, after two users all streaming will go through the remote server. This allows for unlimited user access to a single Camera at one time.
Connectivity issues	I found interference caused by my other webcam devices.	Video streaming performance is related to internet bandwidth, especially if you have 2 or more video streaming devices that are working through the same router.

## 9. General Information

If your product is not working properly...

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website: [www.motorolahome.com](http://www.motorolahome.com)
3. Contact Customer Service at

US and Canada 1-888-331-3383

Email: [support@motorolahome.com](mailto:support@motorolahome.com)

To order a replacement battery pack for parent Unit, contact customer service.

### Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE")

#### ***What Does this Warranty Cover?***

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE OR COUNTRY. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

#### ***Who is covered?***

This Warranty extends only to the first consumer purchaser, and is not

transferable.

### ***What will BINATONE do?***

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

### ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.



Products Covered	Length of Coverage
Consumer Products	<b>One (1) year</b> from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and/or batteries that leak are covered by this Warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### ***How to Obtain Warranty Service or Other Information?***

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: [support@motorolahome.com](mailto:support@motorolahome.com)

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a Warranty card was included in your box, a completed Warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

## FCC and IC regulations

### FCC Part 15

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

## **WARNING**

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

## **Industry Canada**

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## 10. Technical Specifications

### BABY UNIT

Frequency	2400 MHz to 2483.5 MHz
Image sensor	Color CMOS 1M Pixels
Operating Temperature	0°C - 45°C
IR LED	8 pcs
Power Adapter	<p>Ten Pao International Ltd. S012CDU0500150 Input: 100-240V AC, 50/60Hz, 400mA; Output: 5.0V DC, 1500mA</p> <p><b>WARNING</b> <i>Use only with supplied power supply.</i></p>
Battery (built-in)	<p>AAA(JUSHIGH) 3.6V 900mAh Ni-MH Battery or GPRHCH93C021 (GPI) 3.6V, 900mAh Ni-MH battery. (gives up to 3 hours operation)</p> <p><b>WARNING</b> <i>Do not attempt to replace the battery, but contact Customer Service if it needs replacing.</i></p>

---

## PARENT UNIT

Frequency	2400 MHz to 2483.5 MHz
Display	5" diagonal TFT LCD
Display Colors	16.7M color LCD
Operating Temperature	0°C - 45°C
Brightness Control	8 steps
Volume Control	8 steps + Off
Power Adapter	Ten Pao International Ltd. S005BNU0500100 Input: 100-240V AC, 50/60Hz, 150mA; Output: 5.0V DC, 1000mA

### **WARNING**

*Use only with provided power supply.*

---

Battery (built-in)	Lenovo BL253 3.8V, 2000mAh Lithium-Ion Polymer, rechargeable battery pack (gives up to 5 hours operation)
--------------------	---

### **WARNING**

*Do not attempt to replace the battery, but contact Customer Service if it needs replacing.*

---



motorola

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Internet Explorer and Windows are trademarks of the Microsoft group of companies. Firefox is a registered trademark of the Mozilla Foundation. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated. Java is a registered trademark of Oracle and/or its affiliates. All other trademarks are the property of their respective owners. © 2017 Motorola Mobility LLC. All rights reserved.



US\_EN Version 2.0

Printed in China