
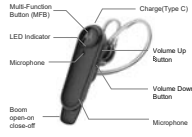


EN



Bluetooth Headset Motorola MH011

AT A GLANCE
the important bits, quick and easy



EN 1


CHARGE IT
let's get you up and running

To charge your headset, plug the Type C cable into the headset's Type C port and connect to Type C power source.

Note: Fully charge the headset before you use it.

Tip: To save battery power, turn off the headset when you're not using it.

Caution: Your battery is designed to last the life of your device. It should only be removed by a recycling facility. Any attempt to remove or replace your battery will damage the device, void your warranty, and could cause injury.

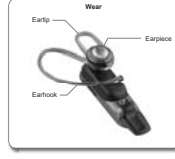

EN 3

CONNECT & GO
let's get you connected


EASYPAIR™ METHOD

- Turn on Bluetooth on your device.
- Turn on your headset and follow the voice prompts.
- Select "Boost" from the smart phone Bluetooth menu.
- When the device and headset connect, you'll hear "connected".

EN 4

COMFORT
what feels best on you

Choose your most comfortable fit ear tip.



EN 5

BASICS
standard features, advanced quality

To...		
answer a call	short press MFB	
reject a call	press volume down 2 seconds	
end a call	short press MFB	
off	boom (open) on / boom (close) off	
change call volume	press the volume up and volume down button	
mute / unmute a call	press volume down 2 seconds during the call and press volume up 2s to unmute.	
last track	press volume down 2 seconds when headset is in music state.	
next track	press volume up 2 seconds	
pausereplay	press MFB once to pause and press again to play.	
pairing mode	press MFB 5 seconds to enter into pairing mode when headset is in on mode.	
reset	press MFB and volume down 5 seconds.	
3-way call ongoing		
pick incoming call, put ongoing call on hold	press MFB once	
repeat incoming, continue ongoing, end ongoing, resume waiting call	press and hold volume down	
switch calls	double press MFB	
end current call	press MFB once / double press MFB	

EN 6

EN 7

Status Light

Note: Some features are phone/network dependent. Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

If light shows...	your headset is...
power on	blue flashes 2 seconds.
pairing	blue flashes once / red flashes 2 seconds.
on standby	red & blue flashes alternately.
charging	steady red.
fully charged	steady blue.
low battery	red flashes once every 5 seconds.

EN 8

Note: After one minute on a call or 20 minutes of playback, the light glows faintly to conserve power but the headset remains on. Closing the Boom also saves battery life.

ADVANCED HANDLING
more clever stuff

SECOND DEVICE

- Pair the first device with your headset as normal (see "CONNECT & GO" on page 4).
- Turn off the Bluetooth® feature on the first device.
- Now pair the second device with your headset as normal.
- Once paired, to connect with both devices simply turn them on.

EN 9

SETTINGS

Restore Factory Settings:
Reset default factory settings on your headset.

Caution: This feature erases all device pairing information stored on the headset.

Multiple:
Connect your headset to two devices.

EN 10

Safety instructions for use

To avoid hearing damage, keep the volume at a moderate level. Avoid listening to music at loud volume levels for prolonged periods of time as this may cause permanent hearing damage or hearing loss. Your hearing is delicate and highly sensitive so please listen to your music responsibly. For more information visit the Deafness Research Foundation www.drf.org.

Don't use Boom 3 when it is unsafe to do so. For example, while operating a vehicle, cycling, crossing a road, or any activity which requires your attention and ability to hear.

You should be aware of your surroundings and use Boom 3 responsibly.

EN 11

Help & more

- Email Support: support@motorola.com
- Live Chat: MotorolaStore.com

Note: If you're watching video while using your earbuds, your audio may be slightly out of sync with your video.

Manufactured, distributed, or sold by Binatone Electronics International LTD. official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. Apple logo is a trademark of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play and Android are trademarks of Google Inc. All other trademarks are the property of their respective owners. © 2020 Motorola Mobility LLC. All rights reserved.

Product ID: MH011
FCC ID: VLA0011
IC: 4224A-MH011

EN 12

EN 13

General Information

Consumer Products and Accessories Limited Warranty
Binatone Electronics International LTD. ("Binatone") warrants that the Binatone-branded product ("Products") or certified accessory ("Accessory") sold for use with this product that is manufactured by Binatone is free from defects in materials and workmanship under normal consumer usage for the period indicated below. This Warranty is not applicable to accessories not manufactured by Binatone.

Who is covered?
This Warranty's coverage extends only to the first consumer purchaser and is not transferable.

What Binatone does not cover:
Binatone does not warrant against use of the product with a third-party accessory or accessories that do not conform to the Warranty. We may use functionality equivalent (replacement) if available (i) purchased or new Products, Accessories or parts.

Other What Limitations Are There?
ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO THE EXTENT OF THIS LIMITED WARRANTY. OTHERWISE, THE EXPRESS OR IMPLIED WARRANTY PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND THERE SHALL BE NO OTHER IMPLIED WARRANTIES, EXPRESS OR IMPLIED, IN ANY EVENT. SHALL INCLUDE THE BATTERY LABEL, WHETHER DAMAGES TO THE USER OR TO OTHERS, OR FOR THE PRODUCT OR ACCESSORY OR FOR ANY INCIDENT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS WITH ACCESSORIES TO THE FULL EXTENT THAT DAMAGES MAY BE ENFORCED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitation or exclusions may not apply to you. This warranty gives you specific rights, which may vary from those that are provided by law. You may have other rights that vary from those provided by law to another.

Consumer Products: One (1) year from the date of the product's original purchase by the first consumer purchaser of the product.

Accessories: Ninety (90) days from the date of the original purchase of the product.

Consumer: The balance of the original warranty or for Accessories: Ninety (90) days from the date returned to the consumer, whichever is longer.

Normal Wear and Tear: Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries: Only batteries whose fully charged capacity falls within 80% of their rated capacity and batteries that are not damaged by the user.

Abuse & Misuse: Defects or damage that result from (a) over-charging, (b) use of non-Binatone branded or counterfeit batteries, (c) use of the product in a way that causes physical damage (cracks, scratches, etc.) to the surface of the product, (d) use of the product in contact with liquid, water, salt, extreme humidity or heavy perspiration, (e) dirt or the like, extreme heat, or frost (a) use of the Product or Accessories for commercial purposes or (b) use of the Product or Accessories to perform tasks not intended for such use are excluded from coverage.

Use of Non-Motorola Branded Products and Accessories: Use of Non-Motorola branded Products and Accessories, or counterfeit Products or Accessories, or other non-Binatone branded or certified Products or Accessories or other non-Binatone branded or certified equipment are excluded from coverage.

EN 14

EN 15

Unauthorized Service or Modification: Defects or damages resulting from repairs, service, adjustments, installation, maintenance, alterations, or modifications may void the warranty other than MOTOROLA, BINATONE or Binatone service centers. Defects from unauthorized service or modification are excluded from coverage.

Disposal of the Device (environment): At the end of the product life cycle, you should not dispose of this product in your household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates where to take your product. Some of the product materials can be recycled if you take them to a recycling point. By using these parts or materials from this product, you are making a significant contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection point in your area.

Binatone Electronics International LTD. ("Binatone") declares that this product is in compliance with:

- The essential requirements and other relevant provisions of RED Directive 2014/53/EU
- All other relevant EU Directives
- The Declaration of Conformity can be obtained at www.motorola.com

EN 16

EN 17

FCC Notice to Users

The following statement applies to all products that bear the FCC logo and/or FCC ID on the product label.

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules, Section 15.107, 15.109.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off, the user is advised to take one or more of the following measures:

- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See FCC Part 15.247.

Some restrictions may apply to the use of this device. Any changes or modifications could void the user's authority to operate the equipment. See FCC Part 15.2.

Industry Canada Notice to Users

This device complies with the Canadian Interference-causing Equipment (ICES) requirements for Class B digital devices. **Le présent appareil est conforme aux normes d'interférence des équipements numériques de classe B.**

1. A user must not attempt to repair or modify the device. If a repair or modification is required, it must be performed by a qualified service technician. Repairs and modifications performed by anyone other than a qualified service technician could void the user's authority to operate the equipment.

EN 18

EN 19

Consumer Products and Accessories Limited Warranty
Binatone Electronics International LTD. ("Binatone") warrants that the Binatone-branded product ("Products") or certified accessory ("Accessory") sold for use with this product that is manufactured by Binatone is free from defects in materials and workmanship under normal consumer usage for the period indicated below. This Warranty is not applicable to accessories not manufactured by Binatone.

Who is covered?
This Warranty's coverage extends only to the first consumer purchaser and is not transferable.

What Binatone does not cover:
Binatone does not warrant against use of the product with a third-party accessory or accessories that do not conform to the Warranty. We may use functionality equivalent (replacement) if available (i) purchased or new Products, Accessories or parts.

Other What Limitations Are There?
ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO THE EXTENT OF THIS LIMITED WARRANTY. OTHERWISE, THE EXPRESS OR IMPLIED WARRANTY PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND THERE SHALL BE NO OTHER IMPLIED WARRANTIES, EXPRESS OR IMPLIED, IN ANY EVENT. SHALL INCLUDE THE BATTERY LABEL, WHETHER DAMAGES TO THE USER OR TO OTHERS, OR FOR THE PRODUCT OR ACCESSORY OR FOR ANY INCIDENT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS WITH ACCESSORIES TO THE FULL EXTENT THAT DAMAGES MAY BE ENFORCED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitation or exclusions may not apply to you. This warranty gives you specific rights, which may vary from those that are provided by law. You may have other rights that vary from those provided by law to another.

Consumer Products: One (1) year from the date of the product's original purchase by the first consumer purchaser of the product.

Accessories: Ninety (90) days from the date of the original purchase of the product.

Consumer: The balance of the original warranty or for Accessories: Ninety (90) days from the date returned to the consumer, whichever is longer.

Normal Wear and Tear: Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries: Only batteries whose fully charged capacity falls within 80% of their rated capacity and batteries that are not damaged by the user.

Abuse & Misuse: Defects or damage that result from (a) over-charging, (b) use of non-Binatone branded or counterfeit batteries, (c) use of the product in a way that causes physical damage (cracks, scratches, etc.) to the surface of the product, (d) use of the product in contact with liquid, water, salt, extreme humidity or heavy perspiration, (e) dirt or the like, extreme heat, or frost (a) use of the Product or Accessories for commercial purposes or (b) use of the Product or Accessories to perform tasks not intended for such use are excluded from coverage.

Use of Non-Motorola Branded Products and Accessories: Use of Non-Motorola branded Products and Accessories, or counterfeit Products or Accessories, or other non-Binatone branded or certified Products or Accessories, or other non-Binatone branded or certified equipment are excluded from coverage.

EN 20

EN 21