



motorola



---

# User's Guide

5" Video Baby Monitor

Model: COMFORT50, COMFORT50-2, COMFORT50-3,  
COMFORT50-4

*The features described in this User's Guide are subject to modifications without prior notice.*

# Welcome...

*to your new Motorola Digital Video Baby Monitor!*

Thank you for purchasing the Digital Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

**US and Canada 1-888-331-3383**

**E-mail: [support@motorolahome.com](mailto:support@motorolahome.com)**

**On the Web: [www.motorolahome.com/support](http://www.motorolahome.com/support)**

This User's Guide provides you with all the information you need to get the most from your product.

 
Before you can use the baby monitor, we recommend you insert and fully charge the battery in the Parent Unit, so that it continues to work if you disconnect it from the power supply to carry it to another location. Please read the Safety Instructions on pages 7 - 9 before you install the units.




## Got everything?

- 1 x Parent Unit (with built-in Li-ion battery)
- 1 x Baby Unit (Camera)
- 1 x Power adapter for the Parent Unit (Output 5V – 1000mA)
- 1 x Power adapter for the Baby Unit (Output 5V – 600mA)



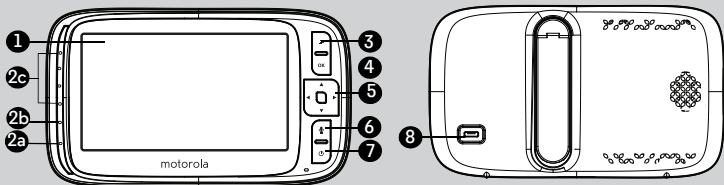




















In multi-camera packs, you will find one or more additional baby units with power adapter units.

# Overview of the Parent Unit

 


- 1. Display (LCD screen)**
- 2. Battery status, Power, Sound level, Pairing indicators**
  - Lights up in blue when the Parent Unit's battery is being charged.
  - Lights up in green when the Parent Unit is switched on.
  - Green-Orange-Red-Red  
Show the sound level detected by the Baby Unit - the louder the sound detected, the more LEDs light up. Flashes rapidly in green when the Parent Unit is searching for the Baby Unit, or is in pairing mode.
- 3. Main menu button**   
Press to enter/exit menu mode.
- 4. OK button**  
When in a menu, press to choose an item, or save a setting.
- 5. Control key panel**  
**UP / VOLUME+ ▲**  
Press to increase speaker volume in camera viewing mode.  
When in a menu, press to scroll up.  
When viewing a zoomed image, press to pan up.  
**DOWN / VOLUME - ▼**  
Press to decrease speaker volume in camera viewing mode.  
When in a menu, press to scroll down.  
When viewing a zoomed image, press to pan down.  
**LEFT ◀**  
When in a menu, press to scroll left.  
When viewing a zoomed image, press to pan left.  
**RIGHT ▶**  
When in a menu, press to scroll right.  
When viewing a zoomed image, press to pan right.
- 6. TALK BACK**   
Hold down to talk back to the baby unit.
- 7. Power button**   
Press and hold to switch the unit On/Off  
Press to turn the video screen Off/On
- 8. Power socket**

## Parent Unit display icons

Signal Strength 
Camera Power Mode - AC or Battery 
Camera Patrol Mode    
Camera Identification Number    
Speaker on / off 
Lullabies menu / mode 
Zoom menu / mode 
Night vision 
Alarm timer 
Parent unit battery status 
Parent unit battery status 
Speaker volume 
Video on timer 
Add camera 
Delete camera 
View camera 
Talk back function 

# Overview of Your Baby Unit (Camera)

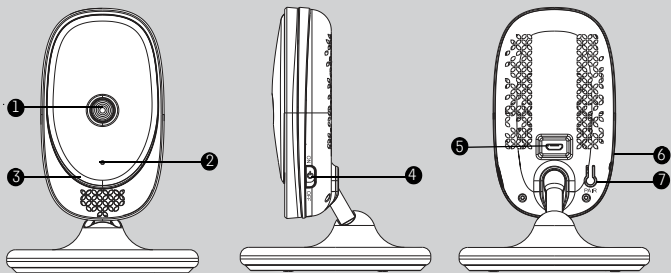

- 1. Camera Lens**
- 2. Microphone**
- 3. Power indicator**  
Lights up in blue when the Baby Unit is switched on and linked to the Parent Unit.  
Off when the Baby Unit is switched off.
- 4. Power ON/OFF switch**  
Slide to switch the Baby Unit on or off.
- 5. Power Adapter Socket**
- 6. Light Sensor (Night Vision Mode)**
- 7. Pair Key**  
Press and hold to pair with the Parent Unit.

## Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and the Parent Unit together, you must be able to establish a radio link between them, and the range may be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Units may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls or electrical equipment, such as radios, TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi<sup>®</sup> routers), Bluetooth<sup>®</sup> systems, or microwave ovens, may cause interference with this product, so keep the Baby Monitor at least 5 feet from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.




## Table of contents

<b>1. Safety Instructions</b> .....	<b>7</b>
<b>2. Getting Started</b> .....	<b>10</b>
2.1 Power up the Baby Unit .....	10
2.2 Charge the Parent Unit .....	11
<b>3. Using the Baby Monitor</b> .....	<b>12</b>
3.1 Setting Up .....	12
3.2 Power On or Off the Baby Unit .....	12
3.3 Power On or Off the Parent Unit .....	12
3.4 Night Vision Mode .....	13
<b>4. Parent Unit Menu Options</b> .....	<b>14</b>
4.1 Adjust Speaker Volume .....	14
4.2 Set the Screen Brightness .....	14
4.3 Adjust Settings .....	14
<b>5. Disposal of the Device (environment)</b> .....	<b>18</b>
<b>6. Cleaning</b> .....	<b>19</b>
<b>7. Troubleshooting</b> .....	<b>20</b>
<b>8. General Information</b> .....	<b>22</b>
<b>9. Technical Specifications</b> .....	<b>28</b>

## 1. Safety Instructions

 **WARNING:**

**Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft away). Do not remove this tag. Never use extension cords with AC Adapters. Only use the AC Adapters provided.**

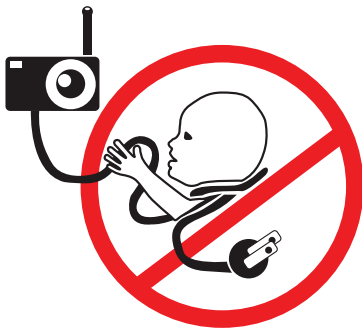



---

## BABY UNIT SET UP & USE:

---

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her cot.
- Place the Baby Unit on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slots in the underside of the stand.
- **NEVER** place the Baby Unit or cords within the cot.

### **WARNING**

*This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.*

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the cot or within reach of the baby (the Unit and cords should be more than 3 feet away).
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.



- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical outlets.

**CAUTION**

*The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which is not a user-accessible item. If you think the battery needs replacing, please contact the helpline. Do not try to replace it yourself.*

*Risk of explosion if battery is replaced by an unapproved battery type.*

 
*Dispose of used batteries according to their instructions.*

The Unit should be set up and used so that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

L'appareil doit être installé et utilisé de sorte que les parties du corps autres que les mains soient à une distance d'environ 20 cm (8 pouces) ou plus.

## 2. Getting Started

### 2.1 Power up the Baby Unit

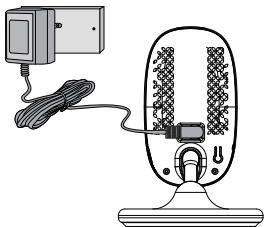

1. Insert the small end (USB) of the Baby Unit's power adapter (Output 5V, 600mA) into the USB socket in the back of the Baby Unit.
2. Insert the other end of the power adaptor into a suitable electrical outlet.
3. Slide the ON/OFF switch to the ON position to switch on the Baby Unit. The power indicator lights up in blue.
4. Slide the ON/OFF switch to the OFF position to switch off the Baby Unit. The power indicator goes off.


#### **IMPORTANT**

 *Only use the supplied power adapter.*

## 2.2 Charge the Parent Unit

The Parent Unit comes with a built-in Li-ion battery.

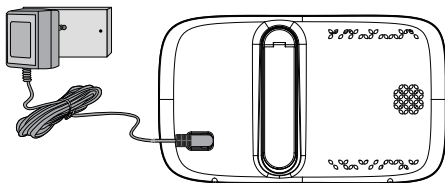

Charge the battery in the Parent Unit for at least 16 hours before using it for the first time or when the Parent Unit indicates that the battery is low.



1. Insert the small end (USB) of the Parent Unit's power adapter (Output 5V, 1000mA) into the USB socket in the back of the Parent Unit.
2. Insert the other end of the power adapter into a suitable electrical outlet. The battery status indicator will light up in blue to indicate that the Parent Unit is connected to the electrical outlet.

### **IMPORTANT**

*Only use the supplied power adapter.*

3. Press and hold the power button  to switch on the Parent Unit. The power indicator will light up in green to indicate that the Parent unit is switched on.
4. When the Baby and Parent Units are both switched ON, the display on the Parent Unit will show the image captured by the Baby Unit. If the Baby Unit (camera) is not in range or is switched off, the Parent Unit beeps repeatedly and  appears on the screen.

## 3. Using the Baby Monitor

Please read these instructions carefully, and be aware that this baby monitor is only intended as an aid. It is not a substitute for responsible adult supervision.

### 3.1 Setting Up

- Make sure that the Baby Unit and Parent Unit are both switched on.
- Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.


#### **NOTE**

*Do not place the Baby Unit within reach of a child or baby! If there is interference with the picture or sound, try moving the units to different locations, and ensure that they are not close to any other electrical equipment.*


*If you place the Parent Unit and Baby Unit too close together, you may hear a high pitched noise. This is not a fault. The units are designed to be operated at some distance apart. So move the units further apart.*

### 3.2 Power On or Off the Baby Unit

Slide the ON/OFF switch  to the ON position to switch on the Baby Unit. The power indicator lights up in blue.


Slide the ON/OFF switch  to the OFF position to switch off the Baby Unit. The power indicator goes off.

### 3.3 Power On or Off the Parent Unit

Press and hold the power button  to switch on the Parent Unit. The power indicator lights up in green.

Press and hold the power button  to switch off the Parent Unit. The power indicator goes off.

### 3.4 Night Vision Mode

The Baby Unit has high-intensity infrared LEDs for picking up clear images in the dark. When the built-in light sensor on the side of the Baby Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The  icon will be displayed on the screen.

## 4. Parent Unit Menu Options

### 4.1 Adjust Speaker Volume

The Parent Unit has 8 volume levels + off.

To adjust volume, press the ▲ UP or ▼ DOWN button when the Parent Unit is in camera viewing mode.

### 4.2 Set the Screen Brightness

The Parent Unit has 8 brightness levels.

To adjust brightness, press the ◀ LEFT or ▶ RIGHT button when the Parent Unit is in camera viewing mode.

### 4.3 Adjust Settings

You can adjust the following settings on the Parent Unit: zoom function, lullabies, alarm, video on timer, add/delete/ view camera and alternating camera image.

To access settings menu, switch on the Parent Unit and press the ≡ MENU button.


The following menu options appear across the bottom of the Parent Unit screen:



You can navigate through the menu options using the ▲ UP, ▼ DOWN, ◀ LEFT or ▶ RIGHT buttons, and press **OK** to select an option.







 




#### 4.3.1 Zoom and Pan

You can zoom in or out when viewing the image on the Parent Unit.

1. Press the ≡ MENU button when the Parent Unit is in camera viewing mode.
2. Press the ◀ LEFT/▶ RIGHT button to select .
3. Press the ▲ UP /▼ DOWN button to select [x1]/[x2] zoom, then press **OK**.
4. Use the ▲ UP/▼ DOWN/ ◀ LEFT / ▶ RIGHT button to pan around the image.
5. Press the ≡ MENU button to exit menu mode.

### 4.3.2 Set lullaby







You can select one or all the 5 lullabies to play over the Baby Unit (Camera). To activate lullaby, proceed as follows:

1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the  LEFT/ RIGHT button to select .
3. Press the  UP/ DOWN button to select the lullaby of your choice (1-5) or play all ().
4. Press the **OK** button, then  UP/ DOWN button to adjust the volume of the lullaby.  
You can stop playing the lullaby by selecting the .
5. Press the  MENU button twice to return to the main screen.

### 4.3.3 Set alarm





You can use the Parent Unit to set an alarm as a reminder for you to take care of your baby. If an alarm time is selected, the Parent Unit will beep at the end of the selected 2, 4 or 6 hour period. The alarm will sound for about 1 minute when the time is reached, or can be stopped by pressing any button.


To activate an alarm, proceed as follows:

1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the  LEFT/ RIGHT button to select .
3. Press the  UP/ DOWN button to select the time period after which you wish the alarm to sound.
4. Confirm with the **OK** button, and return to the main screen.

### 4.3.4 Screen off timer

You can set the screen off time for the Parent Unit after it is in idle mode for a specific time interval (5 mins, 15 mins or 30 mins). When the screen is turned off, you can still hear sound from the Baby Unit.




1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the  LEFT/ RIGHT button to select .

3. Press the ▲ UP / ▼ DOWN button to select the time period after which the screen should switch off automatically (5 mins, 15 mins or 30 mins).
4. Confirm with the **OK** button, and return to the main screen.
5. You can cancel standby mode by selecting the  icon.

### 4.3.5 Add camera





You can connect one Parent Unit with up to four cameras.

To add a compatible camera to the Parent Unit, proceed as follows:

1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the ◀ LEFT / ▶ RIGHT button to select add camera icon .
-  appears on the screen.
3. Press the ▲ UP / ▼ DOWN button to select a number and confirm with the **OK** button. The sound level indicator will flash in green rapidly while the parent unit searches for a camera.
4. Hold down the **PAIR** button on the rear of the camera until an acoustic signal is heard and the transmission image from the camera that has been added appears on the screen.

### 4.3.6 Delete camera





If you wish to delete the connection to a camera, proceed as follows:

1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the ◀ LEFT / ▶ RIGHT button to select delete camera icon .
-  appears on the screen.
3. Press the ▲ UP / ▼ DOWN button to select the number of the camera that you wish to delete.
4. Confirm with the **OK** button.
5. Press ▼ DOWN button to select [X], and then **OK** to confirm delete.  
**Note:** you cannot delete a camera if it is the only unit paired to the Parent Unit.
6. Press the  MENU button to return to the main screen.





### 4.3.7 View camera

If you have more than one camera paired with the Parent Unit, to select the transmission image from a specific camera, proceed as follows:

1. Press the  MENU button when the Parent Unit is in camera viewing mode.
2. Press the  LEFT/ RIGHT button to select view camera icon .

 appears on the screen.



3. Press the  UP /  DOWN button to select the number of the camera that you wish to view, or the scan icon to view each paired camera in sequence at about 20 seconds interval.
4. Confirm with the **OK** button.

### 4.3.8 Switch camera view

The “switch camera view” function is available if you have multiple cameras paired with the Parent Unit.

When the Parent Unit is in camera viewing mode, press the **OK** button, and the camera view from the next paired camera appears on the screen, with the camera number or scan shown on the status bar. Each press of the **OK** button cycles through all the paired cameras.

### 4.3.9 Two-way communication

The Parent Unit has a two-way communication function. To activate two-way communication function, hold down the  button on the Parent Unit and speak into the unit. The words speak will be heard on the camera. To deactivate two-way communication function, release the  button.

## 5. Disposal of the Device (environment)

At the end of the product's life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the Product, User's Guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

## 6. Cleaning

Clean your Baby Monitor with a slightly damp or anti-static cloth. Never use cleaning agents or abrasive solvents.

### Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals -- this may cause permanent damage to the product which is not covered by the Warranty.
- Keep your Baby Monitor away from hot, humid areas or conditions, strong sunlight and avoid moisture.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

### **IMPORTANT**


*Always switch off and disconnect the power adapter before cleaning your baby monitor.*

## 7. Troubleshooting

### Power Indicator on the Parent Unit does not come on

- Check whether the Parent Unit is powered on.
- Check whether the battery is charged.
- Recharge the Parent Unit by connecting it to the power supply.

### The Parent Unit beeps repeatedly

- The Parent Unit and the Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet.
- The Baby Unit may be switched off. Slide the ON/OFF switch  to the On position to switch on the Baby Unit.
- The battery in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

### icon on the Parent Unit flashes

- Battery pack in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

### The Parent Unit switches itself off

- It could be that the Parent Unit is in standby mode. Check whether the video on timer has been selected in the menu and deactivate it where necessary.

### Cannot hear sound or baby crying from the Parent Unit

- The volume level in the Parent Unit may be set too low. Refer to section 4.1 for volume level settings.
- The Parent Unit and the monitoring Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet.

## The baby monitor system produces a high-pitched noise

- The Parent Unit and the Baby Unit are too close to each other. Make sure the Parent Unit and Baby Unit are at least 3 feet away from each other.
- The speaker volume of the Parent Unit may be set too high. Decrease the volume of the Parent Unit.

## Battery pack in the Parent Unit is running low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 4.2 for details.
- The volume level of the Parent Unit may be set too high, which consumes power. Decrease the volume level of the Parent Unit. Refer to section 4.1 for volume level settings.


## Parent Unit image is not in color

- The Baby Unit is in a dark room, which causes the infra-red illumination to turn on and the picture image to change from color to black and white. When the room becomes brighter, the picture will return to color.

## There is no transmission from the Baby Unit to the Parent Unit

- Switch on both the Baby and Parent Units.
- Pair the Baby Unit again as described in see "4.3.5 Add camera".  
If there is no free camera location, delete a location first, as described in see "4.3.6 Delete camera".

## The Parent Unit is in standby

- To turn on the Parent Unit screen, press the ON/OFF button  briefly.

---

## 8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website: [www.motorolahome.com/support](http://www.motorolahome.com/support)
3. Contact Customer Service at  
US and Canada 1-888-331-3383  
E-mail: [support@motorolahome.com](mailto:support@motorolahome.com)

To order a replacement battery pack, contact customer service.

### **Consumer Products and Accessories Limited Warranty ("Warranty")**

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

#### ***What Does this Warranty Cover?***

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

#### ***Who is covered?***

This Warranty extends only to the first consumer purchaser, and is not transferable.

#### ***What will BINATONE do?***

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

### ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	<b>One (1) year</b> from the date of the Products' original purchase by the first consumer purchaser of the product.
Consumer Accessories	<b>Ninety (90) days</b> from the date of the Accessories' original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	<b>The balance of the original warranty or for Ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.



**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### ***How to Obtain Warranty Service or Other Information?***

To obtain service or information, please call:

US and Canada 1-888-331-3383

E-mail: [support@motorolahome.com](mailto:support@motorolahome.com)

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

## FCC and IC regulations

### FCC Part 15

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

**WARNING**

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

**Industry Canada**

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

---

## 9. Technical Specifications

### Baby Unit

---

Frequency	2.4 - 2.483 GHz
Image sensor	Color CMOS 1M Pixels
IR LED	8 pcs
Power	Adapter: Zhongshan Baolijin Electronic Co.,Ltd. BLJ06W050060P1-U; Input: 100-240V 50/60 Hz 200mA; Output: DC5V 600mA <b>WARNING</b> Use only the supplied power adapter.

---

---

## Parent Unit

---

Frequency	2.4 - 2.483 GHz
Display	5" diagonal TFT LCD
Power	Adapter: Zhongshan Baolijin Electronic Co.,Ltd. BLJ06W050100P1-B; Input: 100-240V 50/60 Hz 200mA; Output: DC5V 1000mA Battery: Li-ion 3.7V/2100mAh <b>WARNING</b> Use only the supplied power adapter. Do not use non-rechargeable batteries for the Parent Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

---

*Specifications are subject to change without prior notice.*



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2016 Motorola Mobility LLC. All rights reserved.



US\_EN Version 1.0

Printed in China