

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	1 of 25



MOTOROLA

User’s Guide

MFV700

Digital Photo Frame with Video-in-Picture

The features described in this user’s guide are subject to modifications without prior notice.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	2 of 25

Welcome...

to your new Motorola Digital Photo Frame with Video-In-Picture!

Thank you for purchasing the MFV700 - the Digital Photo Frame with video-In-Picture is more than just a Photo Frame. It's a multimedia trip down memory lane, and with the addition of the Wireless Camera and Live Video Feed, it's also a way of protecting what matters most.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

US and Canada	1-888-331-3383 (FOR US VERSION)
UK	0845 218 0890 (FOR UK VERSION)
ROI	08187 62092 (FOR UK VERSION)

On the Web: www.motorola.com

This User’s Guide provides you with all the information you need to get the most from your product.

Before you can use the digital photo frame, please read the Safety Instructions on page **xx** before you install the units.

Got everything?

- 1 x Digital photo frame (MFV700PU for US version)
- 1 x Camera unit (MFV700BU for US version)
- 1 x Remote control
- 1 x Power adapter for the Digital photo frame
- 1 x Power adapter for the Camera unit


Overview of your Digital photo frame (also digital photo frame)

Front panel




[<Front panel diagram>](#)

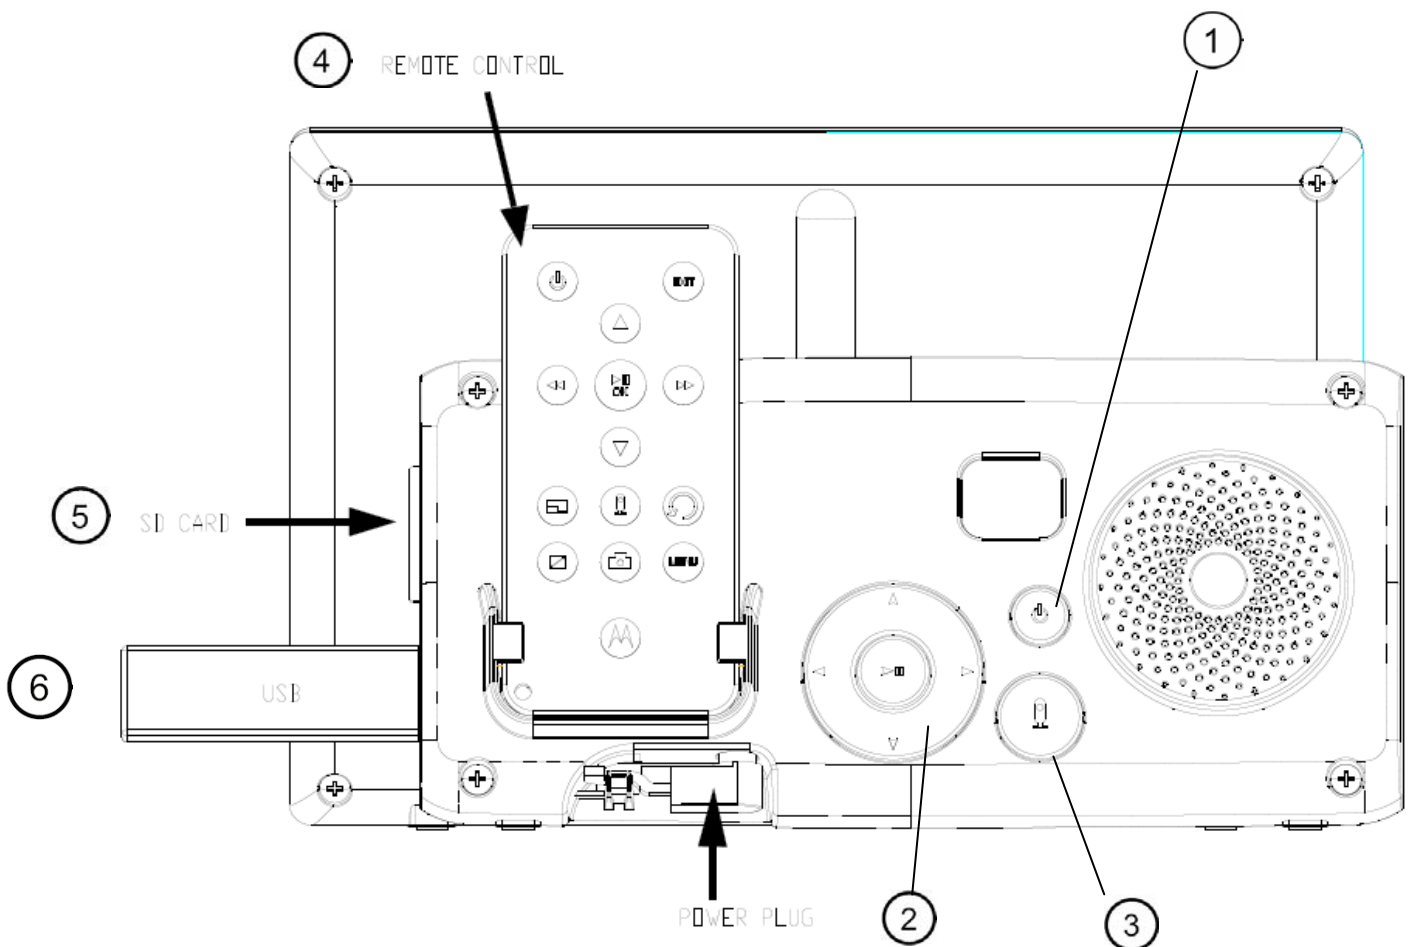


Rear panel



Doc Title	: Product Data – User’s Guide	Revision	: R.00
Model	: MFV700	Page(s)	: 4 of 25

1. **ON/OFF button**
2. **Navigation and  buttons**
3. **Video ON/OFF button**
4. **Remote control**
for remote control functions, please refer to page xx
5. **Memory card slot **
for inserting an SD, SDHC, MMC memory card that contains the photos you want to play or record.
6. **USB connector **

Overview of your Camera unit

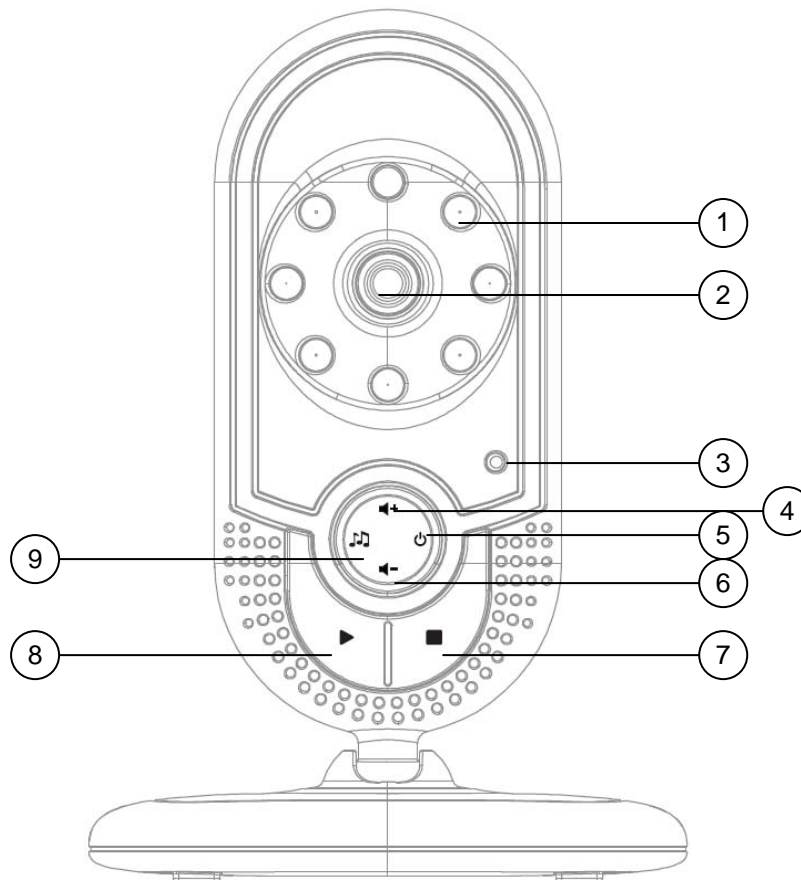

1	Infrared Light	6	▼ / Volume – Press to decrease the speaker volume.
2	Camera	7	Stop During lullaby playback, press to stop the lullaby playback.
3	Power Indicator On when the digital photo frame is switched on. Off when the digital photo frame is switched off.	8	Play Press to play the lullaby.
4	▲ / Volume + Press to increase the speaker volume.	9	Lullaby Press to recall the current lullaby and start playback. During lullaby playback, press to select and play the other lullabies.
5	Power Press and hold to power on/off the camera unit.		

Important guidelines for installing our Digital photo frame

- To use your camera unit and digital photo frame together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic doors or reinforced concrete, between the baby and digital photo frame may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- If the signal is poor, try moving the parent and/or the camera unit to different positions in the rooms.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	6 of 25

TABLE OF CONTENTS

1 SAFETY INSTRUCTIONS.....7

2 GETTING STARTED8

2.1 CONNECTING CAMERA UNIT TO POWER8

2.2 CONNECTING DIGITAL PHOTO FRAME TO POWER8

2.3 INSERTING A MEMORY CARD9

2.4 REMOVING A MEMORY CARD9

2.5 CONNECTING A USB DEVICE9

3 USING YOUR DIGITAL PHOTO FRAME.....11

3.1 USING THE CONTROL BUTTONS11

3.2 USING THE REMOTE CONTROL13

4. USING THE MENUS15

4.1 *Using the Home Menu*15

4.2 *Using the Photo menu*15

4.7.1 *Play/stop lullaby from the camera unit*20

1. DISPOSAL OF THE DEVICE (ENVIRONMENT)20

2. CLEANING20

3. TROUBLESHOOTING.....20

4. GENERAL INFORMATION21

5. TECHNICAL SPECIFICATIONS.....25

Doc Title : Product Data – User’s Guide	Revision : R.00
Model : MFV700	Page(s) : 7 of 25

1 SAFETY INSTRUCTIONS



WARNING:

STRANGULATION HAZARD – Keep the adapter cord out of baby’s reach.

NEVER place the camera unit or its cord within the crib <US version> / Cot <UK version>.

Secure the cord some distance away from baby’s reach.

Never use extension cords with AC Adapters. Only use the AC Adapters provided.

CAMERA SET UP & USE:

- Determine a location for the CAMERA that will provide the best view of your baby in his crib <US version> / Cot <UK version>
- Place the CAMERA on a flat surface, such as a dresser, bureau, or shelf.
- NEVER place camera or cords within crib <US version> / Cot <UK version>
- Secure the cord to the wall to keep cord away from the baby’s reach.

Warning

This digital photo frame and the camera units are compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User’s Guide, safe to use. Therefore, always read the instructions in this User’s Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Don’t allow children to play with it.
- This video in picture function of the digital photo frame is not a substitute for responsible adult supervision.
- Keep this User’s Guide for future reference.
- Do not cover the camera unit with a towel or blanket.
- Never use extension cords with power adapters. Use only the power adapters provided.
- Test this Digital Photo Frame and all its functions so that you are familiar with it prior to actual use.
- Do not install the Digital Photo Frame near a heat source.
- Use only the power adapters provided. Other power adapters may damage the device.
- Do not touch the plug contacts with sharp or metal objects.
- Do not place your Digital Photo Frame in the bathroom or other humid areas.
- Do not place your Digital Photo Frame near sources of heat and extreme temperatures, such as fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- If the LCD screen breaks, do not touch the glass or liquid. Contact Motorola customer support for assistance.

Care and maintenance


- Wipe the frame and the LCD screen gently with a soft, clean, dry cloth.
- To remove fingerprints on the LCD screen, wipe gently with a soft, lint-free cloth. Do not use cleaning solutions unless they are designed specifically for LCD screens.

CAUTION

In order to reduce the risk of fire or electrical shock, do not expose the device to water or humidity. Never disassemble the device. Opening the casing is dangerous and will invalidate the warranty. Always switch off and disconnect the power adapter before cleaning the Digital Photo Frame.

2 GETTING STARTED

2.1 Connecting Camera unit to power

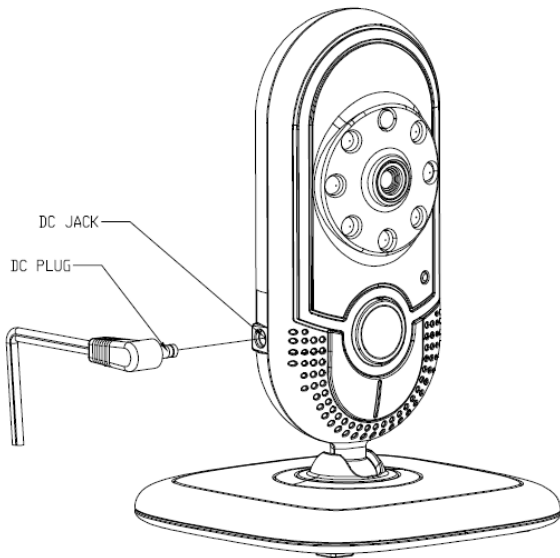


1. Insert the small plug of the power adapter into the side of the camera unit.
2. Connect the other end of the power adapter to the power outlet **<US version>** / mains socket **<UK version>**
3. When the camera unit is off, press and hold **<Power>** until the **Power Indicator** is on.

NOTE

Only use the provided power adapter.

2.2 Connecting Digital Photo Frame to power

<Digital photo frame installation diagram>

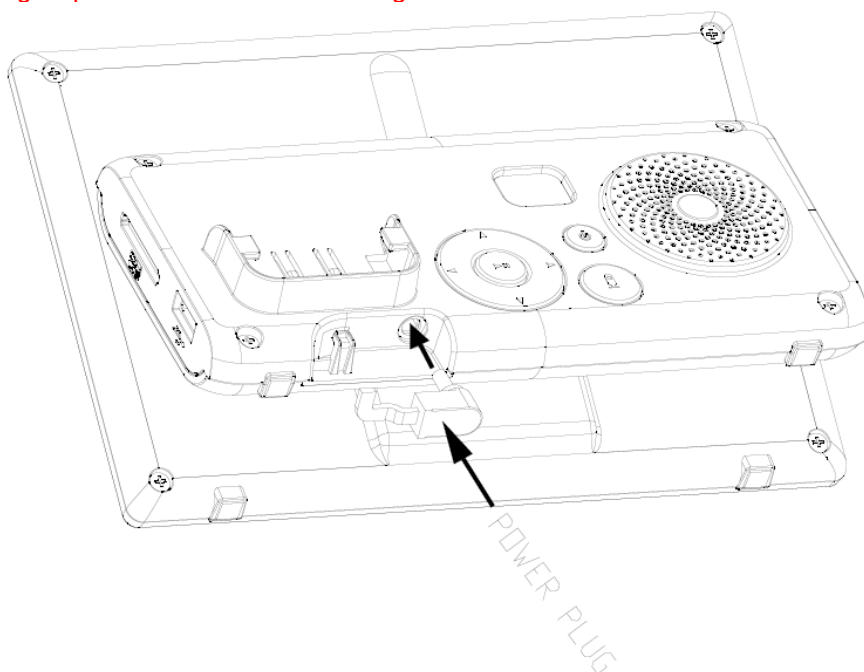

1. Insert the small plug of the power adapter into the DC jack at the stand bottom of the digital photo frame.
2. Connect the other end of the power adapter to the power outlet **<US version>** / mains socket **<UK version>**

- When the digital photo frame is powered off, press and hold the power key at the back of digital photo frame until the **Link Indicator** is on. When the power is on then it will search for and link with the camera unit.


NOTE

Only use the provided power adapter.

2.3 Inserting a memory card

On the side of the Digital Photo Frame, you can also insert a memory card or a USB flash drive containing the content you want to show on this unit. Your Digital Photo Frame supports SD, SDHC and MMC memory cards.

<Diagram to show how memory card is installed>

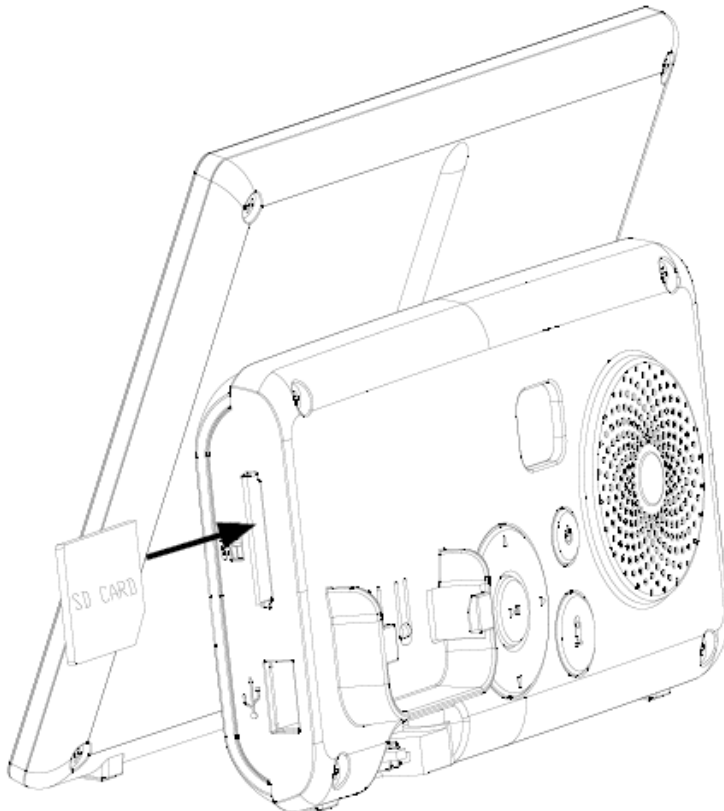

To insert a memory card, push the card firmly into the memory card slot in the corrected direction as indicated above.

2.4 Removing a memory card

Simply pull the card out of the slot gently.

NOTE

Do not insert a micro or mini memory card without an adapter.


2.5 Connecting a USB device

Your Digital Photo Frame supports USB flash drive and card reader.

NOTE

The USB port on the display unit won't be used to connected to the computer

<Diagram to show how USB flash is installed>

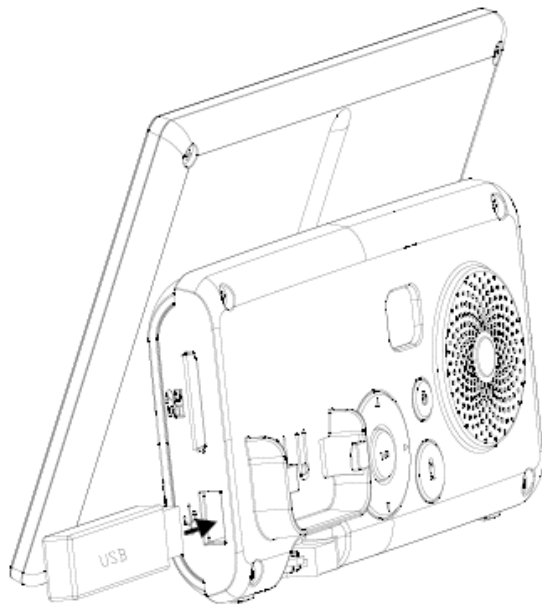


NOTE

- After you insert a photo-loaded memory card or USB flash drive and connect the Digital Photo Frame to power, the Digital Photo Frame will automatically start to display photos in slideshow mode.
- Both ports support hot swap function which allows for swapping cards and drives while the unit is powered on.
- This frame can play images in JPEG format (.jpg). Video files are not supported.


2.5 Replacing the remote control battery

The supplied remote control comes installed with a CR2032 lithium battery. When you need to replace the battery, follow the steps below.


1. Slide the locking tab to the right.

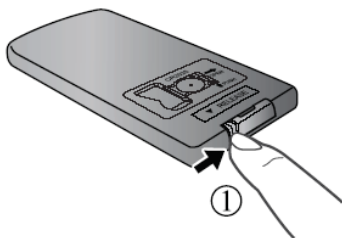

2. Pull out the battery holder.

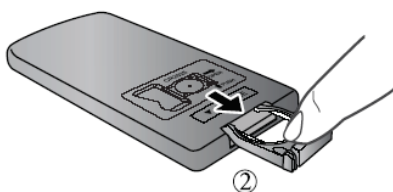

3. Insert the new battery into the battery holder. The battery must be placed with the positive pole facing upwards in the illustrated position.

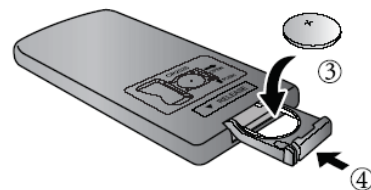

4. Slide the battery holder into the remote control.

WARNING

- Protect the battery from overheating or excessive moisture.
- Failure to replace the battery in the correct manner may result in damage to the battery.
- Use only the approved specified batteries.
- Properly recycle or dispose of used batteries according to local guidelines and regulations.
- Do not throw batteries into fire. This may result in an explosion.
- If the battery is completely drained or the remote control is not in use for a long time, remove the battery to prevent leakage.


3 USING YOUR DIGITAL PHOTO FRAME


Please read these instructions carefully, and be reminded that the video function featured with the digital photo frame is just intended as an aid. It is not a substitute for responsible, correct parental supervision.



NOTE


If you place the parent and camera units too close together, you will hear a high pitched noise, this is normal. The units are designed to be located at a distance from one another, e.g. in separate rooms.

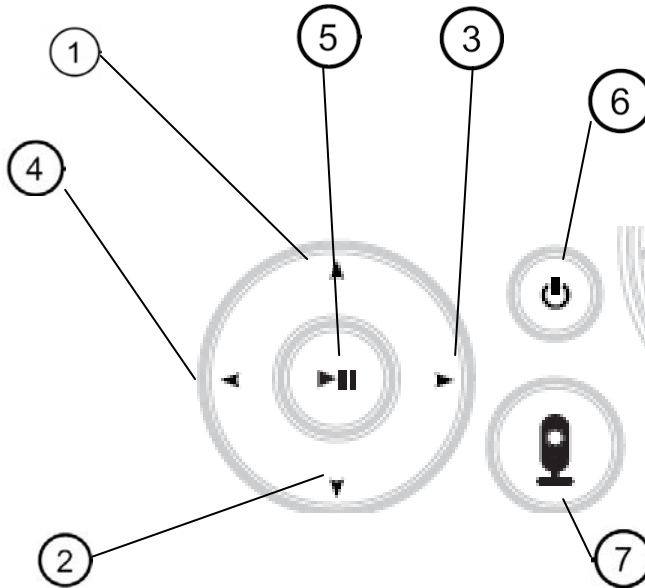

3.1 Using the control buttons






No.	Function
1	UP: moves up / goes back to the previous page
2	DOWN: moves down / goes back to next page
3	LEFT: moves left / decreases the volume
4	RIGHT: moves right / increases the volume
5	 <ul style="list-style-type: none"> enters/confirms the selection, or starts/pauses the playback returns to HOME screens (press and hold) goes back to the previous page (press and hold) stops the playback
6	ON/OFF button Turns on/off the power
7	Video ON/OFF: enters/exits video monitoring mode


When using the Home screen	
Button	Function
UP	Selects USB or Memory Card
DOWN	Selects USB or Memory Card
LEFT	Selects Calendar, Picture, Monitor, Music or Tools menu
RIGHT	Selects Calendar, Picture, Monitor, Music or Tools menu
	Enters sub-pages of Calendar, Picture, Monitor, Music or Tools menu.
	Enters video monitoring mode

When browsing photos in thumbnail view	
Button	Function
UP	Moves up
DOWN	Moves down
LEFT	Moves left
RIGHT	Moves right
	Displays the currently selected photo in Single Photo view Press and hold to return to HOME screen


When playing a slideshow	
Button	Function
UP	Goes back to the previous photo
DOWN	Goes to next photo
LEFT	Decreases the background music volume
RIGHT	Increases the background music volume
	Starts/pauses the playback Press and hold to return to thumbnail view
	Enters video monitoring mode

When browsing/playing Music in Music folder	
Button	Function
UP	Moves up
DOWN	Moves down
LEFT	Decreases the music playback volume
RIGHT	Increases the music playback volume
	Starts/pauses the playback of selected music on the folder Press and hold to return to HOME screen
	Enters video monitoring mode

When video monitoring	
Button	Function
LEFT	Decreases the audio volume
RIGHT	Increases the audio volume
	Exits video monitoring mode


When using the Monitor Settings menu	
Button	Function
UP	Moves up to previous submenu
DOWN	Moves down to next submenu
LEFT	Moves left to select entries at Monitor setting
RIGHT	Moves right to select entries at Monitor setting
	Press and hold to return to HOME screen







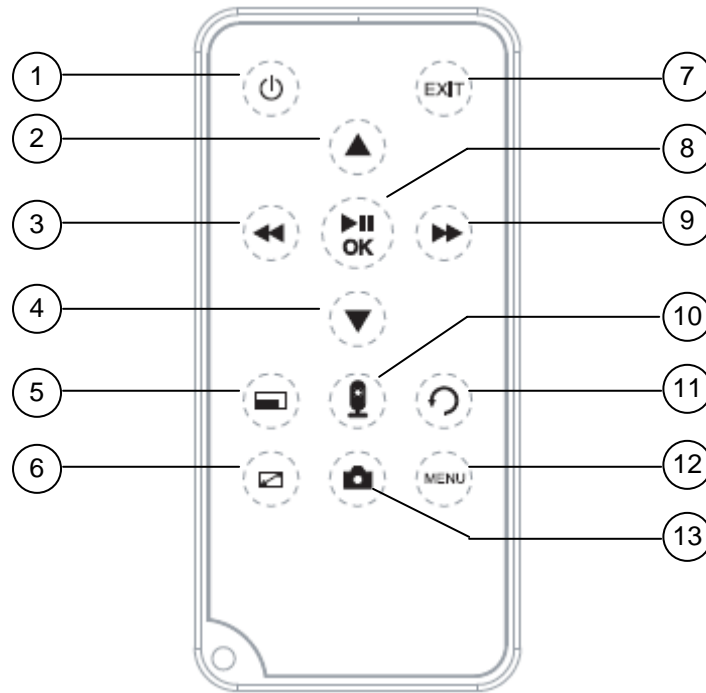


When using the Settings menu	
Button	Function
UP	Moves up to previous submenu / Change the entries in the Calendar setting
DOWN	Moves down to next submenu / Change the entries in the Calendar setting
LEFT	Moves left to select entries at Calendar setting.

RIGHT	Moves right to select entries at Calendar setting.
	Enters submenu or enter/confirm/change the settings. Press and hold to quit submenu or go back to previous page.



3.2 Using the remote control

The following table describes the buttons and their functions that available on the supplied remote control.



No.	Descriptions
1	ON/OFF  • Turn on/off the power
2	UP  • Move up. • Select previous picture at Photo view
3	LEFT/PREVIOUS  Move left or Decreases the volume
4	DOWN  • Move down • Select next picture at photo view
5	Display aspect  Adjust the display aspects between Fit to Screen or Full Screen
6	Zoom  Zoom in the photo by 100%, 125%, 150%, 175%, 200%, 225%
7	Exit Go back to the previous page
8	OK/PLAY/PAUSE  Enter and confirm the selection, or start/pause the playback
9	RIGHT/NEXT  Move right or Increases the Volume
10	Monitoring 

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	14 of 25

	Enter or exit monitoring mode
11	ROTATE  Press repeatedly to rotate the selected photo counterclockwise in increments of 90 degrees.
12	Menu Accesses HOME screen
13	SnapShot  Takes still picture at video monitoring mode and store in memory cards or USB drive


Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	15 of 25

4. USING THE MENUS

4.1 Using the Home Menu

When powered on, photos will play in slideshow mode automatically if the mode is selected at Startup mode settings.

- If a memory card or USB drive has been inserted, photos in the device will play in slideshow mode automatically.
- If no memory card or USB drive is inserted, the screen will stay at **Home Menu**.

To exit slideshow mode, press the  button on the back of the Digital Photo Frame until return to the **Home Menu**.





In the **Home Menu**, you can:

- Press the **LEFT** or **RIGHT** button to select the **Calendar, Picture, Monitor, Music or Tools** menu.
- Press the **UP** or **DOWN** button to select a device, including **USB** or **Memory Card**.


4.2 Using the Photo menu

NOTE

The Digital Photo Frame only supports JPEG (.jpg) image file format.*

1. In the **Home Menu**, press the **LEFT** or **RIGHT** button to select the **Picture** menu.
2. Press the **UP** or **DOWN** button to select a device.
3. Press the  button to enter photo slide show mode.
4. Press and hold the  button to display your photos in thumbnail view (both photos and folders may display, depending on the content stored in the device).



5. To browse or select a photo, use the **LEFT** and **RIGHT** buttons.
6. Press the  button again to start running slideshow.
7. To switch to the previous or next photo in slideshow mode, press the **LEFT** or **RIGHT** button.

4.2.1 ~~Using the submenus at Photo Slideshow~~

~~In Photo Slideshow mode, press MENU button can quick access the photo view setting submenu. Refer to the table below for more information~~

Sub-menu	Descriptions	Description/Function
Zoom	125%, 150%, 175%, 200%, 225%, 100%	Zooms in the photo
Rotate	90, 180, 270, 0	Rotates the selected photo counterclockwise in the increments of 90 degrees
Transition-effect	Random	Selects the transition effect to be applied in the slide show.
	Snake	
	Partition	
	Erase	
	Blinds	
	Random lines	
	Grid	
	Cross	
	Spiral	
	Rect	
Close		
Frequency	5Sec.	Selects the speed of slideshow.
	15Sec.	
	30Sec.	
	60Sec.	
	5Min.	
	15Min.	
Aspect	Full Screen	Optimizes photos to fit the whole screen.
	Crop to Fill	Crop the photos to fit the whole screen



Doc Title : Product Data – User’s Guide	Revision : R.00
Model : MFV700	Page(s) : 17 of 25

Fit to Screen	Stretch the photo to fit the whole screen.
--------------------------	---

4.3 Using the Music Player menu


NOTE

The Digital Photo Frame only supports MP3 (*.mp3) audio file format.


1. In the **Home Menu**, press the **LEFT** or **RIGHT** button to select the **Music** menu.
2. Press the **UP** or **DOWN** button to select a device.
3. Press the  button to enter **Music Player**.
 - To select the song, press the **UP** or **DOWN** button.
 - To play the selected song, press the  button.
 - To change the volume, press the **RIGHT** or **LEFT** button.



During music playback mode,



- Press the **UP** to previous song.
- Press the **DOWN** to next song
- Press  to play/pause
- Press **LEFT** to decrease the playback volume
- Press **RIGHT** to increase the playback volume

4.4 Using the Calendar menu

1. In the **Home Menu**, press the **LEFT** or **RIGHT** button to select the **Calendar** menu.
2. Press the  button to enter the **Calendar** mode. **Monthly Calendar or Clock** appears on the screen upon the settings.
3. You can play video monitoring by pressing Video On/Off button at the back of the panel or the [remote control](#).




4.5 Using the Monitor Setting menu

1. In the **Home Menu**, press the **LEFT** or **RIGHT** button to select the **Monitor** menu.
2. Press the  button to enter the **Monitor** menu.

- To move among sub-menus under **Monitor**, press the **UP** or **DOWN** button.
- To apply the settings you have selected, press the  button.
- To go back to the previous page, press and hold the  button.

Monitor Settings Sub-menu	Options	Description/Function
Background	Slideshow	Selects the mode for video monitoring to be taken place
	Calendar	
Snapshot memory	Memory Card	Selects memory priority for storing still picture snap shot.
	USB	

4.6 Using the Tools menu

1. In the **Home Menu**, press the **LEFT** or **RIGHT** button to select the **Tools** menu.
2. Press the  button to enter the **Tools** menu.
 - To move among sub-menus under **Tools**, press the **UP** or **DOWN** button.
 - To apply the settings you have selected, press the  button.
 - To go back to the previous page, press and hold the  button.

You can control all function settings of the Digital Photo Frame from the **Tools** menu. Refer to the table below for more information.

Photo Settings Sub-menu	Options	Description/Function
Display Mode	Slideshow	Selects photo display mode.
	Thumbnail	
	Browse Mode	
Aspect	Fit to Screen	Optimizes photos to fit the whole screen.
	Crop to Fill	Crop the photos to fit the whole screen
	Full Screen	Stretch the photo to fit the whole screen.
Frequency	5 Sec.	Selects the speed of slideshow.
	15 Sec.	
	30 Sec.	
	60 Sec.	
	5 Min.	
	15 Min.	
Slideshow Repeat	Once	Sets slideshow playback mode.
	Repeat	
Slideshow Effect	Random	Selects the transition effect to be applied in the slide show.
	Snake	
	Partition	
	Erase	
	Blinds	
	Random lines	
	Grid	
	Cross	
	Spiral	
	Rect	
	Close	
	Background Music	
Off		

Calendar Settings Sub-menu	Options	Description/Function
Display mode	Monthly Calendar Clock	Sets the calendar display mode
Date	-	Allows you to set up the date, month and year.
Time Format	24-hour 12-hour	Sets 12-hour and 24-hour time mode
Clock Time	-	Sets hour and minute
Alarm Status	On Off	Enables/disables the Alarm options.
Alarm Time	-	Sets the alarm time.
Alarm Tone	Alarm 1 Alarm 2 Alarm 3	Allow to set 3 alarm melodies
Alarm Frequency	Mon. to Fri. Weekend Once Everyday	Sets the alarm frequency (Mon. to Fri., Weekend, Once, Everyday)

Music Settings Sub-menu	Options	Description/Function
Play Mode	Repeat current Repeat Random Once	Sets music playback mode.
Show Spectrum	On Off	Enables/disables volume level in graphical presentation

System Settings Sub-menu	Options	Description/Function
Languages	English Français Español Deutsch Italiano Dutch Svenska Dansk	Selects an OSD (On-Screen display) language.
Backlight	1, 2,, 5	Sets the intensity level of backlight.
Brightness	1, 2,, 16	Sets the level of display brightness.
Contrast	1, 2,, 16	Sets the level of display contrast.
Saturation	1, 2,, 16	Sets the display color saturation level.
Auto On	Yes No	Enables/disables the Auto power on option.
Auto On Time	-	Powers on the Digital Photo Frame automatically according to the hour and minute you set.
Auto Off	Yes No	Enables/disables the Auto power off option.

Auto Off Time	-	Powers off the Digital Photo Frame automatically according to the hour and minute you set.
Volume	0, 1, 2,, 10	Sets the audio playback volume level.
Reset Default Setting	Yes	Resets to system default system
	No	Cancel the task.
Wallpaper	Wallpaper 1 Wallpaper 2 Wallpaper 3	Selects the pre-loaded wallpapers.

4.7 Lullaby

There are 3 lullabies available for playing to soothe your baby to sleep.

4.7.1 Play/stop lullaby from the camera unit

1. Press <Lullaby> on the camera unit to select the lullaby and start playing.
2. During playback, press <Lullaby> to toggle between different lullabies.

OR

Press <Play/Stop> on the camera unit to start playing the selected lullaby. Press again to stop playing.

1. DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user’s guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area. Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

2. CLEANING

Clean MFV700 with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep your MFV700 away from hot, humid areas or strong sunlight, and don’t let it get wet.
- Every effort has been made to ensure high standards of reliability for your MFV700. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

3. TROUBLESHOOTING

Link light on the digital photo frame does not come on

- Check whether the digital photo frame is powered on.

Link light on the digital photo frame flashes

- The digital photo frame and the camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 meter.
- The camera unit may be switched off. Press and hold <Power> key to switch on the camera unit.

The digital photo frame beeps

- Lost connection with the camera unit. Reduce the distance between the digital photo frame and the camera unit, but not closer than 1.5 meter.
- The camera unit may be switched off. Press and hold <Power> key to switch on the camera unit.

Cannot view the video image of baby from the digital photo frame

- Video feed maybe turned off. Activate the video feed by pressing <Video On/Off>.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	21 of 25

- The digital photo frame and the camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 meter.

Cannot hear sound or baby cry from the digital photo frame

- The volume level in the digital photo frame may be set too low, increase the volume level of the digital photo frame. Refer to section 4.4.11 for volume level settings.
- The digital photo frame and the camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 meter.

The digital photo frame system produces a high-pitched noise

- The digital photo frame and the camera unit are too close to each other. Make sure the digital photo frame and camera unit is at least 1.5 meter away from each other.
- The speaker volume of the digital photo frame maybe set too high. Decrease the volume of the digital photo frame.

Some images are not displayed

- The image file is not supported by this device.

Cannot read SD/MMC/SDHC card

- Check whether SD/MMC/SDHC card is inserted properly.

Cannot read USB flash drive

- Check whether USB flash drive is inserted properly.

4. GENERAL INFORMATION

If your product is not working properly...

1. Read this User’s Guide.
2. Visit our website: www.motorola.com
3. **Contact Customer Service at**

US and Canada	1-888-331-3383 (FOR US VERSION)
UK	0845 218 0890 (FOR UK VERSION)
ROI	08187 62092 (FOR UK VERSION)

Consumer Products and Accessories Limited Warranty (“Warranty”)

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE")

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	22 of 25

LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada **1888-331-3383 (FOR US VERSION)**
UK **0845 218 0890 (FOR UK VERSION)**
ROI **08187 62092 (FOR UK VERSION)**

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	23 of 25

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE. or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

**FCC, ACTA and Industry Canada (IC) Regulations
(FOR US VERSION ONLY)**

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003

Caution: To maintain the compliance with the FCC’s RF exposure guideline, place the camera unit and the digital photo frame at least 20 cm from nearby persons.

<For UK/EU version>

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	MFV700	Page(s) :	24 of 25

Compliance Information

Declaration of Conformity



This product is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC:
European Standard EN55022:2006 Class B,
EN61000-3-2:2006,
EN61000-3-3:1995/A1:2001/A2:2005 and
EN55024:1998/A1:2001/A2:2003
(IEC 61000-4-2:Edition 1.2:2001-04,
IEC 61000-4-3:Edition 2.1:2002-09,
IEC 61000-4-4:Second edition:2004-07,
IEC 61000-4-5:Edition 1.1:2001-04,
IEC 61000-4-6:Edition 2.1:2004-11,
IEC 61000-4-8:Edition 1.1:2001-03,
IEC 61000-4-11:Second Edition:2004-03).

WEEE Directive



Produced after 13 August 2005. Waste electrical should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

<For US_CAN version>

FCC and Industry Canada

This device complies with Industry Canada and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian DOC statement

- This Class B digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

5. TECHNICAL SPECIFICATIONS

(FOR US VERSION)

RF frequency band	1921.536 MHz - 1928.448 MHz
Channels	5
Operating temperature	5oC - 45oC
Camera unit voltage (AC voltage, 50/60Hz)	100 - 240V
Camera unit voltage (Adapter output)	6VDC @600mA
Digital photo frame voltage (AC voltage, 50/60Hz)	100 - 240V
Digital photo frame voltage (Adapter output)	5VDC @1A

(FOR UK VERSION)

RF frequency band	1881.792 MHz - 1897.344 MHz
Channels	10
Operating temperature	5oC - 45oC
Camera unit voltage (Adapter output)	Input 100-240VAC 50/60Hz 150mA; Output 6VDC @600mA < Tenpao S004LV0600060 / S004LB0600060 EU / UK>
Digital photo frame voltage (Adapter output)	Input 100-240VAC 50/60Hz 150mA; Output 5VDC @1A < Tenpao S006MV0500100 / S006MB0500100 EU / UK>



MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.
© 2011 Motorola Mobility, Inc. All rights reserved.

Version 1.0
Printed in China