

Note: Charge the handset for 24 hours before

5. When the handset is fully charged. icon will appear steady on the display. The display will show HANDSET, the handset number date and the time to indicate that it is registered to the base.

IMPORTANT

Warnina! Use only the approved rechargeable Ni-MH battery pack (AAA 2.4v 300mAh Ni-MH rechargeable battery) supplied with your C100xI X. BATTERY LOW WARNING

If ion flashes on the display and you hear a warning beep every 2 minutes during a call, you will need to recharge the handset before you can resume use When charaina, icon will scroll on the display.

# BATTERY PERFORMANCE

3.5 Intercom

3.5.1 Make an internal call

handset number you are calling

3.5.2 Receive an internal call

1. Press to answer the call.

3.5.4 3-way conference call

During a call with an external caller:

the other handset rings automatically.

3.5.3 Transfer a call

During an external call:

handset rings automatically.

number that is calling you is displayed.

the other handset rings automatically.

put to normal use for several days.

In ideal conditions, a fully charged battery should give up to 10 hours of talk time or up to 200 hours standby time on a single charge.  $^{1}$ Note that a new battery does not reach it's full capacity until it has been

To keep your battery down at least one time per week will help prolong battery life.

Running the battery right down at least once a week will help them last as long as possible.

The charge capacity of the rechargeable battery will reduce with time as it wears out, giving the handset less talk / standby time. Eventually it will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. The battery and handset may become warm during charging. This is normal.

<sup>1</sup>All talk and standby times are approximate and depend on features selected and usage pattern.

If more than one handset is registered to the base, internal calls can be made between two handsets. Cicon flashes and the display shows the

1. If only 2 handsets are registered to the base, press (\*\*m) and the other

2. If more than 2 handset are registered to the base press 🐜 and

scroll ▼ to the handset that is to be called and press 💌

When you receive an internal call,  $\boldsymbol{\zeta}$  icon flashes and the handset

You can transfer an external call to another handset registered to the

2. If only 2 handsets are registered to the base, press and hold 🖜 and

If more than 2 handsets are registered to the base press and hold ♠ and scroll ▼ to the handset that is to be called and press ♠...

4. When the other handset answers, press to complete the transfer.

Your external call resumes automatically after 1 minute if there is no

You can hold a 3-way conference call between 2 internal callers and 1

5. If only 2 handsets are registered to the base, press and hold (\*) and

Manufactured, distributed or sold by Binatone Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC, and are used under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.

Version 7 (FN-US)






If you have subscribed to a Caller ID Service and the Auto Clock is set to on, the date and time will automatically for all handsets when you receive

If you do not have a Caller ID service, you can set the date and time manually, see section "5.3. Date and Time".


Your C100xLX is now ready for use.

# 2. Getting to know your phone

# Underside of your base

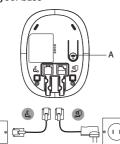

In standby mode, press to ring the handset(s). Press and hold to enter registration mode when registering handsets

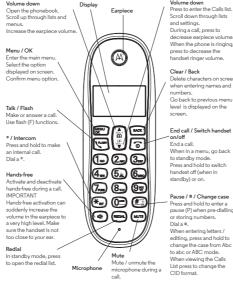

6. Edit the number if necessary, then press to save.

Scroll ▲ or ▼ to the entry you want. Press ...

Scroll ▼ to Delete and press . The display shows Confirm?.

Press . Scroll ▼ to Delete all. The display shows Confirm?.

When the keypad is locked, you can still answer incoming calls and

operate the handset in a normal fashion during a call. When the call

When the keypad is locked, you can still answer incoming calls and

operate the handset in a normal fashion during a call. When the call

You can alert a handset user that they are wanted or locate a missing

Press on the base. All handsets registered to the base will ring.

2. To stop the ringing, press on the base again or press any button

3.7.3 Delete an entry

Press to open the Redial list.

4. Press to confirm or occur to cancel.

3.7.4 Delete the entire Redial list

Press to open the Redial list.

3. Press to confirm or acc to cancel.

3.8 Lock / unlock the keypad

ends, the keypad lock resumes in place.

ends, the keypad lock resumes in place.

Paging calls cannot be answered by a handset.

Press and hold <sup>™</sup>

on the handset.

Keys locked is displayed

3.9 Paging / Find handset

#### 6. If more than 2 handset are registered to the base press and hold $\stackrel{\bigstar}{\clubsuit}$ and scroll ▼ to the handset that is to join the call and press ...

- When the other handset answers, press to connect all three
- callers to begin the conference call. 8. Press to end the call.

# 3.6 Hands-free

To talk to the caller without holding the handset or for other people in the room to listen to the conversation over the loudspeaker simply use the hands-free function.

# 3.6.1 Make a hands-free call

- 1. Dial the number and then press .
- 2. Press to end the call.

### 3.6.2 Answer a call hands-free

# Press to answer the call in hands-free.

Press 🕩 to switch the call between the earpiece and the loudspeaker.

During a hands-free call, press ▲ or ▼ to adjust the volume.

# 3.7 Redial

The last 10 entries dialed are stored in the redial list

3.7.1 View or dial an entry

- 1. Press to open the Redial list
- Scroll ▲ or ▼ to the entry you want.
- Press to dial the displayed entry or press to return to standby.
- 3.7.2 Copy a Redial list number to the phonebook
- 1. Press to open the Redial list.
- Scroll ▲ or ▼ to the entry you want.
- Press . The display shows Save number
- 4. Press again. The display shows Entername
- 5. Enter the name and press . The number is displayed.

# Welcome...

### to your new Motorola C100xLX Digital Cordless Telephone!

- All handsets are completely cordless and easy to locate with paging system.
- Bright hacklit display
- · Speakerphone for hands-free conversations.
- 50 Name and Number phonebook.
- Caller ID shows you who's calling and shows the details of the last 20 callers in a Calls list. $^1$
- Redial up to 10 of the last numbers called.
- Register up to 4 handsets to a single base.
- Make internal calls and transfer external calls between handsets.
- Choose from 10 different ringtones.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services


### Need help?

If you have any problems setting up or using your C100xLX, please contact Customer Service at 1-888-331-3383.

Alternatively, you may find the answer in the 'Help' section at the

<sup>1</sup>You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be applicable.

# Overview of your handset

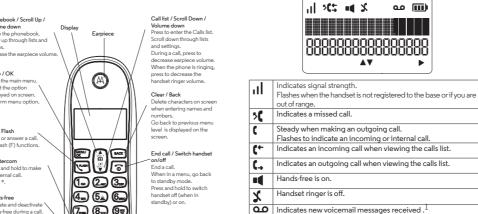

4. Phonebook

Battery is fully charged.

Battery is running low.

Battery is partially charged.

You can store up to 50 names and numbers in the phonebook. Names can be up to 14 characters long and numbers up to 24 digits.

Off when there is no voicemail messages.

Flashes when battery is almost fully discharged.

▲▼ Indicates you can scroll through a list or adjust the volume in talk mod

<sup>1</sup>This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

Indicates more text after the displayed information

# 4.1 Store a name and number

If the C100xLX is connected to a PABX, you may need to enter a pause in a stored number. This gives the PABX time to find an outside line A pause is normally stored after the PABX access code (e.g. 9). When storing a number, press and hold # until the display shows P. You can then continue storing the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller as well as the number, save the full telephone number including the area code to your phonebook.

You can store multiple entries, a telephone number may only be saved once. However, to prevent unnecessary duplicated entries, you can only store the same number once.

- Press . The display shows Phonebook.
- Press . The display shows View.
- 3 Scroll down to Add new
- Press . The display shows Entername.
- Enter the name and press . The display shows Enternumber.
- 6. Enter the number and press to save.

# ENTERING NAMES

Use the keypad letters to enter names, e.g. to store TOM: Press 8 once to enter T.

Press 6 three times to enter O. Press 6 once to enter M.

## 1. Getting started

#### IMPORTANT

This user guide provides you with all the information you need to

To set up your phone, follow the simple instructions in 'Getting

If you have purchased a C100xLX multiple pack you will also have

get the most from your phone.

Started', on the next few pages,

C100xLX base & cordless handset

1 x rechargeable Ni-MH battery pack

Power adapter for the base

Telephone line cord

the following items:

Cordless handset & charger

Power adapter for the charger

Handset LCD Display

· 1 x rechargeable Ni-MH battery pack

Only use the telephone line cord supplied.

IMPORTANT

Got everything?

Do not place your C100xLX in the bathroom or other humid locations.

Make sure that it is at least 3 feet away from other electrical appliances

to avoid interference. Your C100xLX works by sending radio signals

between the handset and base. The strength of the signal depends on

The unit has a range of up to 650 feet outdoors when there is a clear

line of sight between the base and handset. Any obstruction between

base indoors and the handset either indoors or outdoors, the range will

normally be up to 98 feet. Thick concrete and stone walls can severely

The  $\Pi$  icon on your handset indicates that you are within range of the

base. When out of range of the base, the III icon disappears. If you are

The line will hang up if the handset moves out of range of the base. Move

closer to the base. The handset will automatically reconnect to the base.

The base station must be plugged into the electrical outlet at all times.

nandset is fully charged. Use only the power adapter and telephone line

Each menu has a list of options, which can be seen in detail on the menu

Then use ▲ or ▼ buttons to scroll through the available options

press BACK. To exit the menu and return to standby, press .

If buttons on the handset are not pressed within 30 seconds, the handset

When the handset is switched on and in standby mode:

3. Press to select an option. To return to the previous me

Key tone

Docking tone

Battery tone

Phone name

Date & time

Language

Call list type

<sup>1</sup>Only available when an phonebook entry is already stored

Dial mode

Auto clock

Reaister

Do not connect the telephone line cord into the wall outlet until the

the base and handset will reduce the range significantly. With the

where the base is placed. Placing the base at a higher location ensures

# Location

accessible.

a better signal.

HANDSET RANGE

SIGNAL STRENGTH

Setting up

IMPORTANT

on a call, you will hear a warning beep.

cord supplied with the product.

Navigating the menus

1. Press (to open the main menu

map on the below list.

will go into standby mode

NOTE

Menu map

Phone setup

Rina volume

WRITINGTIPS

Press ▲.

Press o to insert a space.

alphabet will be

4.2 View or dial an entry

2. Scroll ▲ or ▼ to the entry you want.

4.3 Edit a name and number

Press ( The display shows View.

umber and press to save.

1. Press . The display shows Phonebook.

Press (KIN). The display shows View.

Scroll ▼ to Delete and press (MENU).

5. Press to confirm or to cancel.

4.4 Delete an entry

Scroll ▼ to Edit and press ...

Enter the first letter of the name to search alphabetically.

displayed. Scroll ▲ or ▼ to the entry you want.

and press 📖 . The existing name is displayed.

and press . The existing number is displayed.

Press to dial or to return to standby.

Press . The display shows Phonebook.

The first name that starts with this letter or the nearest letter in the

Scroll lacktriangle or lacktriangle to the entry you want to edit, or search alphabetically

Press bux to delete the name if required, then enter the new name

Press (BACK) to delete the number if required, then enter the new

Scroll ▲ or ▼ to the entry you want to delete, or search alphabetically and press . The display shows Confirm?.

Press (BACK) to delete the last character or digit.

Press ▲ or ▼ to move between characters.

Add new

Delete<sup>3</sup>

Phonebook \_\_\_

#### You will need to place your C100xLX base within 4.9 feet of the electrical outlet and telephone wall outlet so that the cables will reach. The socket outlet should be installed near the equipment and should be easily

Installing and charging the handset Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery pack supplied. Please note the '+'

1. Plug the telephone line cord into the socket marked 2 on the

2. Plug the power adapter into the socket marked 🛂 on the underside

of the base and plug the other end into the electrical outlet wall outlet. Switch on the electrical outlet.

- and '-' markings inside the battery compartment and insert in the correct direction.
- 2. Slide the battery cover back into place.

Connecting the base

nderside of the base.

- 3. If you are charging the battery for the first time, place the handset on the base to charge for at least 24 hours continuously.
- 4. When the handset is fully charged, **i**icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall outlet.

# Connecting the handset and charger (for multi-pack

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

- Plug the power adapter into the socket marked 🛂 on the underside of he charger and plug the other end into the electrical outlet wall socket
- Remove the battery cover from the back of the handset and insert the AAA 2.4v 300mAh Ni-MH rechargeable battery supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
- 3. Slide the battery cover back into place.
- If you are charging the battery for the first time, place the handset on the charger to charge for at least 24 hours continuously

# 3. Using the phone

Your handset will automatically time the duration of all external calls. The call timer will display after the first 10 seconds of your call. When the call ends, the total duration of your talk time is shown for 3 seconds

#### 3.1 Switch the handset on / off Press and hold to switch the handset on or off.

3.2 Calls

### 3.2.1 Make a call

1. Press .

# 2. Dialing a telephone number.

#### 3.2.2 Preparatory dialling 1. Use the keypad to dial a number, if you make a mistake press [MXX] to

delete the last digit. 2. Press to dial.

### 3.2.3 End a call

Press 🖲, or place the handset back on the base or charger

# 3.2.4 Receive a call

When you receive an external call, the phone rings and [ icon flashes on the display.

1. Press to answer the call.

## 3.3 Adjust the earpiece volume

During a call, press ▲ or ▼ to increase or decrease the volume. There are 5 levels to choose from.

## 3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hear During a call, press will. The display shows Mute on and your caller

2. Press again to resume your call.

# 4.5 Delete all entries

- 1. Press . The display shows Phonebook.
- Press ( The display shows View.
- Scroll ▼ to Delete all and press (XXXII).
- The display shows Confirm? 5. Press to confirm or to cancel.

# 5. Phone setup

### 5.1 Sounds

### 5.1.1 Ringer volume

You can adjust the ringer volume and set different volume levels. Choose from 5 volume levels or Off.

- 1. Press ( scroll ▼ to Phone setup.
- 2. Press (R. ). The display shows Sounds.
- 3. Press (The display shows Ring volume.
- Press ( scroll ▲ or ▼ to select the volume (1-5 or OFF).
- 5. Press to confirm or to return to the previous menu.

#### 5.1.2 Ringertones You can set different ringer melodies for your internal and external calls.

Choose from 10 different ringer melodie

You will hear a sample ring as you scroll to each ring melody.

# 1. Press ( , scroll ▼ to Phone setup.

- 2. Press . The display shows Sounds.
- Press (MENU). Scroll ▼ to Ring tones.
- Press (SKU), scroll ▲ or ▼ to select the melody (1-10).
- Press to confirm or to return to the previous menu.

# 5.1.3 Key tones on/off

When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

Press (MENU). Scroll ▼ to Keytone. Press ( or ▼ to select On or Off and press ( to confirm.

# 5.1.4 Docking tone on /off

When you replace the handset in the base you will hear a double beep. You can switch this beep on or off.

- Press (KENU), scroll ▼ to Phone setup 2. Press . The display shows Sounds.
- Press (MN). Scroll ▼ to Docking tone.
- 4. Press ( or ▼ to select On or Off and press ( to confirm.

### 5.1.5 Battery tones

When you the battery is running low you will hear a warning beep. You can switch this beep on or off.

- Press , scroll ▼ to Phone setup.
- Press ( The display shows Sounds.
- Press (MENU). Scroll ▼ to Battery tone.
- 4. Press (MN), ▲ or ▼ to select On or Off and press (MN) to confirm.

#### 5.2 Handset name

If you are using more than one handset with your C100xLX base, you can set a personalized name for each handset to easily distinguish between

- A name can be up to 14 characters long Press (MRNU), scroll ▼ to Phone setup.
- Press . The display shows Sounds. Scroll ▼ to Phone name and press ...
- 4. Enter the new handset name and press to confirm. Delete the current name by pressing BACK).
- Press (the display shows View
- 5. The display shows Enter name.
- 6. Enter the name and press . The number is displayed.
- 7. Edit the number if necessary, then press . The number is stored.

## 7.2.4 Delete an entry

- Press ▼ to open the Calls list.
- 2. Scroll ▲ or ▼ to the entry you want.
- Press ( the display shows View
- 4. Scroll ▼ to Delete and press . The display shows Confirm?.
- Press to confirm or ACK to cancel.

#### 7.2.5 Delete the entire Calls list Press ▼ to open the Calls list.

- Press ( the display shows View
- Scroll ▼ to Delete all and press . The display shows Confirm?.
- 4. Press to confirm or Act to cancel.

# 8. Help

# No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly
- Check that the power adapter is connected and you have a working outlet.

nsumer Products

Consumer Accessories

Consumer Products and

Accessories that are

Exclusions

Repaired or Replaced

### No display

- Check that the battery is inserted correctly and fully charged. Use only the approved rechargeable battery supplied. Check that the handset is switched on. Press and hold .
- Reset the base by removing the battery and disconnecting the electrical outlet. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

Length of Coverage

Normal Wear and Tear, Periodic maintenance, repair and replacement

Batteries. Only batteries whose fully charged capacity falls below 80% of

their rated capacity and batteries that leak are covered by this Warranty.

of parts due to normal wear and tear are excluded from coverage.

Abuse & Misuse. Defects or damage that result from: (a) imprope

operation, storage, misuse or abuse, accident or neglect, such as

to the surface of the product resulting from misuse; (b) contact with

use of the Products or Accessories for commercial purposes or

subjecting the Product or Accessory to abnormal usage or con

liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or

(d) other acts which are not the fault of MOTOROLA or BINATONE., are

Use of Non-Motorola branded Products and Accessories. Defects or

damage that result from the use of Non-Motorola branded or certified

Products or Accessories or other peripheral equipment are excluded

maintenance, alteration, or modification in any way by someone other

from coverage. Unauthorized Service or Modification. Defects or

damages resulting from service, testing, adjustment, installation,

physical damage (cracks, scratches, etc.)

the like, extreme heat, or food; (c)

excluded from coverage.

One (1) year from the date of the products

ccessories original purchase by the first

riginal purchase by the first consume

Ninety (90) days from the date of the

nsumer purchaser of the product.

returned to the consumer, whichever is

The balance of the original warranty

or for ninety (90) days from the dat

chaser of the product.

#### 5.3 Date & time

- Press (MENU), scroll ▼ to Phone setup.
- 2. Press ( ). The display shows Sounds.
- Scroll ▼ to Date & time and press ...
- Enter the date using the keypad (e.g. 08–12–14 for 12th of August 2014) and press (2014) an
- 5. Enter the time using the 12 hour format hh:mm, e.g. 02:45 for 2:45.
- 6. Scroll ▲ or ▼ to select am or pm and press to confirm.

## 5.4 Language

- Press (x), scroll ▼ to Phone setup.
- Press (The display shows Sounds.
- Scroll ▼ to Language and press ...
- Scroll ▲ or ▼ to select the required language and press to

### 6. Services

# 6.1 Call List type

You can set the Call list to show All calls or Missed calls only. If All calls is selected, press ▼ key in idle and you can view all calls lists. If Missed calls is selected, press ▼ key in idle and you can view missed call only.

- Press (MENU), scroll ▼ to Services and press (MENU).
- The display shows Call list type, press .
- 3. Scroll ▲ or ▼ to select All calls or Missed calls and press to

### 6.2 Area code

You can set your local area code into the phone. When a number from that area code calls only the local number will be displayed and stored. The area code can be up to 5 digits long.

\*\*Notation if area code is stored in phone it will not display full

### ..licon flashes

- Handset is out of range. Move closer to the base.
- Make sure that the handset is registered to the base
- Check that the power adapter is connected and you have a working

## Keypad is not responding

Check that the keypad lock is not on

# **■** icon is not scrolling during charge

- Adjust the handset slightly on the base. Clean the charging contacts with a cloth moistened with alcohol.
- Check that the power adapter is connected and you have a working
- The battery is full. When the handset is fully charged, 💷 icon will appear steady on the display

## No Caller ID

- Check your subscription with your network operator.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

\*\*Notation if area code is stored in phone it will not display full number\*\*

## I have forgotten my PIN!

Restore your C100xLX to its default settings, see "6.7 Restore default settings".

Cannot register a handset to the base You can register up to a maximum of 4 handsets to a C100xLX base. You must un-register a handset in order to register a new one

equipment to avoid interference when registering

Check that you have entered the correct PIN code (default = 0000). Check that you are at least 3 feet away from other electrical

#### than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from

### How to Obtain Warranty Service or Other Information?

US and Canada: 1-888-331-3383

Fmail: motorola@encompass.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center. To obtain service, you must include: (a) the Product or Accessory; (b)

the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE, regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE. or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

# FCC, ACTA and IC regulations FCC Part 15

This equipment has been tested and found to comply with the

- Press ( scroll ▼ to Services and press ( scroll ▼ to
- Scroll ▼ to Area code is displayed. Press ( )
- 3. Using the keypad enter the area code and press to confirm

6.3 Flash time Depending on your country and network operator, your C100xLX has the flash time set as 600 ms (Long). It is unlikely that you need to change this

- Press ( scroll ▼ to Services and press ( sou).
- 2. Scroll ▼ to Flash time and press ...
- Press ▲ or ▼ to select Short, Medium or Long and press to confirm.

### 6.4 Dial mode

Your C100xLX is set to tone dialing. You should only need to change this

- if connected to an older type of PABX / PBX which requires pulse dialing. Press ( scroll ▼ to Services and press ( solutions).
- Scroll ▼ to Dial mode and press .
- Press ▲ or ▼ to select Tone or Pulse and press to confirm.

#### 6.5 Switch Auto clock on / off

If you have subscribed to a Caller ID Service, the date and time will be set on all your handsets whenever a call is received. This feature can be set to On or Off.

- Press ( , scroll to Services and press ( ).
- Scroll ▼ to Auto clock and press .
- 3. Scroll ▼ to On or Off then press to confirm.

#### 6.6 Registration

Up to 4 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

The instructions described below apply specifically to your C100xLXhandset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.

#### Handset does not ring

The handset ringer volume may be set to Off.

# Noise interference on my phone or on other

- electrical equipment nearby
  Place your C100xLX at least 3 feet away from electrical appliances or any metal obstructions to avoid any risk of interference
- If wrong PIN is entered a beep is played. You can enter the PIN

# 9. General information

# If your product is not working properly...

- Read this User's Guide.
- Visit our website: www.motorola.com
- 3. Contact Customer Service in the US and Canada at 1-888-331-3383 Email: motorola@encompass.com

## Important safety instructions

Follow these safety precautions when using your phone to reduce the

- risk of fire, electric shock, and injury to persons or property: 1. Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure
- that proper ventilation is provided at the installation site. 2. Do not use while wet or while standing in water.

cord so that it will not be walked on.

- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool). Do not allow anything to rest on the power cord. Place the power
- Never insert objects of any kind into the product vents as that may result in fire or electric shock. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for

requirements for a Class B digital device under Part 15 of the Federal

in a residential installation. This equipment generates, uses and can

radio frequency energy and, if not installed and used in accordance

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to

rrect the interference by one or more of the following measure

Increase the separation between the equipment and receiver.

Changes or modifications to this equipment not expressly approved by

the party responsible for compliance could void the user's authority to

This device complies with Part 15 of the FCC rules. Operation is subject

to the following two conditions: (1) this device may not cause harmful

including interference that may cause undesired operation. Privacy of

communications may not be ensured when using this telephone.

interference, and (2) this device must accept any interference received.

To ensure safety of users, the FCC has established criteria for the amount

of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product

has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone

base shall be installed and used such that parts of the user's body other

than the hands are maintained at a distance of approximately 20 cm (8

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS

Connect the equipment into an outlet on a circuit different from

Consult the dealer or an experienced radio/TV technician for help.

with the instructions, may cause harmful interference to radio

Reorient or relocate the receiving antenna.

that to which the receiver is connected.

operate the equipment.

Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference

# Scroll ▼ to Unregister and press ...

6.6.2 Un-register a handset

6.6.1 Register a handset

At the base:

At the handset:

number.

you are using.

- Press ( scroll ▼ to Services and press ( scroll ▼ to 3. Enter the 4 digit master PIN and press ... Display shows the first registered handset number.
- 4. Scroll ▲ or ▼ to select the handset you want to delete and press red is displayed on the handset screen.

The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

1. If the handset is not already registered to a base, press ...

2. Or if the handset is already registered to a base, press scroll ▼

When the display shows PIN, enter the base PIN and press ...

Use one handset to delete another. You cannot delete the handset that

When the handset registers with the base, it is assigned a handset

to Services and press . Scroll ▼ to Register and press .....

120 seconds in which to register a handset.

Press and hold the 🖆 on the base until the base beeps. You have

### 6.7 Restore default settings

You can restore your C100xLX to its default (original) settings. All the handsets that are registered to the base will be retained. IMPORTANT

Resetting your phone to its default setting will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press ( scroll ▼ to Services and press ( scroll ▼ to
- Do not disassemble this product. If service or repair work is required contact the customer service helpline found in this User's Guide. Do not overload wall outlets and extension cords. Avoid using during an electrical storm. Use a surge protector to
- protect the equipment. 10. Do not use this phone to report a gas leak, especially if you are in the
- vicinity of the gas line. CAUTION

Installation Guidelines

of the device.

PART 68.

telephone company.

the connection of this equipment

FCC Part 68 and ACTA

To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

# Unplug this cordless phone immediately from an

- outlet if: The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged. The product exhibits a distinct change in performance.
- Read all instructions and save them for future reference
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your
- home, consult with your dealer or local power company. 5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- 6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product

standard(s). Operation is subject to the following two conditions: (1) this

device may not cause interference, and (2) this device must accept any

applicables aux appareils radio exempts de licence. L'exploitation

ouillage radioelectrique subi, meme si le brouillage est sus

This equipment complies with Part 68 of the FCC rules and with

technical requirements adopted by the Administrative Council for

minal Attachments (ACTA). This Product Complies With 47CFR

The plug and tack used to connect this equipment to premises wiring

and the telephone network must comply with applicable Part 68 rules

and technical requirements adopted by ACTA. A compliant telephone

cord and modular plug is provided with this product. It is designed to be

connected to a compatible modular jack that is also compliant. An RJ11

jack should normally be used for connecting to a single line and an RJ14

The Ringer Equivalence Number (REN) is used to determine how many

devices you may connect to your telephone line and still have them ring

when you are called. The REN for this product is encoded as the 6th and

characters following the US: in the product identifier (e.g., if ## is

03, the RFN is 0.3). In most, but not all areas, the sum of all RFNs should

This equipment may not be used with Party Lines. If you have specially

does not disable your alarm equipment. If you have questions about

what will disable alarm equipment, consult your telephone company or

rired alarm dialing equipment connected to your telephone line, ensure

be five (5.0) or less. For more information, please contact your local

iack for two lines. See Installation Instructions in the User's Guide.

est autorisee aux deux conditions suivantes : (1) l'appareil ne doit pas

terference, including interference that may cause undesired operation

#### 7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone. Use only the power supply that came with this unit. Using other power supplies may damage the unit.

- Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case of a power outage.
- 10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR. CAUTION

#### To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 8 inches from nearby persons.

iniury.

Scroll ▼ to Reset and press (MENU).

Confirm? is displayed. Press (MENU).

7. Caller ID and the Calls list

provider. A subscription fee may be applicable.

If the call is blocked, Private will be displayed.

If the number is unavailable, Unknown will be displayed,

If the call is from the operator, Operator will be displayed.

If the call is from a payphone, Payphone will be displayed.

If the call is from a ringback request, Ringback will be displayed.

If you have subscribed to a Caller ID Service, you will be able to see

If your caller's name and number are stored in the phonebook and a

number match is found, you will see the caller's name on the display as

The Calls list stores details of your last 50 received calls, including the

prior to answering the call. The display can show the first 16 digits or 14

your caller's number on your handset (provided it is not withheld)

HANDSET Phonebook

To use Caller ID, you must first subscribe to the service from your network

To ensure that the caller's name is displayed, make sure you have stored

the full telephone number, including the area code in the phonebook.

Calls list

Redial list

Dial mode

Keypad lock

vtam

mpty

6.8 Default settings

Handset name

Oocking tone

Ringer melody

Ringer volume

Ear volume

IMPORTANT

7.1 Caller ID

7.2 Calls list

characters of the phone numbers.

phone number, date and time of call.

ow battery beeps

**Battery Safety Instructions** Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in

# Consumer Products and Accessories

Limited Warranty ("Warranty") Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover? Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consume usage for the period outlined below. This Warranty is your exclusive

#### Who is covered? This Warranty extends only to the first consumer purchaser, and is not

warranty and is not transferable.

SAVE THESE INSTRUCTIONS What will BINATONE do?

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these

locations. If you do store or test emergency numbers, please

Remain on the line and briefly explain the reason for the call before Perform such activities in off-peak hours, such as early morning or

### Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. The term "IC: " before the certification/registration number only signifies

that the Industry Canada technical specifications were met. The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices  $\frac{1}{2}$ allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to The Calls list also alerts you when you have unanswered calls. The caller's details are stored in the Calls list whether or not you have

answered the call. The list is shared by all handsets registered to the base. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

When you have missed call(s) (incoming calls that you haven't answered) the display will show X Missed call(s) and the X icon will flash on all handsets registered to the base. Press 🐷 to see the callers details.

### 7.2.1 View the Calls list

- 1. Press ▼ to open the Calls list. If there are no calls in the list, the display shows List empty.
- is displayed.
- 2. Press ▲ or ▼ to scroll through the list.
- If the call was answered, 🕻 con is displayed as you scroll to the entry. If the call was unanswered,  ${f 1}$  icon is displayed as you scroll to the entry.
- displayed. Press (BACK) to see the remaining digits
- phonebook.
- Press twice to see the time and date of the call. 3. When viewing a calls list number press ## to toggle the Calls List

#### 7.2.2 Dial a number in the Calls list

- Press ▼ to open the Calls list.

- Press ▼ to open the Calls list.

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent

### What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE

INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied varranty, so the above limitations or exclusions may not apply to you This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

This equipment meets the applicable Industry Canada Terminal Equipment & Technical Specifications

Specific Absorption Rate (SAR) information

level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Refore a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear) as required by the FCC. This handset has also been tested and meets the FCC RF exposure guidelines. Use of other accessories may Non-compliance with the above restrictions may result in violation of RF exposure guidelines

### Encompass Supply Chain Solutions, Inc.

775 Tipton Industrial Dr. Suite D Lawrenceville, GA 30046 Tel no.: 1-800-881-3344 Canada:

If the telephone number is longer than 16 digits, ▶ icon is

- 2. Scroll ▲ or ▼ to the entry you want.
- 7.2.3 Copy a Calls list number to the phonebook

reconditioned/refurbished/pre-owned or new Products, Accessories

PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT,

DISCLAIMED BY LAW.

# the requirement that the sum of the RENs of all the devices does not $% \left\{ 1,2,\ldots ,n\right\}$

Placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the

SAR tests are conducted using standard operating positions accepted

# USA:

· The most recent number or name if stored in the phonebook

# Press to access the option to store the entry in your

# between different formats, e.g. YYY-YYYY, AAA-YYY-YYYY or

- 3. Press to dial the displayed entry.
- 2. Scroll ▲ or ▼ to the entry you want.

# exceed five.

by the FCC with the phone transmitting at its highest certified power

# Service Center Information

Lenbrook Industries Ltd

Tel no.: 905-831-6555

# 633 Granite Court, Pickering, ON L1W 3K1