

Manufactured, distributed or sold by Binatone Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC.





The charge capacity of the rechargeable battery will reduce with time as it wears out, giving the handset less talk / standby time. Eventually it will need to be replaced. After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. The battery and handset may become warm during charging. This is

Date and time

If you have subscribed to a Caller ID Service and the Auto Clock is set to on, the date and time will automatically set for all handsets when you receive your first call If you do not have a Caller ID service, you can set the date and time manually, see section "5.3. Date and Time".

Press to end the call.

3.6.2 Answer a call hands-free

3.7.1 View or dial an entry

3.7.3 Delete an entry

Press to open the Redial list.

1. Press to open the Redial list.

1. Press to open the Redial list.

3.7.4 Delete the entire Redial list

1. Press to open the Redial list.

4. Press ox to confirm or BACK to cancel.

3. Press to confirm or sack to cancel.

3.8 Lock / unlock the keypad

Scroll ▲ or ▼ to the entry you want

3. Press Ox. The display shows Save number

4. Press (MENU) again. The display shows Entername.

Scroll ▲ or ▼ to the entry you want. Press (MENU).

5. Enter the name and press (Charles). The number is displayed.

6. Edit the number if necessary, then press (xx) to save.

Scroll ▼ to Delete and press . The display shows Confirm?.

Press (Scroll ▼ to Delete all. The display shows Confirm?.

You can lock the keypad so that it cannot be operated accidentally while carrying it

3.7 Redial

Press (4) to answer the call in hands-free

Press to switch the call between the earpiece and the loudspeaker

3. Press to dial the displayed entry or press to return to standby.

During a hands-free call, press ▲ or ▼ to adjust the volume.

The last 10 entries dialed are stored in the redial list.

Scroll ▲ or ▼ to the entry you want.

3.7.2 Copy a Redial list number to the phonebook

2. Getting to know your phone



Version 9 (EN-US)



Overview of your handset



When the keypad is locked, you can still answer incoming calls and operate the handset in a normal fashion during a call. When the call ends, the keypad lock

can alert a handset user that they are wanted or locate a missing handset.

2. To stop the ringing, press on the base again or press any button on the

You can store up to 50 names and numbers in the phonebook. Names can be up to 14 characters long and numbers up to 24 digits.

If the C101xLX is connected to a PABX, you may need to enter a pause in a stored

A pause is normally stored after the PABX access code (e.g. 9).

When storing a number, press and hold # until the display shows P. You can then continue storing the phone number.

If you have subscribed to a Caller ID Service and wish to display the name of your caller

You can store multiple entries, a telephone number may only be saved once. However

Enter the name and press (MENU). The display shows Enter number.

1. Press on the base. All handsets registered to the base will ring.

sumes in place.

Press and hold $0^{-\infty}$.

4. Phonebook

Keys locked is displayed.

3.9 Paging / Find handset

Paging calls cannot be answered by a handset.

4.1 Store a name and number

number. This gives the PABX time to find an outside line.

Press (MINU). The display shows Phonebook.

Press OK The display shows Enter name


Press (x). The display shows View.

6. Enter the number and press on to save.

Scroll down to Add new.

2. To unlock the keypad, press and hold 0 again.

Handset LCD Display

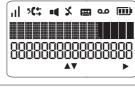

ııl	Indicates signal strength.				
	Flashes when the handset is not registered to the base or if you are out of range. Indicates a missed call				
5 (Indicates a missed call.				
C	Steady when making an outgoing call.				
•	Flashes to indicate an incoming or internal call.				
(+	Indicates an incoming call when viewing the calls list.				
(,	Indicates an outgoing call when viewing the calls list.				
	Hands-free is on.				
X	Handset ringer is off.				
=	Answering machine is on.				
9	Indicates new voicemail messages received.1				
	Off when there is no voicemail messages.				
▲▼	Indicates you can scroll through a list or adjust the volume in talk mode.				
•	Indicates more text after the displayed information.				
1111	Battery is fully charged.				
	Battery is partially charged.				
	Battery is running low.				
	Flashes when battery is almost fully discharged.				
	I .				

ENTERING NAMES

WRITINGTIPS

Press A

Press 8w once to enter T.

Press 6 once to enter M.

Press 0 to insert a space.

4.2 View or dial an entry

Press 6 three times to enter O.

Press BACK to delete the last character or digit

Press ▲ or ▼ to move between characters

2. Scroll ▲ or ▼ to the entry you want.

4.3 Edit a name and number

1. Press X. The display shows Phonebook.

Press . The display shows View.

The existing number is displayed.

1. Press . The display shows Phonebook.

2. Press . The display shows View.

Scroll ▼ to Delete and press (MENU).

Scroll ▼ to Edit and press (NENU).

4.4 Delete an entry

Enter the first letter of the name to search alphabetically.

displayed. Scroll ▲ or ▼ to the entry you want.

Press to dial or to return to standby.

The first name that starts with this letter or the nearest letter in the alphabet will be

Scroll ▲ or ▼ to the entry you want to edit, or search alphabetically and press

Press BACK to delete the name if required, then enter the new name and press

Press (to delete the number if required, then enter the new number and press (to save.

Use the keypad letters to enter names, e.g. to store TOM:

Need help?

Welcome...

with Answering machine!

Speakerphone for hands-free conve

Redial up to 10 of the last numbers called.

Register up to 4 handsets to a single base.

Choose from 10 different ringtones.

50 Name and Number phonebook

Bright backlit display.

to your new Motorola C101xLX Digital Cordless Telephone

All handsets are completely cordless and easy to locate with paging system

Caller ID shows you who's calling and shows the details of the last 20 callers in

Please note that this equipment is not designed for making emergency telephonicalls when the power fails. Alternative arrangements should be made for access

If you have any problems setting up or using your C101xLX, please contact Customer Service at 1-888-331-3383.


Alternatively, you may find the answer in the 'Help' section at the back of this

for these features to work. A subscription fee may be applic

You must subscribe to your network provider's Caller ID or Call Waiting service

Make internal calls and transfer external calls between handsets.

Answering machine up to 12 minutes digital recording time.

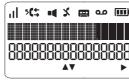

signal strength.
hen the handset is not registered to the base or if you are out of range.
a missed call.
hen making an outgoing call.
o indicate an incoming or internal call.
an incoming call when viewing the calls list.
an outgoing call when viewing the calls list.
ee is on.
ringer is off.
g machine is on.
new voicemail messages received .1
there is no voicemail messages.
you can scroll through a list or adjust the volume in talk mode.
more text after the displayed information.
fully charged.
partially charged.
running low.
hen battery is almost fully discharged.

 $\overline{}^{1}$ This feature is dependent on your Network Service provider supporting the service. A subscription fee may be applicable.

This user guide provides you with all the information you need to 1. Getting started IMPORTANT

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied

get the most from your phone.

Got everything?

- C101xLX base & cordless handse
- 1 x rechargeable Ni-MH battery pack
- Power adapter for the base
- Telephone line cord

If you have purchased a C101xLX multiple pack you will also have the following

- Cordless handset & charger
- 1 x rechargeable Ni-MH battery pack
- Power adapter for the charge

Navigating the menus

Each menu has a list of options, which can be seen in detail on the menu map on the below list.

et is switched on and in standby mode: When the har Press to open the main menu.

- Then use ▲ or ▼ buttons to scroll through the available options.
- Press to select an option. To return to the previous me press BACK. To exit the menu and return to standby, press .

NOTE

If buttons on the handset are not pressed within 30 seconds, the handset will go into standbu mode

Menu map

Phonebook Delete all¹ Phone setup Rina volume

Phone name Date & time

Flash time Dial mode

Scroll ▲ or ▼ to the entry you want to delete, or search alphabetically and press
 The disclay chapter Confermo?

You can adjust the ringer volume and set different volume levels. Choose from 5 volume levels or Off

You can set different ringer melodies for your internal and external calls. Choose from $10\,\mathrm{different}$ ringer melodies.

When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

4. Press (1-5 or OFF).

5. Press to confirm or BACK to return to the previous menu.

You will hear a sample ring as you scroll to each ring melody.

Press (SKE), scroll ▲ or ▼ to select the melody (1-10).

Press to confirm or BACK to return to the previous menu.

Voice answei Ring delay Remote access Voice Language

Delete all

5. Press to confirm or ACX to cancel.

1. Press . The display shows Phonebook.

Press . The display shows View.

Scroll ▼ to Delete all and press (NENU).

5. Press to confirm or BACK to cancel.

Press (NEW), scroll ▼ to Phone setup.

2. Press . The display shows Sounds.

Press (scroll ▼ to Phone setup.

Press . The display shows Sounds.

Press . Scroll ▼ to Ring tones.

3. Press . The display shows Ring volume.

4.5 Delete all entries

4. The display shows Confirm?.

5. Phone setup

5.1 Sounds

5.1.2 Ringertones

5.1.3 Key tones on/off

NOTE

3. Using the phone

callu time the duration of all external calls. The call timer will display after the first 10 seconds of your call. When the call ends, the total durati your talk time is shown for 3 seconds.

Do not place your C101xLX in the bathroom or other humid locations.

near the equipment and should be easily accessible.

the supplied power adapter and telephone line cord.

Installing and charging the handset

at a higher location ensures a better signal.

HANDSET RANGE

everely affect the range.

Connecting the base

SIGNAL STRENGTH

Setting up

IMPORTANT

You will need to place your C101xLX base within 4.9 feet of the electrical outlet and

interference. Your C101xLX works by sending radio signals between the handset and

base. The strength of the signal depends on where the base is placed. Placing the base

The unit has a range of up to 650 feet outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or

outdoors, the range will normally be up to 98 feet. Thick concrete and stone walls can

The 11 icon on your handset indicates that you are within range of the base. When out of range of the base, the 11 icon disappears. If you are on a call, you will hear a

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

The base station must be plugged into the electrical outlet at all times. Do not connect

Plug the telephone line cord into the socket marked on the underside of the base.

Plug the power adapter into the socket marked 🗓 on the underside of the base and plug the other end into the electrical outlet, wall outlet.

Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery pack supplied. Please note the '+' and '-' markings

inside the battery compartment and insert in the correct direction

the telephone line cord into the wall outlet until the handset is fully charged. Use only

Make sure that it is at least 3 feet away from other electrical appliances to avoid

telephone wall outlet so that the cables will reach. The socket-outlet should be installed

3.1 Switch the handset on / off Press and hold to switch the handset on or off

3.2 Calls

3.2.1 Make a call

Press State

2. Dialing a telephone number

3.2.2 Preparatory dialling

Use the keypad to dial a number, if you make a mistake press BACK to delete the last digit.
Press to dial.

3.2.3 End a call

Press , or place the handset back on the base or charger

3.2.4 Receive a call ceive an external call, the phone rings and 🕻 icon flashes on the display.

1. Press to answer the call.

3.3 Adjust the earpiece volume

During a call, press ▲ or ▼ to increase or decrease the volume. There are 5 levels

3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller

During a call, press Mutt. The display shows Mute on and your caller cannot hear you.

Press again to resume your call.

Press (scroll ▼ to Phone setup.

2. Press . The display shows Sounds.

Press (xxv), scroll ▼ to Phone setup.

Press . The display shows Sounds.

Press (CXXXII). Scroll ▼ to Docking tone.

1. Press or local scroll ▼ to Phone setup.

Press Scroll ▼ to Battery tone.

A name can be up to 14 characters long.

Press (NENU), scroll ▼ to Phone setup.

2. Press (XX). The display shows Sounds.

3 Scroll ▼ to Date & time and press (MENU)

Press ox, scroll ▼ to Phone setup.

Press . The display shows Sounds.

Scroll ▼ to Phone name and press ...

Delete the current name by pressing BACK

5.2 Handset name

5.3 Date & time

Press Ox. The display shows Sounds

Press Scroll ▼ to Key tone.

5.1.4 Docking tone on /off

5.1.5 Battery tones

3.5 Intercom

3.5.1 Make an internal call

If more than one handset is registered to the base, internal calls can be made between two handsets. Coince flashes and the display shows the handset number you are calling

When you replace the handset in the base you will hear a double beep. You can switch

When the battery is running low you will hear a warning beep. You can switch this beep

Press () or ▼ to select On or Off and press to confirm.

Press (MENU), ▲ or ▼ to select On or Off and press (MENU) to confirm.

Press (K), ▲ or ▼ to select On or Off and press (K) to confirm.

personalized name for each handset to easily distinguish betw

4. Enter the new handset name and press to confirm.

 If more than 2 handsets are registered to the base press (★w) and scroll ▼ to the handset that is to be called and press (√w). 3.5.2 Receive an internal call

Slide the battery cover back into place.

3. Slide the battery cover back into place.

that it is registered to the base.

BATTERY LOW WARNING

BATTERY PERFORMANCE

IMPORTANT

o charge for at least 24 hours continuously

When charging icon will scroll on the display.

handsets and chargers.

3. If you are charging the battery for the first time, place the handset on the base to

olugged into the base) into the telephone wall outlet

When the handset is fully charged, icon will appear steady on the display.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the

Plug the power adapter into the socket marked 🛂 on the underside of the

markings inside the battery compartment and insert in the correct direction

4. If you are charging the battery for the first time, place the handset on the charge

When the handset is fully charged. I possible possibl

Warning! Use only the approved rechargeable Ni-MH battery pack (AAA 2.4v 300mAh Ni-MH rechargeable battery) supplied with your C101xLX.

If icon flashes on the display and you hear a warning beep every 2 minutes ring a call, you will need to recharge the handset before you can

charger and plug the other end into the electrical outlet wall outle

2. Remove the battery cover from the back of the bandset and insert the AAA 2.4v 300mAh Ni-MH rechargeable battery supplied. Please note the '+' and '-

Plug the other end of the telephone line cord (make sure that one end is already

When you receive an internal call, ${\bf C}$ icon flashes and the handset number that is calling you is displayed.

Press to answer the call.

3.5.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call: 2. If only 2 handsets are registered to the base, press and hold $(\$_{\tt NF})$ and the other

handset rings automatically. If more than 2 handsets are registered to the base press and hold 🗺 and scroll 🔻 to the handset that is to be called and press 🐷.

4. When the other handset answers, press to complete the transfer.

NOTE

nal call resumes automatically after 1 minute if there is no answe

3.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

5. If only 2 handsets are registered to the base, press and hold $(\$_{\rm net})$ and the other

6. If more than 2 handsets are registered to the base press and hold ∰ and scroll ▼ to the handset that is to join the call and press ∰.

7. When the other handset answers, press to connect all three callers to begin the conference call.

8. Press to end the call.

3.6 Hands-free

To talk to the caller without holding the handset or for other people in the room to isten to the conversation over the loudspeaker simply use the hands-free function 3.6.1 Make a hands-free call

1 Dial the number and then press (4)

Enter the date using the keypad (e.g. 08–12–14 for 12th of August 2014) and press to confirm.

5. Enter the time using the 12 hour format hh:mm, e.g. 02:45 for 2:45.

6. Scroll ▲ or ▼ to select am or pm and press to confirm.

5.4 Language

Press lok scroll ▼ to Phone setup.

Press (The display shows Sounds

Scroll ▼ to Language and press (MENU).

4. Scroll ▲ or ▼ to select the required language and press to confirm.

6. Services

6.1 Call List type

You can set the Call list to show All calls or Missed calls only. If All calls is selected, press ▼ key in idle and you can view all calls lists. If Missed calls is selected, press ▼ key in dle and you can view missed call only.

Press (NEW), scroll ▼ to Services and press (NEW).

2. The display shows Call list type, press (MENU)

Scroll ▲ or ▼ to select All calls or Missed calls and press to confirm.

6.2 Area code

You can set your local area code into the phone. When a number from that area code calls only the local number will be displayed and stored. The area code can be up to 5 digits long.

Press (MENU), scroll ▼ to Services and press (MENU).

Scroll ▼ to Area code is displayed. Press (CK). 3. Using the keypad enter the area code and press (KEV) to confirm

6.3 Flash time

Depending on your country and network operator, your C101xLX has the flash time set as 600 ms (Long). It is unlikely that you need to change this setting unless advise

Press (MENU), scroll ▼ to Services and press (MENU).

3. Press ▲ or ▼ to select Short, Medium or Long and press to confirm.

Scroll ▼ to Flash time and press (MENU).

n ideal conditions, a fully charged battery should give up to $10\,\mathrm{hours}$ of talk time or up to $200\,\mathrm{hours}$ standby time on a single charge. 1 Note that a new battery does not reach it's full capacity until it has been put to norma

To keep your battery in the best condition, leave the handset off the base for a few Running the battery down at least one time per week will help prolong battery life.

1. If only 2 handsets are registered to the base, press $(\frac{\mathbf{x}_{\text{nc}}}{\mathbf{x}_{\text{nc}}})$ and the other handset

6.4 Dial mode

Your C101xLX is set to tone dialing. You should only need to change this if connected to an older type of PABX / PBX which requires pulse dialing.

Press (MENU), scroll ▼ to Services and press (MENU). Scroll ▼ to Dial mode and press (MENU).

Press ▲ or ▼ to select Tone or Pulse and press to confirm

6.5 Switch Auto clock on / off

If you have subscribed to a Caller ID Service, the date and time will be set on all your handsets whenever a call is received. This feature can be set to On or Off.

Press (x, scroll to Services and press (x).

Scroll ▼ to Auto clock and press (MENU). Scroll ▼ to On or Off then press to confirm.

6.6 Registration

Up to 4 handsets can be registered to one base station. Additional handsets must be

- of nations can be registered to one base station. Administrations into the tree of the base before you can use them.

 The instructions described below apply specifically to your C101xLX handset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.
- The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

6.6.1 Register a handse

1. Press and hold the 🙀 on the base until the base beeps. You have 120 seconds in

- 1. If the handset is not already registered to a base, press (MRN). Or if the handset is already registered to a base, press (SEN) scroll ▼ to Services
- When the display shows PIN, enter the base PIN and press .

 When the handset registers with the base, it is assigned a handset nu

and press (Scroll ▼ to Register and press (Scroll).

6.6.2 Un-Register a handset

Use one handset to delete another. You cannot delete the handset that you are using

Press (MENU), scroll ▼ to Services and press (MENU).

8.6 Ring delay

Select the duration of rings before your answering machine picks up the call. Choose from 3-8 Rings or In Toll Saver mode:

- If you have new messages your phone answers after 3 Rings
- If there are no new messages it will answer after 5 Rings. So you have the option to hang up, saving the time and cost of a call.
- mory is full, it will automatically revert to Answer Only mode Press (MENU), scroll to ▼ Answ. Machine and press (MENU).
- Scroll to Ring delay and press (MRN). The handset will display the current setting.
- Use ▲ or ▼ to select the number of rings required and press to confirm.

8.7 Remote access

You can operate your answering machine from any touch tone telephone by calling your C101xLX product and entering a 4 digit security PIN code. Dial your telephone number. When you hear your outgoing message, press #.

- Enter your 4-digit PIN (default setting 0000) you will hear a confirmation beep. Use the keypad to operate the C101xLX answering machine.

	Press 7 to turn On the answering machine
Press 2 to play messages	Press 8 to stop message playback
Press 3 to play the next message	Press 9 to turn Off the answering machine
Press 6 to delete the current message	

(1) year from the date of the products original chase by the first consumer purchaser of the

The balance of the original warranty or for ninety (90)

Ninety (90) days from the date of the accessories

8.8 Remote access on/off and change remote PIN

- Press (KENU), scroll ▲ or ▼ to Answ. Machine and press (KENU).
- 2 Scroll ▼ to Remote access and press (MENU) Scroll ▲ or ▼ to select Activated, Deactivated or Change PIN.
- 4. Press to confirm.
- If you choose Change PIN enter the old PIN and press (MENU).
- Enter the new PIN and press OK.

lonaer.

Abuse & Misuse. Defects or damage that result from: (a) improper ope

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

nisuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain

extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that

result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage. Unauthorized Service

nce, alteration, or modification in any way by someone other

or Modification. Defects or damages resulting from service, testing, adjustment

than MOTOROLA, BINATONE or its authorized service centers, are excluded fron

Altered Products. Products or Accessories with (a) serial numbers or date tags that

tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-

due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

Motorola branded housings, or parts, are excluded from coverage.

have been removed, altered or obliterated; (b) broken seals or that show evidence of

Communication Services, Defects, damages, or the failure of Products or Accessories

- Re-enter the new PIN.
- 7. Press (KENU) to confirm.

onsumer Accessories

sumer Products and

sories that are

Repaired or Replaced

Exclusions

Scroll ▼ to Unregister and press (MENU).

3. Enter the 4 digit master PIN and press (XXXII).

Scroll ▲ or ▼ to select the handset you want to delete and press (MENU).

6.7 Restore default settings You can restore your C101xLX to its default (original) settings.

All the handsets that are registered to the base will be retained.

IMPORTANT

Resetting your phone to its default setting will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press (MENU), scroll ▼ to Services and press (MENU).
- Scroll ▼ to Reset and press (MENU). Confirm? is displayed. Press (MENU).
- 6.8 Default settings

	Docking tone	OIN	Diai IIIode	IOHE
	Key tone	ON	Flash mode	Long (600 m
ĺ	Ringer melody	1	Keypad lock	OFF
	Ringer volume	3	Answer machine	On
	Ear volume	1	Answer mode	Record also
	Phonebook	Empty	Ring delay	5

7. Caller ID and the Calls list

IMPORTANT

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be applicable.

To ensure that the caller's name is displayed, make sure you have stored the full

If the call is is blocked. Private will be displayed.

If the number is unavailable, Unknown will be displayed.

If the call is from the operator, Operator will be displayed.

8.9 Answering machine language

achine voice prompts and default OGM language.

- Press (KN), scroll ▼ to Answ. Machine and press (KN). Scroll ▼ to Voice language and press ...
- Scroll ▲ or ▼ to the required language and press .

9. Help No dial tone

Use only the telephone line cord supplied.

- Check that the telephone line cord is connected properly.
- Check that the power adapter is connected and you have a working outlet. No display

- Check that the battery is inserted correctly and fully charged. Use only the approved rechargeable battery supplied. Check that the handset is switched on. Press and hold .
- Reset the base by removing the battery and disconnecting the power adapter. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

ulicon flashes

- Handset is out of range. Move closer to the base.
- Make sure that the handset is registered to the base. Check that the power adapter is connected and you have a working outlet.

Keypad is not responding

- icon is not scrolling during charge
- Adjust the handset slightly on the base.

 Clean the charging contacts with a cloth moistened with alcohol.
- Check that the power adapter is connected and you have a working outlet
- The battery is full. When the handset is fully charged, icon will appear steady

No Caller ID

- Check your subscription with your network operator.
- The caller may have withheld their number

How to Obtain Warranty Service or Other Information?

US and Canada: 1-888-331-3383

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center. To obtain service, you must include: (a) the Product or Accessory; (b) the original proof

of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the seria umber of the Product; (d) a written description of the problem; and, most importantly

These terms and conditions constitute the complete warranty agreement between you and BINATONE. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE. or resentations made by any agent employee or staff of BINATONE, that may have made in connection with the said purchase

FCC, ACTA and IC regulations FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2 this device must accept any interference received, including interference that may

If the call is from a payphone, Payphone will be displayed.

If the call is from a ringback request, Ringback will be displayed.

If you have subscribed to a Caller ID Service, you will be able to see your caller's number on your handset (provided it is not withheld) prior to answering the call. The display can show the first 16 digits or 14 characters of the phone numbers. If your caller's name and number are stored in the phonebook and a number match is found, you will see the caller's name on the display as well.

The Calls list stores details of your last 50 received calls, including the phone nurdate and time of call. The Calls list also alerts you when you have unanswered calls.

The caller's details are stored in the Calls list whether or not you have answered the call. The list is shared by all handsets registered to the base. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

Press (MENU) to see the callers details 7.2.1 View the Calls list

- Press ▼ to open the Calls list. If there are no calls in the list, the display shows
- The most recent number or name if stored in the phonebook is displ
- Press ▲ or ▼ to scroll through the list.
- If the call was answered, (*icon is displayed as you scroll to the entry. If the
- call was unanswered, **X** icon is displayed as you scroll to the entry. If the telephone number is longer than 16 digits, ▶ icon is displayed. Press (MXX) to see the remaining digits.
- Press to access the option to store the entry in your phonebook. Press twice to see the time and date of the call.
- When viewing a calls list number press to toggle the Calls List between different formats, e.g. YYYYYYY, AAA-YYY-YYYY or 1-AAA-YYY-YYY.
- 7.2.2 Dial a number in the Calls list Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.
- 3. Press to dial the displayed entry.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code. **Notation if area code is stored in phone it will not display full number**

I have forgotten my PIN!

Cannot register a handset to the base

- You can register up to a maximum of 4 handsets to a C101xLX base. You un-register a handset in order to register a new one.
- Check that you have entered the correct PIN code (default = 0000). Check that you are at least 3 feet away from other electrical equipment to avoid interference when registering

Handset does not ring

The handset ringer volume may be set to Off.

Noise interference on my phone or on other electrical equipment nearby

Place your C101xLX at least 3 feet away from electrical appliances or any metal obstructions to avoid any risk of interference

Answering machine does not record messages Switch the answering machine on. The memory may be full, delete messages to free space.

- Answer mode may be set to Answer only Change the mode to Record also.

Cannot access messages remotely

If wrong PIN is entered a beep is played. You can enter the PIN once again.

Cannot record outgoing message

Answering machine stops automatically

The memory may be full, delete messages to free sp. The maximum message length is 3 minutes.

cause undesired operation. Privacy of communications may not be ensured when

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical equirements adopted by the Administrative Council for Terminal Attachments (ACTA). This Product Complies With 47CFR PART 68. The plug and tack used to connect this equipment to premises wiring and the

Ine piug and jack used to connect this equipment to premises wining and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modula jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User's The Ringer Equivalence Number (REN) is used to determine how many de

nay connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the oduct identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, plea This equipment may not be used with Party Lines, If you have specially wired alarm

does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

7.2.3 Copy a Calls list number to the phonebook

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want
- Press (K), the display shows View.
- Scroll ▼ to Save number and press (MENU)
- The display shows Enter name
- Enter the name and press . The number is displayed. Edit the number if necessary, then press . The number is stored.
- 7.2.4 Delete an entry

- Press ▼ to open the Calls list.

- Scroll ▲ or ▼ to the entry you want
- Press (the display shows View.
- Scroll ▼ to Delete and press . The display shows Confirm?. Press to confirm or BACK to cancel.
- 7.2.5 Delete the entire Calls list
- Press ▼ to open the Calls list.
- Press (K), the display shows View.
- Scroll ▼ to **Delete all** and press (The display shows **Confirm**?.
- Press to confirm or MACK to cancel.

8. Using the answering machine

Your C101xLX product can digitally record up to 12 minutes of recorded messages. As well as recording incoming messages.

- You can operate your answering machine from
- the handset
- or remotely, from any touch tone telephone.

You will need to set the correct day and time (if you have not already done so) so each

8.1 Switch the answering machine on / off

1. Press on the base to turn the answering machine on or off.

10. General information

- If your product is not working properly... Read this User's Guide
- Visit our website: www.motorola.com
- Contact Customer Service in the US and Canada at 1-888-331-3383

Email: motorola@e

Important safety instructions Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site. Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or 4. Do not allow anything to rest on the power cord. Place the power cord so that it
- will not be walked on Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- 6. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the stomer service helpline found in this User's Guide
- 8. Do not overload wall outlets and extension cords. Avoid using during an electrical storm. Use a surge protector to protect the equipment.

10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the

CAUTION o reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct

the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

If this product is equipped with a corded or cordless handset, it is hearing aid

Of this product has memory dialing locations, you may choose to store emergitelephone numbers (e.g., police, fire, medical) in these locations. If you do str

Industry Canada

CAUTION

Battery Safety Instructions

that may cause undesired operation.

Specific Absorption Rate (SAR) information

Via the handset

message first.

Press to stop message playback.
Press to play the next message.

Press to play the previous message.
Press to delete the current message.

Play is displayed, press ox.

con will flash. Press 🚾 to play new r

the message was left will toggle on the screen

Use the ▲ or ▼ keys to change the options:

Next - press (NEXT) to play next message

Press to stop playback and return to standby.

8.3 Adjust the speaker volume

volume, or to decrease the volume.

Liquid has been spilled on the product.

Installation Guidelines

During playback press (to display a list of options

Repeat - press (XXXIII) to repeat current message

Previous - press to play previous message

Delete - press to delete the current message.

You can adjust the base loudspeaker volume from low to high. Press (a) to increase the

Unplug this cordless phone immediately from an outlet if:

The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.

Operate this phone using only the power source that is indicated on the marking

Do not place this product on an unstable cart, stand, or table. This product may

label. If you are unsure of the power supply to your home, consult with your deale

Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require

Clean this product with a soft, damp cloth. Do not use chemicals or cleaning

Because this phone operates on electricity, you should have at least one phone in

8. Use only the power supply that came with this unit. Using other power supplies

our home that operates without electricity in case of a power outage

To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 8 inches from nearby persons.

Do not burn, disassemble, mutilate, or puncture the battery. The battery contains

The product has been dropped or the cabinet has been damaged

product exhibits a distinct change in performance

Follow all warnings and instructions marked on the product.

extensive work to restore the product to normal operation

Do not install this product near a bath tub, sink, or shower.

fall, causing serious damage to the product.

Read all instructions and save them for future reference

During playback:

Using the handset:

When you have n

Press (NENU), scroll ▼ to Answ. Machine and press (NENU).

Using the base:

1. Press ... If you have new messages they will be played.

Press ▲ or ▼ to select either Answer only, Record also or Off and press to confirm.

If you have no new messages all messages will be played, starting with the oldest

If you have no new messages, press (, scroll ▲ or ▼ to Answ. Machine and press ().

The display shows the number of the message being played and the date and time

ages, the display shows X new message(s) and the

Scroll ▼ to Voice answer and press (MENU).

8.2 Listening to your messages

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including

toxic materials that could be released, resulting in injury.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This equipment meets the applicable Industry Canada Terminal Equipment & Technical Placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the ear.

with the phone transmitting at its highest certified power level in all tested frequency with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g., at the ear)

as required by the FCC. This handset has also been tested and meets the FCC RF

exposure guidelines. Use of other accessories may Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

SAR tests are conducted using standard operating positions accepted by the FCC

8.4 Delete all messages

- Press (MENU), scroll ▲ or ▼ to Answ. Machine and press (MENU)
- Scroll ▲ or ▼ to Delete all and press (MENU).
- Dispaly shows Confirm? press .

8.5 Outgoing messages (OGMs)

This is the message your callers hear when the answering machine answers the call. There are two pre-recorded outgoing messages, or you can record your own.

The pre-set Record also outgoing nessage, allows your caller to leave a mes e: "Hello, your call cannot be taken at the moment, please leave you be trace"

8.5.2 Answer only

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is "Hello, your call cannot be taken at the moment, and you cannot

leave a message, so please call later." 8.5.3 Record, play or delete your own outgoing message

- Press (MENU), scroll ▼ to Answ. Machine and press (MENU). Scroll ▼ to Announcement and press (MENU).

- Press lacktriangle or lacktriangle to select either Answer only or Record also and press $\overline{\mathbb{Q}}_{K}^{minu}$.
- Scroll ▲ or ▼ to select either Play, Record or Use default and press (MENU).

If you select Play the current OGM will play back. If you select Record once you here the beep speak your message into the handset, to end recording press . The message will automatically play ba If you selected Use default the display shows Confirm?, press to confirm.

- 8.5.4 Select the OGM
- Press (NENU), scroll ▼ to Answ. Machine and press (NENU).
- Scroll ▼ to Voice answer and press (OK). 3. Press ▲ or ▼ to select either Answer only, Record also and press to confirm.

erina machine is turned off and then turned on via the base unit the setting

will be the same as when it was last switched on

Consumer Products and Accessories

Limited Warranty ("Warranty") Thank you for purchasing this Motorola branded product n by Binatone Electronics International LTD ("BINATONE").

what boes this warranty cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessorie

does not conform to this Warranty. We may use functionally equivalent reconditioned/ efurbished/pre-owned or new Products, Accessories or parts.

THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL

MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ARILITY OR INARILITY TO USE THE

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Service Center Information Encompass Supply Chain Solutions, Inc.

Lenbrook Industries Ltd

What Does this Warranty Cover?

under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE

PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

775 Tipton Industrial Dr. Suite D Lawrenceville, GA 30046 Tel no.: 1-800-881-3344

633 Granite Court, Pickering, ON L1W 3K1 Tel no.: 905-831-6555

This Warranty extends only to the first consumer purchaser, and is not transferable. SAVE THESE INSTRUCTIONS What will BINATONE do?

What Other Limitations Are There?