

ibiza Rhapsody™ Rhapsody® Owner's Manual

Version 1.0

Revision Date: September 22nd, 2007



© Copyright 2007 Haier America Trading LLC. All rights reserved.

Information in this documentation has been carefully checked and is believed to be accurate. However, this information is subject to change without notice, and Haier assumes no responsibility for any inaccuracies that may be contained in this documentation. In no event will Haier be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this technical note, even if advised of the possibility of such damages.

In the interest of continued product development, Haier reserves the right to make improvements to this documentation and the products it describes at any time, without notice or obligation.

The trademarks, logos, and service marks ("Marks") displayed in this document are the property of Haier or other third parties. You are not permitted to use the Marks without the prior written consent of Haier or such third party which may own the Marks. "ibiza" and the ibiza logo are trademarks or registered trademarks of Haier America Trading LLC. Rhapsody® and the Rhapsody logo are registered trademarks of RealNetworks, Inc. The *Bluetooth*® word mark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such marks by Varia Mobile, LLC. is under license. Windows XP, Windows Vista, Microsoft, Windows, and Windows Media are either registered trademarks or trademark of Microsoft Corporation in the United States and/or other countries. "America Online", "AOL", and the AOL triangle logo are trademarks or registered trademarks of America Online, Inc.

Published by Haier America Trading LLC., 1356 Broadway, New York, NY 10018. Phone: (212) 594-3330. Fax 212-594-3311

Printed in China

Contents

1	The Basics	1
	<i>Power Modes: On, Idle, and Off</i>	1
	<i>Operating the Controls</i>	2
	<i>A Tour of ibiza</i>	2
	<i>Touchpad Tips and Tricks</i>	9
	<i>Text-Entry</i>	10
2	Activating Your Rhapsody Membership	13
3	Installing Software	14
4	Importing Media	15
	<i>Importing Music (Ripping CDs)</i>	15
	<i>Transferring Your Music Library to ibiza</i>	16
	<i>Adding Media to the Rhapsody Library</i>	17
5	Playing Media	18
	<i>Playing Music</i>	18
	<i>Playing Videos</i>	21
	<i>Playing Podcasts</i>	22
6	Listening to FM Radio	24
	<i>Playing the Radio</i>	24
7	Rhapsody Channels	28
	<i>Accessing Channels</i>	28
	<i>Listening to Channels</i>	28
	<i>Adding Channels</i>	29
8	Connecting to the Internet	30
	<i>Enabling Wireless</i>	30
	<i>Using the Connect Button</i>	31

<i>Familiar Networks</i>	32	<i>About Airskins</i>	55		
<i>Wireless Security</i>	34	<i>Changing Your Airskin</i>	56		
9	Downloading Media	38	Downloading New Airskins	56	
	<i>Downloading Music</i>	38	14	Using the Web Browser	57
	<i>Downloading Podcasts</i>	42	15	Listening via Bluetooth®	58
10	Copying Media	46		<i>Enabling Bluetooth</i>	58
	<i>Copying Music from CDs</i>	46		<i>Connecting to a New Bluetooth Device</i>	59
	<i>Copying Videos from Your PC</i>	47		<i>Connecting to Familiar Device</i>	59
11	Playlists	48		<i>Disabling Bluetooth</i>	60
12	Downloading and Viewing Photos	53	16	Troubleshooting	61
	<i>Downloading Photos</i>	53	17	Technical Information	68
	<i>Viewing Photos</i>	54			
13	Airskins	55			

1 The Basics

The **ibiza Rhapsody™ Rhapsody®** lets you enjoy music, videos, podcasts, radio, and photos without ever connecting to a PC. Or (if you prefer), you can use your PC to rip CDs and download media.

Power Modes: On, Idle, and Off

ibiza Rhapsody has three (3) power modes:

- To turn **ibiza Rhapsody** on, press and hold the Power button for two seconds. When you turn the power on, the Main Menu appears.
- To place **ibiza Rhapsody** in idle mode, simply stop all media playback and leave the player on for 30 seconds without touching any controls. In idle mode, **ibiza Rhapsody** turns off its display. The player, remembers what you were doing, however, and it can continue downloading media.
- To turn **ibiza Rhapsody** off, press and hold the Power button.

Note: When **ibiza Rhapsody** is on or idle and a Wireless network is available, it automatically receives content. We recommend that you leave **ibiza Rhapsody** in Idle (with the keys locked), even when the player is not in use. In this mode, **ibiza Rhapsody** turns itself off periodically to conserve power, but still downloads content as needed.



The Main Menu

Operating the Controls

For optimal comfort and control, we recommend that you hold **ibiza Rhapsody** in one hand while sliding the index finger of the opposite hand over the Touchpad. Alternatively, for one-handed use, hold **ibiza Rhapsody** in the palm of your hand while sliding your finger across the Touchpad.

A Tour of ibiza Rhapsody

Table 1: Buttons and Controls (Device Front)

Button or Control	What You Can Do	Details...
LCD screen	<ul style="list-style-type: none">Display content.	<ul style="list-style-type: none">To adjust screen settings, go to Main Menu, "Settings," "Display settings."
Play/Pause button	<ul style="list-style-type: none">Play or pauses the currently selected media.	<ul style="list-style-type: none">Press and hold the Play/Pause button while music is playing, to go to the "Now playing" screen.
Touchpad	<ul style="list-style-type: none">Navigate within ibiza Rhapsody.	<ul style="list-style-type: none">Please consult the section entitled "A Tour of ibiza Rhapsody," for instructions on how to use the Touchpad.
Press the Touchpad	<ul style="list-style-type: none">Select onscreen elements.	

Button or Control	What You Can Do	Details...
Back button	Return to the previous screen.	<ul style="list-style-type: none"> Press and hold to return to the Main Menu. During text entry, deletes characters.
Skip back button	Display previous or earlier portions of the media.	<ul style="list-style-type: none"> Press more than once or continuously, to go back farther or faster.
Skip forward button	Display next or later portions of the media.	<ul style="list-style-type: none"> Press more than once or continuously, to go forward farther or faster.

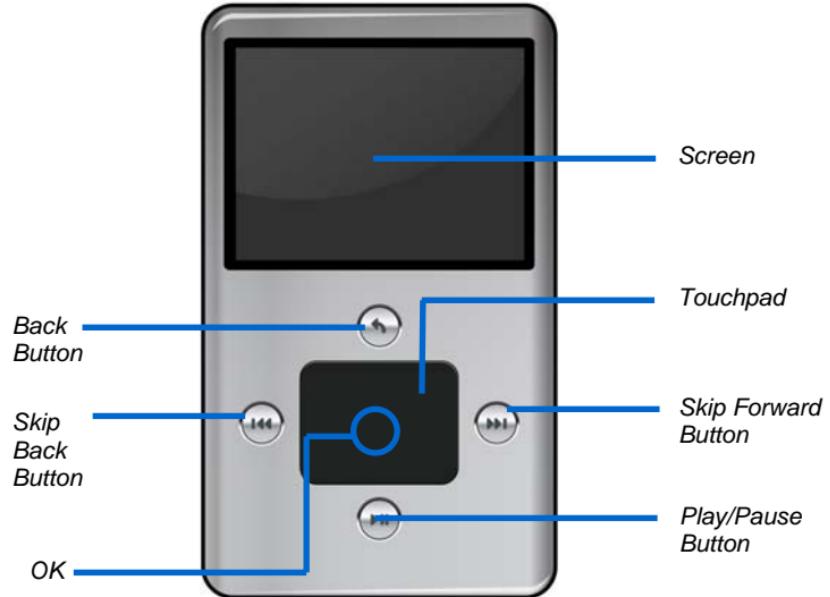
Front View of *ibiza Rhapsody*

Table 2: Buttons and Controls (Device Top)

Button or Control	What You Can Do	Details...
Connect button	Launch the “Get connected” screen.	<ul style="list-style-type: none"> View wireless networks within range. Check connection status. Manage your wireless connection.
Lock switch	Disable all controls except for the volume buttons.	<ul style="list-style-type: none"> To lock ibiza Rhapsody, slide the switch to the right. To unlock ibiza Rhapsody, slide the switch to the left.
Indicator light	<ul style="list-style-type: none"> Assess network availability. Monitor network connection status. Observe network data activity. 	<ul style="list-style-type: none"> Green, flashing: downloading content. Bright green: connected, not downloading content. Dim green: familiar network detected, not connected. Dim orange: unfamiliar network detected. Indicator light off: no network detected, or wireless disabled; and not charging.

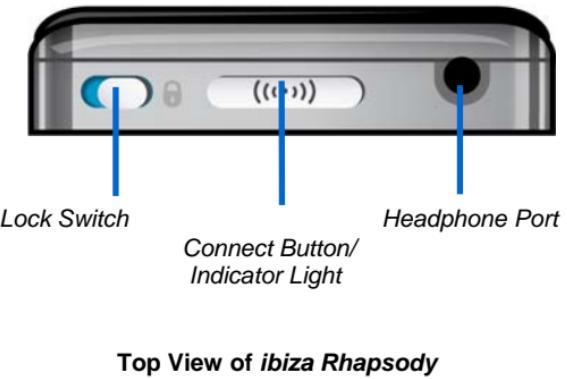


Table 3: Buttons and Controls (Device Bottom)

Button or Control	What You Can Do	Details...
USB port	Connect to ibiza Rhapsody via USB cable.	<ul style="list-style-type: none"> Connect to your PC for data transmission, and to charge ibiza Rhapsody. Connect to the wall charger to charge ibiza Rhapsody.
Docking connector	Connect ibiza Rhapsody to the (optional) docking station, or to any other accessory with a docking port.	Contact device manufacturer for information about other possible connection options.
Reset switch	<ul style="list-style-type: none"> Stop ibiza Rhapsody. Clear current selections. Terminate existing wireless connections. 	<ul style="list-style-type: none"> To press, use a pen tip or other stylus. Use only if ibiza is not responding. <p>Note: Pressing the Reset switch resets the device clock. This terminates time-sensitive licenses on downloaded music. Licenses will be restored the next time you connect to the Internet.</p>

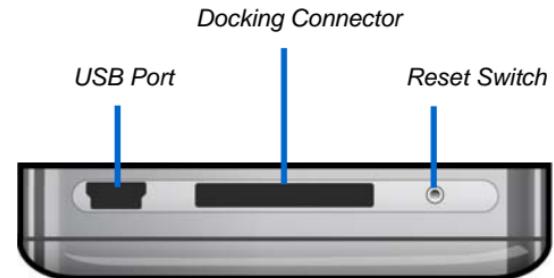
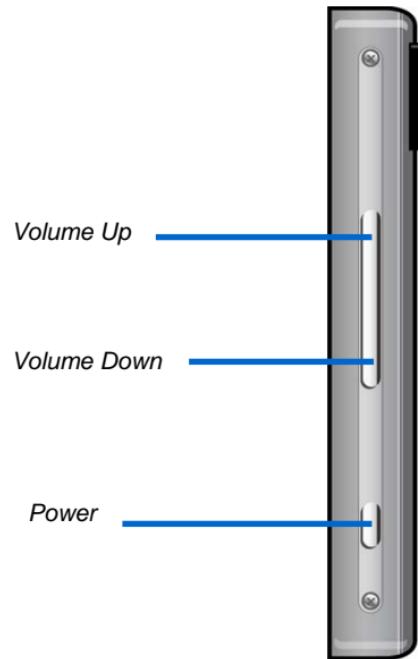
Bottom View of *ibiza*

Table 4: Buttons and Controls (Right-hand Side)

Button or Control	What You Can Do	Details...
Volume up button	Raise the volume.	
Volume down button	Lower the volume.	The volume controls work even when the device is locked and the other controls are disabled.
Power switch	Turn ibiza Rhapsody on and off.	<ul style="list-style-type: none"> To turn ibiza Rhapsody on, press and hold until the LCD screen becomes lit. To turn ibiza Rhapsody off, press and hold the power switch.

Right Side View of *ibiza*

Charging the Battery

The USB cable you received with **ibiza Rhapsody** can be used in conjunction with the (included) power adapter to recharge **ibiza Rhapsody**. Or, you can use it to connect **ibiza Rhapsody** to a PC, to charge the player. Charging begins as soon as **ibiza Rhapsody** is plugged in, whether it is turned on or off.

You do not have to wait until the battery is fully charged. Disconnecting **ibiza Rhapsody** before charging completes does not damage the player or its battery.

Charging From a Standard Outlet

- 1) Connect the USB 2.0 cable to **ibiza Rhapsody** using the cable's Mini-USB connector.
- 2) Connect the other end of the cable to the USB power adapter.
- 3) Plug the USB power adapter into a wall outlet to begin charging.

Note: (1) You can continue to use **ibiza Rhapsody** as it charges via wall outlet.

(2) Not all USB cables are manufactured to the same specification. Some USB2-to-mini-USB cables may not be able to transmit data between **ibiza Rhapsody** and your PC. For best results, always use the cable provided when syncing media between **ibiza Rhapsody** and your PC.




Charging the Battery from a Wall Outlet

Charging Via Your Computer

- 1) Connect the USB 2.0 cable you received in the package to **ibiza Rhapsody** using the cable's Mini-USB connector.
- 2) Connect the other end of the cable to one of your PC's USB ports.
- 3) The battery begins charging as soon as it connects with the PC. When charging from a PC, **ibiza Rhapsody** displays the "Connected" screen.

Note: (1) You can not continue to use **ibiza Rhapsody** while it is connected to a PC. The Touchpad and buttons are disabled, allowing you to manage the **ibiza Rhapsody**'s data from the PC. (2) Note: Not all USB cables are manufactured to the same specification. Some USB2-to-mini-USB cables may not be able to transmit data between **ibiza Rhapsody** and your PC. For best results, always use the cable provided when syncing media between **ibiza Rhapsody** and your PC.

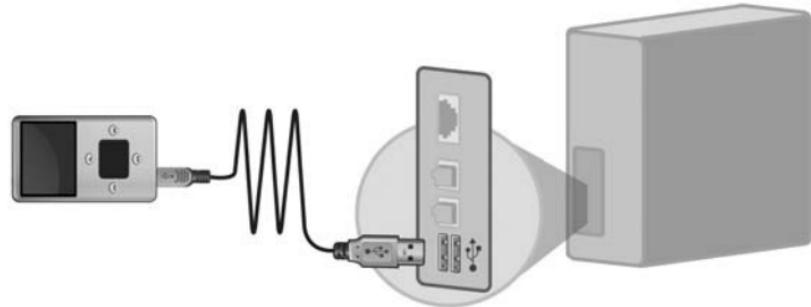

Charging the Battery from a Desktop Computer

Touchpad Tips and Tricks

Once you become comfortable using the Touchpad to navigate through menus and select different items, try some of the following suggestions for more scrolling options.

The Touchpad

Use the Touchpad to scroll through menus on **ibiza Rhapsody** screen. Pressing the center of the Touchpad signifies “OK.”

To scroll down a menu or list:


- 1) Slide your finger or finger downward across the center of the Touchpad.
- 2) Tap the bottom edge of the Touchpad. (Shifts the device's focus down by one item.)

To scroll up a menu or list:

- 1) Slide your finger or thumb upward across the center of the Touchpad.
- 2) Tap the top edge of the Touchpad. (Moves focus up by one item.)



Pressing the Touchpad

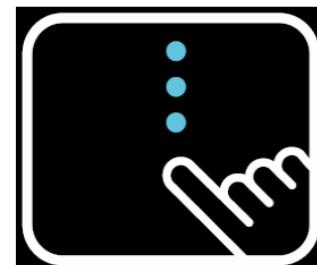


Scrolling Up and Down

To scroll to the left through text-entry bar or a collection:

- 1) Slide your finger to the left across the center of the Touchpad.
- 2) Tap the left edge of the Touchpad. (Moves focus to the left by one item.)

To scroll through a text-entry ribbon or a collection:

- 1) Slide your finger to the right or left across the center of the Touchpad.
- 2) Tap the right or left edge of the Touchpad. (Moves focus to the right or left by one item.)

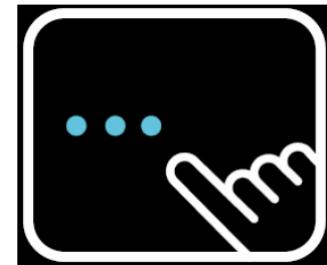**Scrolling Right and Left*****Text-Entry***

ibiza Rhapsody features a text-entry ribbon that lets you input text without a keyboard. You can use this text-entry capability to search for music, give a playlist a name, find a podcast, and so on.

To use the text-entry ribbon, select each letter with the Touchpad, and press the Touchpad.


Using the Text-entry Ribbon

- 1) Scroll up until the cursor appears in the text-entry ribbon's text field.
- 2) Use the Touchpad to move to the left and right through the text ribbon.
- 3) Select the character you wish to input. Press the Touchpad. The character appears in the text field.
- 4) To delete or remove a character from the text field, press the Back button. To delete several characters, press and hold the Back button.
- 5) To leave the text entry ribbon, use the Touchpad to move down, or press the Back button.
- 6) Some text-entry screens require you to select Save, Submit, or other options to continue.

Changing the Character Set

If the string you want to input contains a mix of lower-case letters, capital letters, numbers, and other symbols, you will need characters from more than one character set.

To change character sets, scroll along the text-entry ribbon to the symbol for the character set you need, and click the Touchpad.

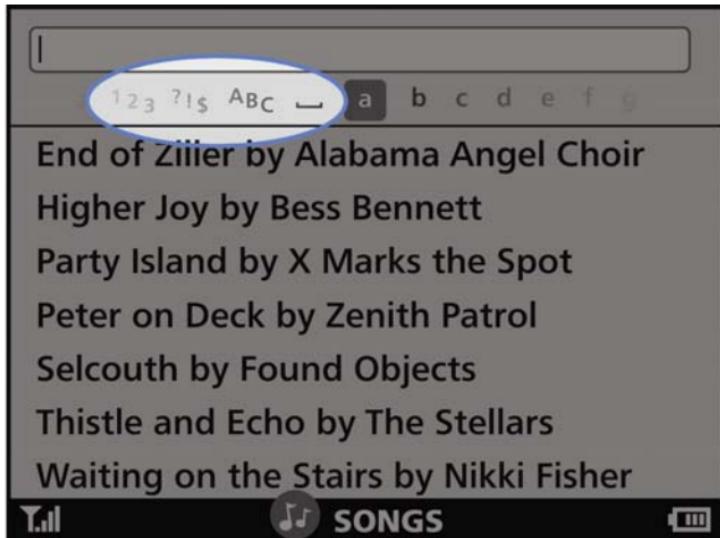

Selecting a Character Set

2 Activating Your Rhapsody Membership

ibiza Rhapsody comes with a 30-day, Rhapsody-to-go free trial. To begin streaming music, you'll need to activate this trial membership.

(If you already have a Rhapsody membership, select "Settings," "Account information." Provide your username and password, and then select "Sign on now.")

- 1) From the Main Menu, select "Rhapsody." After the device connects to the Internet, a dialog box appears, letting you know that you are entitled to a free trial.
- 2) Select "Yes, use my free trial." A dialog box appears asking you whether you agree to the terms and conditions of the free trial.
- 3) If you click "Yes, I agree," your free trial is activated, and the device connects to Rhapsody.

Note: (1) Do not activate the free trial for **ibiza Rhapsody** from a desktop PC. If you do, you will lose your downloaded songs when obtaining a new membership. Activating from the device helps ensure that you will keep your downloaded media after starting a full membership in Rhapsody. (2) You can upgrade to a full Rhapsody membership at any time. Just insert the **ibiza Rhapsody** CD into your PC, and install Rhapsody Software. When prompted to sign in, click the Create New Account button and follow the instructions.

3 **Installing Software**

Getting Rhapsody Software on Your PC

Whether you plan to download music wirelessly, rip CDs, or copy an entire music library from your PC, Rhapsody Software makes getting music easier and more enjoyable. The software is included on the software CD you received with **ibiza Rhapsody**.

To install the software, insert the **ibiza Rhapsody** software CD into your PC. Select Rhapsody Software setup and follow the directions provided.

Updating Software on ibiza Rhapsody

New software versions may be made available from time to time. You can check for new versions wirelessly.

- 1) From the **ibiza Rhapsody** Main Menu, select “Settings,” then “Device updater,” and then “Check for updates.” **ibiza Rhapsody** connects wirelessly.
- 2) if a new version of software is available, it is downloaded immediately.
- 3) After download, a star icon appears next to the options “Settings” and “Device updater.”
- 4) To install the updated software, set the device up for charging using the power adapter and cable. Select “Install the latest update. At the prompt, select “Yes, continue.” When prompted, connect **ibiza Rhapsody** to a power source. (This ensures that **ibiza Rhapsody** remains on during the update process.) The software is installed, and the device reboots. When the device displays the main menu, you can disconnect the cable and the device is ready to use.

4 Importing Media

Importing Music (Ripping CDs)

- 1) On the PC, launch Rhapsody Software and sign in.
- 2) Insert a music CD into your PC's CD drive. On some PCs, the Windows Audio dialog box appears.
- 3) Click Cancel to clear the Windows Audio dialog box.
- 4) In the Display area, select tracks you want to import. Click Import CD.
- 5) When the importing process completes, the newly saved tracks are added to My Library.
- 6) To transfer these tracks to **ibiza Rhapsody**, drag and drop them from My Library to the **ibiza** Rhapsody icon (located in the Sources area).

Transferring Your Music Library to ibiza Rhapsody

To sync your entire music library:

- 1) On the PC, launch Rhapsody Software and sign in.
- 2) Connect **ibiza Rhapsody** to the PC.
- 3) In the Rhapsody Sources area, click the **ibiza Rhapsody** icon. The portable device view appears in the Display area.
- 4) Click Options (located at the top of the Rhapsody Display Area). Then select Library Transfer. Rhapsody Software copies your library from the PC to **ibiza Rhapsody**.

Note: When you sync **ibiza Rhapsody** to your music library using Rhapsody software, any videos you have added to the Rhapsody are also synced.

To sync specific tracks:

- 1) On the PC, launch Rhapsody Software and sign in.
- 2) Connect **ibiza Rhapsody** to the PC.
- 3) Drag and drop music from My Library, the Music Guide, or the Playlists/Mixer area onto the **ibiza Rhapsody** icon (located in the Sources list). You can add Channels from My Channels or the Channel Guide in exactly the same way.

Adding Media to the Rhapsody Library

Rhapsody software can find music tracks and videos on your PC and add them to the Rhapsody library.

- 1) On the PC, launch Rhapsody Software and sign in.
- 2) Click File, Add Tracks to My Library. The “Add Tracks to My Library” dialog box is displayed.
- 3) Follow the instructions in the dialog box to find and add the preexisting tracks.

5 Playing Media

The Main Menu is displayed when you turn on **ibiza Rhapsody**. The Main Menu provides access to all areas of **ibiza Rhapsody**.


Playing Music

This section describes some common ways of playing music.

Playing a Song, Album, Artist, or Playlist

- 1) Select "Music" from the Main Menu.
- 2) Navigate or browse to the song, album, artist, or playlist you want.
- 3) Press the Play/Pause button.
- 4) The music begins playing in the Now playing screen.

Note: You can navigate away from Now playing without stopping the music. From the Main Menu, you can always get back by selecting "Music," "Now playing."

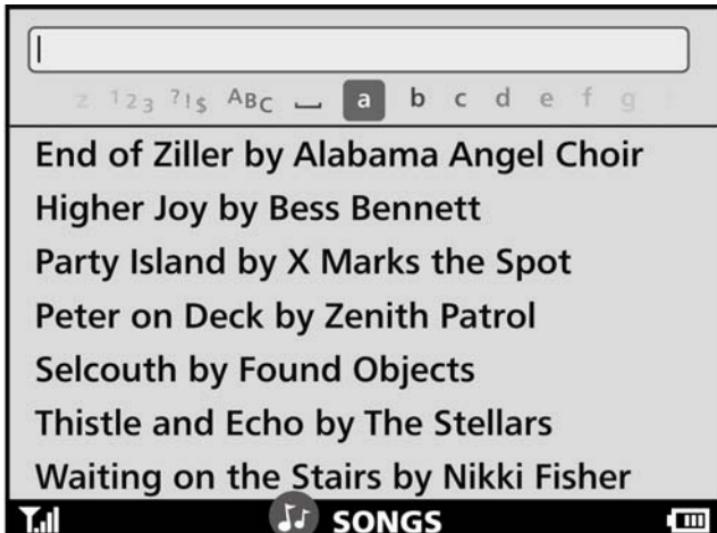

Selecting a Song

Streaming Music Wirelessly

- 1) Begin in any of these ways:
 - o From the **ibiza Rhapsody** Main Menu, select "Rhapsody."
 - o From any Artist screen, Album, or Genre screen, select "More by this artist," "More like this artist," or "More media in this genre."
 - o From the Now playing screen, press the Touchpad for options.
- 2) If you are not already connected to the Internet, **ibiza Rhapsody** attempts to connect automatically.
- 3) **ibiza Rhapsody** logs onto Rhapsody. The Rhapsody portal is displayed.
- 4) Explore the Rhapsody web site for media you want to stream. Select a song or album, and press Play. The music begins to play, streaming via wireless Internet.

Note: When you stream music, it is not downloaded or saved on **ibiza Rhapsody**. If you wish to download the song (copy it to your player) while streaming it, simply press the Touchpad while the song is playing in the "Now playing" screen.



The Rhapsody Portal

Viewing Song Information

Media information about a song (also called metadata), can include the name of the artist, name of the album, year the song was released, and so on. You can view this information for songs **ibiza Rhapsody** plays.

- 1) From the Main Menu, select "Music." Navigate to the song you want.
- 2) Select the song and press and hold the Touchpad. The "Advanced options" box appears in the screen. Scroll down to "View song information."

Or

- 1) From the "Now playing" screen, while the song is playing, press and hold the Touchpad.
- 2) Scroll down to "View song information" and press the Touchpad. Song information is displayed.

Title: Brand New Girl

Filename: brandnewgirl.mp3

Artist: Found Objects

Album: Shiny

Year: 2007

Genre: Alternative Rock

Rating: not rated

Played: 33 times

Protection: Unprotected



Viewing Song Information

Viewing Album Information

- 1) From the Main Menu, select "Music," "Albums."
- 2) Select an album and press the Touchpad.
- 3) Album information appears at the top of the screen. The information includes artist, genre, and release date.

Playing Videos

- 1) From the Main Menu, select "Videos."
- 2) Navigate or browse to find the video you want.
- 3) Select the video.
- 4) Press the Play/Pause button.
- 5) The video begins playing in the "Now playing" screen.

Viewing Video Information

- 1) From the Main Menu, select "Videos."
- 2) Select a video category. Press the Touchpad.
- 3) Select a video. Press and hold the Touchpad. The "Advanced options" box appears in the screen.
- 4) Select "View video info." Information is displayed, including file name, duration, and size.

Playing Podcasts

- 1) From the Main Menu, select "Podcasts." A list of podcasts is displayed. This screen displays information about each podcast series:
 - o Title: The first line shows the title of the podcast series.
 - o New episodes: The "New" icon appears next to the title if there are any new episodes in the podcast. When you view the new episodes, the "New" icon goes away.
 - o Description: The second line shows a description of the podcast.
- 2) Select the podcast, and then select an episode.
- 3) To play only the selected episode, press the Touchpad. To play the selected episode plus all the episodes that follow it, press the Play/Pause button.



"New" Icon

Viewing Information About a Podcast Episode

- 1) From the Main Menu, select "Podcasts." Then select a podcast series and press the Touchpad. A list of episodes appears.
- 2) This screen contains limited information about each episode, including:
 - o Title: The first line shows the title of the podcast episode.
 - o "New" icon : Appears next to the title if the episode is new. When you view the episode, the "New" icon goes away.
 - o Date published
 - o Description: The third line shows a description of the podcast episode.
- 3) For additional information:
 - o Navigate to the episode you want.
 - o Press and hold the Touchpad to bring up the "Advanced options" box.
 - o Select View episode details.



"New" Icon

6 Listening to FM Radio

Playing the Radio

- 1) Plug headphones or an antenna into **ibiza Rhapsody's** headphone jack.

Note: The FM radio will operate only if **ibiza Rhapsody** detects an antenna. You need to plug in headphones (or compatible speakers) for the FM radio to play.

- 2) From the Main Menu, select "FM radio." Any music that was playing stops. The radio begins playing the current station.

Note: **ibiza Rhapsody** keeps track of the last station you listened to. It will begin playing that station the next time you select "FM radio."



Configuring the Player for Radio

Setting the Station Manually

- 1) From the Main Menu, select "FM radio."
- 2) Use the Touchpad to scroll along the FM band.
 - o Scrolling to the right tunes the radio to a higher MHz value; scrolling to the left takes you lower.
 - o Each finger tap (left or right) moves the setting by a 0.2 MHz increment.



Changing Radio Stations

Creating Bookmarks

Note: Bookmarks are simply “preset stations.”

- 1) From the Main Menu, select “FM radio.”
- 2) Navigate to a favorite station. Then press the Touchpad.
- 3) The station number changes from gray to blue, indicating that a bookmark has been created.

Using Bookmarks

- **Press the Skip Forward button** to move **up** through your bookmarked stations.
- **Press the Skip Back button** to move **down** through your bookmarked stations.

Note: Holding down the Skip Forward and Skip Back buttons activates seeking. It does not move you quickly through your bookmarked stations.



Bookmarked FM Stations

Managing Bookmarks

- 1) From the Main Menu, select "FM radio." Press and hold the Touchpad. The Bookmarks screen appears.
- 2) Select "View bookmarked stations." A list of your bookmarked stations appears in the screen.
- 3) Use the Touchpad to scroll through this list.
- 4) To listen to a bookmarked station, select it and press the Touchpad.
- 5) To delete a bookmark, select the bookmarked station and press the Touchpad. The station is no longer bookmarked.

Clearing All Bookmarks

- 1) From the Main Menu, select "FM radio." Press and hold the Touchpad. The Bookmarks screen appears.
- 2) Select "View all bookmarks." The list of bookmarks is displayed.
- 3) Select "Clear all bookmarks." All existing bookmarks are removed (cleared).

7 Rhapsody Channels

The Rhapsody Channels music service is provided via wireless Internet. The procedures in this section assume that **ibiza Rhapsody** is already connected.

Accessing Channels

- 1) From the Main Menu, select "Rhapsody channels." The Rhapsody Channels screen is displayed.
- 2) Browse Rhapsody Channels and select a channel. Press the Touchpad to start listening.

Listening to Channels

- To start and stop the music, press the Play/Pause button
- To keep the current song, press the Touchpad. **ibiza Rhapsody** queues the song for downloading
- To skip the current song, press the Skip Forward button.

Note: Most channels do not support skipping backward to previous songs.

Adding Channels

This procedure assumes:

- You have a paid Rhapsody subscription or free 30-day Rhapsody-to-go trial
- Your desktop PC has Rhapsody Software installed
- Your desktop PC is connected to the Internet
- **ibiza Rhapsody** is powered on
- **ibiza Rhapsody** is connected to your PC, using the provided USB 2.0 data cable

- 1) Using your desktop PC, launch Rhapsody Software and sign in.
- 2) Select a channel and add it to My Channels.
- 3) Click My Channels. A list of your selected channels appears in Rhapsody Software Display area.
- 4) Drag the channels you want to add from the Display area, and drop them onto the **ibiza Rhapsody** icon. The channels are added to **ibiza Rhapsody**. These channels appear in two areas of **ibiza Rhapsody's** interface:
 - Select "Music," then "Channels."
 - Select "Rhapsody channels," "My channels."

8 Connecting to the Internet

Enabling Wireless

You need to have wireless set to “on” (enabled) for **ibiza Rhapsody** to connect to a wireless network. With wireless enabled, **ibiza Rhapsody** periodically scans for wireless networks within range. It can also connect to your familiar networks automatically to receive automatic updates.

- 1) From the Main Menu, select “Settings.” Select “Wireless settings” and press the Touchpad.
 - o If “Wireless connectivity” is set to “On,” then wireless is already enabled.
 - o If “Wireless connectivity” is set to “Off,” then wireless is disabled and you need to complete the rest of this section.
- 2) Select “Wireless connectivity” and press the Touchpad. The setting changes from “Off” to “On.” Wireless is now enabled.



The “Wireless settings” Screen

Using the Connect Button

- 1) From any screen, press the Connect button (located at the top of the player).
- 2) If your wireless settings are set to off, a screen prompts you turn wireless on. Press the Touchpad. Your wireless settings are applied.
- 3) Next, you are taken to the "Get connected" screen where you can choose from a list of wireless networks.
- 4) Select the network you want and press the Touchpad.
- 5) If the network is protected, you may need to input some security information. For more information about security, please see the section entitled "Wireless Security."
- 6) Once the device connects, it automatically leaves the "Get connected" screen and returns to the screen you were on before.



The Connect Button

Familiar Networks

Familiar networks allow **ibiza Rhapsody** to connect automatically. This allows the player to access online services and download content you want. **ibiza Rhapsody** connects whenever it has a task that requires a connection, provided it detects a familiar network within range. When all scheduled tasks are completed, **ibiza Rhapsody** disconnects automatically.

Note: For **ibiza Rhapsody** to connect automatically, you must set Wireless to "On" in the Settings menu.

Automatic connection allows **ibiza Rhapsody** to perform these tasks:

- Download media that you have queued, without any further effort on your part
- Update your music licenses
- Get music from hotlists to which you have subscribed
- Mark downloaded content with a New icon

Note: These tasks are also carried out any time you manually connect to the Internet.

Adding a Familiar Network

When **ibiza Rhapsody** connects to a network, the network becomes a *familiar network*. When **ibiza Rhapsody** attempts to connect, it tries the familiar networks first. (If no familiar networks are available, the player asks you to choose from any other available networks.)

Prioritizing Familiar Networks

When **ibiza Rhapsody** attempts to connect, it begins with the first listed familiar network. If it cannot connect, it tries the next familiar network on the list, and so on. Thus, by changing the sequence in which your familiar networks listed, you change which networks **ibiza Rhapsody** tries connecting to first.

- 1) From the Main Menu, select “Settings,” “Wireless settings,” “Familiar networks.” A list of your familiar networks is displayed.
- 2) Select a network that you want to move up or down in the sequence, and press the Touchpad. Then select “Reorder the networks.” The “Reorder” icon appears next to the entry for that network.
- 3) Press the Up and Down buttons to move the selected network up or down within the list. When it is where you want it, press the Touchpad. The list is reordered.

Removing a Familiar Network

- 1) From the Main Menu, select “Settings.”
- 2) Select “Wireless settings” and select “Familiar networks.”
- 3) Select the network you want to remove, and press the Touchpad.
- 4) Select “Delete this network,” and press the Touchpad.

Wireless Security

A variety of security technologies exist to protect wireless networks from hackers. When you log onto a particular network, it may be protected by any or all of these countermeasures. When you connect to a secure network, you may be prompted for some of the following information.

Locking the MAC Address

Internally, **ibiza Rhapsody** uses a network's MAC address to uniquely identify that network. The network's SSID, on the other hand, is probably the name you will think of when selecting the network in the future. We recommend that you resolve this difference the first time you access a particular network, locking the SSID to that network's MAC address.

To obtain a particular network's MAC address:

- 1) Connect to the network whose MAC address you want to lock. [See the chapter entitled "Connecting **ibiza Rhapsody** to the Internet," for details.]
- 2) Press the Connect button. The Connection Details screen is displayed.
- 3) Press and hold the Touchpad. An Advanced Options menu is displayed.
- 4) Select "Connection details," Advanced, The 12-character MAC address appears at the top of the screen. Make a note of the MAC address.
- 5) From the Main Menu, select "Settings," "Wireless settings," "Familiar networks."
- 6) Select the SSID for the network you want to lock and press the Touchpad. Use the text ribbon to input the MAC address. Then select "Confirm." The new MAC address is locked.

Using a WEP Key

- 1) To connect to a WEP-secured network, you must obtain a WEP key for that network. Contact the network administrator or service provider to obtain a WEP key.
- 2) When prompted, use the Touchpad and text-entry ribbon to input the WEP key. Then select Confirm. (Typically, WEP keys are between 10 and 58 characters long.)
- 3) There may be a brief processing delay while a connection is formed. Then, the screen you were accessing is restored.

Inputting WPA Credentials

- 1) To connect to a WPA-secured network, you must obtain a username and password. Contact the network administrator or service provider to obtain these credentials.
- 2) The prompt for your username is accompanied by a text-entry ribbon. Use the Touchpad and text-entry ribbon to input your username. Then select "Confirm."
- 3) When prompted, input your password. Then select "Confirm."
- 4) There may be a brief processing delay while a connection is formed. Then the screen you were accessing is restored.

Inputting a Passphrase

- 1) To connect to a WPA-PSK-secured network, you must obtain a passphrase. Contact the network administrator or service provider to obtain a passphrase.
- 2) The prompt for your passphrase is accompanied by a text-entry ribbon. Use the Touchpad and text-entry ribbon to input your passphrase. Then select "Confirm." (Typically, a passphrase is between 8 and 63 characters long.)
- 3) There may be a brief processing delay while a connection is formed. Then the screen you were accessing is restored.

Authenticating on a Captive Portal

- 1) If your network administrator indicates that your network uses a captive portal, you may need to obtain a username and/or password. Ask the network administrator or service provider to obtain these credentials.
- 2) A prompt similar to the following appears: "To log on to this network, you must sign in through a network web page."
- 3) Press the Touchpad. The network portal's page appears. Follow the prompts to provide authentication and gain access to the Internet.


Viewing Wireless Settings

- 1) From the Main Menu, select "Settings."
- 2) Select "Wireless settings" and press the Touchpad.

Disabling Wireless

Setting wireless to "Off" prevents **ibiza Rhapsody** from connecting to any wireless networks. With wireless disabled, **ibiza Rhapsody** does not scan for networks and cannot receive automatic updates.

- 1) From the Main Menu, select "Settings." Then select "Wireless settings" and press the Touchpad.
 - o If "Wireless connectivity" is set to "Off," then wireless is already disabled.
 - o If "Wireless connectivity" is set to "On," then wireless is enabled and you need to complete the rest of this section.
- 2) Select "Wireless connectivity" and press the Touchpad. The setting changes from "On" to "Off." Wireless is now disabled.

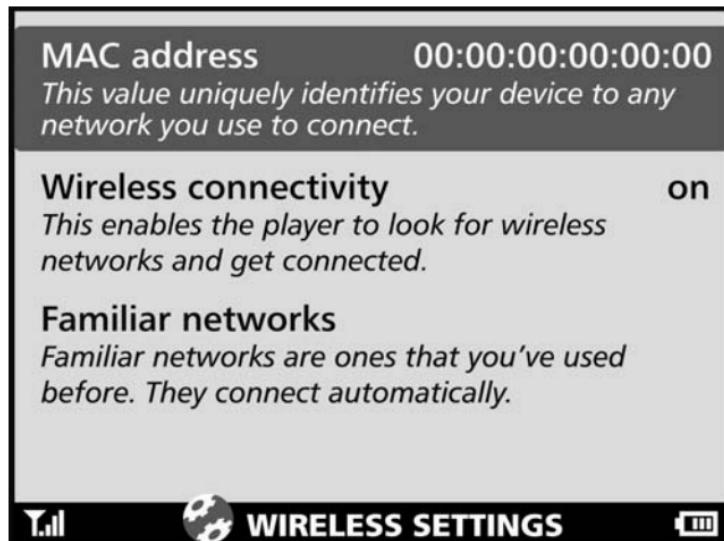

The "Wireless settings" screen

9 Downloading Media

Downloading Music

You can download music to **ibiza Rhapsody** without ever connecting to a PC. **ibiza Rhapsody** can connect to Rhapsody Software via wireless Internet.

About Rhapsody Software

Rhapsody Software offers two types of subscriptions:

- Rhapsody Unlimited
- Rhapsody To Go

With a To Go subscription, you can download music from the Internet to **ibiza Rhapsody** -- wirelessly, or via PC.


Your **ibiza Rhapsody** comes with a free 30-day Rhapsody-to-go trial).

Note: Activate your free trial from **ibiza Rhapsody**, not from a PC. If you create a membership account, later on, your free trial must have originated from the device. Otherwise, Rhapsody cannot merge the accounts, and your downloaded songs will be lost.

Initializing Your Player

- 1) From **ibiza Rhapsody** Main Menu, select "Settings," and then "Account settings." The current User ID and password are displayed.
- 2) Select User ID and press the Touchpad. A text input ribbon appears. Input the user name that applies to your Rhapsody account. Then select Save, and press the Touchpad. The new user name appears in the "Account settings" screen.
- 3) Select Password and press the Touchpad. A text input ribbon appears. Input the password that applies to your Rhapsody account. Then select Save, and press the Touchpad. The "Account settings" screen is displayed.
- 4) Press the Back button twice to return to the Main Menu. **ibiza Rhapsody** is initialized for your account.

Note: You only need to authenticate once; after that, **ibiza Rhapsody** remembers your account information whenever you log in.

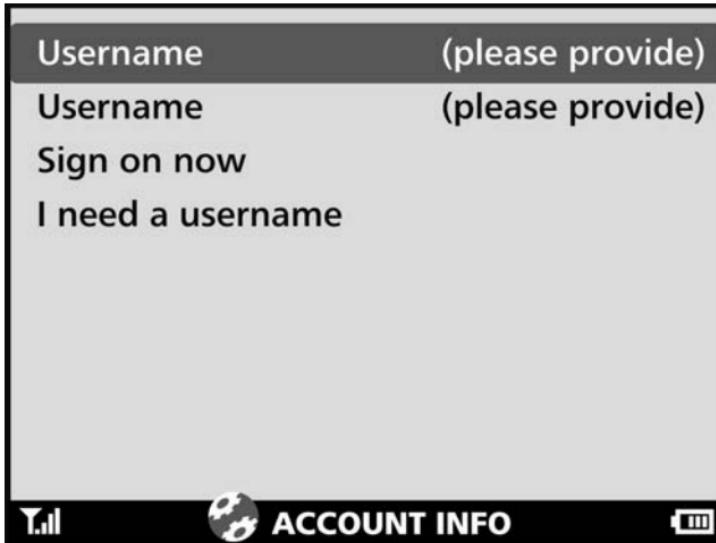

Initializing your the Music Store Account

Downloading Music Wirelessly

- 1) From the **ibiza Rhapsody** Main Menu, select "Rhapsody."
- 2) If you are not already connected to the Internet, ibiza Rhapsody attempts to connect automatically. (See the chapter entitled "Connecting to the Internet" for more information.)
- 3) **ibiza Rhapsody** attempts to log onto Rhapsody. (See "Downloading Media" for more information.)
- 4) Explore the Rhapsody web site for media you want to download.
- 5) Select a song or album. Then press the Touchpad.
- 6) Select "Download this song or album." **ibiza Rhapsody** downloads the media.

Using Any of the "Get More" Options

- 1) While browsing the media on **ibiza Rhapsody**, select any prompt similar to the following:
 - o Get more media
 - o More music by this artist
 - o Get more Country music
 - o Add a new podcast

- 2) Press the Touchpad.
- 3) If you are not already connected to the Internet, **ibiza Rhapsody** attempts to connect automatically. (See the chapter entitled "Connecting to the Internet" for more information.)
- 4) **ibiza Rhapsody** attempts to log onto Rhapsody. (See "Downloading Media" for more information.)
- 5) You will be prompted for more information, based on the type of content you are trying to download.

Downloading Music with a Desktop Computer

- 1) On the PC, launch the software and sign in.
- 2) Explore Rhapsody for media you want to download.
- 3) Click the add icon (+) next to the song or album you want to download. Select "Download to PC" and press the Touchpad. The music downloads to your PC. The default location for Windows XP is My Documents, My Music, Rhapsody. The media you download is arranged in subfolders that are labeled with the artists' names.

Downloading Podcasts

The type of media available in a particular podcast episode depends on what the creator chose to include. An episode can include text, audio, video, or some combination of these. The downloading process is triggered when you access the URL associated with a podcast.

Subscribing to a Podcast

- 1) Wirelessly connect **ibiza Rhapsody** to the Internet. (For details, please consult the chapter entitled, Connecting to the Internet.)
- 2) From the Main Menu, select "Podcasts," "Add a new podcast." A list of topics appears.
- 3) Select a topic. A list of podcasts (links) appears.
- 4) Select "Subscribe to this podcast" and press the Touchpad. The subscription is added and **ibiza Rhapsody** begins downloading.
- 5) Press the Back button twice. The podcast is listed in the Podcasts screen.
- 6) Select the podcast, and press the center of the Touchpad. The current episode is listed in the screen for this podcast.

Playing a Podcast

When the user selects a podcast episode and presses the Touchpad or Play, **ibiza Rhapsody** will do what it can to interact with that episode. This depends on what content that episode has: an audio file, a video file, a URL, or nothing but text.

Keeping a Podcast Episode

By default, **ibiza Rhapsody** deletes any automatically downloaded podcast episodes as soon as they become out of date. You can manually select specific episodes to be saved on the player.

- 1) From the Main Menu, select "Podcasts." The Podcasts screen appears.
- 2) Select the podcast you are interested in. Then, select the episode you want to keep.
- 3) Press the Touchpad. The podcast episode begins to play.
- 4) To keep this episode, click the Touchpad again. The episode is stored **ibiza Rhapsody**.



Playing a Podcast

Deleting Episode Content

If you are done with a particular podcast episode – or if you just want to clear space on **ibiza Rhapsody**, you can delete any or all of a podcast's episodes.

- 1) From the Main Menu, select "Podcasts." The Podcasts screen appears.
- 2) Select a podcast and press the Touchpad. A list of available episodes appears.
- 3) Select the episode you want to delete. Then press and hold the Touchpad. The "Advanced options" box for this podcast appears.
- 4) Select "Delete all episode content" and press the Touchpad. When prompted, select "Yes, delete" and press the Touchpad. The episode and all associated media are deleted from **ibiza Rhapsody**.

Deleting Podcast Content

- 1) From the Main Menu, select "Podcasts." The Podcasts screen appears.
- 2) Select the podcast you want to delete. Then press and hold the Touchpad. The "Advanced options" box appears.
- 3) Select "Delete all media from this podcast." When prompted, confirm by selecting "Yes, delete" and pressing the Touchpad. All episodes of this podcast, along with all of their associated media files, are deleted from **ibiza Rhapsody**.

Unsubscribing From a Podcast

- 1) From the Main Menu, select "Podcasts." The Podcasts screen appears.
- 2) Select the podcast from which you want to unsubscribe. Then press and hold the Touchpad. The "Advanced options" box appears.
- 3) Select "Unsubscribe from this podcast." When prompted, confirm by selecting "Yes, unsubscribe" and pressing the Touchpad. The subscription is cancelled and the podcast is removed from the Podcasts screen. No further downloads from this podcast will occur.

10 Copying Media

Copying Music from CDs

- 1) Insert the CD into your PC's CD drive.
- 2) Launch Rhapsody. In the Sources area, select the CD you want to copy. Then click the CD Import button. Songs from the CD are imported into your library.
- 3) Turn on **ibiza Rhapsody** and connect it to the PC using the provided USB 2.0 cable. The **ibiza Rhapsody** icon appears in the Sources area.
- 4) In the Sources area, click My Library. The contents of your music library are listed in the Details area.
- 5) In the Details area, select the songs you want to copy to **ibiza Rhapsody**. then drag them into the Sources area and drop them onto the **ibiza Rhapsody** icon. The songs are copied to **ibiza Rhapsody**.

Note: Supported media formats are listed in the section on "Technical Information."

Copying Videos from Your PC


- 1) On the PC, launch the **ibiza Rhapsody** software and sign in.
- 2) Connect **ibiza Rhapsody** to the PC.
- 3) Drag and drop videos from My Library onto the **ibiza Rhapsody** icon (located in the Sources list).

Note: You can create subfolders within the Video folder. These appear as categories when you navigate using **ibiza Rhapsody**. Folders within these sub-folders will not appear on **ibiza Rhapsody**, however.

11 Playlists

Creating a Playlist

- 1) From the Main Menu, select "Music."
- 2) Select "Artists," "Albums," or "Songs."
- 3) From the Main Menu, select an individual artist, album, or song. Then, press and hold the Touchpad. The "Advanced options" box appears in the screen.
- 4) Select "Add to a playlist." The text-entry ribbon appears.
- 5) Use the text-entry ribbon to give the playlist a name.
- 6) Select Save. The playlist is created and saved to **ibiza Rhapsody**.

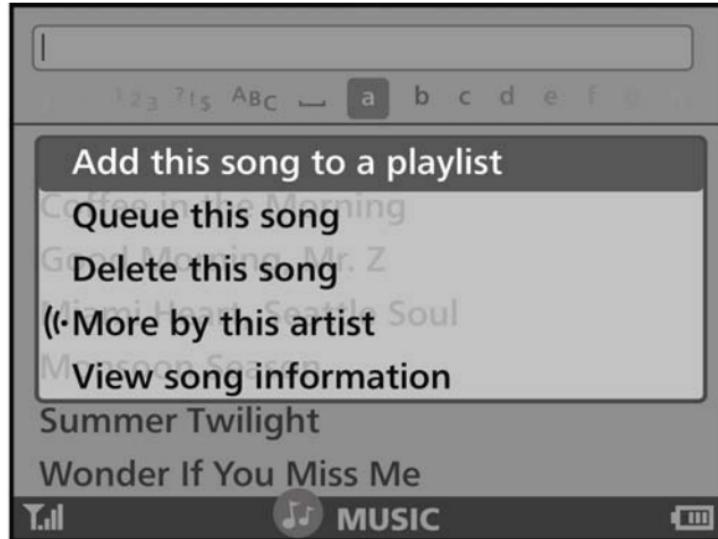

Creating a New Playlist

Viewing a Playlist

- 1) From the Main Menu, select "Music."
- 2) Select "Playlists," and press the Touchpad. A list of the playlists currently on **ibiza Rhapsody** appears.
- 3) Select a playlist, and press the Touchpad. The playlist appears.

Adding a Song to a Playlist

- 1) From the Main Menu, select "Music."
- 2) Select a song you wish to add. Then, press and hold the Touchpad. The "Advanced options" box appears in the screen.
- 3) Select "Add this song to a playlist."
- 4) If playlists already exist on **ibiza Rhapsody**, a list of playlists appears. Select the playlist you want, and press the Touchpad. The song is added to the end of the playlist.

Deleting a Song from a Playlist

- 1) From the Main Menu, select "Music," "Playlists."
- 2) Select a playlist and press the Touchpad.
- 3) From the Main Menu, select the song you want to remove. Then, press and hold the Touchpad. The "Advanced options" box appears.
- 4) Select "Remove from this playlist." The song is removed from the playlist.

Deleting a Song from *ibiza Rhapsody*

Deleting a song from a playlist removes the song from the playlist, but does not remove it from **ibiza Rhapsody**. To delete a song from **ibiza Rhapsody**, follow these steps:

- 1) From the Main Menu, select "Music."
- 2) Select a song you wish to remove. Then, press and hold the Touchpad.
- 3) From the popup menu, select the option "Delete this song." When prompted to confirm, select "Yes, delete." The song is deleted from **ibiza Rhapsody**.

Renaming a Playlist

- 1) From the Main Menu, select "Music," "Playlists."
- 2) Select the playlist you want to rename. Then, press and hold the Touchpad. The "Advanced options" box appears.
- 3) Select "Rename this playlist."
- 4) Use the text ribbon to give the playlist a new name and select "Save." The new name is saved to **ibiza Rhapsody**.

Changing the Order of a Playlist

- 1) From the Main Menu, select "Music" and select "Playlists."
- 2) Select the playlist you want to edit.
- 3) Select a song that you'd like to move in the list. Then press and hold the Touchpad. The "Advanced options" box appears.
- 4) Select "Reorder the playlist."
- 5) Scroll up or down on the Touchpad to move the song up or down the playlist.
- 6) When the song is where you want it, press the Touchpad. The playlist is reordered.

Deleting a Playlist

- 1) From the Main Menu, select "Music," "Playlists."
- 2) Select a playlist you want to delete. Then, press and hold the Touchpad. The "Advanced options" box appears in the screen.
- 3) If you want to remove the playlist but keep the music it contains, select "Yes, delete." The playlist is removed from **ibiza Rhapsody**.
Or,
If you want to remove the playlist *and all the music it contains*, select "Yes, and delete the media." The playlist and the songs are removed from **ibiza Rhapsody**.

12 Downloading and Viewing Photos

Downloading Photos

- 1) Copy the photo files to your PC.
- 2) Connect **ibiza Rhapsody** to your PC using the provided USB 2.0 cable.
- 3) Use the Windows Explorer to navigate to My Computer\ibiza Rhapsody\30GB HDD\Pictures

Note: You can create subfolders within /Pictures. These appear as categories when you navigate using **ibiza Rhapsody**. Folders within these sub-folders will not appear on **ibiza Rhapsody**, however.

- 4) Drag the pictures you want from your PC and drop them into the Video folder.

Viewing Photos

- 1) From the Main Menu, select "Photos." The Photos screen appears. If your photos have been categorized, the categories are listed here.
- 2) Select a picture category and press the Touchpad. The Photo Grid screen is displayed.
- 3) Select a picture that you want to view and press the Touchpad. The picture is displayed.
- 4) Navigate among your pictures as follows:
 - o To view the next picture, press the Skip Fwd button.
 - o To view the previous picture, press the Skip Back button.
 - o To return to the Photo Grid screen, press the Back button.

13 Airskins

About Airskins

You can change your experience of using **ibiza Rhapsody** by applying a new skin. **ibiza Rhapsody's** skins, which can be downloaded wirelessly, are called **Airskins**.

Using a different Airskin changes the appearance of every screen on **ibiza Rhapsody**. Background, text colors and fonts, and special images may change with a new Airskin. Choosing an Airskin is a great way to personalize **ibiza Rhapsody**.

In some cases, a new Airskin also gives you access to new content.

ibiza Rhapsody comes with a selection of Airskins already loaded. You can access additional Airskins and download them.



Selecting an Airskin

Changing Your Airskin

- 1) From the Main Menu, select "Extras," "Airscreens."
- 2) Select the Airskin you want to display, and press the Touchpad. There may be a brief processing delay. Then, the Airskin is displayed on **ibiza Rhapsody**.
- 3) To change back to the original Airskin, return to the Main Menu and select "Extras," "Airscreens," "Original."

Downloading New Airskins

- 1) From the Main Menu, select "Extras," "Airscreens." The Airskins screen appears.
- 2) Select "Get more Airskins." **ibiza Rhapsody** connects, and a list of available Airskins appears.
- 3) Select an Airskin that interests you and press the Touchpad. **ibiza Rhapsody** downloads the Airskin.
- 4) You can apply the Airskin, or save it to **ibiza Rhapsody**. To reject the Airskin, press the Back button.

14 Using the Web Browser

To use the browser, complete these steps:

- 1) From the Main Menu, select "Extras," "Internet browser." The Browser screen is displayed.
- 2) From here, you can:
 - a) Select the pre-configured link to the "Home page"
 - b) Select any of the other pre-configured links
 - c) Input a web address (URL). Select "New location" and press the Touchpad. A text-entry ribbon appears. You can use it to manually add a new URL. Then select "Load the web page" to continue.
- 3) If it is not already connected, **ibiza Rhapsody** connects to the Internet.
- 4) Use the touchpad to navigate within a web page.
 - o To scroll in any direction, use the Touchpad.
 - o To shift focus to a field or control on the page, scroll over it. (**ibiza Rhapsody** indicates focus by outlining the specific web page control.)
 - o To input text, first shift focus to the text fields on the web page. Press the Touchpad, and a text-entry ribbon appears. To return to the web page after you have entered your text, select the [X] character on the ribbon and press the Touchpad.

15 Listening via *Bluetooth*® Wireless Technology

Supported Profiles

ibiza Rhapsody supports most commercially available *Bluetooth*® headphones, and can transmit to a variety of other *Bluetooth* accessories, as well. To determine whether **ibiza Rhapsody** can connect to a particular *Bluetooth* accessory, consult the documentation for the accessory. For connection, the accessory must support *Bluetooth* profiles A2DP and AVRCP.

Enabling *Bluetooth* Connectivity

- 1) From the Main Menu, select "Extras," "Bluetooth," "Bluetooth."
- 2) This setting is a toggle. If it is set to "Off," press the Touchpad to toggle *Bluetooth* to "On." There is a brief processing delay as **ibiza Rhapsody** enables *Bluetooth* connectivity.



The "Bluetooth" Screen

Connecting to a New Bluetooth Device

- 1) For **ibiza Rhapsody** to communicate with your (optional) *Bluetooth* headphones, the headphones must be in *discoverable mode*. If you are not sure how to do this, please consult the documentation you received with your *Bluetooth* headphones.
- 2) From the Main Menu, select “Extras,” “Bluetooth,” “Choose a *Bluetooth* device.” The *Bluetooth* devices screen appears.
- 3) Select “Search for new devices.” **ibiza Rhapsody** scans for *Bluetooth* devices in the immediate area. (This process can take up to 10 seconds.)
- 4) If the *Bluetooth* headphones have the qualifying *Bluetooth* profiles, the headphones appear in the list displayed on **ibiza Rhapsody**.
- 5) **ibiza Rhapsody** connects to the *Bluetooth* headphones. Any media you play on **ibiza Rhapsody** is now audible via the *Bluetooth* headphones.

Connecting to Familiar Device

- 1) From the Main Menu, select “Extras,” “Bluetooth,” “Choose a *Bluetooth* device.” The *Bluetooth* Devices screen appears.
- 2) If you have connected to this set of headphones (or other device) before, it is listed on the *Bluetooth* Devices screen. Select the name of the device and then press the Touchpad. **ibiza Rhapsody** attempts to connect.
- 3) While **ibiza Rhapsody** attempts connection, press the Connect button on the *Bluetooth* headphones or other device. **ibiza Rhapsody** connects to the *Bluetooth* device.

Disabling Bluetooth Connectivity

- 1) From the Main Menu, select “Extras,” “Bluetooth,” “Bluetooth.”
- 2) This setting is a toggle. If it is set to “On,” press the Touchpad to toggle *Bluetooth* to “Off.”
- 3) There is a brief processing delay as **ibiza Rhapsody** turns off its *Bluetooth* connectivity.

16 Troubleshooting

Device Problems

ibiza Rhapsody won't turn on.

Possible Cause	Corrective Action
ibiza Rhapsody is locked.	Locate the Lock switch on the top side of the player. Slide this switch to the left to unlock the player.
The battery is not charged sufficiently.	Charge the battery using either a PC or standard wall outlet. Please consult the section entitled "Charging the Battery" for more information.
The Power button is not being held long enough.	To turn the power on, hold down the Power button for about two seconds, or until the LCD lights up.
ibiza Rhapsody is connected to a PC.	Try disconnecting ibiza Rhapsody from your PC before turning it on.

ibiza Rhapsody isn't responding.

Processing delay		Wait for processing to complete
Possible Cause	Corrective Action	
Environmental static electricity Incompatible downloaded media Incompatible web site software	<ol style="list-style-type: none">1) ibiza Rhapsody may be processing a previous request or task. Allow 15 seconds for ibiza Rhapsody to catch up with your requests.2) Cycle ibiza Rhapsody's power (Off and On). To do this, press and hold power key for two seconds. ibiza Rhapsody powers down. Then press and hold the power key for two seconds again, to start ibiza Rhapsody.3) Reset ibiza Rhapsody by following these steps:<ol style="list-style-type: none">a) Locate the Reset button on the bottom side of the player.b) Use the end of a straightened paperclip or pen to press the Reset button.c) After a brief delay, ibiza Rhapsody shuts down. Wait a few seconds, and then press and hold the Power button for two seconds. Wait for the Main Menu to load before attempting to use ibiza Rhapsody.	

Problems Listening to Music Files

Music that was on Ibiza" went away."

Possible Cause	Corrective Action
Music downloaded with your Rhapsody account does not play.	Check to see that your account is up-to-date. If the account has expired, or if you do not have a Rhapsody account, you can renew and create accounts by selecting "Settings," "Account information," "I need a new username."
Download failed.	If you know you have an active Rhapsody account, try downloading the music again.

Music files are on *ibiza Rhapsody*, but it can't play them.

Possible Cause	Corrective Action
Music is in a file format that is not supported by ibiza Rhapsody .	To see which formats are supported, refer to the Technical Information provided at the end of this document.
Music file is corrupt. (This sometimes occurs when connection is broken during a download.)	Try deleting the song and loading it onto ibiza Rhapsody again.
Music file is nonstandard.	If the file carries a supported file extension (such as MP3) but is not actually a standard file, ibiza Rhapsody may not be able to play it. Obtain a copy of the same music from a reputable and authorized source, and try again.

Wireless Connectivity Problems

Problem	Corrective Action
I'm not sure whether I'm connected.	Press the Connect button. If ibiza Rhapsody is connected to a wireless network, the name of the network appears on the screen. This is the "Connection details" screen. It shows details about the network to which ibiza Rhapsody is connected and it gives you the option to disconnect.
I can't see my preferred network in the "Get connected" screen.	<ol style="list-style-type: none">1) Wait 60 seconds, to allow ibiza Rhapsody to conduct a thorough scan for your preferred network(s).2) Make a specific search for your network, by completing these steps:<ol style="list-style-type: none">a) Scroll to the bottom of the "Get connected" screen and select "Don't see your preferred network?"b) Input the preferred network's SSID in the space provided and select Continue. If you don't know the SSID, contact the network administrator to find out. (Note that, if you set up the network yourself, the SSID is simply the network name you assigned to it during setup.) ibiza Rhapsody searches for this specific network.3) If you are still not prompted for your preferred network's security type, you are outside the network's wireless range.

Problem	Corrective Action
I'm being prompted unexpectedly for WEP key, username or passphrase.	<p>Network security or encryption is on.</p> <ul style="list-style-type: none">• To check the settings associated with the current network: from the Main Menu, select "Settings," then "Wireless settings," and then "Familiar networks." Select the network you are trying to access, to determine whether it is normal for you to be prompted for authentication information.• Ask the network administrator for authentication information. <p>For more information, please consult the section entitled "Wireless Security."</p>
ibiza Rhapsody displays a popup that says that the network is restricted or disabled.	<p>You have successfully connected with a wireless access point but the access point cannot connect you to the Internet.</p> <ul style="list-style-type: none">• if this network uses WEP security, check with network administrator. The WEP key may have been changed. If this is the case, obtain the new WEP key from the administrator. Input this key when prompted by ibiza Rhapsody.• Contact the network administrator to verify that the access point is currently connected to the Internet.• Some wireless networks use a "white list" of permitted users. Contact the network administrator to ensure that you are on the list of permitted users.• If you know of an existing, temporary condition that prevents the access point from communicating with the Internet, you can continue trying to connect by selecting "Keep using it."

Problem	Corrective Action
ibiza Rhapsody displays a popup that says that I need to sign on through a web page, to connect.	This network uses a captive portal to control access. You may need special authentication to sign on. Contact the network administrator to obtain credentials.

17 Technical Information

General Product Information	
Model	<ul style="list-style-type: none">MW101 ibiza Rhapsody Player with wireless Internet and <i>Bluetooth</i>® wireless technology
Platform	<ul style="list-style-type: none">SmartScreens Media Platform by Varia Mobile.
Compatible services	<ul style="list-style-type: none">Music: Rhapsody and Rhapsody Channels, by RealNetworksVideo: AOL Video
Accessories available from Haier	<ul style="list-style-type: none">ibiza Rhapsody Ear Buds (Headphones)ibiza Rhapsody USB-2 Data/Power CableHaier 5V Folding Travel Charger (U.S.)ibiza Rhapsody Protective Silicone Case
System requirements	<p>Note: A PC is required if you plan to "side-load" music via USB cable; no PC needed for wireless download or streaming.</p> <ul style="list-style-type: none">USB capable PC, with Windows XP or VistaRhapsody software version 4.0.2.345 or later.
Language	<ul style="list-style-type: none">U.S. English

General Product Information		
	Supported file formats	<ul style="list-style-type: none">• Audio: AAC, MP3, MP3 VBR, WMA, WAV• Video: MPEG-4, WMV, H 264• Images: JPEG, PNG <p>Note: Please visit the Haier ibiza web site (http://www.haieramerica.com/ibiza) for news and information about supported formats..</p>
	Wireless standards	<ul style="list-style-type: none">• Wifi (802.11 b/g)• <i>Bluetooth</i> (2.0 EDR)
	Software updates	Delivered to the device automatically, when device is connected and as they become available. Watch for the star icon that marks "Settings," "Device Updater."

Physical Characteristics		
	Dimensions	<ul style="list-style-type: none">• Height: 4.1 inches (105.0 mm)• Width: 2.4 inches (61.6 mm)• Depth: 0.52 inch (13.2 mm) at thinnest point
	Weight	<ul style="list-style-type: none">• 4.9 oz (140 grams)
	Display	<ul style="list-style-type: none">• 2.5" diagonal (QVGA) LCD• 320x240 pixels• 65,000+ colors
	Power Source	<ul style="list-style-type: none">• Battery type: Internal rechargeable lithium polymer battery• Fast charge: about 1.5 hours to 80%• Full charge: 2.5 hours <p>Note: You may continue using your ibiza while it is charging.</p>

Physical Characteristics		
	AC adapter	<ul style="list-style-type: none">• Input: 100-240V~50-60Hz 0.15A• Output: 5.0V 550mA
	Connectors and ports	<ul style="list-style-type: none">• 1/8" industry standard A/V headphones connector• USB 2.0 mini-B port for data and charging• Haier Advanced Docking Connector
	Charging	<ul style="list-style-type: none">• Accepts 5.25 VDC standard USB mini-B charger

Performance Characteristics		
	Data Capacity	<ul style="list-style-type: none">• Data: Internal 30 GB (footnote: approximately 29GB usable for storage)• Music: Holds up to 7000 songs (assumes 128Kbps, 4 minute average length)
	Supported <i>Bluetooth</i> profiles	<ul style="list-style-type: none">• Advanced Audio Distribution Profile (A2DP) for stereo headphones and other <i>Bluetooth</i> audio accessories• Audio Visual Remote Control Profile (AVRCP)
	FM frequency range	87.5MHz to 107.9MHz
	FM radio countries supported	United States
	Audio frequency response	20Hz to 20,000Hz

Certifications		
FCC information		<p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">-- Reorient or relocate the receiving antenna.-- Increase the separation between the equipment and receiver.-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-- Consult the dealer or an experienced radio/TV technician for help. <p>WARNING: Changes or modifications to this device that are not expressly approved by Haier America may void your authority to operate this equipment.</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
Bluetooth QDID		BO12354

Important Notices

WMDRM

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.