 


OPERATOR'S MANUAL MANUAL DEL OPERADOR

CRAFTSMAN[®]

19.2 VOLT RADIO RADIO DE 19,2 V

Model No.
315.EL2100
Número de modelo
315.EL2100

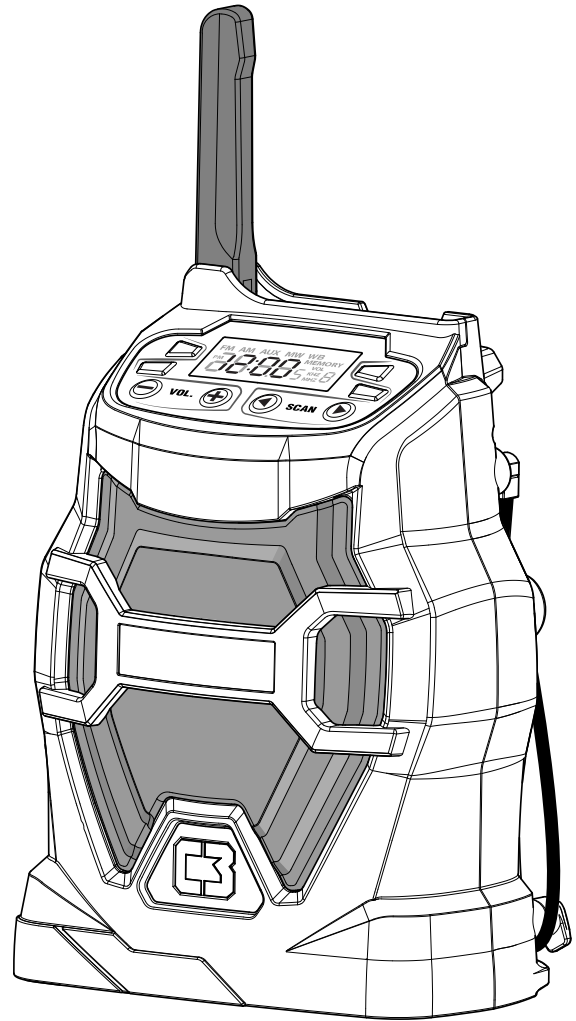

⚠ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

⚠ ADVERTENCIA: Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador antes de usar este producto.

BATTERIES AND CHARGERS SOLD SEPARATELY

LAS BATERÍAS Y LOS CARGADORES SE VENDEN POR SEPARADO

Customer Help Line: 1-800-932-3188
Teléfono de atención al consumidor: 1-800-932-3188

Sears Brands Management, 3333 Beverly Rd., Hoffman Estates, IL 60179 USA
Visit the Craftsman web page: www.sears.com/craftsman
Visite el sitio web de Craftsman: www.sears.com/craftsman

**Save this manual for future reference
Guarde este manual para futuras consulta**

991000152
8-1-14 (REV:01)

FC
VMZEL2100

TABLE OF CONTENTS / ÍNDICE DE CONTENIDO

ENGLISH

■ Warranty	2
■ Introduction	2
■ Important Safety Instructions	3-4
■ Symbols.....	5
■ Assembly.....	5
■ Operation.....	6-8
■ Maintenance.....	8
■ Illustrated Parts List.....	9
■ Illustrations	i-iii
■ Parts Ordering / Service	Back Page

ESPAÑOL

■ Garantía	2
■ Introduction	2
■ Instrucciones de seguridad importantes.....	3-4
■ Símbolos.....	5
■ Armado.....	5
■ Funcionamiento.....	6-8
■ Mantenimiento.....	8
■ Ilustraciones	i-iii
■ Pedidos de piezas / Servicio	Pág. posterior

WARRANTY / GARANTÍA

CRAFTSMAN LIMITED WARRANTY

FOR ONE YEAR from the date of sale, this product is warranted against defects in material or workmanship. WITH PROOF OF SALE, a defective product will be replaced free of charge.

For warranty coverage details to obtain free replacement, visit the web page: www.craftsman.com/warranty.

This ONE YEAR warranty is void if this product is ever used while providing commercial services or if rented to another person. For 90 DAY commercial and rental use terms, see the Craftsman warranty web page.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

* * *

GARANTÍA LIMITADA DE CRAFTSMAN POR UN AÑO

A partir de la fecha de venta, y DURANTE UN AÑO, este producto goza de garantía por defectos en materiales o mano de obra.

ANTE LA PRESENTACIÓN DEL COMPROBANTE DE VENTA, un producto defectuoso se reemplazará gratis.

Si desea conocer los detalles de la cobertura de la garantía para conseguir reparaciones o recambios, visite el sitio Web: www.craftsman.com/warranty.

Esta garantía POR UN AÑO se anulará en caso de que el producto se utilice al menos una vez en servicios comerciales o si se lo alquila a otra persona. Para conocer los términos de 90 DÍAS para aplicaciones comerciales y alquileres, consulte la página web de garantía de Craftsman.

Esta garantía le otorga derechos legales específicos y también puede gozar de otros derechos que varían según el estado.


Sears Brands Management Corporation, Hoffman Estates, IL 60179

INTRODUCTION / INTRODUCCIÓN

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

Este producto ofrece numerosas características para hacer más agradable y placentero su uso. En el diseño de este producto se ha conferido prioridad a la seguridad, el desempeño y la fiabilidad, por lo cual se facilita su manejo y mantenimiento.

IMPORTANT SAFETY INSTRUCTIONS

 **WARNING! READ THESE INSTRUCTIONS.** Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

KEEP THESE INSTRUCTIONS HEED ALL WARNINGS FOLLOW ALL INSTRUCTIONS

- **Do not use this apparatus near water.**
- **Clean only with dry cloth.**
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- **Only use attachments/accessories specified by the manufacturer.**
- **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as liquids has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **When servicing a product, use only identical replacement parts. Follow instructions in the Maintenance section of this manual.** Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.
- **Know your product. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this product.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Do not operate products in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Products create sparks which may ignite the dust or fumes.

ELECTRICAL SAFETY

- **A battery operated product with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use battery operated product only with specifically designated battery pack.** Use of any other batteries may create a risk of fire.
- **Use battery only with charger listed.** For use with 19.2V nickel-cadmium and 19.2V lithium-ion battery packs, see tool/appliance/battery pack/charger correlation supplement 988000-272.

PERSONAL SAFETY

- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the product in unexpected situations.
- **Do not use the radio to listen to music or other audio programs while operating machinery.** Doing so may cause distractions that could result in serious personal injury.
- **This radio is capable of producing sound levels that can be dangerous to long-term hearing.** Listening to music at high volume for any period of time may cause noise-induced hearing loss. The higher the volume, the less time required before your hearing may be affected.

PRODUCT USE AND CARE

- **When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Keep the radio and its handle dry, clean and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean the radio. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.
- **Battery products do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery product or when changing accessories.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- **Do not place battery products or their batteries near fire or heat.** This will reduce the risk of explosion and possibly injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery product in a damp or wet location.** Following this rule will reduce the risk of electric shock.

IMPORTANT SAFETY INSTRUCTIONS

- **For best results, your battery product should be charged in a location where the temperature is more than 50°F but less than 100°F.** To reduce the risk of serious personal injury, do not store outside or in vehicles.
- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.
- **To reduce the risk of personal injury and electric shock, the product should not be played with or placed where small children can reach it.**
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan them these instructions also.


BLUETOOTH® LICENSE STATEMENT

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sears Brands Management is under license. Other trademarks and trade names are those of their respective owners.

CALIFORNIA PROPOSITION 65

 **WARNING:** This product may contain chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. ***Wash hands after handling.***

FCC COMPLIANCE

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation is subject to the following two conditions:




1. This device may **not** cause harmful interference and,
2. This device must accept any interference received, including interference that may cause undesired operation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:








- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SYMBOLS


The following signal words and meanings are intended to explain the levels of risk associated with this product.


SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates important information not related to an injury hazard, such as a situation that may result in property damage.

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Recycle Symbols	This product uses nickel-cadmium and lithium-ion batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
	Direct Current	Type or a characteristic of current
	Class II Construction	Double-insulated construction
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time

ASSEMBLY

 **WARNING:** Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled could result in serious personal injury.

 **WARNING:** Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

If any parts are damaged or missing, please call 1-800-932-3188 for assistance.

OPERATION

⚠ WARNING: Do not allow familiarity with products to make you careless. Remember that a careless fraction of a second is sufficient to inflict severe injury.

⚠ WARNING: Always remove battery pack from the product when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

⚠ WARNING: The radio is not waterproof. Do not submerge in liquid. Failure to heed this warning could result in serious personal injury.

NOTICE: Always refer to the manual for any device recommended for use as an attachment or accessory. Proper use of any device, when attached to the radio, is the sole responsibility of the operator. Improper use may damage the device or the product.

⚠ WARNING: This radio is capable of producing sound levels that can be dangerous to long-term hearing. Listening to music at high volume for any period of time can cause noise-induced hearing loss. The higher the volume, the less time required before your hearing could be affected.

APPLICATIONS

You may use this product for the purposes listed below:

- Listening to AM/FM radio, MP3 players, CD players, and other audio devices
- Charging USB capable devices
- Streaming audio from BLUETOOTH® enabled devices

INSTALLING/REMOVING AAA BATTERIES

See Figure 1, page i.

It is advisable to write down saved channels before replacing the AAA batteries.

There is a 15-second time frame for replacing the AAA batteries. If the batteries are not replaced within 15 seconds, the radio will lose all settings previously stored in memory, and they will require reprogramming.

Always use new alkaline batteries for replacement.

⚠ WARNING: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

- Remove the battery pack, if installed.

- Loosen the screw in the battery door. Remove door and set aside.
- Install two new AAA batteries according to polarity indicators inside the battery compartment.
- Replace the battery door and tighten screw to secure.

INSTALLING/REMOVING BATTERY PACK

See Figure 2, page i.

- Place the battery pack in the radio, aligning the rib on the battery pack with the groove in the battery port.
- Make sure the latches on the battery pack snap into place and the battery pack is secured to the radio before beginning operation.
- Depress the latches to remove the battery pack.

NOTE: Always remove battery pack from radio when not in use.

C3 ENERGY INDICATOR WINDOW

The C3 energy indicator window located on the front of the radio will light when a Craftsman 19.2 V lithium-ion battery pack with C3 light is installed and the fuel gauge button is pressed.

NOTE: Feature will not light with Craftsman 19.2 V nickel-cadmium battery packs.

LCD DISPLAY

See Figures 3 - 4, page ii.

When a battery pack is installed and the radio is in the ON position, the LCD display will show the time, frequency, mode, and settings. When the battery pack is removed and AAA batteries are installed, the LCD display will display the time only.

NOTE: The illustrations of the LCD display shown in this manual are only examples of the frequencies you may see on your radio and are not the exact frequencies that you may choose to listen to.


 
MENU NAVIGATION BUTTONS

See Figures 3 - 4, page ii.

Use the menu navigation buttons to turn the radio on and off, control the volume, change frequencies, toggle between modes and set the time.

TURNING THE RADIO ON AND OFF:

Press the **ON/OFF** button to turn the radio ON and OFF.

When the radio is on and a battery pack is installed, the [] symbol will be shown in the LCD display. If the battery charge is low, a flashing low battery indicator will be displayed [].

ADJUSTING THE VOLUME:

When the radio is turned ON, the unit will return to the last volume setting used.

- To increase the volume, press the **VOL +** button.
- To decrease the volume, press the **VOL -** button.

OPERATION

SWITCHING MODES:

To switch modes, press the **MODE** button. The selected mode will be displayed above the frequency. Press the **MODE** button until the desired mode is selected. There are four modes:

- FM mode
- AM mode
- AUX mode
- BLUETOOTH® mode

AM/FM TUNING:

Use the **SCAN** ◀ and **SCAN** ▶ buttons to manually tune to the desired radio frequency. The selected frequency is displayed on the LCD.

- Press the **SCAN** ◀ button to tune to a lower frequency and press the **SCAN** ▶ button to tune to a higher frequency.

NOTE: Briefly press either button (not press and hold) to tune one frequency step at a time. Press and hold either button to quickly find the next frequency with clear reception.

- To decrease interference or electrical noise, adjust the position of the antenna or move the radio to a higher elevation. The antenna folds down and out of the way when not in use.

STORING A PRESET IN MEMORY:

The memory feature saves up to 20 frequencies as presets in the radio's memory. You can save up to ten (10) frequencies each for FM and AM modes.

- Tune to the desired AM or FM frequency.
- Press and hold the **PRESET** button until the word "MEMORY" and the preset position number flash on the screen.
- Press the **SCAN** ◀ or **SCAN** ▶ button to choose a preset position number.
NOTE: There are ten (10) preset positions for FM and ten (10) for AM. Only one station can be saved in each preset position.
- Press the **PRESET** button again to store the frequency.

To tune to presets (FM or AM mode):

- Press and release the **PRESET** button to cycle through each preset position number and its associated frequency.

SETTING THE CLOCK:

The time appears on the LCD display when the radio is on.

- Press and hold the **CLK/DSPY** button until the "hour" display blinks.

- Press the **VOL +** or **VOL -** button to select the hour.
NOTE: Time is displayed in 12-hour format only. To select an hour that is after noon and before midnight, cycle the hours until "PM" appears in the display.
- Press and release the **CLK/DSPY** button to lock in the hour setting. "Minutes" will begin to blink.
- Press the **VOL +** or **VOL -** button to select the desired number.
- Press and release the **CLK/DSPY** button again to confirm the time.

USING A PHONE/MP3 PLAYER (NOT INCLUDED) WITH THE RADIO

See Figure 5, page iii.

- Press the **MODE** button until AUX mode is highlighted.
- The retainer strap may be used to secure the device into position.
- Connect integrated auxiliary cable to the device.
NOTE: The auxiliary cable cannot be removed from the radio.
- The phone/MP3 player must be on and in play mode for sound to be heard through the speakers.
- All phone/MP3 player controls can be used normally while connected to radio.
NOTE: Volume for any device connected through the integrated auxiliary cable can be adjusted using the volume control for that device or by using the radio's **VOL +** or **VOL -** button.
- Turning the radio off will NOT turn the phone/MP3 player off.
- The integrated auxiliary cable DOES NOT provide charging function.
- For complete operating instructions for the connected device, always refer to the manual that was included with your device.

USING THE USB DEDICATED CHARGING PORT

See Figure 6, page iii.

The USB dedicated charging port provides charging power of 5 Volts DC at up to 1 Amp for your cell phone, MP3 player, or other USB devices.

NOTICE: Attempting to charge devices rated more than 1 Amp, such as a tablet, could damage the USB dedicated charging port and/or the device.

- Connect one end of a USB cable (not provided) to your USB device.

OPERATION

- Connect the other end of the USB cable (not provided) to the USB dedicated charging port to begin charging the device.

NOTE: The USB dedicated charging port provides power only; it does not provide any communication capabilities.

USING A BLUETOOTH® ENABLED DEVICE (NOT INCLUDED) WITH THE RADIO

See Figure 7, page iii.

- Press the **MODE** button until the (📶) BLUETOOTH® mode is highlighted.
- When the radio is switched to (📶) BLUETOOTH® mode, the unit will attempt to pair to a BLUETOOTH® enabled device and “bt” will flash in the LCD display.
NOTE: The radio will automatically attempt to connect to the last device it was paired to. If a connection cannot be established within five seconds, the radio will make itself available to other BLUETOOTH® enabled devices.
- BLUETOOTH® enabled devices must be within 30 ft. of the radio and set to search/scan in order to pair with the radio.

- Select “Craftsman Radio” from your device’s list of available BLUETOOTH® signals to pair the device and the radio. No password or PIN is required for connection.

- When the device has successfully paired with the radio, “bt” will stop flashing.

NOTE: When a device is paired to the radio, information for connecting to the device is saved in the radio’s memory.

- When streaming audio from a BLUETOOTH® enabled device, press the **SCAN** ◀ or **SCAN** ▶ button to go to the previous or next track. Briefly press and release the **PRESET** button to cycle between pausing and playing the audio.


NOTE: These controls may not be supported by the BLUETOOTH® device and/or application you are using.

- All BLUETOOTH® enabled device controls can be used normally while paired to the radio.

NOTE: Volume for any device paired to the radio can be adjusted using the volume control for that device or by using the radio’s **VOL +** or **VOL -** button.


- To disconnect the BLUETOOTH® enabled device, press and hold the **PRESET** button. When the device is disconnected, “bt” will begin flashing in the LCD display and the radio will begin searching for another device.

MAINTENANCE

 **WARNING:** When servicing, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

 
 **WARNING:** Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced by a qualified service dealer.

CRAFTSMAN RADIO – MODEL NUMBER 315.EL2100

The model number will be found on a label attached to the radio housing. Always mention the model number when ordering repair parts. To purchase parts, call the following toll free number: 1-888-331-4569.

SEE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

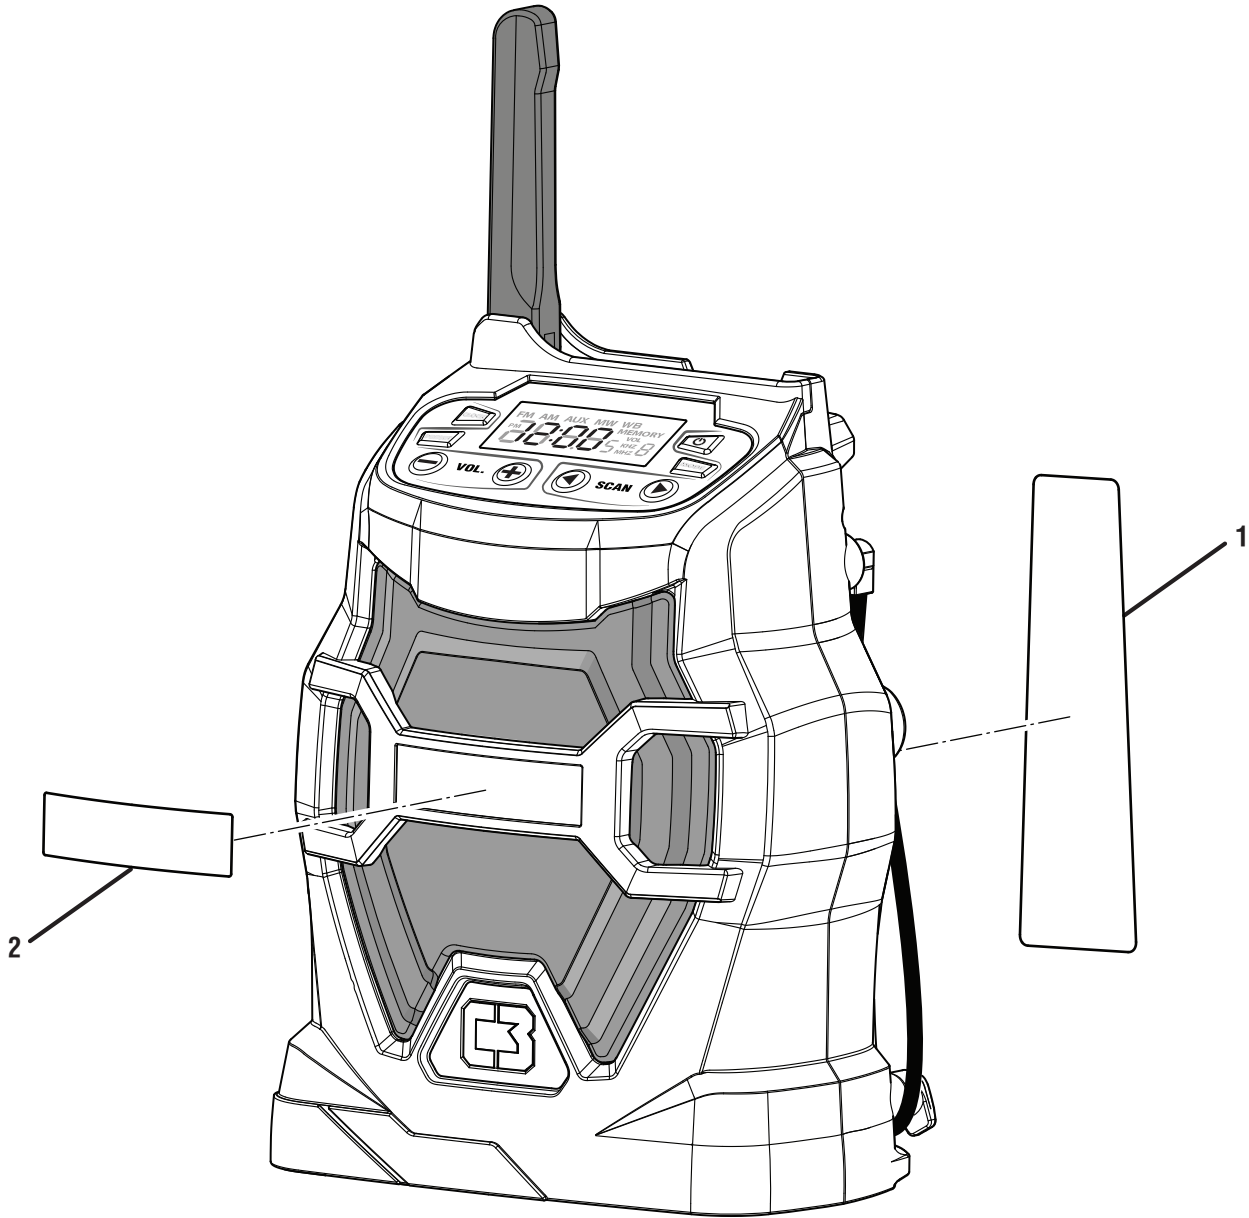

PARTS LIST

Key No.	Part Number	Description	Qty.
1	941121380	Data Label	1
2	941002143	Logo Label	1
	991000152	Operator's Manual (Not Shown)	

CRAFTSMAN®

Product questions or problems?

1-888-331-4569

Customer Care Hot Line

**Get answers to questions, troubleshoot problems,
order parts, or schedule repair service.**

Para respuestas a preguntas o problemas, y ordenar
piezas o pedir servicio para la reparación de su equipo.

To help us help you, register your product at www.craftsman.com/registration

Para poderte ayudar mejor, registra tu producto en www.craftsman.com/registration

Join the Craftsman Club today!

CRAFTSMAN® CLUB

www.craftsman.com/signup

**Receive exclusive member benefits including special pricing and offers,
project sharing, expert advice, and SHOP YOUR WAY REWARDS!**

Como miembro exclusivo, recibe diversos beneficios como ofertas, precios especiales, proyectos nuevos, consejos de expertos y nuestro programa de puntos SHOP YOUR WAY REWARDS!