

RF Remote Operating

1. Input a Key of RF Remote.
2. IC S3C825A receives this key.
3. Custom & Data Code assigned for inputted Key is transferred to IC ATmega48.
4. IC ATmega48 attribute the remote ID & Sub ID to received data and transfer it as FSK format(2.433GHz)

