



## DS-3200 Wireless Optical Slimline Deskset

### User's manual

Version 1.0



UK

DE

FR

IT

ES

PL

NL

PT

GR

DK

SE

HU

CZ

SK

FI

 
 
 
NO

 
TR

RU


L I F E I S M O R E I T R U S T U S

TRUST.COM

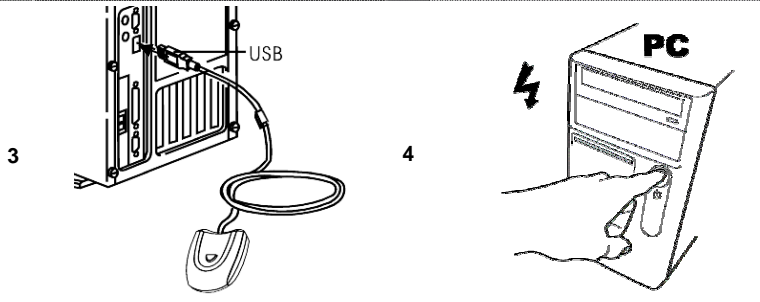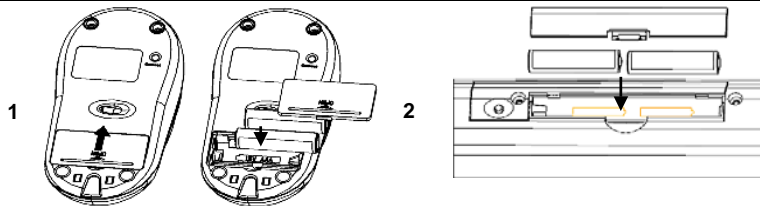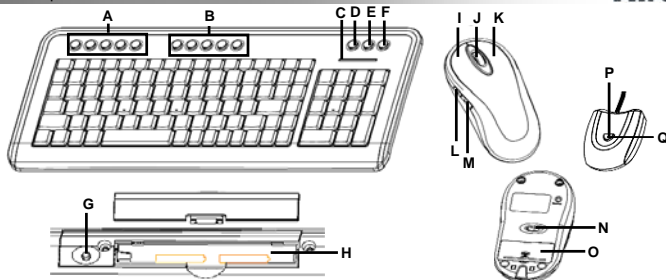

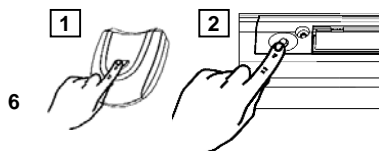

- 8
- Install software
  - Read manual

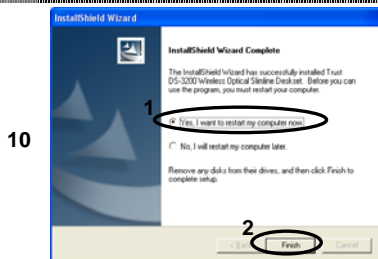 

**Product information**

Keyboard	Mouse	Receiver
<b>A:</b> Internet keys	<b>I:</b> Left button	<b>P:</b> Connect button
<b>B:</b> Multimedia keys	<b>J:</b> Scroll wheel Button	<b>Q:</b> Active indicator
<b>C:</b> Battery low indicator	<b>K:</b> Right button	Steady lit: powered
<b>D:</b> Open My computer	<b>L:</b> Browser forward button	Flashing: connect/active
<b>E:</b> Open calculator	<b>M:</b> Browser backward button	
<b>F:</b> Standby button	<b>N:</b> Motion sensor	
<b>G:</b> Connect button	<b>O:</b> Battery compartment	
<b>H:</b> Battery compartment		

UK

**Installation**
**1** Insert batteries to mouse

**2** Insert batteries to keyboard

**3** Connect USB to PC

**4** Computer on

**Connect Mouse**
**5** 1. Press connect button on receiver

2. Press connect button on mouse

**Connect Keyboard**
**6** 1. Press connect button on receiver

2. Press connect button on keyboard

The product is ready to use!

**Install Easy Configure Program**
**7** Place Trust CD in CD-ROM drive

**8** Install software

 
**9** Click 'Next'. Follow onscreen instructions.

**10** 1. Select 'Yes, I want to restart my computer now'

2. Click 'Finish'. Installation finished. Keyboard and mouse are ready for use.

**Reminder**
** Less performance**

- Metal object close to or in between the device
- Material of the surface which may cause sensor imprecision. Use a mousepad to avoid it
- Place receiver on same height as mouse
- Follow connect mouse or keyboard procedure to change wireless ID in case of disturbance
- Batteries (almost) empty
- Another wireless device is close by




**General usage**

- Adjust the speed of mouse pointer: (1) Open Windows Help (Start → Help). (2) Search "adjust the speed of mouse pointer". (3) Follow instructions
- Read the manual on CD for the use of the configuration program
- Num/Scroll/Cap Lock icon is displayed on taskbar once the program is installed
- All Windows, Fn+F11: lock keyboard. In Window98SE, Fn+Standby/Sleep: Sleep
- Re-connect mouse or keyboard is required after battery is replaced
- Install Trust Easy Configuration software on CD to configure the mouse buttons or hot keys
- Do not use old and new batteries at the same time, because the old batteries may deplete the new ones

If you have any problems, go to [www.trust.com/14627](http://www.trust.com/14627), for FAQ, software and manuals. This product may have other item no. due to various keyboard layout, but they are basically the same as 14627's.

**Safety**

- Do not open or repair this device.
- Keep this device away from liquids, such as water.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/14627/ce](http://www.trust.com/14627/ce)

**Wireless**

- This wireless device works at a frequency of 27MHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in EU countries plus: EU candidates and NO/CH/RU/HR/IS/UA. There are no limitations per channel for the above-mentioned countries. Go to [www.trust.com/14627](http://www.trust.com/14627) for an updated list of the countries where the use of this device is permitted.
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets local regulations. Frequency: Mouse: 27.045MHz, Keyboard: 27.145MHz; Bandwidth: 6KHz, Power: 0.5mW.
- Nowadays, there are an increasing number of wireless products (video, audio, computer, etc.), which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this product is limited by or is limiting for other wireless products. This can only be avoided by paying attention to the distance between products and, where possible, by changing channels.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.



- If possible, dispose of the device at a recycling centre. Do not dispose of the device with the household waste.

**Warranty & copyright**

- This product has a two-year manufacturer's warranty which is effective from the date of purchase. For more information see [www.trust.com/warranty](http://www.trust.com/warranty)
- Reproduction of this manual or any part of it is prohibited without permission from Trust International B.V.