

Theory of Operation

On the front panel there is a Green led.

When connected to the USB port, the Green led is ON.

The device waits for “Start” command from the PCECG software. If receives “Start” command from the PC, it tries to send it to the 1200W. On success it starts to receive ECG data from the 1200W and sends it to the PCECG software, The Green led blinks while receiving the ECG data.