

# Rakuraku smartphone 4

ISSUE DATE:

*'16.12*

NAME:

PHONE NUMBER:

MAIL ADDRESS:

## Introduction

Thank you for purchasing "F-04J" mobile terminal.  
Before using your terminal, or when necessary, read this manual to ensure safe use and handling.

### Manuals

#### "かんたん操作ガイド (Kantan operation guide)" (booklet)

This manual provides main functions and operations for the terminal. Operate according to the explanation to use basic function of F-04J.

#### "らくらくスマートフォン4を お使いになる前に (Before using Raku raku smartphone 4)" (booklet)

This manual provides important information for using the terminal. For attaching docomo nano UIM card, microSD card, battery pack or charging, refer to this booklet.

#### "使いかたガイド (User's guide)" (installed in the terminal)

This manual provides detailed information and operations of the functions.

##### <Step>

**標準** : From the Home screen, [使いかたガイド (User's guide)] ▶ Search method

**シンプル** : On the Standby screen, [使い方 (How to use)] ▶ [使いかたガイドを読む (Read User's guide)] ▶ Search method

#### "Instruction manual" (PDF file)

This manual provides detailed information and operations of the functions.

##### <From a PC>

<https://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>

\*You can download the latest information.


## Viewing this manual


- "F-04J" mobile terminal is usually referred to as "the terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- Explanations and screen images for "標準メニュー (Standard menu)" that is set by default are provided. If there are differences between "標準メニュー (Standard menu)" and "シンプルメニュー (Simple menu)" in operation, they are distinguished by mark **標準** or **シンプル**.
- Menu items for "シンプルメニュー (Simple menu)" are described when [リスト (List)] is set. When [タイル (Tile)] is set, some names of menu items are different from the description in this manual.
- Descriptions when setting of らくらくタッチ (Raku raku touch) is enabled are provided.
- "Authenticate" indicates the operating procedure for entering security code or password depending on functions.
- In some step descriptions, pressing button is shown by illustration (→p.14).
- Main operations are provided. A part of operation steps is simplified in the descriptions.

### 標準

Indicates that the operation in 標準メニュー (Standard menu) is described.

## 1 From the Home screen, [メール (Mail)]

On the 標準メニュー (Standard menu) Home screen, touch and push .

Touch and push .

## 2 [送受信履歴 (Sent and received logs)] ▶

[受信した人 (Recipient)]/[送信した人 (Sender)]

Touch and push [送信した人 (Sender)] or [受信した人 (Recipient)] according to your purpose.

A log list appears.

- To delete all logs, touch and push [受信履歴を削除する (Delete received log)]/[送信履歴を削除する (Delete Sent log)].
- Select a log to create mail, register/add to phonebook or delete.

Describes operation result and complementary explanation.

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

# Contents

■ Before using the terminal .....	2
■ Precautions (Always follow these directions) .....	3
■ Handling precautions .....	8
■ Waterproofness/Dustproofness .....	12

## Before using the terminal ..... 14

Part names and functions.....	14
docomo nano UIM card.....	15
microSD card.....	15
Battery pack.....	16
Charging .....	16
Turning power ON/OFF .....	18
Basic operation.....	18
Initial settings .....	20
Home screen.....	20
Home screen/Icons.....	21

## Calling ..... 24

Making a call/video call .....	24
Receiving a call/video call .....	25
One-touch dial.....	25
Phonebook.....	26

## Appendix ..... 28




Specific Absorption Rate (SAR) of Mobile Phones .....	28
Export Administration Regulations .....	31
Intellectual Property Right.....	31
SIM unlock.....	33

## Before using the terminal







- This terminal supports LTE, W-CDMA, GSM/GPRS, Wireless LAN System.
- Because your terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of Xi and FOMA service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when there are strong radio waves with 4 signal status icons on the terminal and you are not moving (traveling).
- Because your terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the LTE, W-CDMA, GSM/GPRS automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your terminal encodes voice communication as digital data. When you are operating your terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data you saved in the terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of the terminal.
- In the terminal, as it is for a PC, some applications that you install may give instability of the operation, or may send your location information or personal information registered to the terminal to outside via the Internet and the information may be used improperly. Please thoroughly check a provider and operation status of the application etc. which you want to use beforehand and then use it.
- You are recommended to save important data to microSD card. or a PC.
- This terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- The terminal does not support i-mode sites (programs) or i-appli.
- You can use the terminal only with docomo nano UIM card. If you have a UIM or FOMA card, bring it to a docomo Shop to replace.
- Even in Manner mode, shutter sound, auto focus lock sound for camera shooting, and count down sound for self timer are emitted.
- To check your own phone number, touch and push [自分の電話番号 (My own phone number)] on the Home screen.
- The terminal automatically performs communication for some functions, for example, to synchronize data, check the latest software or maintain connection with the server. If you transmit a large amount of data such as downloading applications or watching video, a packet communication charge becomes high. Subscription of packet flat-rate service is highly recommended.
- Depending on the applications or service you use, packet communication charge may be applied even in Wi-Fi communication.
- The software on the terminal can be updated with the latest information.
- Improving the terminals quality may be included in the software update.
- Display is manufactured by taking advantage of highly advanced technology but some dots may be always or never lit. Note that, this shows characteristics of liquid crystal displays and not defects in the terminals.
- When the memory of the microSD card or the terminal is almost full, running application may not operate normally. In this case, delete saved data.
- In the terminal, only specified applications such as sp-mode mail, i-channel, etc. are available. Downloading applications from Google Play and using them are not available.
- If your terminal is lost, change your password or disable your PC mail accounts using a PC to prevent other persons from using them.
- Set the screen lock to ensure the security of your terminal for its loss.
- The terminal supports only sp-mode, mopera U and Business mopera Internet. Other providers are not supported.
- For details on usage fee, refer to <https://www.nttdocomo.co.jp/english/>.

## Precautions (Always follow these directions)

- Before using your terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 <b>DANGER</b>	This sign denotes that death or serious injury may directly result from improper use.
 <b>WARNING</b>	This sign denotes that death or serious injury may result from improper use.
 <b>CAUTION</b>	This sign denotes that minor injury or damage to property may result from improper use.

- The symbols below show specific directions.






 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

### ■ Precautions contain the description below.





Handling the terminal, battery pack, adapter, desktop holder and docomo nano UIM card (common).....	3
Handling the terminal .....	4
Handling battery pack.....	5
Handling adapter and desktop holder.....	6
Handling docomo nano UIM card .....	7
Handling mobile phones near electronic medical equipment .....	7
Material list.....	7

## ◆ Handling the terminal, battery pack, adapter, desktop holder and docomo nano UIM card (common)

### DANGER

-  Don't **Do not use, store or leave the terminal in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct sunlight, in a car in the hot sun).**  
May cause fire, burns or injuries.
-  Don't **Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.**  
May cause fire, burns, injuries, electric shock.
-  No disassembly **Do not disassemble or remodel the equipment.**  
May cause fire, burns, injuries, electric shock.
-  No liquids **Do not let the terminal get wet with water, drinking water, urine of pet animals, etc.**  
May cause fire, burns, injuries, electric shock.  
For waterproofness, refer to "Waterproofness/ Dustproofness"
-  Do **Use the battery pack and adapter specified by NTT DOCOMO for your terminal.**  
May cause fire, burns, injuries, electric shock.

### WARNING

-  Don't **Do not throw the equipment or give a strong force or hard shock to it.**  
May cause fire, burns, injuries, electric shock.
-  Don't **Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack, external connection jack, or stereo earphone jack. Do not put those materials inside the terminal.**  
May cause fire, burns, injuries, electric shock.
-  Don't **Do not cover or wrap the terminal with a blanket, etc while using or charging.**  
May cause fire or burns.
-  Do **Turn the terminal OFF and stop charging before entering a place such as a gas station where flammable gases are generated.**  
The gas may catch fire.  
When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it.  
(When Osaifu-Keitai lock is activated, deactivate it before turning OFF the terminal.)



**If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.**

- Remove the power plug from the wall outlet or cigarette lighter socket.
  - Turn the terminal OFF.
  - Remove the battery pack from the terminal.
- May cause fire, burns, injuries, electric shock.

### CAUTION



**Do not leave the equipment on unstable or sloping surfaces.**

May cause injuries.



**Do not store the equipment in extremely humid, dusty or hot areas.**

May cause fire, burns, electric shock.



**Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.**

May cause injuries.



**Store the equipment out of reach of small children.**

May be accidentally swallowed or cause injuries.



**Be careful especially when using the terminal connected to the adapter continuously for a long time.**

If you use applications, call or watch 1Seg while charging the battery for a long time, the terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

## Handling the terminal

### WARNING



**Do not direct the infrared data port toward your eye and transmit signals.**

May cause harmful effect on eyes.



**Do not direct the infrared data port toward home electric appliances etc. equipped with infrared device when using infrared communication.**

May cause an accident because of malfunction of infrared device.



**Do not turn on the light by getting the lighting part closer to other person's eyes. When shooting infants, keep at least 1 m away from the object.**

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



**Do not put foreign objects such as liquid like water, metal pieces or burnable things into docomo nano UIM card slot or microSD card slot.**

May cause fire, burns, injuries, electric shock.



**Do not turn on the light aiming directly at the driver of the car etc.**

May disturb driving and cause an accident.



**Turn the terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.**

May cause electronic equipment or electronic medical equipment to fail or malfunction.

When using the phone in a medical facility, be sure to observe the regulations of the facility.

If you do prohibited act such as using the phone in an airplane, you will be punished according to law.

If usage of the terminal in an aircraft is admitted by setting airplane mode, etc., use the terminal under the direction of the airline.



**When you talk by setting handsfree or ring alert is sounding, keep the terminal away from your ear.**

**And, when connecting the earphone/microphone etc. to the terminal and play a game or music, adjust the volume moderately.**

Too loud volume may cause a hearing loss.

And, if you cannot hear the sound around you clearly, it may cause an accident.



**If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.**

May cause harmful effect on heart.



**When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.**

May cause harmful effect on electronic medical equipment etc.



**Turn the terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.**

May cause the equipment to fail or malfunction.

\* Examples of electronic equipment to avoid.

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



**When the display or camera lens is accidentally broken, be careful of fragments of broken glass or exposed internal parts of the terminal.**

Surface of display and camera lens are made of plastic panel so as not to be shattered, however, if you mistakenly touch broken or exposed parts, you may be injured.

### CAUTION



**Do not swing the terminal by the antenna, strap, etc.**

Don't

May cause accident such as injury to yourself or others by hitting.



**Do not use the damaged terminal.**

Don't

May cause fire, burns, injuries, electric shock.



**When using the motion sensor, check the safety around you, hold the terminal firmly, and do not shake it unnecessarily.**

Don't

May cause accident such as injuries.



**If the display part is accidentally broken and the liquid crystal leaks out, do not make the substance contact with your skin of face or hands.**

Don't

May cause loss of sight or skin problems.

If the liquid crystal gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.



**To use the terminal in car, check with automobile manufacturer or dealer to determine how the device is affected by radio waves before using.**

Do

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the terminal immediately.



**The use of the terminal may cause itching, rashes, eczema, or other symptoms depending on the user's physical condition. If you develop skin problems, immediately stop using the phone, and see a doctor.**

Do



**When watching the display, take a certain distance from the display in a fully bright place.**

Do

May reduce visual acuity.

## ◆ Handling battery pack

■ Check that the battery type matches the type displayed on the battery pack label.

Display	Battery type
Li-ion 00	Li-ion battery

### DANGER



**Do not connect a wire or other metal objects to the jack. And, do not carry or store the terminal with objects like a metal necklace.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**Check the orientation of the battery pack to attach to the terminal, and do not try to force the battery pack onto the terminal if you are having trouble attaching it.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**Do not throw the battery pack into the fire.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**Do not nail the battery pack, hit with a hammer or step on it.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**If the battery pack's fluid etc. contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.**

Do

May cause loss of sight.

### WARNING



**If the battery pack seems to have abnormalities such as deformation or scratches due to falling, never use it.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.**

Do

The vapors from leaking battery pack fluid may ignite or explode.



**Be careful not to let your pet bite the battery pack.**

Do

May cause battery pack to ignite, burst, heat or leak.

## ⚠ CAUTION



**Do not discard old battery packs together with other garbage.**

Don't

May cause ignition or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as docomo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



**Do not use or charge a wet battery pack.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**If fluid etc. leaks out from the battery pack, do not make the fluid contact with your skin of face or hands.**

Do

May cause loss of sight or skin problems. If the fluid etc. put into your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water. If the fluid etc. put into the eyes or mouth, immediately see a doctor after flushing.

## ◆ Handling adapter and desktop holder

## ⚠ WARNING



**Do not use the adapter cord if it gets damaged.**

Don't

May cause fire, burns, electric shock.



**Do not use the AC adapter or desktop holder in a bathroom or other highly humid area.**

Don't

May cause fire, burns, electric shock.



**Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.**

Don't

May cause fire, burns, electric shock.



**When it starts to thunder, do not touch adapter.**

Don't

May cause electric shock.



**Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.**

Don't

May cause fire, burns, electric shock.



**Do not place heavy objects on the adapter cord.**

Don't

May cause fire, burns, electric shock.



**When you insert and remove the AC adapter from power outlet, do not contact a metal strap or other metal objects with the jack.**

Don't

May cause fire, burns, electric shock.



No wet hands

**Do not touch the adapter cord, desktop holder or outlet with wet hands.**

May cause fire, burns, electric shock.



**Always use with the specified power source and voltage.**

**When charging the terminal overseas, use AC adapter for global use.**

If incorrect voltage is used, this may cause fire, burns or electric shock.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V

AC (Connect to the AC outlet for internal household use)



**If the DC adapter's fuse blows, replace it only with the specified fuse.**

May cause fire, burns, electric shock. For the specified fuse, see the instructions that come with the DC adapter.



**Wipe off any dust that accumulates on the power plug.**

May cause fire, burns, electric shock.



**When you connect the AC adapter to an outlet, firmly connect to the outlet.**

May cause fire, burns, electric shock.



**When you disconnect the power plug from the outlet or cigarette lighter socket, do not pull the adapter cord with excessive force. Instead, hold the adapter to disconnect.**

May cause fire, burns, electric shock.



**Always remove the power plug from the outlet or cigarette lighter when not using the adapter for an extended period.**

May cause fire, burns, electric shock.



**Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.**

May cause fire, burns, electric shock.



**Always remove the power plug from the cigarette lighter socket when cleaning the equipment.**

May cause fire, burns, electric shock.



## ◆ Handling docomo nano UIM card

### ⚠ CAUTION



**Be careful of the cut surface when removing docomo nano UIM card.**  
May cause injuries.

## ◆ Handling mobile phones near electronic medical equipment

### ⚠ WARNING



**Wearers of medical equipment such as implanted pacemakers or defibrillators must carry and use the terminal at least 15 cm away from the implanted device.**

The terminal's signals may affect the performance of electronic medical equipment.



**When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.**

The terminal's signals may affect the performance of electronic medical equipment.



**When you are in a crowd etc. and you have difficulties to keep a distance of 15 cm or more from others, turn the airplane mode on or power off the terminal not to transmit signals.**

There may be wearers of medical equipment such as implanted pacemakers or defibrillators around you. The terminal's signals may affect the performance of electronic medical equipment.



**When using the terminal in a medical facility, be sure to observe the regulations of the facility.**

## ◆ Material list

Part		Material/Surface treatment
Display panel		Hardened glass
Exterior case	Front case	PA-GF resin/Acrylic UV curable coating
	Back case	PC+ABS-GF resin/Acrylic UV curable coating
	Back cover	PC-GF resin + polyester elastomer resin/Acrylic UV curable coating
Receiver panel		ABS resin/Discontinuous evaporated
Home key		PC resin/Discontinuous evaporated+Serigraph
1Seg antenna	Top section	PC+ABS resin
	Pipe section	Stainless steel
	Root flexure section	Nickel titanium alloy
	Root rotating section	Stainless steel/Nickel plating
Out-camera/Infrared data port	Panel	Acrylate resin
Power key, Volume key		Aluminum alloy/Alumite coating
One-touch buzzer switch		POM resin
External connection jack cap		PC resin + polyester elastomer resin/Acrylic UV curable coating
Charging jack		PC resin + ABS resin/Gold plating
Battery Pack F35	Body	PC resin
	Contacts	Beryllium copper/Gold plating
	Label	PET/Black print letter
Desktop Holder F46	Upper and lower case	ABS resin
	Spacer (L/R), Front hook, Side lever, Charging terminal (lever)	POM resin
	Charging terminal (Contacts)	Phosphor/Gold plating
	Rubber part	Polyurethane
	External connection jack	Stainless steel/Tin plating

### ◆ General

- **F-04J is waterproof/dustproof, however, do not allow water or dust to seep into the terminal and do not allow accessories or optional devices to get wet or attached with dust.**
  - Battery pack, adapter, desktop holder, docomo nano UIM card are not waterproof/dustproof. Do not use in a bathroom or other highly humid area or do not let rain touch. Or putting the terminal on your body, humidity of sweat may cause internal corrosion and malfunction. Note that malfunctions, which are determined to be caused by water as result of inspections, are not covered by the warranty. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- **Clean the terminal with a dry soft cloth (such as a cloth for eyeglasses).**
  - Rubbing it roughly with a dry cloth may scratch the display.
  - Drops of water or dirt left on the display may cause stains.
  - If the terminal is wiped with alcohol, paint thinner, benzene or detergent, the printing may disappear or color may fade.
- **Clean the jack occasionally with a dry cotton swab etc.**
  - If the jack is soiled, connection gets worse and it may cause power to be turned off or insufficient battery charge, so clean the jack with a dry cotton swab etc. Also, be careful never to damage the jack when cleaning it.
- **Do not place the terminal near an air-conditioner outlet.**
  - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- **When using, be careful not to subject excessive force to the terminal or the battery.**
  - If the terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if external devices are plugged into the external connection jack or the stereo earphone jack, the breakage of the connector or malfunction may result.
- **Do not rub or scrape the display with a metal piece etc.**
  - May scratch the display, causing malfunction or damage.
- **Carefully read the separate instructions that come with optional devices.**

- **Do not press the surface of the touch panel strongly or operate it with sharp objects such as a nail, a ballpoint pen and a pin.**
  - It may damage the touch panel.
- **Avoid extreme temperature.**
  - Use the terminal where the temperature ranges are between 5 and 40°C (limited to the temporary use in a bathroom etc. when temperature is above 36°C) and humidity ranges between 45 and 85%.
- **The terminal may affect land-line phones, TVs or radios in use nearby, so use it as far as possible from these appliances.**
- **Maintain a separate record of the data you saved in the terminal.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **Do not drop the terminal or subject it to shocks.**
  - May cause malfunction or damage.
- **Do not plug external devices into the external connection jack or stereo earphone jack at a slant, or do not pull it forcibly while it is plugged.**
  - May cause malfunction or damage.
- **It is normal for the terminal to become warm during use or charging. Continue to use it.**
- **Do not leave the terminal with the camera in areas under strong direct sunlight.**
  - May cause discoloring or burn-in of elements.
- **Use the terminal with the external connection jack cap closed.**
  - Dust and/or water brought into the terminal cause troubles.
- **Do not use the terminal with the back cover removed.**
  - May cause removal of battery pack, malfunction or damage.
- **While microSD card is being used, do not take the card out and do not turn off the terminal.**
  - May cause data loss or malfunction.
- **Do not bring magnetic cards etc. close to the terminal.**
  - Magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- **Do not bring magnetized objects close to the terminal.**
  - Bringing strong magnetism close may cause a malfunction.

## ◆ Battery pack

---

- **The battery pack is a consumable part.**
  - Replace the battery pack if the terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.**
- **The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.**
- **Be careful especially about the following points when preserving the battery pack.**
  - Keeping under the state of the full charge (right after charging ends)
  - Keeping under the state of the empty charge (too exhausted to turn on the terminal)They may cause the battery pack performance to be degraded or its lifetime to be shortened.  
A recommended battery level when keeping the battery pack is approximately 40 % of remaining battery level as a guide.

## ◆ Adapter

---

- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **Do not charge the battery in the areas below.**
  - In areas of excessive humidity, dust or vibrations
  - Near land-line phones or TVs/radios
- **It is normal for the adapter to become hot while charging. Continue to use it.**
- **When using the DC adapter for charging, keep the vehicle engine running.**
  - The vehicle's battery could become flat.
- **When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.**
- **Do not give strong shock. Do not deform the charging jack.**
  - May cause malfunction.


## ◆ docomo nano UIM card


---

- **Do not use excessive force to install/remove docomo nano UIM card.**
- **Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using docomo nano UIM card with another IC card reader/writer.**
- **Always keep UIM ICs clean.**
- **Clean UIM with a soft, dry cloth (such as a cloth for eyeglasses).**
- **Maintain a separate record of the data you saved in docomo nano UIM card.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **To preserve the environment, bring the old docomo nano UIM card to a sales outlet such as docomo Shop.**
- **Take care not to scratch, touch accidentally or short IC.**
  - May cause data loss or malfunction.
- **Do not drop docomo nano UIM card or subject it to shocks.**
  - May cause malfunction.
- **Do not bend docomo nano UIM card or place heavy objects on it.**
  - May cause malfunction.
- **Do not install docomo nano UIM card into the terminal with a label or sticker put on.**
  - May cause malfunction.

## ◆ Using Bluetooth function

- This terminal is equipped with the security features that are compliant with Bluetooth standards for communication via Bluetooth. However, depending on the settings, there may not be enough security. Be aware of security risks when using Bluetooth.
- DOCOMO assumes no responsibility for any information which may be leaked during communication via Bluetooth.
- **Frequency bands**  
Frequency bands used by the terminal Bluetooth function are as below.

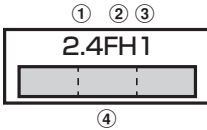

- ① 2.4 : Radio equipment that uses the 2400 MHz band.
- ② FH : The modulation is the FH-SS method.
- ③ 1 : The expected interference distance is 10 m or shorter.
- ④  : All bandwidths between 2400 MHz and 2483.5 MHz are used, and the bandwidth used by mobile object identification devices cannot be avoided.

### Cautions on using Bluetooth devices

In the bandwidth used by this terminal, in addition to home electric appliances such as a microwave oven and industrial/scientific/medical devices, in-plant radio stations used to identify mobile objects used in production lines of a factory that require a license, specified low power radio stations, or amateur radio stations that do not require a license (hereafter "other radio stations") can be in operation.

1. Before using this terminal, check whether other radio stations are in operation in your neighborhood.
2. If radio wave interference occurs between the terminal and "other radio stations", use the terminal in a different location or "Turn the power OFF" to avoid the radio wave interference.
3. For details, contact "General Inquiries" on the last page of this manual.

## ◆ Wireless LAN (WLAN)


- **Wireless LAN (WLAN)** exchanges information using radio waves, and allows you to freely establish LAN connection if you are within an area where radio wave reaches. On the other side, if you communicate without appropriate security settings, communications may be intercepted or hacked by malicious parties. It is recommended to make necessary security settings on your judgement and responsibility.
- **Wireless LAN**


Do not use Wireless LAN in a place where magnetized by electric products, AV, OA equipment, etc. or where electromagnetic wave is generated.

- If magnetism or electrostatic noise affects the terminal, noise may be increased or communication may not be available (especially when using microwave oven, it may affect the terminal).
- Using near TV or radio may cause poor reception or TV screen may be blurred.
- When multiple wireless LAN access points exist near the terminal and they use the same channel, search may not be performed correctly.

### • Frequency bands

Frequency bands for Wireless LAN function of the terminal are written on battery pack insert section of the terminal. Label description are as follows.

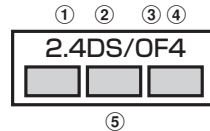

- ① 2.4 : Radio equipment that uses the 2400 MHz band.
- ② DS : The modulation is the DS-SS method.
- ③ OF : The modulation is the OFDM method.
- ④ 4 : The expected interference distance is 40 m or shorter.
- ⑤  : All bandwidths between 2400 MHz and 2483.5 MHz are used, and the bandwidth used by mobile object identification devices can be avoided.

Using wireless LAN built-into the terminal in 5.2/5.3 GHz outside is prohibited by the Radio Law.

Available channels vary by countries. To use WLAN overseas, check the conditions such as available frequency, regulation, etc. for the country.

To use in airplane, confirm with airline company in advance.

When docomo nano UIM card is not inserted or when you are out of service area, channels 12, 13 of 2.4 GHz band and 5 GHz band are not available regardless of whether you are in Japan or abroad.

## ◆ FeliCa reader/writer

### Cautions on using 2.4 GHz devices

In the frequency band used by WLAN devices, in addition to home electric appliances such as a microwave oven and industrial/scientific/medical devices, in-plant radio stations for identification of mobile objects used in production lines of a factory (a license is required), specified low power radio stations (a license is not required), or amateur radio stations (a license is required) can be in operation.

1. Before using this device, confirm that in-plant radio stations for identification of mobile objects, specified low power radio stations or amateur radio stations are not in operation in your neighborhood.
2. If this device generates harmful radio wave interference against in-plant radio stations for identification of mobile objects, change the using frequency promptly or stop using wireless LAN function, and contact "General Inquiries" on the last page of this manual, then consult about treatment for prevention of the interference (for example, installation of partitions etc.).
3. If this device generates harmful radio wave interference against in-plant radio stations for identification of mobile objects or amateur radio stations, or if any trouble, contact "General Inquiries" on the last page of this manual.

### Cautions on using 5 GHz devices

Channel numbers and frequency bands available in Japan are as follows.

- 5.2 GHz band : 5,180 to 5,240 MHz (36, 38, 40, 42\*, 44, 46, 48 Ch)
  - 5.3 GHz band : 5,260 to 5,320 MHz (52, 54, 56, 58\*, 60, 62, 64 Ch)
  - 5.6 GHz band : 5,500 to 5,700 MHz (100, 102, 104, 106\*, 108, 110, 112, 116, 118, 120, 122\*, 124, 126, 128, 132, 134, 136, 140 Ch)
- \* Compatible with IEEE802.11ac draft version. The terminal may not be able to communicate with official-version-compatible devices to be launched in future or draft-version-compatible devices from other companies. For compatible products, refer to the following website.  
<http://www.fmworld.net/product/phone/wifi/>

- FeliCa reader/writer function of the terminal uses weak waves requiring no licenses for radio stations.
- It uses 13.56 MHz frequency band. When using other reader/writers in your surroundings, keep the terminal away sufficiently from them. Before using the FeliCa reader/writer, confirm that there are no radio stations using the same frequency band nearby.

## ◆ CAUTION

- **Do not use a remodeled terminal. Using a remodeled terminal violates the Radio Law/Telecommunications Business Act.**

The terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law/Telecommunications Business Act, and as a proof of it, the "Technical Compliance Mark" (TCM) is depicted on the electronic nameplate of the terminal.

If you remodel the terminal by removing its screws, your certification of technical standard conformance becomes invalid.

Do not use the terminal with its certification of technical standard conformance invalid as it violates the Radio Law/Telecommunications Business Act.

- **Be careful when you use the terminal while driving a car etc.**

Using a mobile phone while driving is subject to penal regulations.

However, absolutely necessary cases such as rescue of a sick person or maintaining public's safety are exempted.

- **Use the Bluetooth function only in Japan.**

The Bluetooth function of the terminal is compliant with wireless standards and is authorized for use only in Japan.

If you use this function overseas, you may be punished.

- **Use FeliCa reader/writer function only in Japan.**

FeliCa reader/writer function of the terminal conforms to Japanese radio standards.

If you use this function overseas, you may be punished.

- **Do not alter the basic software.**

Repairs may be refused as a modification of software.

## Waterproofness/ Dustproofness

**F-04J provides waterproofness of IPX5\*1, IPX8\*2 and dustproofness of IP5X\*3 with firmly closing the external connection jack and steadily installing the back cover.**

- \*1 IPX5 means that a phone keeps functioning after applying a jet flow of 12.5 L/min. from every direction from a distance of approximately 3 m for at least 3 minutes using water nozzle in 6.3 mm inner diameter.
- \*2 For F-04J, IPX8 means that a phone keeps functioning after F-04J is slowly submerged to depth of 1.5 m in static tap water at room temperature, left there for 30 minutes and then taken out. (Camera function cannot be used under water.)
- \*3 IP5X means a protection degree that a phone keeps functioning and safety after it is placed in a device with dust in diameter 75 μ or less for 8 hours, agitated and then taken out.

### ❖ What you can do with waterproofness of F-04J

- **You can talk and watch 1Seg without an umbrella in the rain (for rainfall of 20 mm or less per hour).**
  - When your hands or the terminal are wet, avoid installing/removing the back cover or opening/closing the external connection jack.
- **The terminal can be washed with tap water at room temperature.**
  - With pressing and holding the external connection jack cap not to open, wash the terminal with tap water without rubbing hard.
  - Do not apply water flow stronger than allowed.
  - Do not use brush, sponge, soap, detergent, etc.
  - If mud or soil is adhered to the terminal, eliminate the dirt first by shaking several times in tap water of wash-basin and then wash the terminal with running water.
  - Drain water in the specified steps after washing.
- **You can use the terminal in a bathroom.**
  - Do not immerse the terminal into a bathtub. Also, do not use the terminal in hot water. May cause malfunction. If you should fall the terminal into the bathtub, immediately pick it up to drain water in specified procedure.
  - Never put the terminal in hot spring water or water containing soap, detergent or bath powder. In case the terminal gets wet with water other than tap water, wash it in the procedure above.
  - You can use the terminal within 2 hours in a bathroom where the temperature ranges between 5 and 45°C and humidity ranges between 45 and 99%.
  - Rapid temperature change may cause condensation. If you bring the terminal from a cold place to warm

- place such as a bathroom, wait until the terminal reaches the room temperature.
- Do not put hot water from a faucet or shower.

### ◆ To ensure waterproofness/ dustproofness

**To avoid water/dust ingress, be sure to observe the following points.**

- When using external connection jack, pull the cap with your fingertip by the groove to open. Then push the tab down and ensure that there are no gaps between the cap and the terminal.
- For installing the back cover, see the description in "■ Attaching" of "Attaching/Removing battery pack". → p.16
- Steadily attach the back cover without any space between and firmly close the external connection jack. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) put between contact surfaces may allow water to enter.
- Do not poke the stereo earphone jack, microphone, earpiece, speaker or rear microphone with a sharp object.
- Do not let the terminal fall. It may become scratched causing the waterproof/dustproof performance to degrade.
- The external connection jack cap and the rubber packing of the rear side of the back cover play important roles for keeping waterproof/dustproof performance. Do not deform the back cover by twisting etc. or peel off or damage the rubber packing. Also, prevent dust from adhering to it.

To keep the terminal waterproofness/dustproofness, replacement of parts is required every 2 years regardless of whether the terminal appears normal or abnormal. DOCOMO takes the terminal to replace the parts as a chargeable service. Bring the terminal to a sales outlet such as a DOCOMO-specified repair office.

## ◆ Important precautions

Do not perform actions shown in the illustrations below.

<Example>



Using Soap/  
Detergent/Bath powder



Washing with  
brush/sponge



Machine-washing



Applying strong  
water flow



Soaking in  
ocean water



Using in  
hot spring

Observe the following precautions to use the terminal properly.

- Accessories and optional devices are not waterproof/dustproof. When watching 1Seg, etc. with the terminal installed in the included desktop holder, do not use it in a bathroom, shower room, kitchen or lavatory even if it is not connected to the AC adapter.
- Do not apply water flow stronger than allowed. Even if the F-04J is waterproof in IPX5 waterproof, water may enter inside from a damaged section and cause troubles such as electric shocks or corrosion of the battery.
- If the terminal gets wet with salt water, sea water, refreshing beverage or mud or soil adhered, wash it immediately. If they dry out, it is hard to remove the dirt and it may cause damage or malfunction.
- Do not put the terminal in hot water, use it in a sauna or apply hot airflow (from a hair dryer etc.) to it.
- Do not move the terminal in water or slam the terminal against the surface of water.
- When you use the terminal in swimming pool, obey rules of the facility.
- The terminal does not float on water.
- Do not leave water on the terminal. May short-circuit the power jacks, or in a cold region, water may freeze causing malfunction.
- Do not leave water on the stereo earphone jack, microphone, earpiece or speaker. Such water may interfere with talking.
- If the back cover is damaged, replace it. Water may enter inside from a damaged section causing troubles such as electric shocks or corrosion of the battery.
- If the terminal gets wet with water or other liquids with the external connection jack cap or the back cover open, the liquid may get inside the terminal causing electric shocks or malfunction. Stop using the terminal, turn the power OFF, remove the battery pack and contact a DOCOMO-specified repair office.
- If the external connection jack cap, or the rubber gasket on the rear side of the back cover is damaged

or deformed, replace it at DOCOMO-specified repair office.

DOCOMO does not guarantee actual operations under all states. Malfunctions deemed to be caused by inappropriate operation by the customer are not covered by the warranty.


## ◆ Charging


Check the following before and after charging.






 
- Never try to charge the battery pack when the terminal is wet.
- When charging the battery after the terminal is wet, adequately drain it and wipe off water with a dry, clean cloth etc., before connecting the accessory desktop holder or opening the external connection jack cap.
- When the external connection jack cap is opened for charging, close the cap firmly after charging. It is recommended to use the desktop holder for charging to prevent water or dust from seeping inside from the external connection jack.
- Do not use the AC adapter or desktop holder in a bathroom, shower room, kitchen, lavatory or other highly humid area. May cause fire or electric shock.
- Do not touch the AC adapter or desktop holder with wet hands. May cause electric shock.
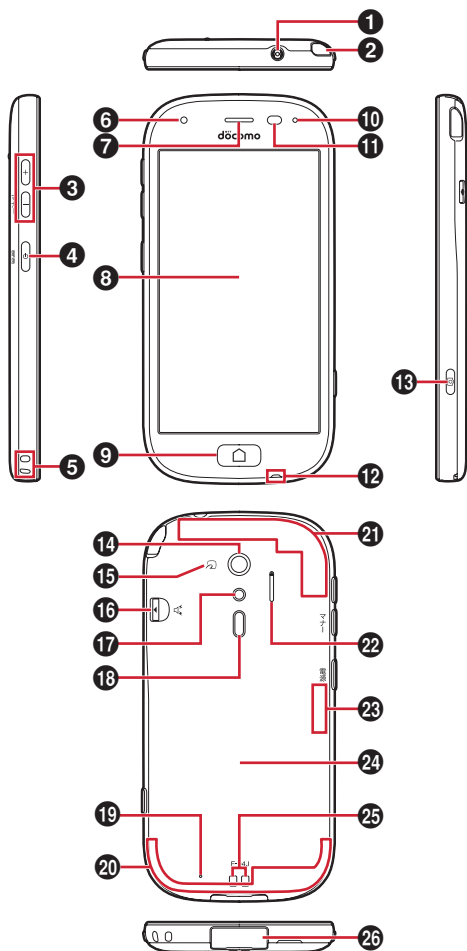
# Before using the terminal

## Part names and functions



- 1 Stereo earphone jack (waterproof)**
- 2 1Seg antenna**  
Extend when watching TV.
- 3 Volume key (+/- key)**  
Adjust volume for functions. Press and hold  for 1 second or more to activate/deactivate manner mode.

- 4 Power key ( key)**  
Turn display on/off (switch sleep mode). Press and hold to turn power ON/OFF, restart and activate/deactivate Manner mode, Public mode and Airplane mode.
- 5 Strap hole**
- 6 In-camera**
- 7 Receiver/Speaker**
- 8 Display (Touch panel)**
- 9 Home key ( key)**  
Exit from the application and return to the Home screen.  
Some applications such as Media Player and radio can be kept active in the background.
- 10 Indicator light**
- 11 Proximity sensor/RGB sensor**  
Proximity sensor prevents the erroneous operation of the touch panel during a call. RGB sensor senses ambient light and brightness and automatically adjusts the display backlight. Putting a protective sheet or seal on the sensors or covering the sensors with your finger may cause erroneous operation or erroneous detection.
- 12 Microphone**
- 13 Camera key ( key)**  
Touch and hold on the Home screen or Standby screen to activate the camera.
- 14 Out-camera**
- 15  mark**  
You can use the terminal by holding  mark over the card reader as an Osaifu-Keitai.
- 16 One-touch buzzer switch ( switch)**  
Slide switch to beep sound (change settings after purchasing).
- 17 Flash/Light**
- 18 Infrared port**
- 19 Back microphone**  
Use to reduce noise during a call. Do not cover it.
- 20 Xi/FOMA antenna\***
- 21 GPS/Xi antenna\***
- 22 Speaker**
- 23 Bluetooth/Wi-Fi antenna\***
- 24 Back cover**  
To access docomo nano UIM card slot and the microSD card slot, remove the back cover and the battery pack.  
Rubber gasket is attached on the rear side of the back cover to resist water.
- 25 Charging terminals**
- 26 External connection jack**  
\* The antennas are built into the terminal. Covering around the antenna by the hand may affect the quality.



## docomo nano UIM card

The docomo nano UIM card is an IC card in which user information such as your phone number etc. is saved.

- You can use the terminal only with docomo nano UIM card. If you have a UIM or FOMA card, bring it to a docomo Shop to replace.
- When docomo nano UIM card is not inserted to the terminal, some functions such as making/receiving calls and sending/receiving SMS are not available.
- For details on docomo nano UIM card, refer to the docomo nano UIM card manual.

### ◆ Installing/Removing docomo nano UIM card

- Turn the terminal OFF, remove the back cover and the battery pack before installing/removing.

#### ■ Attaching

- ① **Insert docomo nano UIM card into the docomo nano UIM card slot with the IC side facing up**
  - Check the orientation of docomo nano UIM card corner cut.

#### ■ Removing

- ① **Put your fingertip on the tab of the tray and pull it straight out**
- ② **Lightly press docomo nano UIM card and pull out in the direction of the arrow**
  - Do not press docomo nano UIM card downward forcefully.

#### ✓INFORMATION

- When handling docomo nano UIM card, take care not to touch or scratch the IC part. Note that inserting docomo nano UIM card forcibly into the terminal may damage docomo nano UIM card.
- The tray is designed not to be removed. When pulling the tray out, stop pulling out at the pullout limit. Do not pull out with excessive force. Doing so may damage or destroy the tray.

### ◆ Security codes of docomo nano UIM card

Security code called PIN code can be set for docomo nano UIM card. "0000" is set at the subscription but it can be changed yourself.

## microSD card

### ◆ microSD card

- The terminal supports microSD card of up to 2 GB, microSDHC card and microSDHC UHS-I card of up to 32 GB, and microSDXC card and microSDXC UHS-I card up to 64 GB (as of June, 2014).
- DOCOMO does not guarantee actual operations of all microSD cards. For information on compatible microSD cards, contact manufacturers of microSD cards.
- Do not turn the power OFF or give shock while accessing data on the microSD card. The data may corrupt.
- Class 10 is supported as speed class rate of microSD card.

## Battery pack

### ◆ Attaching/Removing battery pack

- Attach/Remove the battery pack after turning OFF the power.
- When you attach/remove the back cover, hold the terminal in your hand so that you will not scratch the display etc.
- If the terminal gets wet, wipe off water before removing the back cover.
- Use Battery back F35 dedicated to the terminal.

### ■ Attaching

- ① **Put your fingertip at the back cover removing part, remove tabs on the back side of the back cover in the order of ❶ and ❷ and lift the back cover in the direction of the arrow to remove**
- ② **With the arrow side of the battery pack label facing up, align the metal contacts of the battery pack with those of the terminal, insert in the direction of the ❶ to attach in the direction of ❷**
- ③ **Check the orientation of the back cover, and attach it fitting to the terminal**
- ④ **Fit the tabs on the reverse side of the back cover with the grooves on the terminal, press firmly ▼ to close**
  - Check if there is no gap at all in order to maintain waterproofness/dustproofness, and attach securely.

### ■ Removing

- ① **Perform Step ① in Attaching the battery pack**
- ② **Pinch the tab of battery pack and pick it up in the direction of the arrow to remove**

## Charging

### ◆ Precautions on charging

- If you use applications while charging, it may take time to complete charging or charging may not complete because applications use battery power. It is not a defect of the terminal.
- It is normal for the terminal or AC adapter to become warm while charging. When the terminal becomes warm, charging may stop temporarily for the safety. When the terminal becomes extremely hot, stop using immediately.
- The following conditions will lead to a charging error and the indicator light turns off. Charging restarts when the charging becomes possible.
  - When the power voltage of the battery pack becomes out of chargeable range
  - When temperature of the battery pack or the terminal becomes out of chargeable range
- If charging takes for very long time, a charging error is notified and the indicator light turns off. Remove the terminal from the charger and then recharge it.
- When power voltage of the battery pack is abnormal, charging error occurs and the indicator light flashes. Remove the terminal from the charger or remove the battery pack and then recharge it.
- When charging starts with the battery empty, the terminal may not be immediately activated after turning the power ON. In this case, charge the terminal while keeping it turned OFF, and turn it on after a while.
- Right after the battery pack is removed and reattached, the correct battery level may not be shown. While using, the battery level indicator is corrected.
- For charging time., see "Main specification".

### ◆ Battery pack life

- The battery pack is a consumable part. Each time it is charged, time available with each charging reduces. Talking on the phone for a long time while charging may reduce the battery pack lifetime.
- When a time available with each charging is reduced to about a half from that of a new battery, replacement of the battery is recommended because it is near the end of life. The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.



Li-ion 00

## ❖ Available charging adapter

For details, refer to the operation manual of AC adapter or DC adapter.

### AC Adapter 03 (optional)/AC Adapter 04 (optional)/AC Adapter F05 (optional)/AC Adapter F06 (optional) :

Between 100V and 240V AC. AC Adaptor has a plug dedicated to 100V AC (for domestic use). When using the AC adapter in the range of AC 100V and 240V overseas, a conversion plug adapter applicable to the country you are staying is required. Also, do not charge the battery with a transformer for overseas travel.

**DC Adapter 03 (optional) :** Use for charging in a car.

## ◆ Charging with desktop holder

Charging with supplied Desktop Holder F46 and optional AC Adapter 04 is described.

- ① **Insert a microUSB plug of AC adapter into the external connection jack on the back side of the desktop holder horizontally with engraved side facing up**
- ② **Insert the terminal into the Desktop Holder**
  - Make sure the orientation and connect correctly. If you force to connect, damage may occur.
- ③ **Insert the AC adapter's power plug into an outlet**
  - Indicator light lights red while charging. If the indicator light does not turn on, push the terminal into the desktop holder until it turns on.
  - Indicator light turns off when charging is complete.
- ④ **When charging is complete, unplug the AC adapter's power plug from the wall outlet and remove the terminal from the desktop holder**
- ⑤ **Remove microUSB plug from the desktop holder**

## ✓INFORMATION

- Do not hold a strap etc. between the terminal and desktop holder.
- In-put specification of Desktop Holder F46 is 5.0V 1.5A. However you can use it combining with AC Adapter 04 (Output 5.0V 1.8A).
- Connect specified AC adapter to the desktop holder.

## ◆ Charging with AC adapter

Charging with the optional AC Adapter 04 is described.

- ① **Open the external connection jack cap of the terminal, insert the microUSB plug of the microUSB cable horizontally into the external connection jack with engraved side facing up**
- ② **Insert the AC adapter's power plug into an outlet**
  - Indication light lights red while charging, and turns off when charging is complete.
- ③ **When charging is complete, remove the AC adapter's power plug from the wall outlet**
- ④ **Remove the microUSB plug from the terminal and close the external connection jack cap of the terminal**


## ◆ Charging with a PC

If you connect the terminal with a PC using a USB Cable for PC connection T01 (optional), you can charge the terminal with a PC.

- When a screen of new hardware detection or operation selection appears on the PC, select "キャンセル (Cancel)".

## Turning power ON/OFF

### ◆ Turning power ON

- 1 Press and hold  (2 sec. or more) until the indication light lights in green and the terminal vibrates.  
The top screen appears following the startup screen.
- 2 On the Top screen, slide from bottom to top
  - When a confirmation screen for sending terminal error information appears, touch and push [OK].

### ■ Turning power ON for the first time

Make initial setting for DOCOMO services after making the initial setting for the terminal (setup the terminal). Follow the onscreen instructions.

### ■ Changing the Home screen

[標準メニュー (Standard menu)] is set in Home screen for the first activation. To change to "シンプルメニュー (Simple menu)", operate from [メニュー切替 (Switch menu)] in the Settings menu.

### ◆ Top screen

Top screen is a screen for preventing misoperation.





- 1 On the Top screen, slide from bottom to top  
Home screen/Standby screen appears.

### ✓INFORMATION

- On the top screen, the display is automatically turned off according to the screen time out setting and the terminal goes into sleep mode.

### ◆When the screen display is turned off

When no operation is performed in certain period of time, the display is automatically turned off according to the screen time out setting and the terminal turns into sleep mode.

- 1  key  
Sleep mode is deactivated, and the top screen appears.  
**Setting sleep mode manually :**  key

### ✓INFORMATION

- When receiving a call while in sleep mode, sleep mode is deactivated.

### ◆ Turning power OFF

- 1 Press and hold  until the phone options menu appears
- 2 [電源を切る (Power off)] ▶ [OK]  
The terminal vibrates and turns OFF.  
**Restarting :** [再起動 (Restart)] ▶ [OK]

## Basic operation

### ◆ Using touch panel


You can operate the terminal by directly touching with your finger.

### ◆ Notes for using the touch panel

- Touch panel is designed to be operated with your fingertip. Do not apply excessive force on the touch panel or use sharp objects (nail, ball point pen, pin, etc.).
- Touching the touch panel may not work in the following cases. Note that it may cause malfunction.
    - Operation with gloved hands
    - Operation with tip of fingernail
    - Operation with a foreign object on the display
    - Operation with protective sheet or seal on the display
    - Operation with the touch panel wet
    - Operation with finger wet by sweat or water
    - Operation under water

## ❖ Touch and push

Touch lightly and push, then release the finger.  
Operation is performed at the instant of pushing.

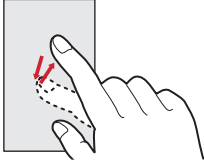

- For some applications, touch and long-push on the screen.
- Lightly touch the screen to change the color or frame of available icons or menu options by default. When you touch and push it, you can feel vibration on your finger. You can change operations in Rakuraku touch setting.
- When Rakuraku touch setting is disabled, touch the screen lightly and release the finger (touch). Operation can be valid at the instant of releasing the finger from the screen.
- In some applications or when browsing web sites, etc., the following operations may take place in spite of Rakuraku touch setting.
  - Even if Rakuraku touch setting is enabled, touch and push operation is not accepted
  - Even if Rakuraku touch setting is enabled, the terminal does not vibrate
  - Touching and pushing does not change color and frame
  - When an icon or menu option is touched and pushed, its color or frame does not change but the terminal vibrates
- Tapping free area other than displayed screen may be cancel operation.


## ❖ Slide (Swipe)/Drag/Pan

**Slide (Swipe)** : Touch the screen with your finger and drag to the desired position.

- For some screens, keeping touching the same point for 0.5 seconds or more fixes the scroll operation by slide operation. Release your finger from the screen to cancel the fix status.

**Drag** : Touch an item etc. on the screen and move it to the desired position.


**Pan** : Drag the screen in some direction to view the desired part.

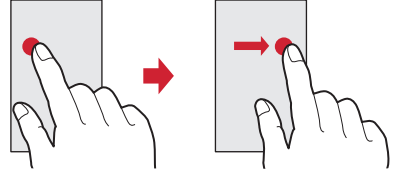

Example : Drag


## ❖ Pinch

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

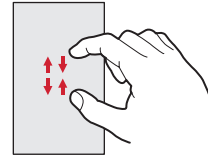

## ❖ Flick

Touch the screen and sweep the finger quickly.

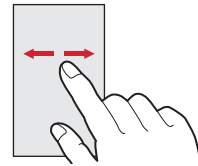

## ◆ Switching the portrait/landscape view

The terminal supports a motion sensor that senses orientation or motion of the terminal. You can switch screen view by tilting the terminal vertically or horizontally.

- Even when you change the orientation of the terminal, the screen may not change depending on the screen displayed.

## Initial settings

For the first time you turn the power ON, a screen for preparation before using the terminal (initial settings) appears.

- The settings can be changed later.
- If you turn the power OFF with some settings not made in the initial settings, unset items appear again when you turn the power ON next time.
- If you turn on the power without docomo nano UIM card inserted, "日付と時刻 (Day & time)" setting appears. The initial setting screen for DOCOMO services does not appear.

**1** On the "初期設定 (Initial settings)" screen, [次へ (Next)]

**2** Following the onscreen instructions, set **Text-to-speech ▶ Setting my body ▶ Security code ▶ One-touch buzzer**

**音声読み上げ設定 (Text-to-speech)** : Set whether to enable Text-to-speech function which lets the terminal read information on the screen or operation.

**自分から設定 (Setting my body)** : Set basic information for **自分から設定 (Setting my body)**.

**暗証番号 (Security code)** : Set security code for using the security lock.

- By default, "0000" is set. To change, enter "0000" on the security code entry screen, then enter a new security code.

**ワンタッチブザー (One-touch buzzer)** : Set whether to enable one-touch buzzer.

**3** On the "ソフトウェア更新 (software update)" screen, [次へ (Next)]

**4** Follow the onscreen instructions to make **initial settings for DOCOMO services**

**アプリ一括インストール (Install apps all at once)** : Install applications for subscribed DOCOMO services all at once.

**おサイフケータイの利用 (Use Osaifu-Keitai)** : Make settings for using Osaifu-Keitai.

**ドコモアプリパスワードの設定 (Set docomo apps password)** : Set a password for DOCOMO applications.

- By default, "0000" is set for docomo apps password.

**位置提供設定 (Location information setting)** : Set location information function settings.


## Home screen

Home screen is a start screen to use applications. The terminal has two types home screens; "標準メニュー (Standard menu)" and "シンプルメニュー (Simple menu)".

- To switch the home screen, operate from "メニュー切替 (Switch menu)" in the Settings menu.

### ◆ Learning the Home screen (標準 (Standard))

On the Home screen in "標準メニュー (Standard menu)", slide the screen up and down.

- Press  key to return to the top position of the Home screen.



**① Status area → p.22**

Status icons, notification icons and date & time are displayed. They are displayed at the bottom of the top screen.

- Touch and push the status area on the Home screen, the notification panel (→ p.22) appears.

## ② Incoming notification

Appears when missed calls, phone memo, received mail, etc. They are displayed at the bottom of the top screen.

## ③ Basic applications

Activate frequently-used application directly from here.

## ④ Applications by category

Display a list of applications other than basic applications to activate.

## ⑤ i チャンネル (i-channel)

A widget of information delivery service "i チャンネル (i-channel)". It does not appear if you do not subscribe i-channel.

## ⑥ One-touch dial

Register parties you contact frequently to make a phone call or create mail easily.

## ⑦ 自分の電話番号 (Own phone number)

You can check your own phone number.

## ⑧ らくらくホンセンター (Rakuraku phone center)

Call to Rakuraku phone center.

## ⑨ 使いかたガイド (guide)

Activate Guide.

## ✓INFORMATION

- You can change the settings of i-channel or one-touch dial to be displayed/not to be displayed.

## ◆ Learning the Standby screen [シンプル (Simple)]

On the "シンプルメニュー (Simple menu)" Standby screen (Home screen), you can operate from menu items from the Standby screen just like the Standby screen of existing Rakuraku phone.

- In Simple menu, Home screen is called "Standby screen".



## ① Status bar→p.21

Status icons, notification icons appear.

- Touch and push the status bar on the Standby screen to display notification panel.→p.22

## ② Incoming notification→p.23

Appears when missed calls, received mail, etc. Touch and push to check the notification. They are displayed at the bottom of the top screen.

## ③ Help

See 使いかたガイド or call to Rakuraku phone center.

## ④ i チャンネル (i-channel)

A widget of information delivery service "i チャンネル (i-channel)". It does not appear if you do not subscribe i-channel.

## ⑤ One-touch dial

Register parties you contact frequently to make a phone call or create mail easily.

## ⑥ Phone/Menu/Mail activating icons

Touch and push to display "電話帳・伝言メモ・音声メモを使う (Use phonebook/Phone memo/Voice memo)" menu of the Menu list to operate.

## ⑦ Menu icons

Touch and push to display Menu list.

## ⑧ Mail menu icon

Touch and push to display "メールを使う (Use Mail)" menu of the Menu list to operate.

## ✓INFORMATION

 
- You can change the settings of Help, i-channel, one-touch dial and clock to be displayed/not to be displayed.

## Home screen/Icons

## ◆ Learning the status bar

On the status bar, status icons which indicate current status of the terminal and notification icons which shows notifications from the terminal are displayed.

- The status bar is displayed on the Simple menu screens and screens when applications or functions are activated in the Standard menu.
- For some applications, the status bar may not appear.



## ■ Main status icons

🔋\*: Battery level 80-100% (enough)

🔋\*: Battery level 31-79%

- Indicator (green area) changes according to the battery level of from 31 to 79%.

🔋\*: Battery level 16-30% (low)

🔋\*: Battery level 5-15% (nearly empty)

🔋\*: Battery level 0-4% (charge battery)

🔋\*: Battery level (charging)

📶\*: Signal strength

📶外\*: Out of service area


- : Roaming
  - : Communicating in LTE/LTE available
  - : Communicating in 3G/3G available
  - : Communicating in GSM/GSM available
  - : Airplane mode
  - : Manner mode
  - : Public mode (Drive mode)
  - : Osaifu-Keitai lock is set
  - : New mail (sp-mode mail, MessageR, SMS)
  - : New mail (PC mail)
  - : Missed call
  - : Message in Voice mail Service
  - : Phone memo ON
  - : Unread Phone memo exists
  - : Wi-Fi is connected.
  - : Bluetooth function is ON
  - : Bluetooth device is connected
  - : Speaker phone is on
  - : Ringtone volume 0
  - : Enable vibrate for reception
  - : Ringtone off and enable vibrate for reception
- \* Icons are also displayed in the status area on the Home screen.

## ■ Main notification icons

- : New Area Mail
  - : Sending SMS is failed
  - : Wi-Fi is on, and Wi-Fi network is available
  - : Calling
  - : Call on hold
  - : Uploading data completed/Downloading data is complete
  - : Error message exists
  - : Positioning with GPS
  - : Earphone is connected (terminal microphone input)
  - : Earphone is connected (earphone microphone input)
  - : Receiving 1Seg
  - : Alarm is set
  - : Screenshot image is saved
  - : Koe-no-Takuhaibin (message received, playback completion notification)
  - : Software update available/completed/unable to continue
  - : Omakase Lock is set
  - : Available memory on the terminal is low
  - : USB is connected (appears only in the status area)
- \* Icons are also displayed in the status area on the Home screen.

## ◆ Learning Status area (標準 (Standard))

Status area appears at the bottom of the Home screen and top screen in the Standard menu. Status icons to be displayed on the status bar and a part of the notification icons.

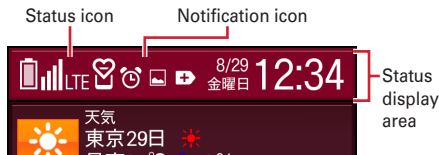

- The same icons on the status bar are displayed. Some icons may not be displayed or may be displayed highlighted.
- Up to 2 notification icons are displayed in the status area. When 3 or more notification icons exist, (Hidden icons) appears.
- Touch and push the status area to display notification panel. The details of notification icons can be checked on the notification panel.

## ◆ Notification panel

Display the notification panel to set [簡単モード切替 (Easy mode switch)] or check the details of notification icons.

### 1 Touch and push the status area on the Home screen



- Touch and push each notification to check the detail of the notification.
  - Touch and push [通知を消去 (Clear notification)] to clear the notifications. [通知を消去 (Clear notification)] may not be displayed depending on the content of the notification.
  - When all the notifications are not displayed, scroll the screen.
  - Tap [閉じる (Close)] to close the notification window.
- シンプル** : Touch and push the status bar on the Standby screen



## ✓INFORMATION

- Even if you touch and push the status area on the top screen or status bar other than one on the Standby screen, the notification panel does not appear.

## ◆ Incoming notification

Only when there are missed calls or incoming mails, incoming notification appears on the Home screen, the Standby screen, or the top screen. You can check the details of notifications from the incoming notifications on the Home screen and the Standby screen.

- Missed calls, incoming calls, incoming mails, incoming SMS, phone memos and voicemail messages, incoming notifications from Rakuraku community (comments for posted messages, friend requests etc.) are displayed as incoming notifications.

### 1 On the Home screen, touch and push an incoming notification

A related application activates.

**シンプル** : Touch and push the incoming notification on the Standby screen

### ■ When different types of incoming notifications exist

[新着あり (New arrival)] appears. Touch and push the notification to display a list of incoming notifications. Touch and push each notification to activate a related application.

Press new arrival notification



# Calling

## Making a call/video call

Enter a phone number of the other party to make a call/video call. You can also make a call/video call from the phonebook.


### ◆ Making a call/video call [標準 (Standard)]

#### 1 On the Home screen, [電話 / 電話帳 (Phone/ Phonebook)]

The dialpad screen appears.

- When the call history screen is displayed, touch and push [ダイヤル (Dial)].


#### 2 Enter a phone number

- To correct a wrong number, touch and push .
- Touch and push [メニュー (Menu)] to register a phonebook entry, show/hide caller ID, make an international call.

#### 3 [電話をかける (Call)]

**Making a video call :** [メニュー (Menu)]▲[ビデオ コールをかける (Make a video call)]

#### 4 When a call is ended, [電話を切る (End call)]

- Alternatively, Press  key, then touch and push [はい (Yes)] to end a call.

### ◆ Making a call/video call from the phonebook

#### 1 On the Home screen, [電話 / 電話帳 (Phone/ Phonebook)]▲[電話帳 (Phonebook)]▲[電話をかける (Call)]

 
**Making a video call :** [ビデオコールをかける (Make a video call)]

### ◆ Making a call/video call [シンプル (Simple)]

#### 1 On the Standby screen, [電話 (Phone)]▲[電話をかける (Call)]

The dialpad screen appears.

#### 2 Enter a phone number


- To correct a wrong number, touch and push .

- Touch and push [メニュー (Menu)] to register/add a phonebook entry, show/hide caller ID, make an international call.

#### 3 [電話をかける (Call)]

**Making a video call :** [メニュー (Menu)]▲[ビデオ コールをかける (Make a video call)]

#### 4 When a call is ended, [電話を切る (End call)]

- Alternatively, Press  key, then touch and push [はい (Yes)] to end a call.

### ◆ Making a call/video call from the phonebook

#### 1 On the Standby screen, [電話 (Phone)]▲[電話帳の内容を見る (View phonebook entries)]▲ Select a phonebook entry▲[電話をかける (Call)]

**Making a video call :** [メニュー (Menu)]▲[ビデオ コールをかける (Make a video call)]

### ◆ International call (WORLD CALL)

Enter "+" to make an international call. Touch and hold "0" to enter "+".

- For details on WORLD CALL, contact "総合お問い合わせ先 (General Inquiries)" on the last page of this manual.

#### 1 On the Home screen, [電話 / 電話帳 (Phone/ Phonebook)]

**シンプル :** On the Standby screen, [電話 (Phone)]▲[電話をかける (Call)]

#### 2 + (Touch and hold "0")▲Enter "Country code-Area code (City code) omitted prefix 0" and phone number

#### 3 [電話をかける (Call)]

- If [自動変換機能 (Automatic conversion function)] of [国際ダイヤルアシスト (International dial assist)] is ON, "International dial assist" screen appears when dialing. Touch and push [元の番号で発信 (Original number)] or [変換後の番号で発信 (Converted number)].
- In some countries and areas such as Italy, entering "0" is required.
- To enter "+ Country code" by selecting the country list, enter the area code (city code) and a phone number, then [メニュー (Menu)]▲[国際電話をかける (Make an international call)]▲Select a country.



## Receiving a call/video call

Answer an incoming call/video call. You can reject a call, hold answering, or record a phone memo (only for voice call) while a call is incoming.

- Video calls cannot be answered as voice calls. To switch to voice call during a video call, on the video call screen, [メニュー (Menu)]▲Touch and push [音声通話に切替 (Switch to voice call)].

### ◆ Receiving a call/video call (標準 (Standard))

#### 1 A call/video call is received.

- To stop ringtone or vibration, touch and push [着信音を消す (Mute ringtone)], or press  or  key.

#### 2 [電話に出る (Answer a call)]

**Receiving a video call** : [映像で通話する (Call with image)].

- When Rakuraku touch is OFF, slide the incoming call screen up, then touch [電話に出る (Answer a call)]/[映像で通話する (Call with image)].

**Declining a call** : [メニュー (Menu)]▲[拒否 (Decline)]



**Recording a phone memo** : [メニュー (Menu)]▲[伝言メモ (Phone memo)]

- Available only for voice calls.

#### 3 When a call is ended, [電話を切る (End call)]

### ◆ Receiving a call/video call (シンプル (Simple))

#### 1 A call/video call is received.

- To stop ringtone or vibration, press  or  key.

#### 2 [電話に出る (Answer a call)]

**Receiving a video call** : [映像で通話する (Call with image)].

- When Rakuraku touch is OFF, slide the incoming call screen up, then touch [電話に出る (Answer a call)]/[映像で通話する (Call with image)].

**Recording a phone memo** : [メニュー (Menu)]▲[伝言メモ (Phone memo)]

- Available only for voice calls.

**Declining a call** : [メニュー (Menu)]▲[着信拒否 (Decline a call)]

#### 3 When a call is ended, [電話を切る (End call)]

## One-touch dial

Register frequently dialed parties to the one-touch dial to call or send email easily.

### ◆ Registering to the one touch dial

#### 標準

#### 1 On the Home screen, touch and push any key from to

#### 2 [新規電話帳作成して登録 (Add a new phonebook entry)]▲Set each item▲Check the phone number/email address, then [OK]

**Registering from the phonebook** : [電話帳から選ぶ (Select from the phonebook)]▲Select a party you want to register▲Check the phone number/email address, then [OK]

#### 3 [アイコンを選択 (Select icon)]/[設定しない (Do not set)]▲[OK]

- If you touch and push [アイコンを選択 (Select icon)], select an icon.

#### シンプル





#### 1 On the Standby screen, touch and push any key of -


 
#### 2 [新規電話帳作成して登録 (Add a new phonebook entry)]▲Set each item▲[OK]

**Registering from the phonebook** : [電話帳から選ぶ (Select from the phonebook)]▲Select a party you want to register▲Check the phone number, then [次へ (Next)]▲Check the email address, then [決定 (OK)]▲[OK]

### ◆ Using the one touch dial


#### 1 On the Home screen, touch and push any key of - , or or

- When you lightly touch a registered key such as  - , or  or  with your finger, the name of registered party appears.

**シンプル** : On the Standby screen, touch and push any key of  - 

## 2 [電話をかける (Call)]/[ビデオコールをかける (Make a video call)]/[メールを送る (Send email)]

- For the standard menu, you can change the registered parties or the icons, whether to show the names when lightly touching the registered keys on the Home screen such as **1** - **9**, or **☎** or **📧**, correct the phonebook entries, or cancel the one-touch dial by touching and pushing [× ニュー (Menu)]. For the simple menu, you can change the registered parties, correct the phonebook, or cancel the one-touch dial by touching and pushing [修正する (Correct)].

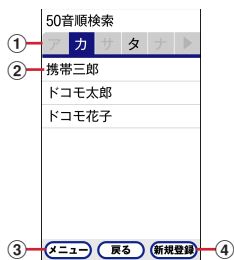


- Index**  
Display the index.
- Name**  
Touch and push to display the detail screen. From the entry detail screen, you can make voice calls or video calls, send email or SMS, correct the contents, set ringtone, send via infrared communication, etc.
- Menu**  
Change the search method, log into cloud, make overseas use settings, etc.
- New entry**  
Add new phonebook entry.

## Phonebook

### ◆ Phonebook [標準 (Standard)]

#### 1 On the Home screen, [電話 / 電話帳 (Phone/ Phonebook)]▲[電話帳 (Phonebook)]

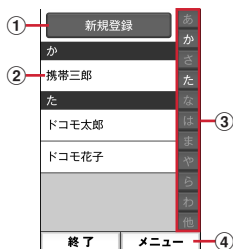

- New entry**  
Add new phonebook entry.
- Name**  
Touch and push to display the entry detail. From the entry detail screen, you can make voice calls or video calls, use send email or SMS, correct the contents, set ringtone, send via infrared communication, etc.
- Index**  
Display the index.
- Menu**  
Display groups, search phonebook entry, log into cloud, etc.

### ◆ Phonebook [シンプル (Simple)]

#### 1 On the Standby screen, [電話 (Phone)]▲[電話帳の内容を見る (View phonebook entries)]

### ◆ Registering a phonebook entry [標準 (Standard)]

Add phonebook entry.

- On the Home screen, [電話 / 電話帳 (Phone/ Phonebook)]▲[電話帳 (Phonebook)]**
- [新規登録 (New entry)]**
- Enter a name▲[次へ (Next)]**
- Enter a reading▲[次へ (Next)]**
  - The reading corresponding to entered name is entered in advance. If it is not necessary to correct, touch and push [次へ (Next)].
- Enter a phone number▲[次へ (Next)]**
- Enter an email address▲[次へ (Next)]**
- [この内容で登録する (Register this content)]▲[OK]**
  - To register memo, address, etc., touch and push [追加 (Add)] on each item.

### ◆ Phonebook [シンプル (Simple)]

- On the Standby screen, [電話 (Phone)]**
- [電話帳に登録する (Register to the phonebook)]▲Enter a name▲[次へ (Next)]**

### 3 Enter a reading ▲[次へ (Next)]

- The reading corresponding to entered name is entered in advance. If it is not necessary to correct, touch and push [次へ (Next)].

### 4 Select the entry method ▲Enter a phone number ▲[次へ (Next)]

- You can select from direct input or call history for entry method.

### 5 Select the entry method ▲Enter an email address ▲[次へ (Next)]

### 6 [入力する (Enter)] ▲Enter a postal code and the address ▲[次へ (Next)]

### 7 [入力する (Enter)] ▲Enter a memo ▲[次へ (Next)]

### 8 [入力する (Enter)] ▲Select the entry method ▲Enter a birthday ▲[OK]

- You can select from 明治 (Meiji), 大正 (Taisho), 昭和 (Showa), 平成 (Heisei), 西暦 (Christian year) for the entry method.
- If you register a group, the group settings screen appears.
- If you enter with Christian year, [次へ (Next)] appears when a group is registered, or [決定 (Done)] appears when a group is not registered.

### 9 [終了する (End)]

**Registering the one-touch-dial :** [登録する (Register)] ▲Select an unregistered one-touch dial ▲[決定 (Done)] ▲[OK]

- Registered phonebook entry is registered to the one-touch dial.

## ◆ Editing the phonebook entries

Correct contents of registered phonebook entries.

### 標準

### 1 Select a phonebook entry you want to edit ▲[修正する (Correct)]

### 2 Set each item

- You can edit a name, phonebook, etc.

### 3 [この内容で登録する (Register this content)] ▲[OK]

### サンプル

### 1 Select a phonebook entry you want to edit ▲[メニュー (Menu)] ▲[修正する (Correct)]

### 2 Set each item

- You can edit a name, phonebook, etc.

### 3 [上書きする (Overwrite)]/[新規登録する (Register new entry)] ▲[終了する (End)]

**Registering the one-touch-dial :** [登録する (Register)] ▲Select an unregistered one-touch dial

- Edited phonebook entry is registered to the one-touch dial.

## ◆ Deleting the phonebook entries

Delete the registered phonebook entries.

### 1 Select a phonebook entry you want to delete

### 2 [メニュー (Menu)] ▲[削除する (Delete)] ▲[削除する (Delete)] ▲[OK]

**サンプル :** [メニュー (Menu)] ▲[電話帳から削除 (Delete from the phonebook)] ▲[削除する (Delete)] ▲[OK]

## ◆ Searching the phonebook entries

Search the phonebook entries.

### 標準

### 1 In the phonebook list, [メニュー (Menu)] ▲[検索する (Search)]

### 2 Enter a search word ▲[検索する (Search)]

### サンプル

### 1 On the Standby screen, [電話 (Phone)] ▲[電話帳を検索する (Search the phonebook)]

- For search by Japanese alphabet, [メニュー (Menu)] ▲Touch and push [検索方法を変更 (Change search method)] to change the search method. If you select the search by group or search by text, the search method can be changed by touching and pushing [検索方法 (Search method)]. You can select the search method from 50 音順検索 (Search by Japanese alphabet), グループ検索 (Search by group), 文字列検索 (Search by text).
- To use temporary selected search method, on the selection screen for search method, touch and push the item name of the search method. Touch and push ○ for the search method item to turn to ● to preferentially search by the search method when you operate from the Standby screen, [電話 (Phone)] ▲[電話帳を検索する (Search the phonebook)].

## Specific Absorption Rate (SAR) of Mobile Phones

**This model F-04J mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.**

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves<sup>\*1</sup> and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near the head is 0.783 W/kg<sup>\*2</sup> and when worn on the body is 0.426 W/kg<sup>\*3</sup>.

There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device. This mobile phone can be used in positions other than against your head. Please keep the mobile phone farther than 1.5 cm away from your body by using such as a carrying case or a wearable accessory without including any metals. This mobile phone satisfies the technical regulations and international guidelines.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the WHO website if you would like more detailed information.

[http://www.who.int/docstore/peh-emf/publications/facts\\_press/fact\\_english.htm](http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm)

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website:

<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website: <http://www.arib-emf.org/01denpa/denpa02-02.html> (in Japanese only)

NTT DOCOMO, INC. Website:

<https://www.nttdocomo.co.jp/english/product/sar/>

FUJITSU LIMITED Website:

<http://www.fmworld.net/product/phone/sar/> (in Japanese only)

\*1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).

\*2 Including other radio systems that can be simultaneously used with LTE/FOMA.

\*3 Including other radio systems that can be simultaneously used with LTE/FOMA.

## ◆ Declaration of Conformity

Trade Mark: Fujitsu

Model Name: F-04J

Hereby, Fujitsu Connected Technologies Ltd. declares that the RE product of "F-04J" is in compliance with RED 2014/53/EU.

The full text of the EU DoC is available at the following internet address:

<https://www.fmworld.net/product/phone/doc/>

This mobile phone complies with the EU requirements for exposure to radio waves. Your mobile phone is a radio transmitter, designed and manufactured not to exceed the SAR<sup>\*1</sup> limits<sup>\*2</sup> for exposure to radio-frequency (RF) energy, which SAR<sup>\*1</sup> value, when tested for compliance against the standard was 0.704 W/kg<sup>\*3</sup> for HEAD and 1.271 W/kg<sup>\*3</sup> for BODY. While there may be differences between the SAR<sup>\*1</sup> levels of various phones and at various positions, they all meet<sup>\*4</sup> the EU requirements for RF exposure.

\*1 The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

\*2 The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

\*3 Including other radio systems that can be simultaneously used with cellular radio wave.

\*4 Tests for SAR have been conducted using standard operation positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Radio type / Description		Transmitter Frequency	Maximum Output Power
GSM	GSM900	880-915MHz	33.5dBm
	DCS1800	1710-1785MHz	30.5dBm
UMTS	FDD I	1920-1980MHz	24.5dBm
LTE	FDD 1	1920-1980MHz	23.5dBm
	FDD 3	1710-1785MHz	23.5dBm
WLAN 2.4GHz	IEEE 802.11b	2400-2483.5MHz	13.5dBm
	IEEE 802.11g	2400-2483.5MHz	13dBm
	IEEE 802.11n	2400-2483.5MHz	13dBm
WLAN 5GHz	IEEE 802.11a	5150-5350MHz	13dBm
		5470-5725MHz	12.5dBm
	IEEE 802.11n	5150-5350MHz	13dBm
		5470-5725MHz	12.5dBm
	IEEE 802.11ac	5150-5350MHz	13dBm
		5470-5725MHz	12.5dBm
Bluetooth	Bluetooth	2400-2483.5MHz	10dBm
RFID	NFC	13.56MHz	10dB $\mu$ A/m

The manufacturer of this product is Fujitsu Connected Technologies Ltd. with its registered place of business at 1-1, Kamikodanaka 4-chome, Nakahara-ku, Kawasaki, Kanagawa 211-8588, Japan.

The Authorized Representative for RED is Fujitsu Services Ltd. with its registered place of business at 22 Baker Street, London, U.K, W1U3BW.

## ◆ Federal Communications Commission (FCC) Notice

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
  - ① this device may not cause harmful interference, and
  - ② this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made in or to the radio phone, not expressly approved by the manufacturer, will void the user's authority to operate the equipment.
- The device complies with 15.205 of the FCC Rules.

## ◆ FCC RF Exposure Information

This model phone meets the U.S. Government's requirements for exposure to radio waves. This model phone contains a radio transmitter and receiver. This model phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy as set by the FCC of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions as accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output level of the phone.

Before a phone model is available for sale to the public, it must be tested and certified to prove to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure.

The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC, when tested for use at the ear, is 0.529 W/kg<sup>\*</sup>, and when worn on the body, is 0.984 W/kg<sup>\*</sup>. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirements.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Equipment Authorization Search section at <http://www.fcc.gov/oet/ea/fccid/> (please search on FCC ID VQK-F04J).

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines. Please use an accessory designated for this product or an accessory which contains no metal and which positions the handset a minimum of 1.0 cm from the body.

- In the United States, the SAR limit for wireless mobile phones used by the general public is 1.6 Watts/kg (W/kg), averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

\* Including other radio systems that can be simultaneously used with cellular radio wave. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ◆ Important Safety Information

### AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers flight mode or similar feature consult airline staff as to whether it can be used on board.

### DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

### HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

## INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pace maker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and does not carry it in a breast pocket.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### For other Medical Devices :

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

### Warning

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

<Prevention of Hearing Loss>

Warning statement requirement under EN 60950-1:A12.



Warning: To prevent possible hearing damage, do not listen to high volume levels for long periods.



## Export Administration Regulations

This product and its accessories may be under coverage of the Export Administration Regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations). And, they are also under coverage of Export Administration Regulations of the U.S. When exporting and reexporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry of Japan or US Department of Commerce.

## Intellectual Property Right

### ◆ Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited.

Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use.

Avoid taking pictures of others with the terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites etc., because they may infringe on portrait rights.


### ◆ Trademarks

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "i-mode", "i-αpli", "i-motion", "Deco-mail", "ToruCa", "mopera", "mopera U", "WORLD CALL", "iD", "WORLD WING" and "sp-mode", are trademarks or registered trademarks of NTT DOCOMO, INC.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- This product contains NetFront Browser and NetFront Document Viewer of ACCESS CO., LTD. ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

Copyright© 2014 ACCESS CO., LTD. All rights reserved.

ACCESS™ NetFront™

- "ATOK" is a registered trademark of JustSystems Corporation in Japan and other countries. "ATOK" is a copyrighted work of JustSystems Corporation and other rights are those of JustSystems Corporation and respective owners.
-  is a registered trademark of FeliCa Networks, Inc.
- FeliCa is a registered trademark of Sony Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- StationMobile® is trademark of PIXELA CORPORATION.
- microSDHC Logo and microSDXC logo are trademarks of SD-3C, LLC.



StationMobile®



## ◆ Others

- Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Vista<sup>®</sup> and Hotmail<sup>®</sup> are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.
  - Windows 8 indicates the Microsoft<sup>®</sup> Windows<sup>®</sup> 8 operating system and Microsoft<sup>®</sup> Windows<sup>®</sup> 8 Pro operating system.
  - Windows 7 stands for Microsoft<sup>®</sup> Windows<sup>®</sup> 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).
  - Windows Vista stands for Windows Vista<sup>®</sup> (Home Basic, Home Premium, Business, Enterprise and Ultimate).
  - Windows XP indicates the Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional operating system or Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition operating system.
- Google, Android, Google Play and Gmail are registered trademarks of Google Inc.
- The Bluetooth<sup>®</sup> smart ready word mark and logos are owned by the Bluetooth SIG, INC. and any use of such marks by NTT DOCOMO, INC. is under license. Other trademarks and names are those of their respective owners.
- Fonts installed to the terminal are provided by Morisawa Inc. and the copyrights of the font data belong to them. "丸ゴシック体" and "明朝体" are registered trademarks or trademark of the company.
- Wi-Fi, logo of Wi-Fi, Wi-Fi Alliance, WMM, Wi-Fi CERTIFIED, log of Wi-Fi CERTIFIED, WPA, WPA2, Wi-Fi Protected Setup are trademarks or registered trademarks of Wi-Fi Alliance.
- AOSS™ is a trademark of BUFFALO INC.
- OBEX™ is a trademark of Infrared Data Association<sup>®</sup>.
- Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.



- Part of this product includes module developed by Independent JPEG Group.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License. The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below.
  - Recording moving pictures and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
  - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
  - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA  
For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.
- This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>
- This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide VC-1 video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>

- The following dictionary data is installed in the built-in storage.

<Iwanami Shoten>

広辞苑 第六版 DVD-ROM版 (内蔵版) (新村出編)

<Sanseido>

デイリーコンサイス和英辞典 (内蔵版) (三省堂編修所編)

デイリーコンサイス英和辞典 (内蔵版) (三省堂編修所編)

## ◆ Open source software

- Software licensed under Apache License V2.0 and necessarily modified by us is used for this product.
- This product contains open source software complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For details on the software license, refer to the following.

**標準** : From the Home screen, [設定 (Settings)] ▶ [その他 (More)] ▶ [端末情報 (About phone)] ▶ [法的情報 (Legal information)] ▶ [オープンソースライセンス (Open source licenses)]

**シンプル** : On the stand-by screen, [メニュー (Menu)] ▶ [設定を行う (Make settings)] ▶ [その他の設定を行う (Make other settings)] ▶ [端末情報を見る (View phone information)] ▶ [法的情報を確認する (Check legal information)] ▶ [オープンソースライセンス (Open source licenses)]

For software source codes disclosed based on the open source licenses, refer to the following website.

For details, refer to the website below.

<http://spf.fworld.net/fujitsu/c/develop/sp/android/>

## SIM unlock

**This terminal supports SIM unlock. If you release SIM lock, you can use SIM by a carrier other than NTT DOCOMO.**

- The SIM unlock service is provided at a docomo Shop.
- A SIM unlock charge is separately required.
- With UIM other than by DOCOMO, using the terminal in LTE system is unavailable. And available services and functions will be limited. DOCOMO is not liable to any failures or malfunctions.
- For details of SIM unlock, refer to NTT DOCOMO website.

**General Inquiries**  
**<Rakuraku phone center>**

■ Mobile phone/land-line phone (In Japanese only)

 **0120-6969-37**

\* Unavailable from part of IP phones.

**(Business hours : 9:00 a.m. to 8:00 p.m. (open all year round))**


● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website.

NTT DOCOMO website <https://www.nttdocomo.co.jp/english/>

**Repairs**

■ From DOCOMO mobile phones (In Japanese only)

 **(No prefix) 113 (toll free)**

\* Unavailable from land-line phones, etc.

■ From land-line phones (In Japanese only)

 **0120-800-000 (toll free)**

\* Unavailable from part of IP phones.

**(Business hours : 24 hours (open all year round))**

**For loss, theft, malfunction, and inquiries while overseas (24-hour reception)**

● From DOCOMO mobile phones

**International call access code  
for the country you stay**

**-81-3-6832-6600\* (toll free)**

\* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use F-04J, you should dial the number +81-3-6832-6600 (to enter '+', Touch and long-push the '0' key).

● From land-line phones <Universal number>

**Universal number  
international prefix**

**-8000120-0151\***

\* You might be charged a domestic call fee according to the call rate for the country you stay.

※ For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

● If you lose your terminal or have it stolen, immediately take the steps necessary for suspending the use of the terminal.

● If the terminal you purchased is damaged, bring your terminal to a repair counter specified by DOCOMO after returning to Japan.



**docomo "Anshin" Mission**  
**"Safe and secure world for all with mobile"**

Sales: NTT DOCOMO, INC.

Manufacturer: FUJITSU CONNECTED TECHNOLOGIES LIMITED



Li-ion 00

2016.12 (1st Edition)