



F-09C

INSTRUCTION MANUAL '11.5

docomo **PRIME** series

DOCOMO W-CDMA, GSM/GPRS, Wireless LAN System

Thank you for purchasing "docomo PRIME series F-09C" mobile terminal.

Before using F-09C, read this manual to ensure safe use and handling.

About manuals for F-09C

The operations of F-09C are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (in pdf format).

Instruction manual (this manual)

This manual provides information about screens and operations of basic functions.

"使いかたガイド (Guide)" (installed in FOMA terminal)







This guide provides overviews and operations of frequently-used functions. (In Japanese only)
In F-09C Stand-by display, **[MENU]** ▶ **[6]** Tool ▶ **[#]** Guide ▶ Select a search method

"Instruction manual (detailed version)" (in pdf format)

This manual provides detailed information and operations of all the functions. (In Japanese only)
<From a PC> This manual can be downloaded from NTT DOCOMO website.
<http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>
* The URL and contents are subject to change without prior notice.

- In this "F-09C INSTRUCTION MANUAL", "F-09C" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The images used in this manual assume that Kisekai Tool is set to "White" and Color theme setting is set to "White".
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P42) or performing fingerprint authentication.

Basic package

F-09C (including Back Cover F60 and warranty)		Battery Pack F18 	Desktop Holder F33   Desktop Holder F33 is made of recycled ABS from used products.	Instruction manual 	電子辞書データ DVD (Electronic dictionary data DVD) (Sample)  Compatible options ⇒PXX
---	---	--	--	--	--

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

Contents

<ul style="list-style-type: none"> FOMA terminal 2 What you can do with F-09C 3 Part names and functions 4 Usage styles 6 	<ul style="list-style-type: none"> Precautions (Always follow these directions) 7 Handling precautions 16 Waterproof/Dustproof function 21 	Introduction
<ul style="list-style-type: none"> Before Using 26 Screen Explanation 29 Character Entry 34 	<ul style="list-style-type: none"> Sound/Screen Setting 37 Lock/Security 42 	Basic Operation
<ul style="list-style-type: none"> Call Telephone 47 Mail 56 Phonebook 60 		Connect
<ul style="list-style-type: none"> i-mode/Full Browser/Smart Browser 62 i-Channel 64 	<ul style="list-style-type: none"> Map/GPS 65 	Search
<ul style="list-style-type: none"> Camera 67 1Seg 69 Music 71 	<ul style="list-style-type: none"> i-appli 73 i-motion/Movie 74 	Enjoy
<ul style="list-style-type: none"> Osaifu-Keitai 75 i-concier 76 Convenient tools 77 	<ul style="list-style-type: none"> Data Management 81 	More Convenient
<ul style="list-style-type: none"> Support 87 Appendix 94 Index 112 		Others

FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS, Wireless LAN system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Memo, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc., Go Daddy, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

What you can do with F-09C

Waterproofness/Dustproofness 21

Waterproofness of IPX5 and IPX8 and dustproofness of IP5X are provided by firmly closing the external/HDMI connection jack cap and installing the back cover in a locked state.

Quick voice activation 33

Just speaking a keyword of function you want to use activates the function. It is useful when you do not know where is a desired function in the menu or when you want to activate the function immediately.

使いかたガイド (Guide) 33

Without the instruction manual at your hand, you can check readily the operations of function you want to use. By searching from the function list or entering a keyword, you can view the outline or operation for the function and also activate the function. (In Japanese only)

Smart Browser 62

WebKit, adopted by Smartphone etc., enables to view contents on the Internet comfortably by touch operation.

AUTO-GPS 66

The AUTO-GPS function allows for useful services that deliver information about the weather or shops around where you are, or sightseeing information. (In Japanese only) You can also enjoy a game using your location or the distance you moved.

High functionality camera 67

Camera offers approximately 16,3 million pixels (effective pixels) and high functionality such as HDR (High Dynamic Range) synthesis, Art camera function, etc., which enable to shoot 3D still images and Full HD moving pictures. You can also view images on wide-screen by connecting the FOMA terminal to a TV with HDMI cable.

i-concier 76

 
It is a service that Machi-chara (a character on the stand-by display) supports your life like a butler or concierge. It stores your various information (area of residence, memo, schedule, ToruCa, phonebook, etc.) and offers you information that matches contents of Memo or Schedule, your living area or current location, or preferences and interest at the right time. (In Japanese only)

Wi-Fi 79

You can perform Internet connection with connecting the access point for home network or Public wireless LAN service (Client mode), and use the FOMA terminal as access point (Base unit) of Wi-Fi to enjoy a versus game etc. on Wi-Fi device (Sub unit).

Part names and functions

Part names of F-09C and major functions assigned to each part are as follows.

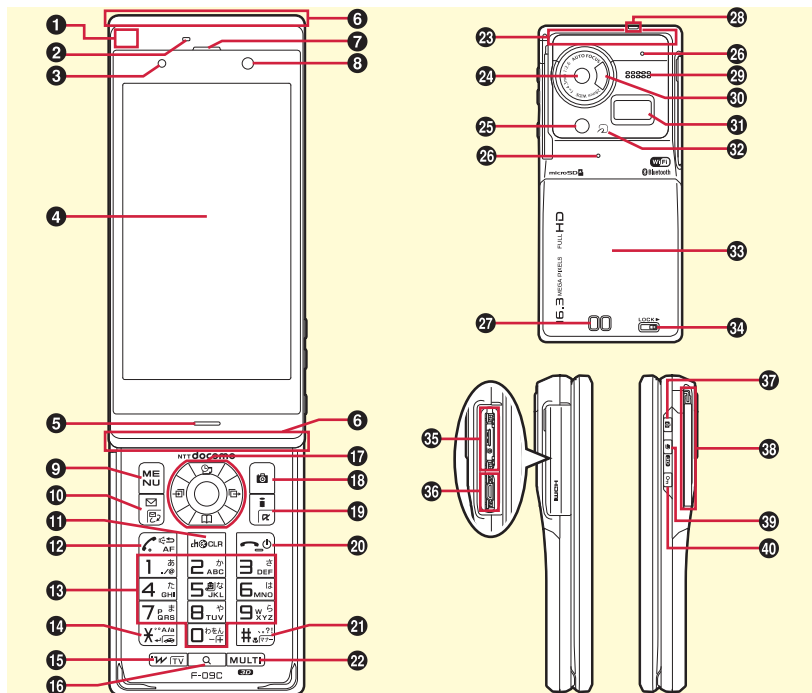

To use the function with *, press the key for 1 second or more.

 
- 1 **GPS antenna is built-in**
- 2 **Temperature/Humidity sensor**
- 3 **Light sensor for sensing the ambient lightness to adjust the brightness of the display**
- 4 **Display (Touch panel)**
- 5 **Microphone for calling and recording**
- 6 **Light for indicating charging**
- 7 **Earpiece**
- 8 **In-camera**
- 9 **[MENU]** Display the menu
- 10 **[✉]** Display the mail menu, switch text input modes or check new mail/message*
- 11 **[CLR]** Display i-Channel or return to the previous screen
- 12 **[☎]** Start voice call, switch to hands-free call or perform quick voice activation*
- 13 **[0] - [9]** Enter phone number or characters, or select menu item
- 14 **[✂]** Enter "*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode)*
- 15 **[iW TV]** Start/Exit i-Widget, or watch 1Seg*
- 16 **[Q]** (Search key) Activate Quick search/i-mode voice search*
- 17 **[Cross]** Multi-cursor key for moving the cursor
 - : Perform an operation.
 - : Display Schedule, or adjust sound volume
 - : Display Phonebook, adjust sound volume or add a phonebook entry*
 - : Display Received calls.
 - : Display Redial or start/cancel IC card lock*
- 18 **[📷]** Start the still camera shooting

- 19 **[iα]** Display iMenu or i-appli folder*
- 20 **[OFF]** Exit a running function, or turn ON/OFF the FOMA terminal by pressing for 2 seconds or more
- 21 **[#]** Enter "#" or punctuation, or start/cancel Silent mode.
- 22 **[MULTI]** Multitask key for starting another function during a call or operation, or switching 3D/2D*
- 23 **FOMA antenna is built-in**
- 24 **Out-camera**
- 25 **Light/Shooting light**
- 26 **Back side microphone for Movie shooting or Voice recorder**
- 27 **Charging jack**
- 28 **Strap opening**
- 29 **Speaker**
- 30 **Infrared data port for infrared communication or infrared remote control function**
- 31 **Fingerprint sensor for registering fingerprint and authentication**
- 32 **[IC mark]** mark for placing over IC card reader for Osaifu-Keitai and iC transmission
- 33 **Back cover**
- 34 **Back cover lever**
- 35 **Jack for charger, earphone, etc.**
- 36 **HDMI jack (type D)**
- 37 **[Stop]** Stop the ring alert, record video during 1Seg watching* or start the still camera shooting*
- 38 **1Seg antenna used for 1Seg watching**
- 39 **[Multi]** Side multi key for starting another function during a call or operation, or switching 3D/2D*

40 Lock key for starting Operation lock or starting/canceling Privacy view*


Connection of Stereo Earphone Set 01 (Optional) for external connection jack

* AC adapter uses a common jack.

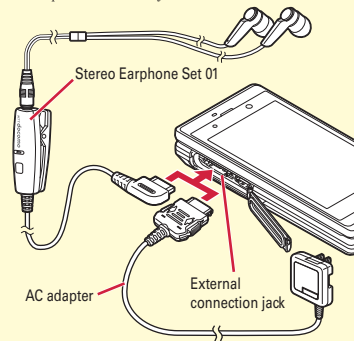


Usage styles

 You can use functions of F-09C with three styles: "closed style (closed state)", "slide style (opened state)", "YOKO-MOTION style (opened state)". In closed style, vertical and horizontal views can be switched according to tilt of the FOMA terminal by the auto rotation in Motion sensor.

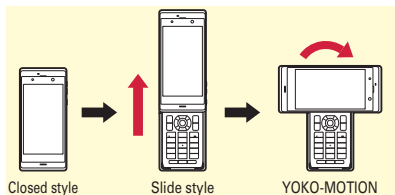

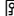


Point



- When you use the slide style or YOKO-MOTION style, do not rotate the display counterclockwise nor more than 90 degrees clockwise.
- The sliding operation of the FOMA terminal may be felt hard, but it is not malfunction. When opening/closing or rotating, hold the display lightly with your hand and move it until it clicks.
- Microphone is below the display. When making a call in YOKO-MOTION style, change the holding hand etc. to get close to the microphone.
- When you carry the FOMA terminal, close the FOMA terminal and activate Operation lock by pressing  to avoid erroneous touch panel operation and save battery consumption. For opening, closing or rotating the FOMA terminal, do not touch the touch panel with your fingers to avoid erroneous operation.





Precautions (Always follow these directions)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that minor injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.

 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter, desktop holder and UIM (common)	8
Handling FOMA terminal	9
Handling battery pack	11
Handling adapter and desktop holder	12
Handling UIM	13
Handling mobile phones near electronic medical equipment.....	13

Handling FOMA terminal, battery pack, adapter, desktop holder and UIM (common)

DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause fire, burns or injuries.



Don't

Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.

May cause fire, burns, injuries, electric shock.



No disassembly

Do not disassemble or remodel the equipment.

May cause fire, burns, injuries, electric shock.



No liquids

Do not let the terminal get wet with water, drinking water, urine of pet animals, etc.

May cause fire, burns, injuries, electric shock.
For waterproofness, refer to ⇒P21



Do

Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.

May cause fire, burns, injuries, electric shock.

WARNING



Don't

Do not throw the equipment or give hard shock to it.

May cause fire, burns, injuries, electric shock.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May cause fire, burns, injuries, electric shock.



Don't

Do not cover or wrap the terminal with a blanket, etc while using or charging.

May cause fire or burns.



Do

Turn FOMA terminal OFF and stop charging before entering a place such as a gas station where flammable gases are generated.

The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

- Remove the power plug from the wall outlet or cigarette lighter socket.
- Turn FOMA terminal OFF.
- Remove the battery pack from FOMA terminal.

Failure to do so may cause fire, burns, injuries, electric shock.

CAUTION



Don't

Do not leave the equipment on unstable or sloping surfaces.

May cause injuries.



Don't

Do not store the equipment in extremely humid, dusty or hot areas.

May cause fire, burns, electric shock.