

A black and red camouflage-patterned Xbox controller is shown from a top-down perspective. The controller features two analog sticks with red bases, a D-pad, and four face buttons (X, Y, B, A) with red symbols. The central buttons are labeled "START", "SELECT", "TURBO", and "JUMBO". A white rectangular label is positioned at the bottom center of the controller, pointing to the USB port. The label contains the text "FCC ID" and "Label Location".

FCC ID  
Label Location