USER MANUAL

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT

Products introduction

Set Up -

- Insert the device to car cigar socket power supply (12V DC power).
 you will see the screen as shown channel in LED display.
- 2. Tune your FM radio to one of pre-set FM frequencies used by the Player.
- Press the Button"+"or"-" to set the Player's broadcast frequency to match the frequency you have set on your radio.

Pre-set Broadcast Frequency 199 channel

88.1


SD Memory Card & USB Flash Memory —

- 1. Follow the instructions in the "Set Up" section of this manual.
- 2. Insert the SD Memory card into the SD card slot of the Player.
- Press the "►I" button once to go to the previous file. Press and hold the button to decrease the volume.

SD Card

Products introduction

Features & Functions

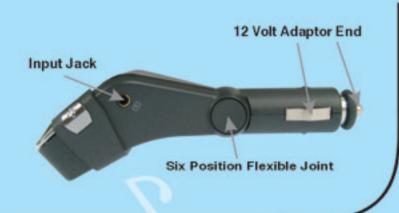

Press the button

to derease the broadcast

Previous Track & Volume Decrease (USB Flash Memory & SD Card) Press this button once to return to ___ the previous file. Press and hold to decrease the volume.

Play/Pause

(USB Flash Memory & SD Card)
Press this button once to start playing an MP3 file.
Press it again to pause.

Press the button

to increase the broadcast frequency

LED Display


Next Track & Volume Increase (USB Flash Memory & SD Card) Press this button once to advance to the next file. Press and hold to increase the volume.



Extra .5 Amp Fuse



Supplied Cable

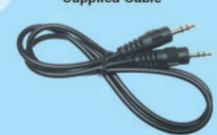

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.