

A1285/A1286



Use manual

## TABLE OF CONTENTS

Important safety instruction.....	1
Product description.....	2
Connect cable.....	3
The IR Remote Control.....	4
Touch menu.....	5
Setup menu.....	10
IR headphone use manual.....	20
Preparation before operation.....	21
Specifications.....	22
Compatible disk types.....	23
How to deal with disc.....	24



*Note:*

*The design and specifications of this manual may not match with the real, final interpretation of all the Division.*

## How to deal with disc

 
### How to hold disc

Do not touch the unlabeled side of the disc..

### When there are stains on face of disc

Wipe gently with a wet cloth and then with dry one.

When a disc is brought in from a cold environment to a hot one, condensation can form on the face of the disc. Wipe down with a soft, smooth, dry cloth before using.

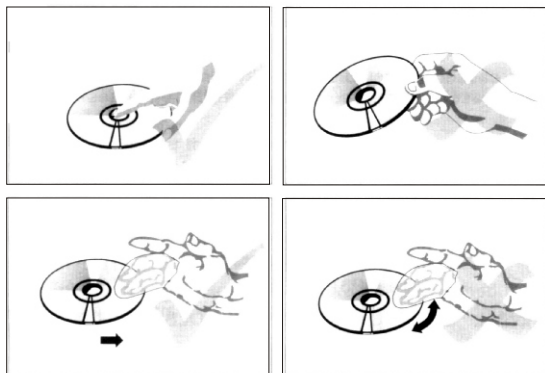

### Attention:

Do not write on the unlabeled side of the disc.

Do not use chemical solutions to clean the DVD disc.

Do not stick labels or glue-based notes on the disc.

Do not use disks with glue residue or damaged labels.

Do not use anti-scratching materials or covers, that were not designed for this machine.

Do not put or store disk in the following environments:

Directly under the sunlight, in moist or dusty environments or beside heating elements.

### Disc loading

- Load one disc with the data side facing upwards and make sure you do not touch the data side with your fingers.



Once the disc is loaded, the unit will automatically start reading the disc and it will take a few seconds to download the disc initial data, thereafter the disc type will be displayed in the left upper corner of the LCD screen and the unit will start playing the disc.

### Dear Customer:

We thank you for purchasing the Multimedia . We wish you many pleasant hours of watching DVD's or listening to your favorite music. Personal Safety has been taken in consideration in the design and manufacturing this product, however any improper use or operation may result in an electrical shock, fire and/or any other hazards. To prevent these hazards it is strongly recommended to read this manual thoroughly and adhere to the following precautions:

## Important Safety Instructions



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### WARNING:

FCC regulations state that any change or modification to the equipment, not expressly approved by maker or its authorized parties, could void user's authority to operate this equipment.

### NOTE

- Please dispose empty batteries according the regulations in your country
- All On Screen Displays (OSD) and Pictures will be based on the English version.
- Design and Specifications may vary in the manual from the actual product in use.

### CAUTION:

The unit employs a laser system.

 
To ensure proper use of this product. Please read this owner's manual carefully and retain for future reference. Should the require maintenance, contact an authorized service location-see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation may be present when the enclosure is opened. Do not stare into beam.


## PRODUCT DESCRIPTION

A1285

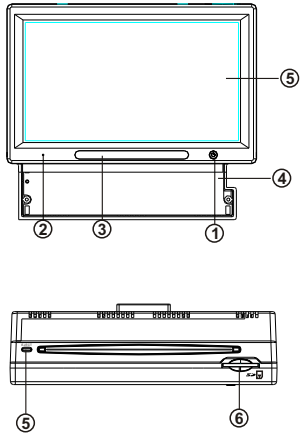

- (1) Power
- (2) Indicator light  
when the machine have electric,  
it as red light,playing it turn off
- (3) (8)Infra-Red Audio transmitter:  
2.3MHz/2.8MHz & 3.2MHz/3.8MHz
- (4) DVD
- (5) LCD screen
- (6)EJECT
- (7)SD Card

 A1286

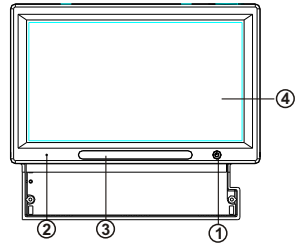

- (1) Power
- (2) Indicator light  
when the machine have electric,  
it as red light,playing it turn off
- (3) (8)Infra-Red Audio transmitter:  
2.3MHz/2.8MHz & 3.2MHz/3.8MHz
- (4) LCD screen

## COMPATIBLE DISK TYPES

Some DVD discs may have special requirements for playing, with which this system may not be compatible. Please refer to the specifications on the individual disc.

DISC TYPE	Content	Size	Total Play time
DVD	AUDIO/ VIDEO	12CM	About 4.7 GB - 2hrs. (Single side & single layer)
			About 8.5 GB - 4hrs. (Single side & double layer)
			About 9.4 GB - 4hrs. (Double side & Single layer)
			About 17GB - 8hrs. (Double side & double layer)
CD-DA	AUDIO	12CM	About 700MB - 74 minutes
MP3	MP3 AUDIO	12CM	About 700MB - 300 minutes

### Discs types

The Multimedia Player can play the following types of discs: DVD / CD / CD-R / CD-RW / DVD-R / DVD-RW / DVD+R / DVD+RW. Discs other than listed above cannot be played. Please do NOT play discs smaller than 12CM or of odd shapes, only play sound 12CM discs.

The Multimedia Player uses the NTSC/PAL color systems. It cannot play discs recorded with other systems, such as SECAM.

### Region code

The region code for this player is 0 which indicate any region.

### Copyright

According to the related laws, DVD discs, without proper authorization, are not allowed to be copied, broadcasted, cable broadcasted, or played publicly with the Multimedia Player.

The Multimedia Player incorporates copyright protection technology that is protected by method of claims of certain U.S. patents and other intellectual Property Rights owned by their rights owners. Reverse engineering or disassembly is prohibited.

## SPECIFICATIONS

### Warning

#### CAUTION

 
1. The driver must not be able to view operational monitor while driving the vehicle . This is illegal in most states. CHECK with your local law enforcement officials for details .
2. Always check polarity when connecting wire to avoid damage to the unit and /or vehicle.
3. Do not open the housing of the monitor ,Servicing must be done at our factory by authorized technicians to maintain the warranty.

### Specifications

System	NTSC/PAL Auto Switch
Power Input/Consumption	DC(10.8~16V)±10% ,<2500mA
Video Input	Composite Video Signal 1Vp-p 75Ohm
Operating Temperature	-10℃~+60℃
Storage Temperature	-20℃~+70℃
Screen Size(Diagonal)	7.0"
Display Method	TFT Active Matrix System
Resolution(Dot)	1440(W)x234(H)
Back Light	CCFL
Viewing Area	154.08(W)x86.58(H)mm
Viewing Angle	Left ,Right:65° , Top:40° ,Down:65°
Monitor Overall Dimension	164.9(W)x100(H)x5.7(D)mm
Monitor Weight	<1kg
The Specifications are subject to change without prior notice	

## CONNECT CABLE


### CONNECT CABLE

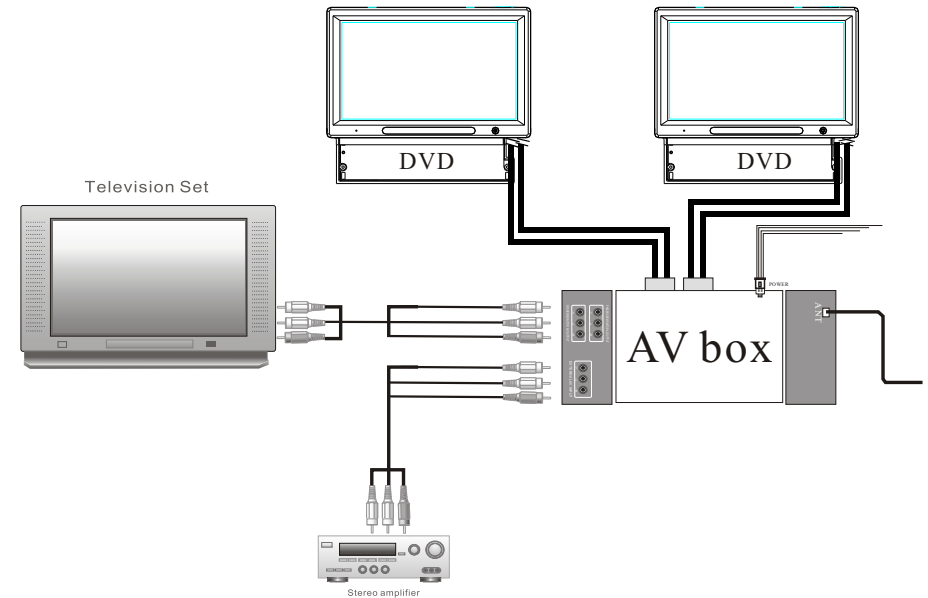

## THE IR REMOTE CONTROL

### The IR Remote Control

 Point the remote control no more than about 3~4 meters (approx. 21 feet) from the remote control sensor on the front of the player and keep with in a  $\pm 30^\circ$  angle.

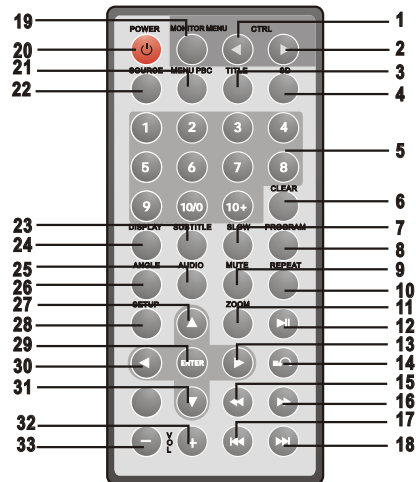

(1) Adjust Decrease	(13) Right Arrow ►	(25) Audio
(2) Adjust Increase	(14) Stop&Return	(26) ANGLE
(3) Title	(15) Fast Reverse◀◀	(27) Up Arrow▲
(4) SD	(16) Fast Forward▶▶	(28) Setup
(5) Number buttons	(17) Previous◀◀	(29) Enter
(6) Clear	(18) Next▶▶	(30) Left Arrow◀
(7) Slow	(19) Monitor Menu	(31) Down Arrow▼
(8) Program	(20) Power	(32) Volume+
(9) Mute	(21) Menu/PBC	(33) Volume-
(10) Repeat	(22) Source	
(11) Zoom	(23) Subtitle	
(12) play/pause▶	(24) Display	

## PACKAGE CONTENTS

### Package Contents

Check for the following accessories:



REMOTE CONTROL (1)



OWNERS/INTSTALL MANUAL (1)



Host line (1)



Vice-machine line (1)



AV BOX(1)



POWER CABLE(1)



BLACK CONNECT CABLE(2)



WHITE CONNECT CABLE(2)



FM ANT(1)

## IR Headphone use manual

### IR Headphone use manual



( Note: The product will be slightly different for different batches, this picture is for reference only, to kind of quasi )

1. Power switch manual switch on the headset. When the headset is turned on, the power indicator goes on.
2. IR channel selection (A-B-band)
3. Indicator -When the headset is turned on, the power indicator goes on.
4. Adjust the headset volume control the volume level.

Infrared headphones are equipped with an integrated display on the front of the infrared (IR) transmitter. Send the driver side of the display Channel is the "A", passenger side of the monitor to send channel is "B". Listen to the audio playback display, open the headset, Select the corresponding display is watching the audio channel. Note: Open the headset before, certainly not to the volume control on headphones System to its lowest setting.

 
#### Note:

1. Please mark the correct installation of the power slot 3A (AAA) battery (long-term when not in use, remove the battery the headset).
2. Open the headset, the head of the child or adult-sized headphones to adjust the slider to the best size.
3. When the headset does not receive the signal source, about 500 seconds, will automatically switch off the headset.

When the power LED does not light, check the battery is placed correctly or replace the battery. Make sure that the receive window to receive the IR signal emitted.

When using an infrared headset, speaker volume adjusted to the minimum recommended (to protect your hearing, do not long Use headphones).

### Wired headset use manual

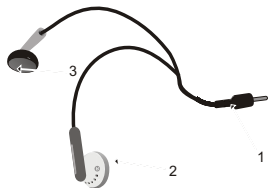

1. headphone jack
2. Right channel
3. left channel

Connect the wired headset, wired headset cable plugs into headphone jack, Do not listen to the volume under long-term, good product dust, moisture, dirt and so on. to avoid contact with sharp objects and high temperature to avoid damage to the product structure and function.


#### Note:

 Over headphones specifications for reference only, please prevail in kind, standard headphones are not attachments.


(Note: The product will be slightly different due to batch differences. This image is for reference only, quasi-kind)

## TOUCH MENU

After you connect well the power wire, press the [POWER] button on the screen or touch any area of the panel to power on the screen. When you touch any area of the panel, the screen will display 1.0, When you select [MENU] on the panel, the screen will display as 1.1

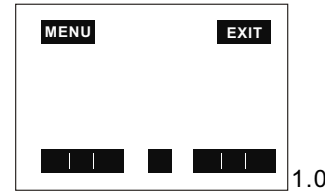


 1.0

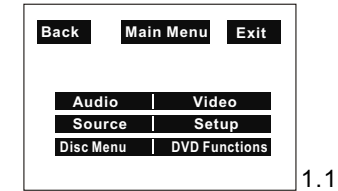


1.1

 
When you press [Audio] on the panel, the screen will display as below and you can adjust two monitor's parameters at your willing

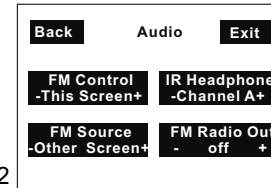

 
1.2

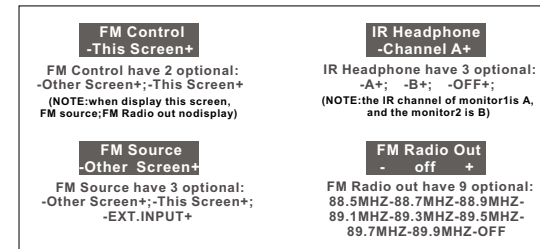

 When you press [Video] on the panel, the screen will display as below and you can adjust parameters at your willing

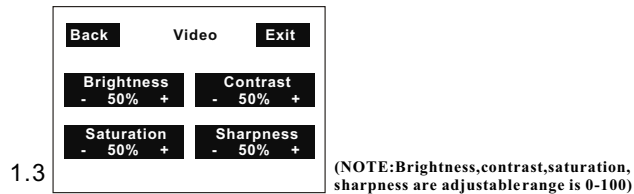


 When you press [Source] on the panel, the screen will display as below and you can adjust parameters at your willing

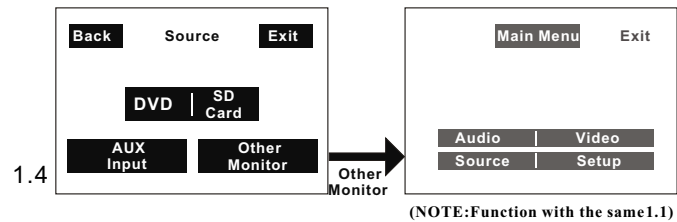

- 1) SINGLE (All the songs / videos will be played only once)
- 2) REPEAT ONE (The current playing song / video will be repeated)
- 3) REPEAT FOLDER (Only the songs / videos of the current folder will be repeated)
- 4) FOLDER (Only all the songs / videos of this folder will be played once)
- 5) SHUFFLE /RANDOM (The songs / videos will be played in random order)

 When the disc is playing, press **REPEAT** to select your repeat mode, the TV screen will show:

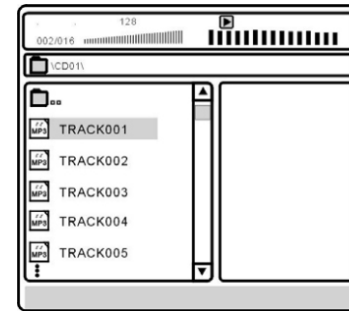


### Other functions

Functions such as MUTE, VOLUME, PAUSE, PREVIOUS, NEXT, etc. are also available for MP3 /MPEG4 recorded discs. These operations are the same as playing an Audio CD.



Enter the PIN numbers with the number buttons of the remote control and press **PLAY**, enter the new password and press **PLAY** again, confirm your new password and press **PLAY** again.

 
**Important:** Do not forget the newly entered password, there is no way to retrieve the (newly) entered password.

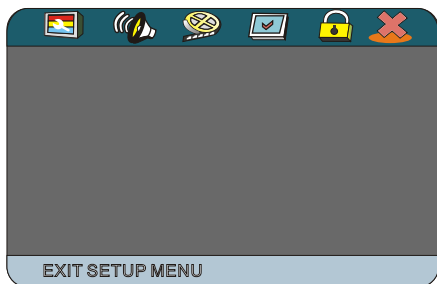

With this selection **X** you exit the system setup and return to normal viewing of the video.

## MP3/MPEG4 PLAYBACK

 The Multimedia Player is able to play discs (CD-R/ CD-RW) recorded with MP3/ MPEG4 audio and video files. When a disc with MP3 or MPEG4 files (including multiple directories) is loaded in the system the following screen is displayed:

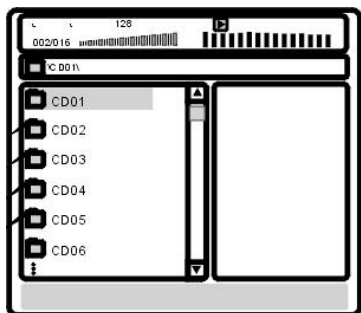


To go to the preferred music or video directory, press the **▲ ▼** arrows to scroll to your selection and confirm your choice by pressing the **PLAY** button. To select your preferred song or video title, press the **▲ ▼** arrows to scroll to your selection and confirm your choice by pressing the **PLAY** button. Your selected song or video will now be played.

### Play mode

 There are four kinds of play modes available when playing MP3/ MPEG4(.AV1) recorded discs:

When you press [Setup] on the panel, the screen will display as below and you can adjust parameters at your willing

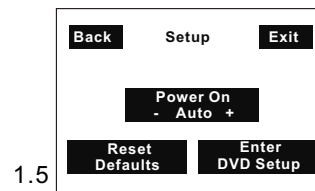


1.5

**Power On - Auto +**  
 Power ON have 3 optional:  
 -Auto+;-with car+;-Manually+  
 Auto:ACC off automatically after Power on,  
 and with memory function  
 With car:Automatically turn connected power  
 Manually:Must manually Power on

**Reset Defaults**  
 Screen prompt:  
 All previous settings will be lost.  
 Do you wish to reset defaults?  
 NO YES



Enter DVD Setup → Back | setup | | | | OK | Exit

 When you press [Disc Menu] on the panel, the screen will display as below and you can adjust parameters at your willing

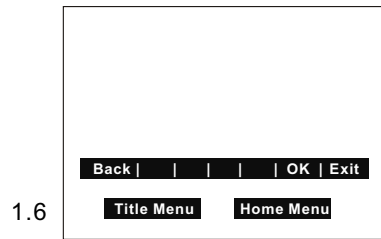

*NOTE: The menu screen will automatically reduce the transparency of a few seconds, the menu automatically disappears after a few seconds.*

  
When you press [DVD Functions] on the panel, the screen will display as below and you can adjust parameters at your willing

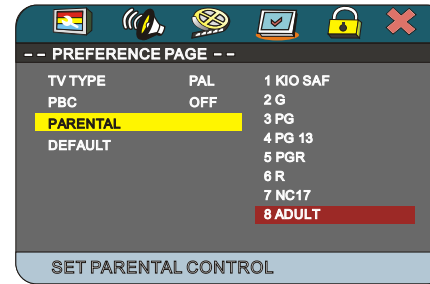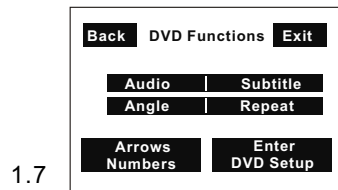


### Set age control grade:

For DVD discs with a rating system programmed (for example: the North American CARA) parents can prohibit watching content that might be inadvisable for children. Press the ► **RIGHT** arrow to enter the submenu. If you want to change the age control grade press either the ▲ **UP** or ▼ **DOWN** arrow to scroll to the available selections. **Selection 1** is Kid safe, **selection 2** is some guidance advisable, **selection 3** is PG (Parental guidance suggested, some material may not be suitable for children), **selection 4** is PG13 (Parents strongly cautioned, some material may be inappropriate for children under 13), **selection 5** is PG-R (Restricted, under 17 requires accompanying parent or adult guardian), **selection 6** is Restricted viewing, **selection 7** is NC-17 (No one 17 and under admitted), **selection 8** is for Adult Entertainment or X rated movies and **NO PARENTAL** is for General Audiences (All Ages).

 
Hereafter a screen will indicate to enter a password, if the ex-factory password has never been modified, you can use [123456] by pressing the according number buttons on the remote control. Select "YES" or "NO" with either the left or the right arrow key and press **PLAY** to confirm.

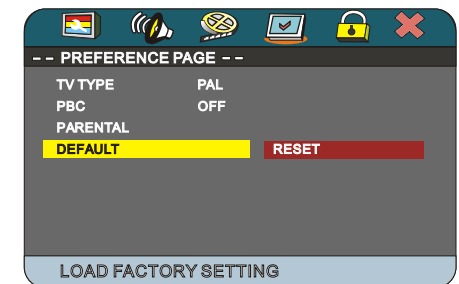

 
With this option you can select to reset to the factory preset values.




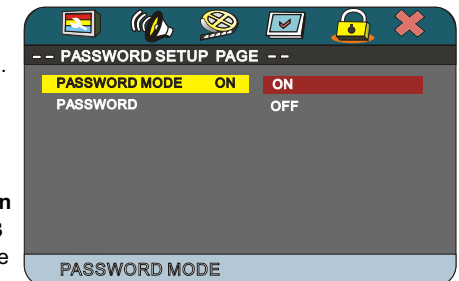


 With this option you can select to set your password protection **ON** or **OFF**.

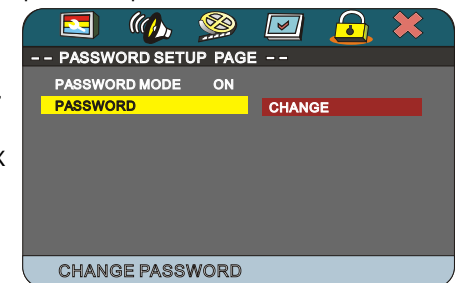

    
 
Use this menu to change the factory set password [123456]

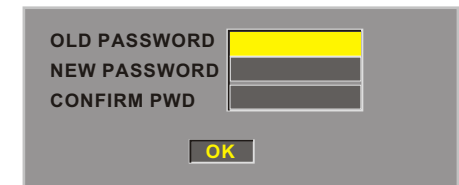

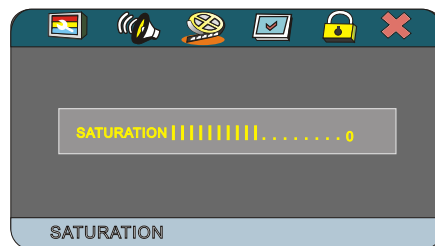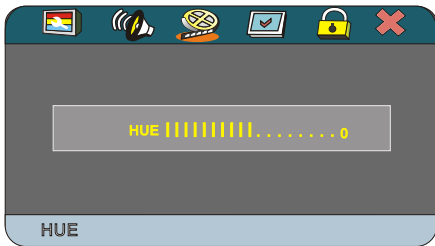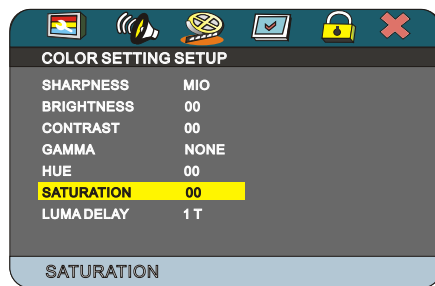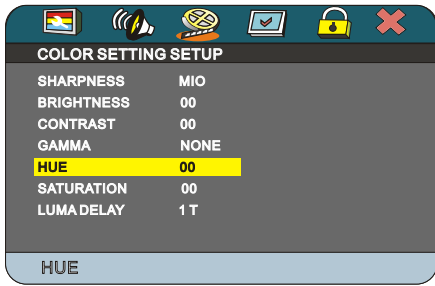

You can set the Hue (for NTSC) to your liking. Press **PLAY/SAVE** or the **▶ RIGHT** arrow to enter the Hue control, then press the **▲ UP** or **▼ DOWN** arrow to adjust the image. Press the **▶ LEFT** arrow to go back to the menu.

  You can set the Saturation to your liking. Press **PLAY/SAVE** or the **▶ RIGHT** arrow to enter the Saturation control, then press the **▲ UP** or **▼ DOWN** arrow to adjust the image. Press the **▶ LEFT** arrow to go back to the menu.

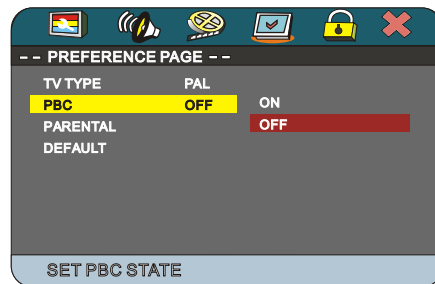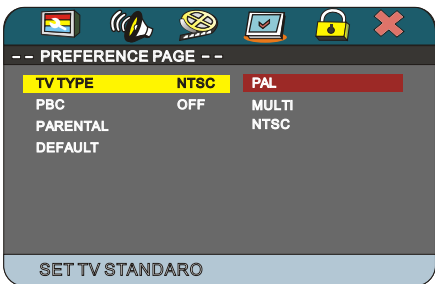


Select this menu item to setup your preferred video output format. PAL is commonly used in Europe and NTSC is commonly used in the USA and Japan. Select **MULTI** only if your TV supports both formats, the output signal will follow automatically the video format on the DVD disc.

For VCD and SVCD, this selection turns **ON** or **OFF** the Playback Control (PBC) function. VCD or SVCD media have PBC menu's that contains the track list. The default PBC state is set to **ON**. In **OFF** mode, no tracks can be selected.



Function with the same remote control

 Arrows Numbers

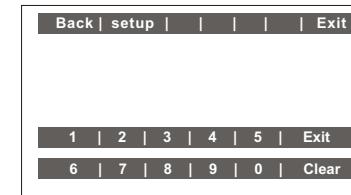


Enter DVD Setup




Function with the same 1.5 [Enter DVD setup]

## SETUP MENU

 When you press SETUP on the panel or on the remote control, the screen will display setup menu.

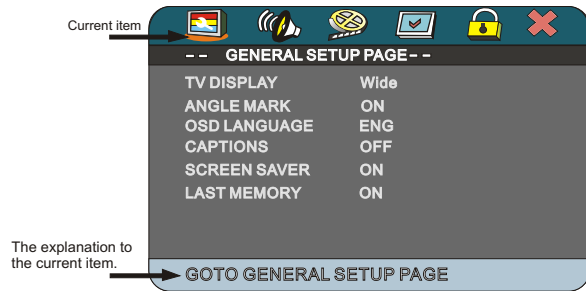

 
On the Remote Control, press either the ▲ UP or ▼ DOWN or ◀ LEFT or ▶ RIGHT arrow buttons to move to the desired menu item and press PLAY to select the menu item

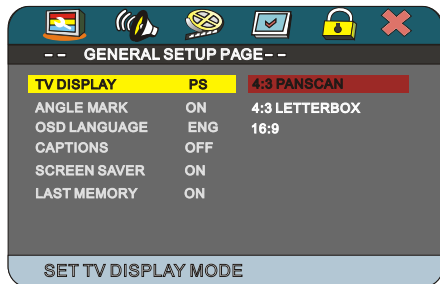


### Set TV Display mode to the correct ratio:

- Press the ▶ RIGHT arrow button to enter the sub-menu. If you want to set the screen to "WIDE", press the ▼ DOWN arrow twice to move your selection until the "WIDE" item is selected, now press PLAY.
- Press SETUP to exit these system settings

 
**Note:** three screen ratio modes are available, 16:9 WIDE, 4:3LB (Letterbox) and 4:3PS (Pan Scan). Different disc formats will display different images depending this setting and the screen size used. Hereunder is an example of the different choices and the relation between the disc format and screen ratio. of the different choices and the relation

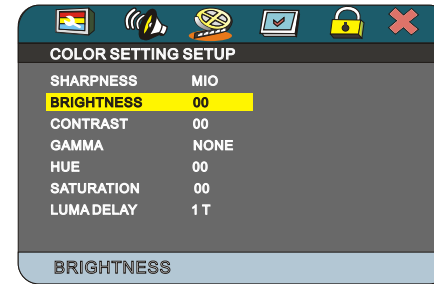

 
You can set the Brightness to your liking. Press PLAY or the ▶ RIGHT arrow to enter the brightness control, then press the ▲ UP or ▼ DOWN arrow to adjust the image. Press the ◀ LEFT arrow to go back to the menu.

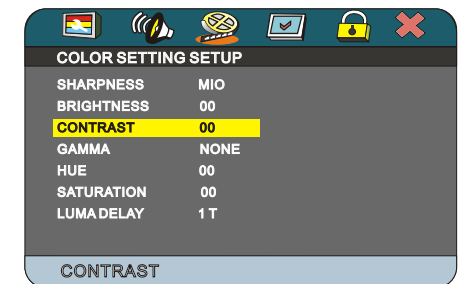

 
You can set the Contrast to your liking. Press PLAY or the ▶ RIGHT arrow to enter the brightness control, then press the ▲ UP or ▼ DOWN arrow to adjust the image. Press the ◀ LEFT arrow to go back to the menu.

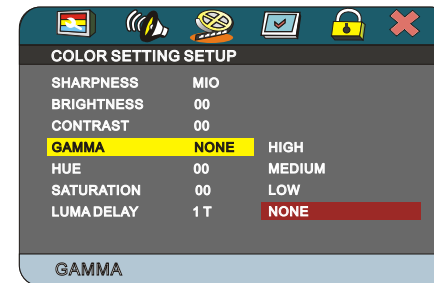

 
**Gamma** refers to the exponent between video or pixel values and the displayed brightness. You can set the Gamma to these choices and your liking.

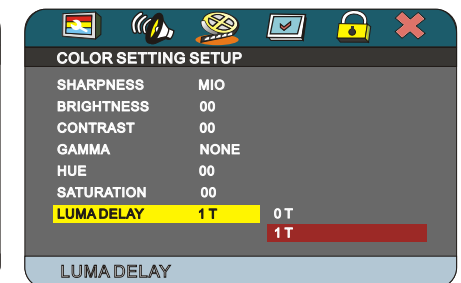

 
**Luma Delay** You can adjust the luminance delay by selecting one of these choices to best suit the brightness of your TV.

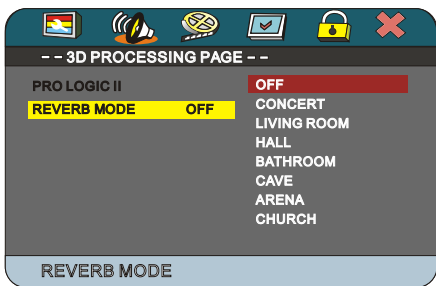

 Select **3D PROCESSING** to set up your preferred 3D mode. Press **PLAY** to enter this selection and to set up your preferred Audio mode for a better surround effect. Press **PLAY/SAVE** or the **RIGHT** arrow to enter this selection.

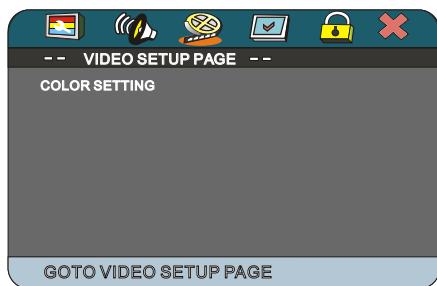


 Select this menu item to setup your Video Quality modes. Press **PLAY** to enter this selection.

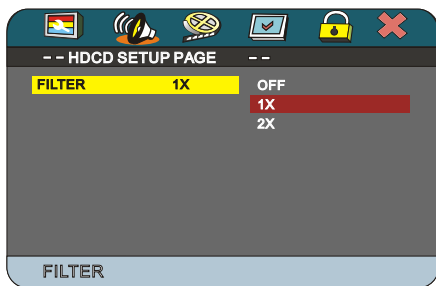

Select **HDCD** to set up your preferred Audio mode for HDCD. Press **PLAY** to enter this selection and to set up your preferred filter mode for HDCD (default is 1X).

 1x = 48K Sampling, 2x = 96K Sampling

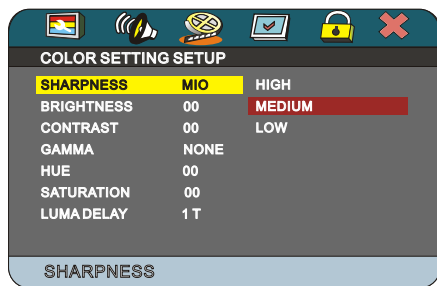

You can set the picture sharpness to these choices. If a video image is light, select the **LOW** option. If a video image is dark, select the **HIGH** option.



4:3LB Allow you to see movies in their original aspect ratio. The entire frame of the movie will be displayed. 16:9 recorded movies will occupy a smaller portion of the screen and you will see black margins above and below the picture.



 
 
4:3PS The movie will be shown full screen without any black margins, but parts of the image will be cut off from the right and left side.



16:9 Allow you to see movies in their original aspect ratio, when connected to a wide screen TV. The entire frame of the movie will be displayed.





16:9 Note: depending the DVD screen format (e.g. 2.35 :1), the wide screen setting may still have black margins above and below the picture.

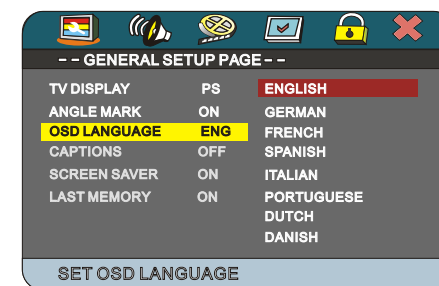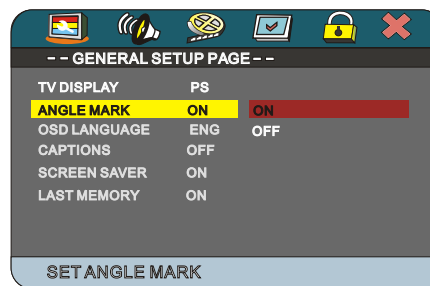


When playing a DVD disc and you have selected ON, then the screen will show the angle mark. This will give you the possibility to view multi angle DVD's. (whether this functions works, depends on the disc type in use.) When you have selected OFF, no angle mark will be shown on the screen.

  To select the language for your On Screen Display (OSD) use this menu item. There are multiple languages available.

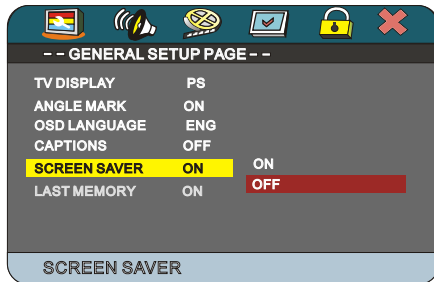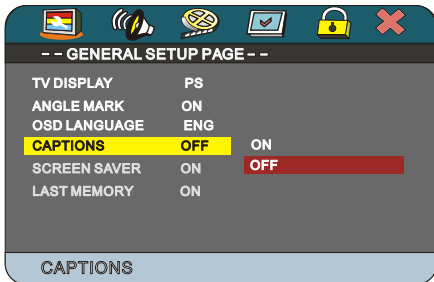

**ON:** To display captions. (Subtitles)  
**OFF:** Captions will not be displayed. (No Subtitles)

 When there is no activity with the Player for some time, a screen saver will start to prevent damage to the screen. Select **ON** to activate the screen saver function or select **OFF** to deactivate this function

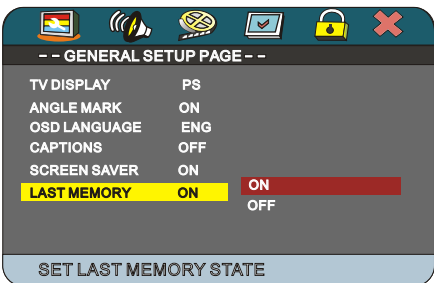


**ON:** Each time when you turn off the player, it will memorize the last play time. So if you turn on the player the next time and the same disc is played, it will resume play from the last memory point.

**OFF:** Disable the last memory function



 
Press **PLAY** to enter the Analog Audio setup page. The page hereunder will be shown:

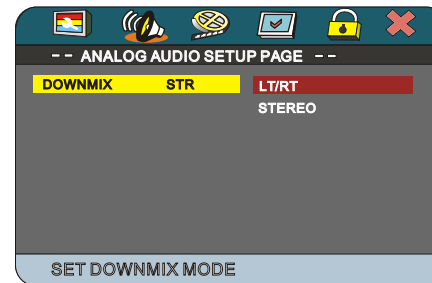

Set sound mix output mode:




- press the **▶ RIGHT** arrow to enter the sub-menu. If you want analog stereo signals, set the sound mode to "STEREO", press the **▼ DOWN** arrow once to move the selection to "STEREO", then press **PLAY**.
- If you want to have Dolby Pro Logic stereo (the decoded signal will create a 2ch reality simulating effect via the R/L connectors), select "LT/RT", then press **PLAY**.

 You can select one of these modes to adjust the Bass and Treble signal to your best liking. ON will switch the selected mode on and OFF will switch it back to normal Audio playback. Note: Please be advised that sometimes the BASS on an Audio CD or DVD is already very low, using the Bass Boost or Super Bass can overload your speakers resulting in poor sound quality.

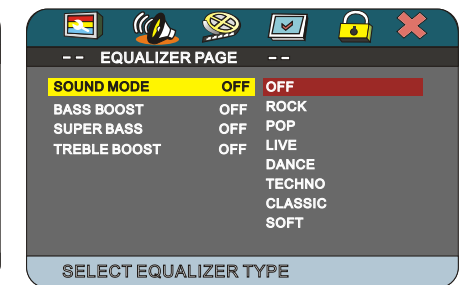

**EQUALIZER** Select this menu item to set up your preferred Equalizer mode. Press **PLAY** to enter this selection.

   You can select one of these preset Equalizer modes to adjust the audio signal to your best liking.

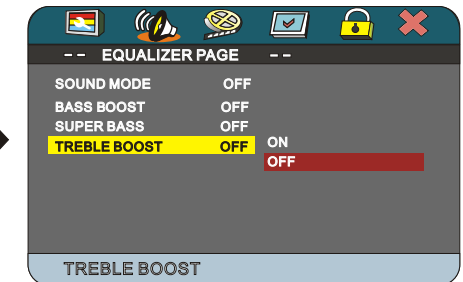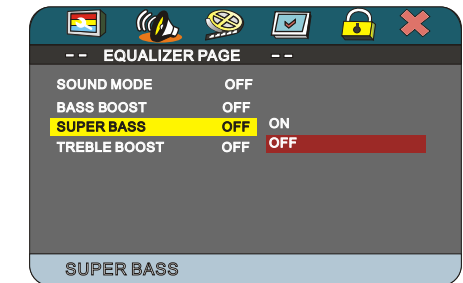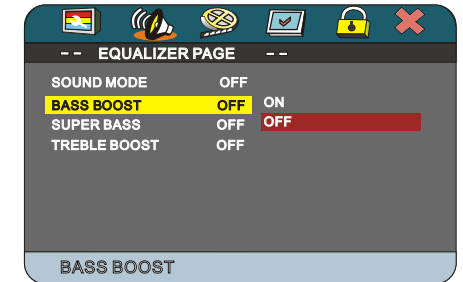

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

? Reorient or relocate the receiving antenna.

? Increase the separation between the equipment and receiver.

? Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

? Consult the dealer or an experienced radio/TV technician for help.