





## Antenna Location

NB Mode

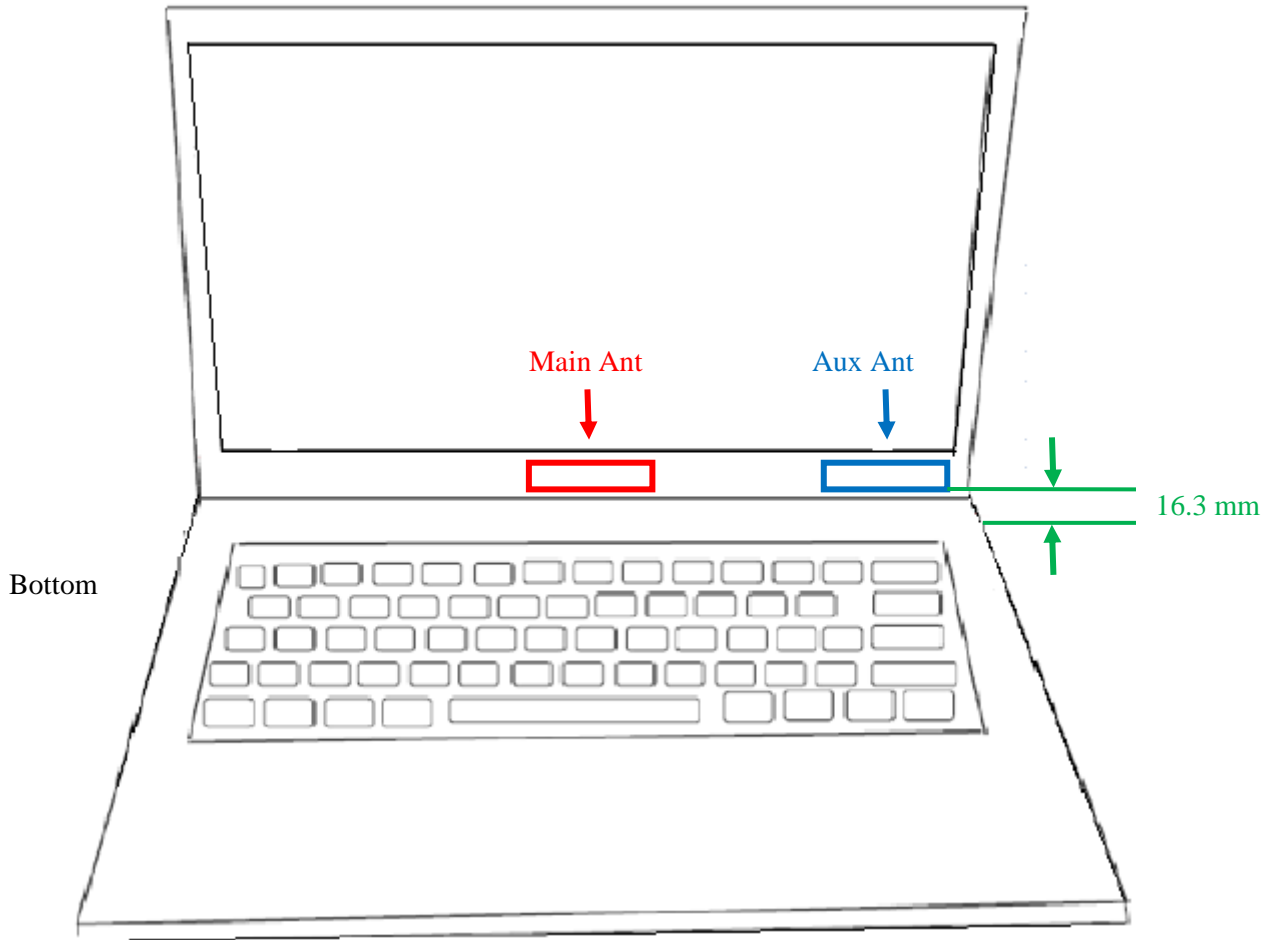



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)		
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Bottom	16.3	16.3

## Tablet Mode

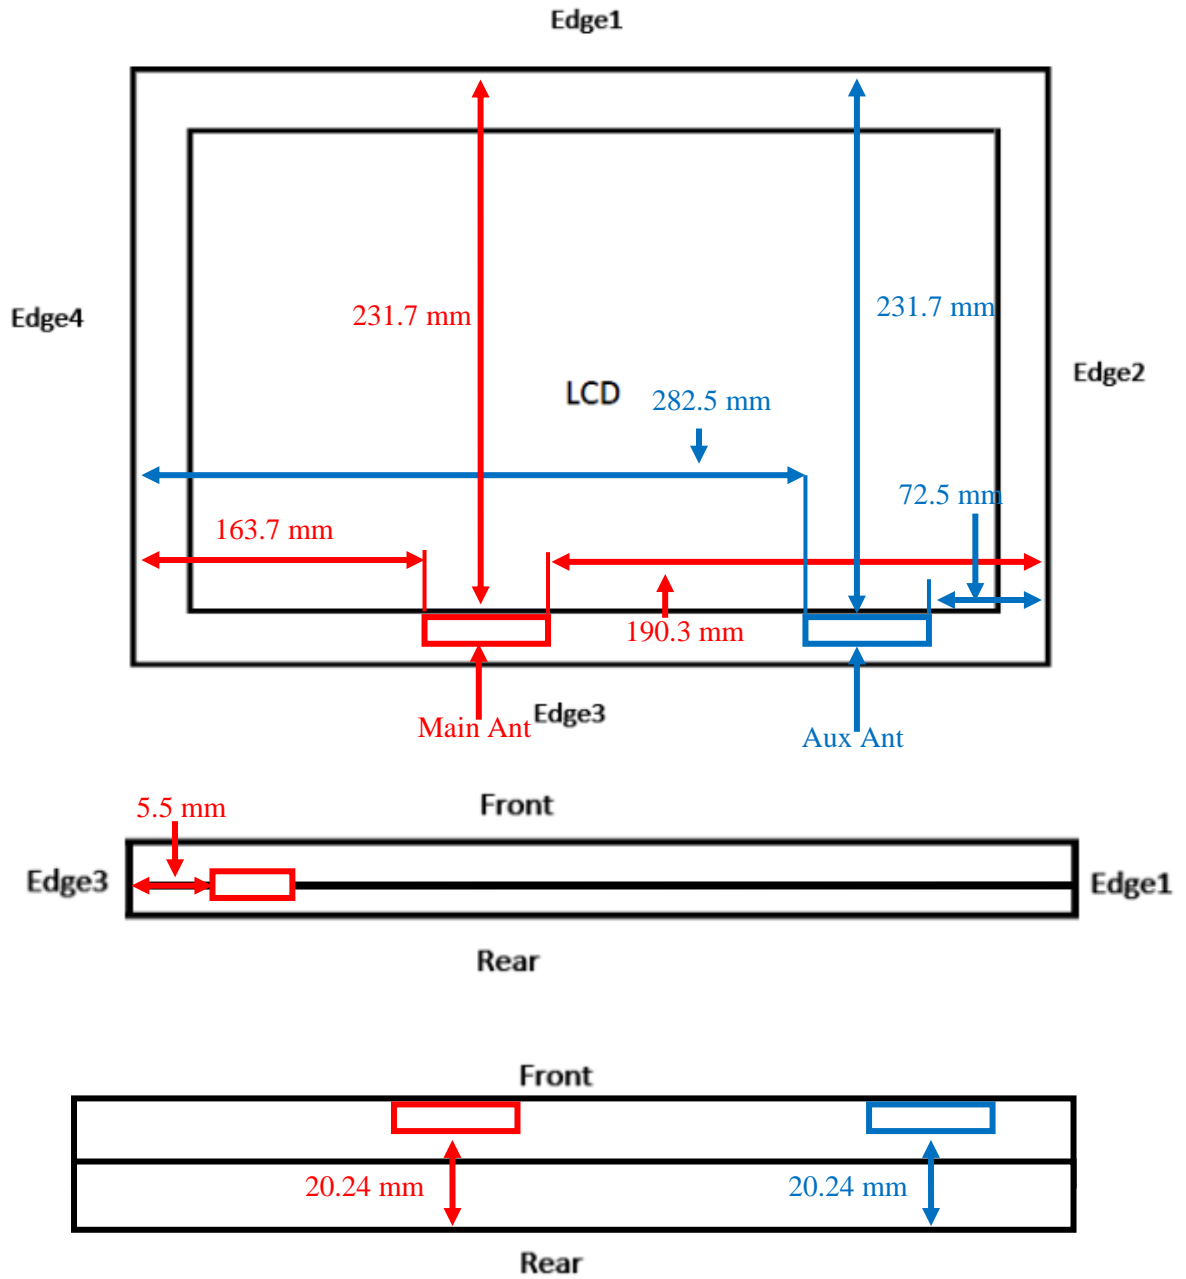



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	231.7	231.7
Right-Edge (Edge2)	190.3	72.5
Bottom-Edge (Edge3)	5.5	5.5
Left-Edge (Edge4)	163.7	282.5
Rear Surface	20.24	20.24

## Stand Mode

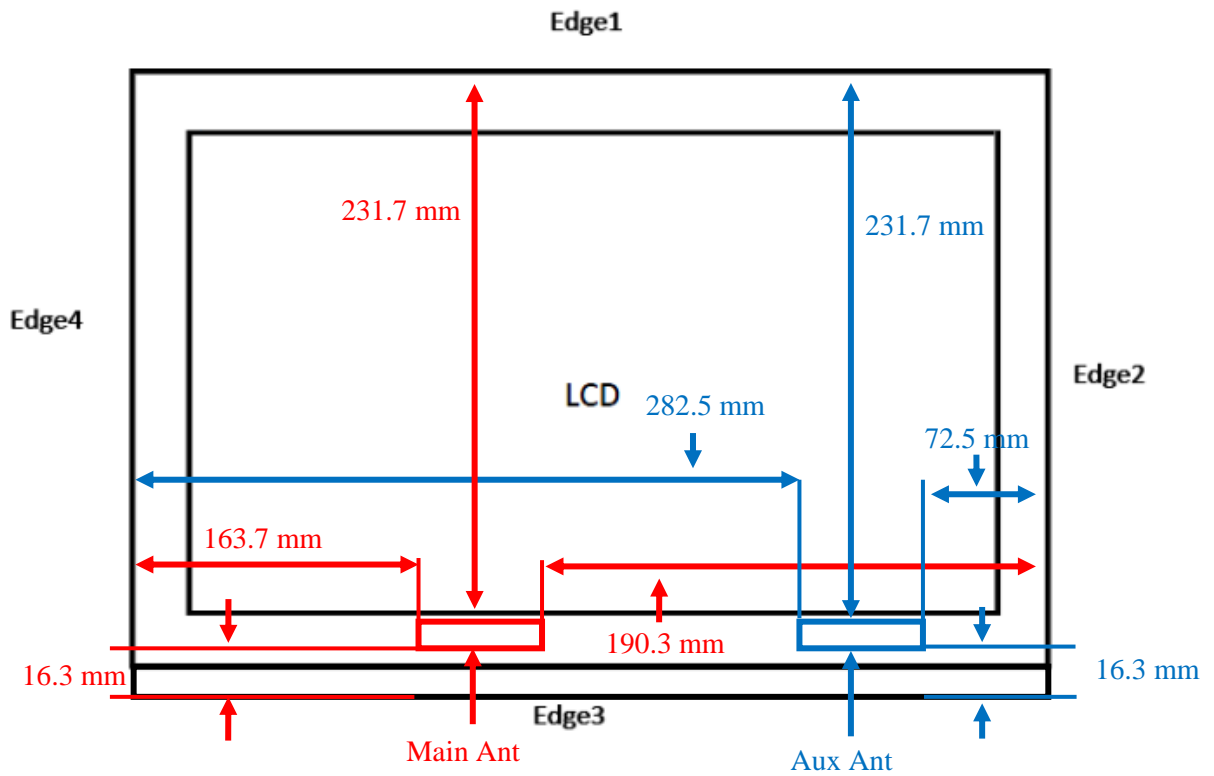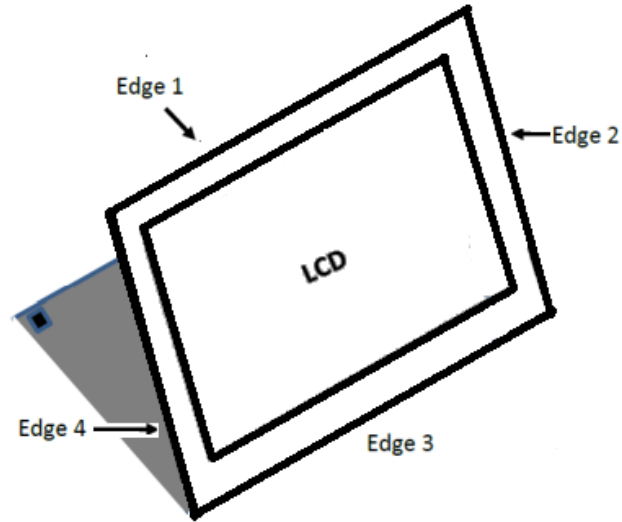


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	231.7	231.7
Right-Edge (Edge2)		72.5
Bottom-Edge (Edge3)	5.5	5.5
Left-Edge (Edge4)	163.7	
Rear Surface	16.3	16.3

## Tent Mode

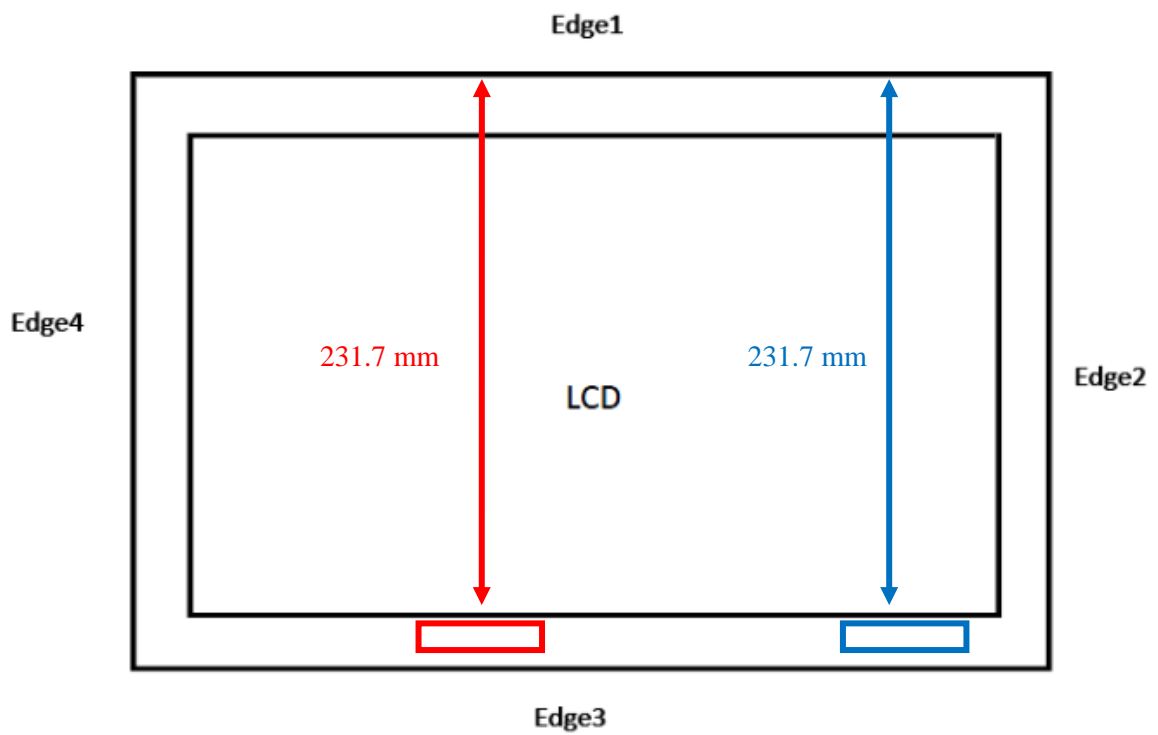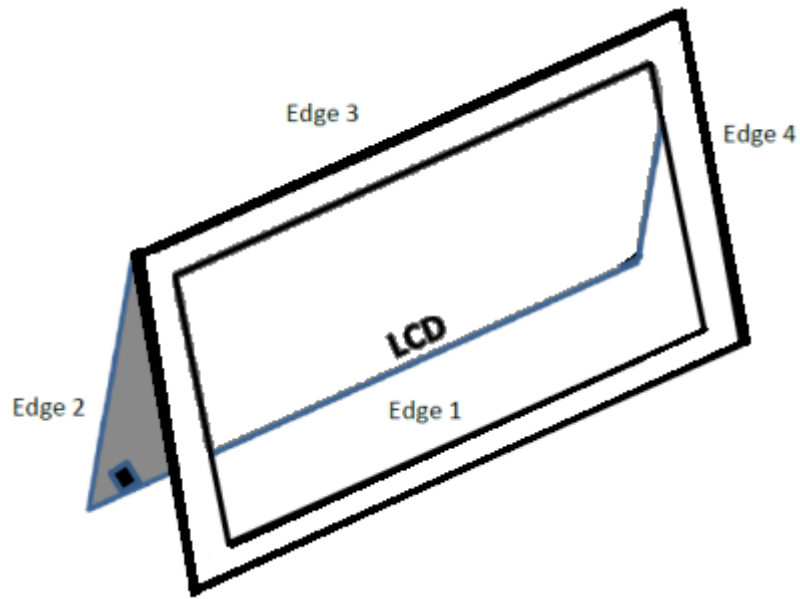


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	231.7	231.7
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Rear Surface		

## SETUP PHOTOS

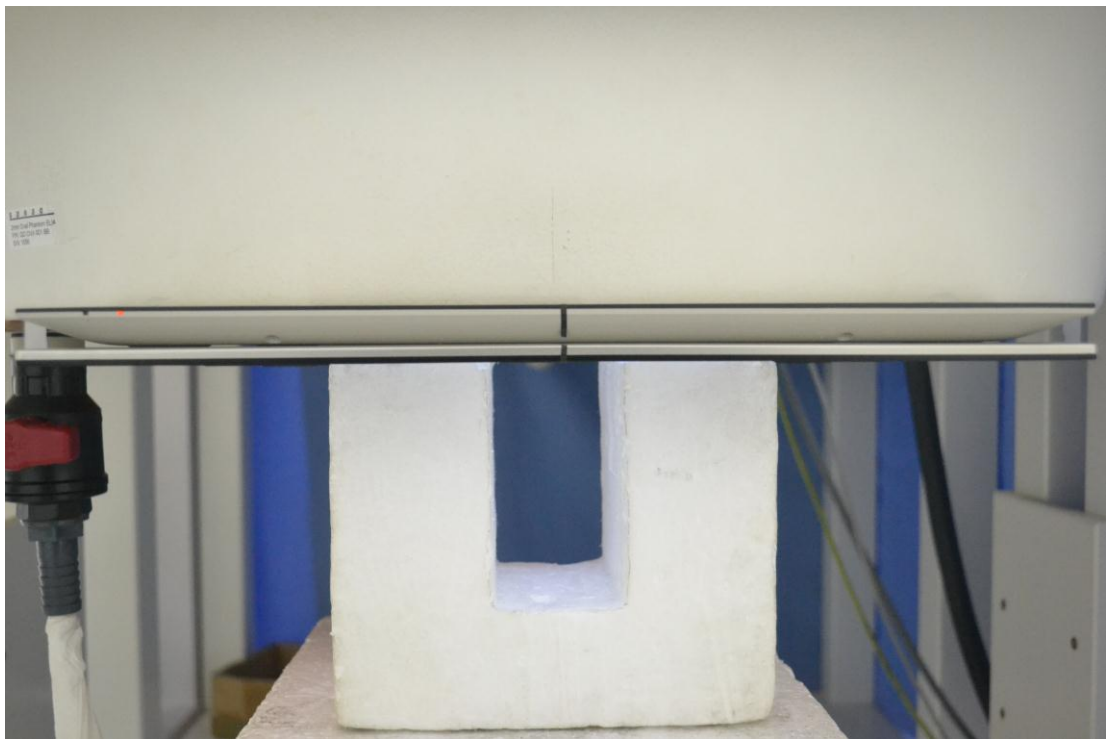

**Tablet Mode Rear**

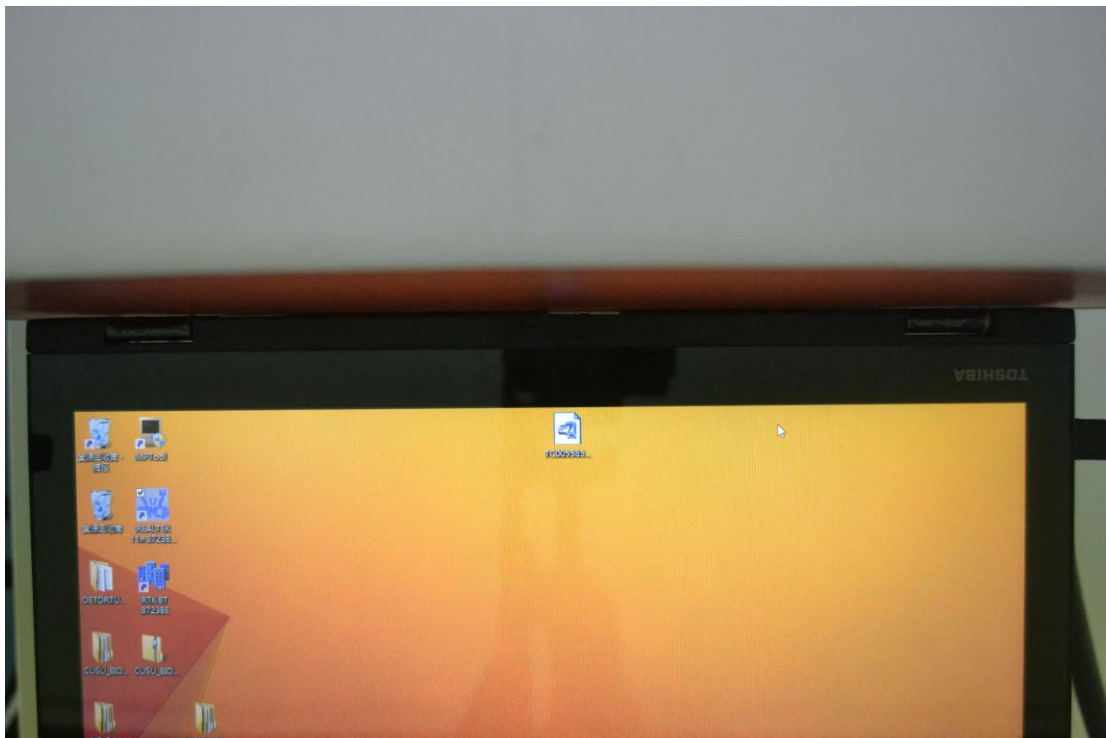

**Tablet Mode Edge3**

## EUT Photos

