





Antenna Location

NB Mode

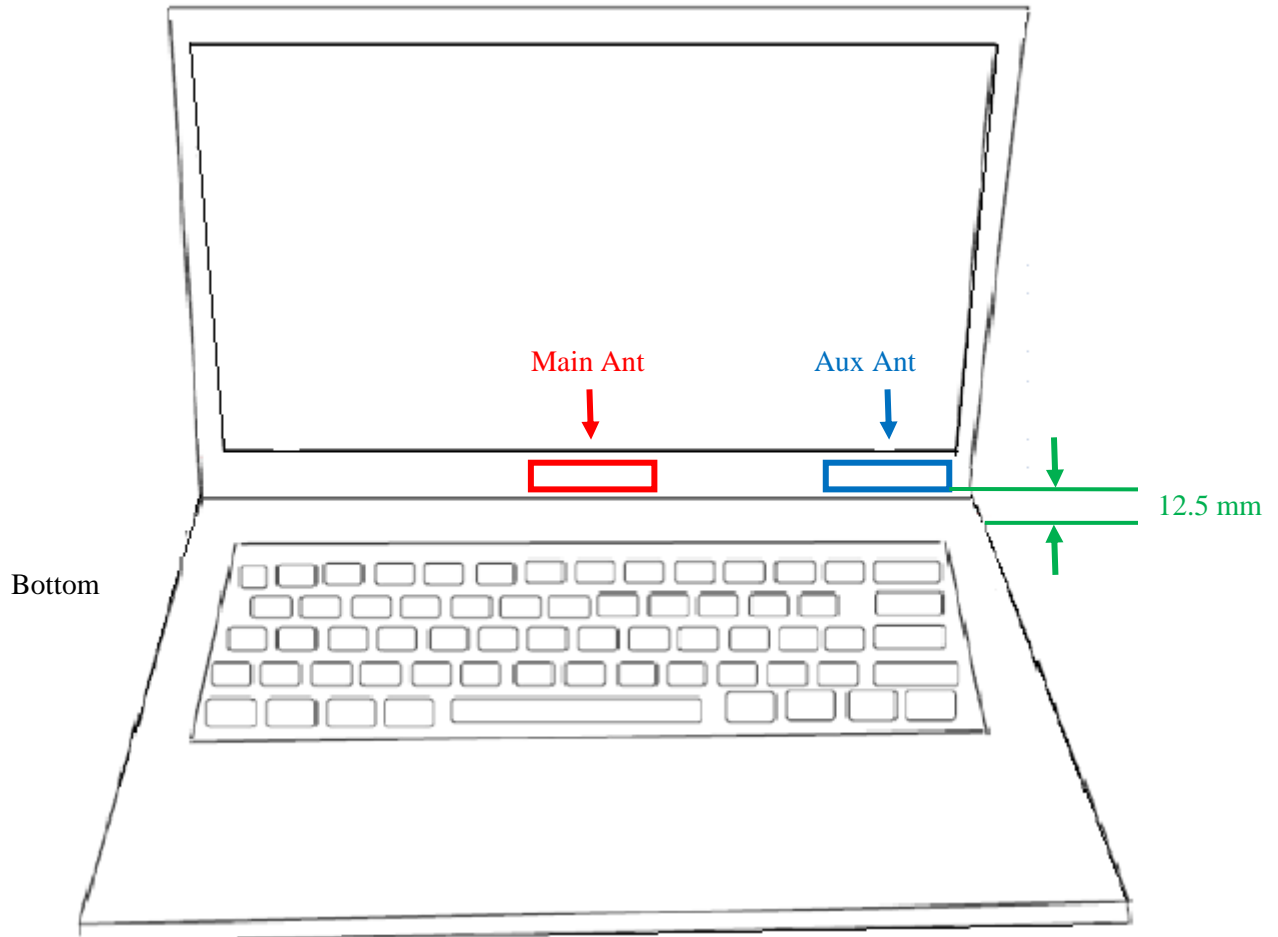



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)		
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Bottom	12.5	12.5

Tablet Mode

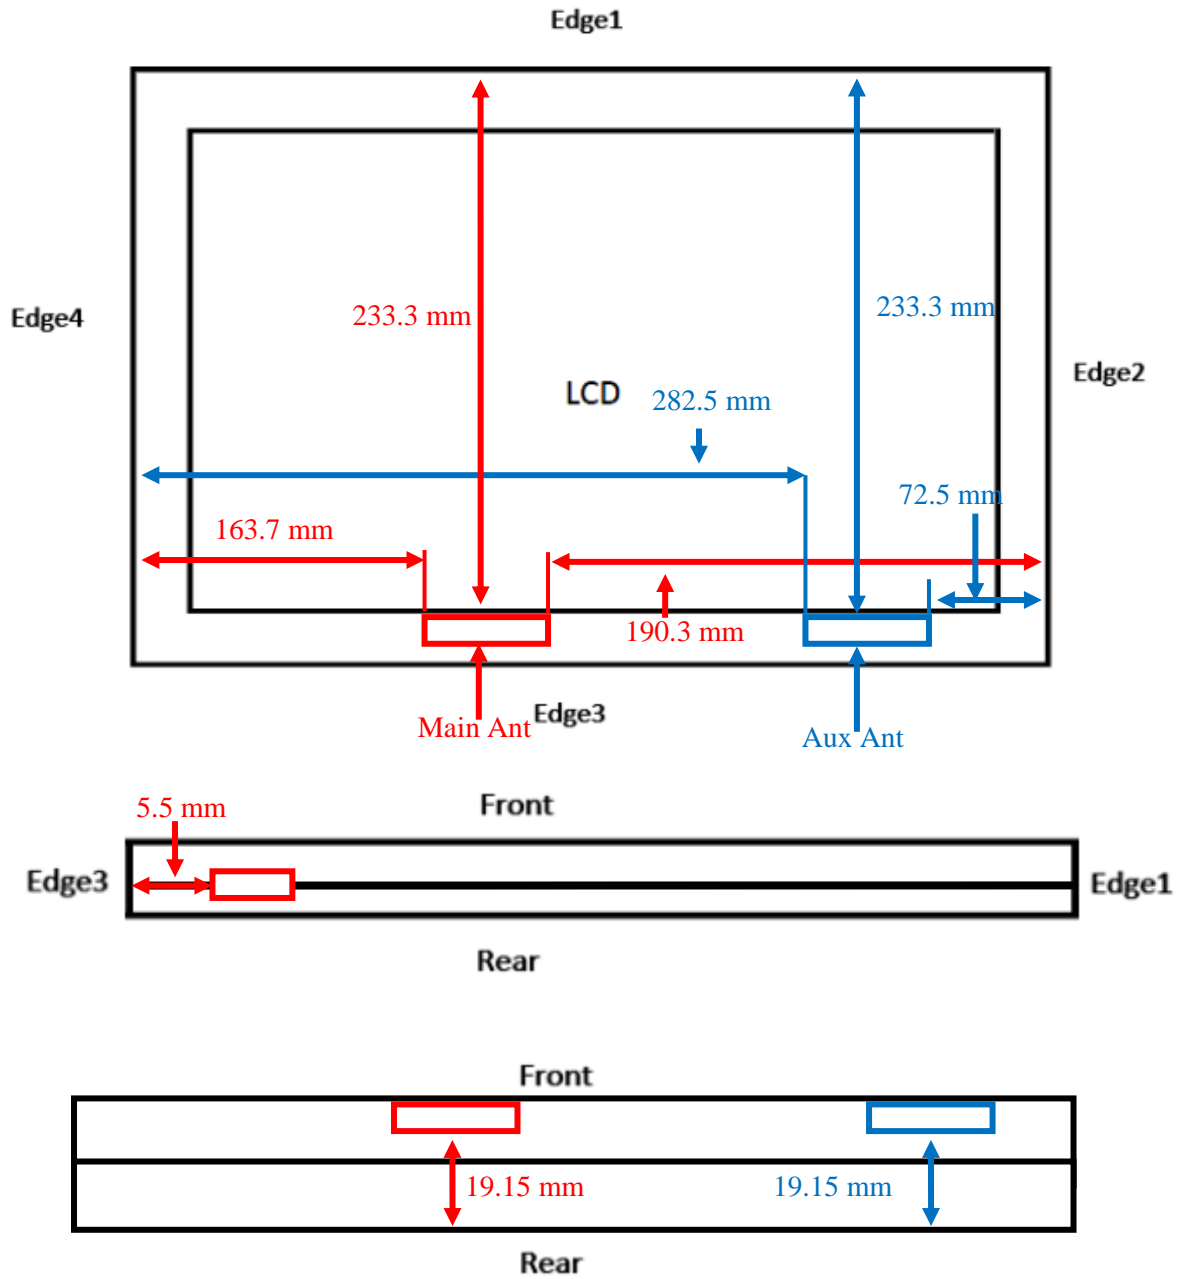



Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	233.3	233.3
Right-Edge (Edge2)	190.3	72.5
Bottom-Edge (Edge3)	5.5	5.5
Left-Edge (Edge4)	163.7	282.5
Rear Surface	19.15	19.15

Stand Mode

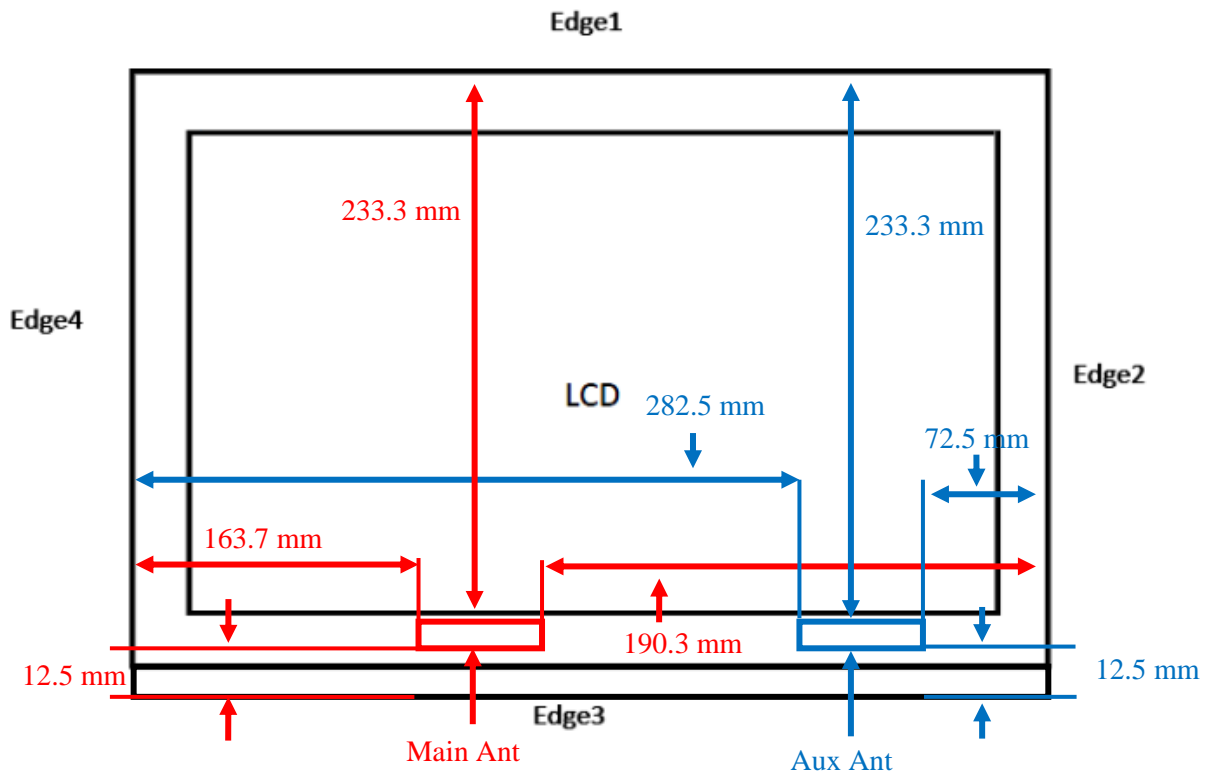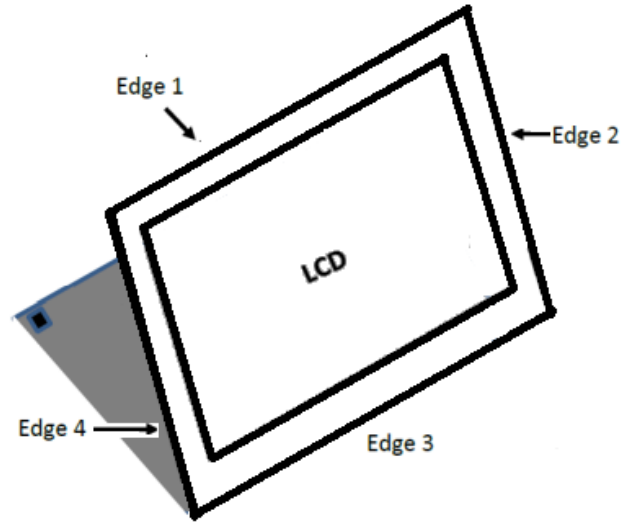


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	233.3	233.3
Right-Edge (Edge2)	190.3	72.5
Bottom-Edge (Edge3)	12.5	12.5
Left-Edge (Edge4)	163.7	282.5
Rear Surface	12.5	12.5

Tent Mode

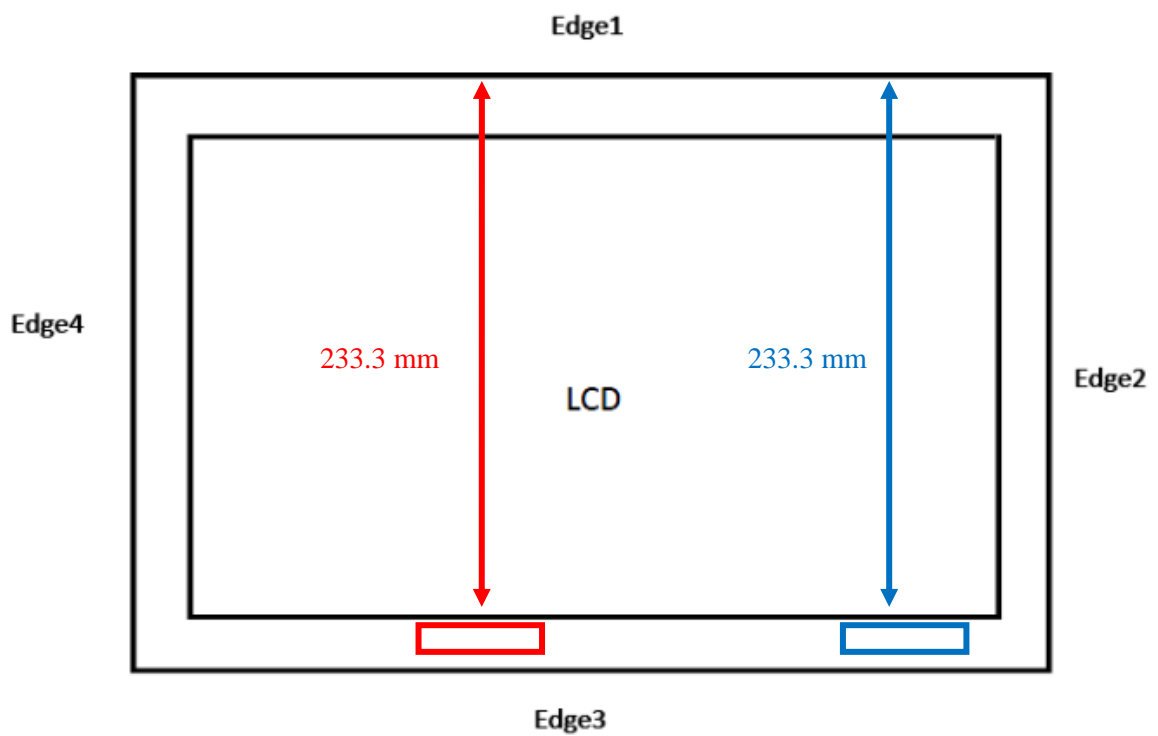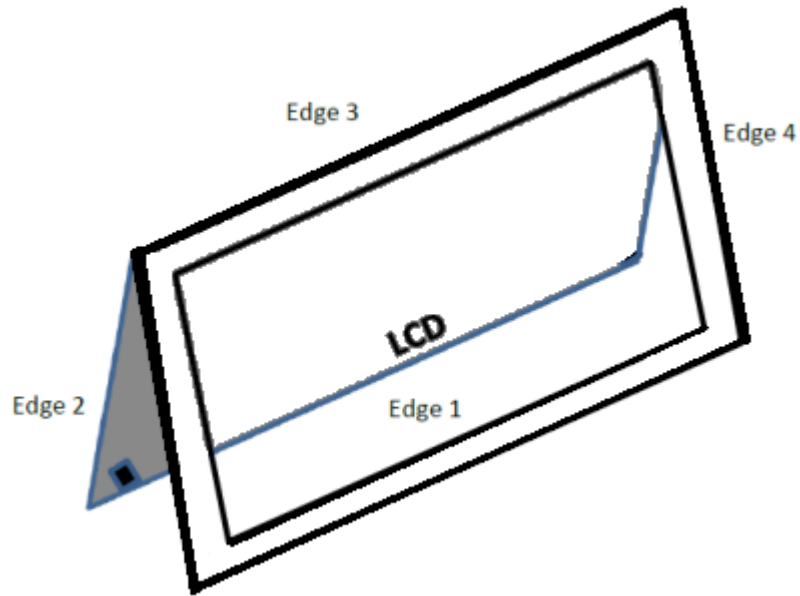


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	233.3	233.3
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Rear Surface		

SETUP PHOTOS

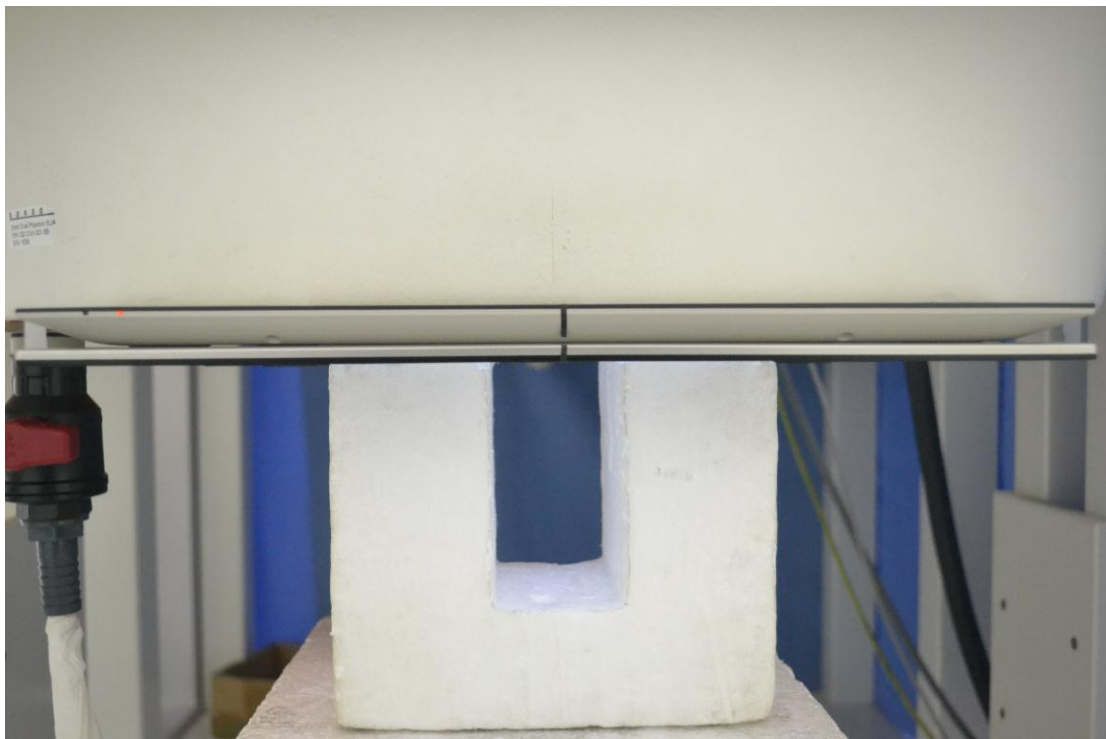

Tablet Mode Rear

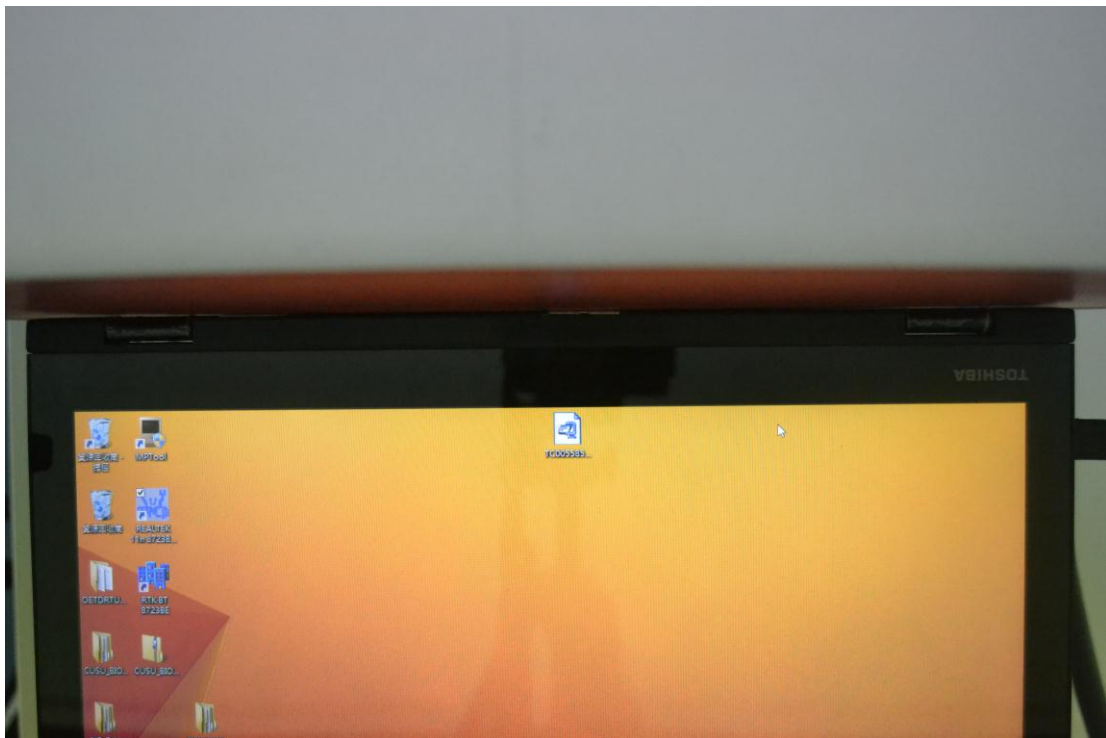

Tablet Mode Edge3

EUT Photos

