
LANGUAGE**PAGES**

English.....1-36

French.....37-71

Dutch72-107

German108-143

Italian144-179

Portuguese..... 180-215

Spanish216-251

A. Basic Introduction	6
1. Overview	6
1.1 Front components	6
1.2 Back components.....	7
1.3 Top components.....	7
1.4 Left-side components	8
1.5 Right-side components	9
1.6 Bottom components	9
2. Accessory	10
2.1 Charging by Car Charger	10
2.2 USB Cable usage optional	11
2.3 Install the Support and Bracket	12
2.4 AC-DC 200 volt optional	14
B. Main function introduction	15
1. Starting up	15
2. Power off	15
3. Main Interface.....	16
3.1 Navigation	17
3.2 Media	17
3.2.1 Music.....	18
3.2.2 Photo.....	20
3.2.3 EBook.....	21

3.2.4 Video	23
3.3 Games	25
3.4 Tools.....	26
3.5 Setting.....	28
3.5.1 Volume	29
3.5.2 Backlight.....	30
3.5.3 Language	30
3.5.4 Date Time	31
3.5.5 Calibration	32
3.5.6 Factory Reset	33
3.5.7 System Info	34
3.5.8 USB	34
3.5.9 Nav Path.....	35
3.6 Info GPS	36

Federal Communications Commission (FCC) Statement

You are cautioned that changes or Modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment

FCC- Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Precaution and Notice

- The PND is used only as a navigation aid. It is not for precise measurement of direction, distance, location or topography. The user must follow all traffic signs and local regulations along the roads.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS position is not available.
- A minimum of 4 GPS satellite signals are


needed to determine current location. Signal reception can be affected by situations such as bad weather or dense overhead obstacles (e.g. tall buildings).

- Other wireless devices in the vehicle might interfere with the reception of satellite signals and cause the reception to be unstable.
- When you get out of the car, do not leave your PND on the dashboard or subject to direct sunlight. The overheating of the battery may cause malfunctions and/or dangerous conditions.
- For your own safety, do not operate the controls of the PND while driving. Do not mount where the driver's field of vision is blocked.


A. Basic Introduction

1. Overview


1.1 Front components

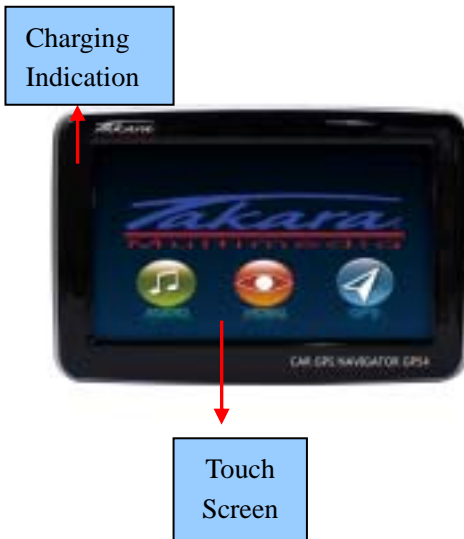


1.2 Back components

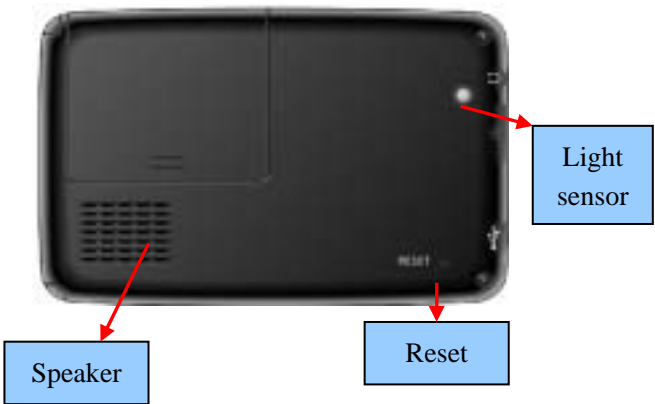

1.3 Top components

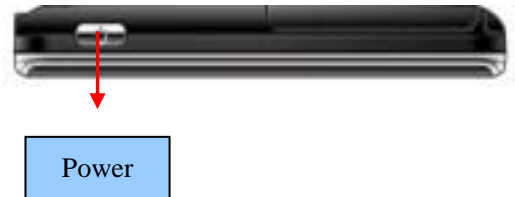

1.4 Left-side components

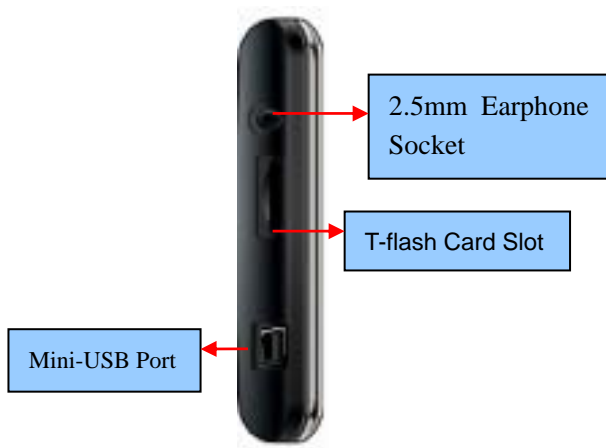

1.5 Right-side components



1.6 Bottom components



Installing the T-flash Memory Card

- Once the card is installed, it can not be removed during the operation of the device.
- If you need to remove the card, switch the unit off first; then push the card in and it will eject from the slot.

2. Accessory

2.1 Charging by Car Charger

The car charger supplies power to your device when you are using the device in car.

Caution: To protect your device against suddenness, please connect the car charger only after the car engine has been started. Please connect one end of the car charger to the power connector of your device and connect the other end to the cigarette lighter in the car to power

your device.



Ref.AC54

2.2 USB Cable usage optional

The USB cable is used for system upgrading. This USB cable will work with the PC or with Microsoft Active Sync® or can be used as a mass storage media. You can select the mode in the “Setting USB” menu.


For upgrading and more information about Microsoft Active Sync, please visit Microsoft web.



Ref.USB54

2.3 Install the Support and Bracket

Take off the protected film on the bottom of the suction. Then put the bracket onto a suitable location of your windscreen or side window and make sure the window or the suction or windscreen is clean without water or any dirty things inside. Then fix the stand on that position. Never place the stand where the driver's field of vision is blocked.

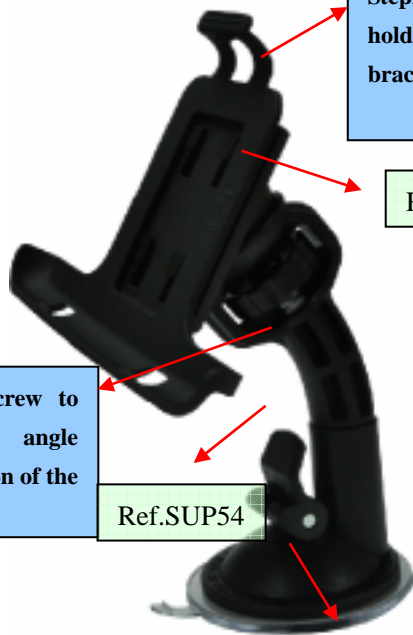

Step2: Install the holder into the bracket

Ref.SUP54B

Use this screw to adjust the angle and direction of the PND

Ref.SUP54

Step1: Rotate the screw to lock the bracket onto car glass

2.4 AC-DC 200 volt optional



Ref.AC-DC54

B. Main function introduction

1. Starting up

Long-time press the “Power” button to power the equipment on

2. Power off

Long-time press the “Power” button again to enter into below interface:



- 1). Tap the Power off button to turn the unit off.
- 2). Tap the Cancel button to turn back to the screen.

3. Main Interface




3.1 Navigation

Double tap the “GPS” icon to start navigation program.

3.2 Media

Tap the icon "Media" on the main menu and enter into the following interface.



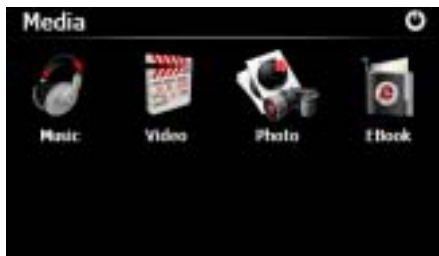

3.2.1 Music

1) Tap the icon “Music” on the media menu and enter into the following interface.



-
- A: Return to the Media menu
 - B: Volume control
 - C: Select desired music file
 - D: Next
 - E: Previous
 - F: Stop
 - G: Speed bar
 - H: Pause/play
 - I: Play mode
 - J: Equalizer

2) Double tap icon “select desired music file” and enter into the following interface.




3.2.2 Photo

1) Tap the "Photo" icon on the media menu and tap the icon "select photo file"(see next step) to enter into the following interface.




2) Double tap the file on the screen and enter into the following interface.

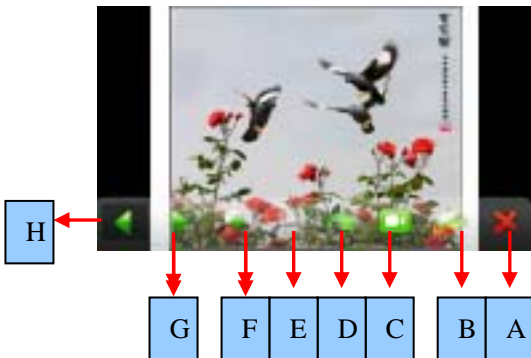


-
- A: Return to the Media menu
 - B: Select photo file
 - C: Slide mode
 - D: Rotate
 - E: Zoom in
 - F: Zoom out
 - G: Next
 - H: Previous

3.2.3 EBook

- 1) Tap the "EBook" icon on the media menu and enter into the following interface.

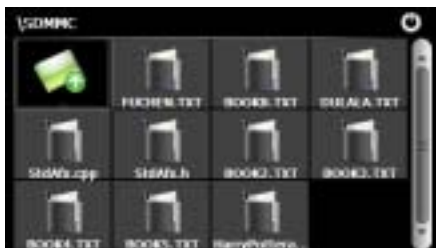

2) Double tap the file and enter into the following interface.

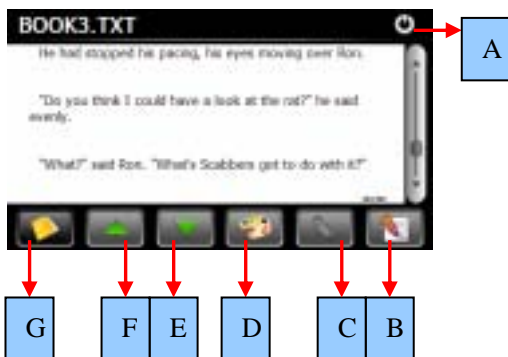


A: Return to the Media menu

-
- B: Bookmark list
 - C: Bookmark
 - D: Theme and font
 - E: Down
 - F: Up
 - G: Select EBook file

3.2.4 Video


1) Tap the icon "Video" on the media menu and enter into the following interface:

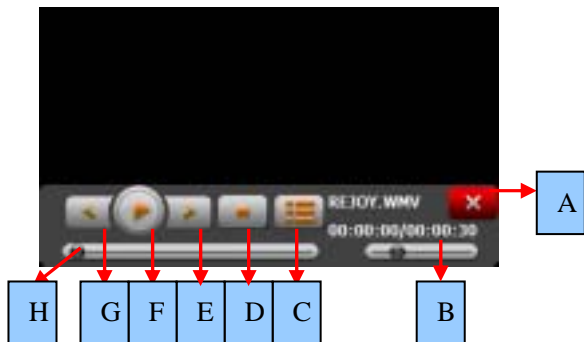

A: Return to the Media menu

-
- B: Volume
 - C: Select video file
 - D: Stop
 - E: Next
 - F: Pause/play
 - G: Previous
 - H: Speed bar

2) Tap the icon “Select video file” to enter into the following interface:

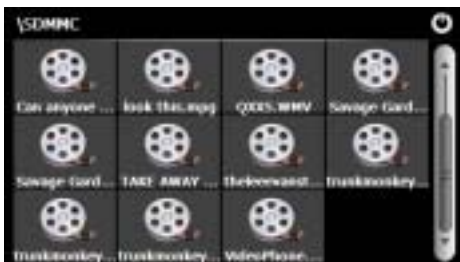

3) Tap the file you desired and enter into the following interface.



Tips:

Tap NEXT button to recycle the movie.

Double tap the screen, it will display in full screen.

When displaying in full screen, double tap the screen again, it will return to original playing size.


3.3 Games

Tap the icon "Games" on the main menu and enter into the following interface.



3.4 Tools

Tap the icon "Tools" on the main menu and enter into the following interface:

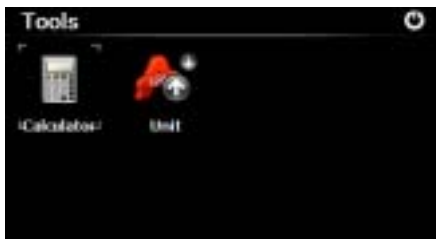



3.5 Setting

Tap the icon "Setting" on the main menu and enter into the following interface:





3.5.1 Volume

Tap the icon "Volume" and enter into the following interface:



Drag "Volume" icon to adjust volume of the speaker.

3.5.2 Backlight

Tap the "Backlight" icon and enter into the following display interface:



- A. Drag "Backlight" icon to adjust the backlight.
- B. For the Auto OFF, tap "Left-side" or "Right-side" button to select the duration of automatically powering off the backlight.

3.5.3 Language

Tap the icon "Language" and enter into the following interface:



3.5.4 Date Time

Tap the icon "Date Time" and enter into the following interface:



Tips:

- Tap "Date Up" or "Date Down" icons to adjust the date.
- Tap "Time Up" or "Time Down" icons to adjust the time.
- Tap "Time Zone Left" or "Time Zone Right" icons to adjust the time zone.

3.5.5 Calibration

Tap the " Calibration " icon and enter into the following display interface:




Tap the icon "OK" to adjust the touch screen.

Please tap on the crosslines firmly
The crosslines will continue to move until
the screen is aligned.



3.5.6 Factory Reset

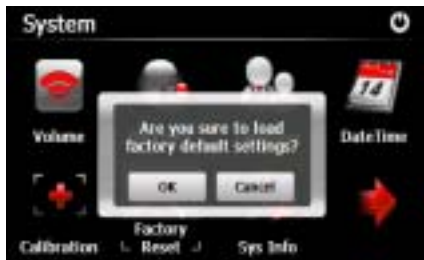

Tap the icon "OK" to load factory default settings.


3.5.7 System Info

Tap the "Sys Info" icon and enter into the following display interface:



3.5.8 USB

Tap the icon "USB" to set the USB working mode.

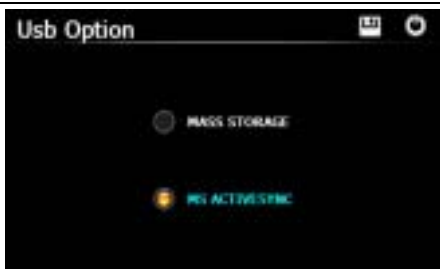

3.5.9 Nav Path

Tap the "Nav Path" icon and enter into the following display interface:



-
- 1) Select the Auto Run Navigation, the device will run the Navigation software automatically when tapping the GPS icon on the main menu.
 - 2) Select "Navigation" to run the navigation.exe files manually.

3.6 Info GPS

Tap the "GPS Info" icon and the unit will show the detail information of GPS satellites.



