 


USER MANUAL

T106 REMOTE TRANSMITTER

INSTALLATION INSTRUCTION



This option controls the engine run time for remote start.

SPECIFICATION

- 1. Power Supply:** 6V (CR2016*2Battery)
- 2. Current Consumption:** Standby Consumption : < 3uA
Operating Consumption: <25mA
- 3. Frequency:** 433.92MHz
- 4. Frequency Tolerance:** $\pm 300\text{KHz}$
- 5. Modulation:** OOK (On Off Key / ASK)
- 6. OSC With SAW Resonator:** SAW oscillator plus antenna buffer
- 7. Hopping code MCU Encoder:** Highly security private hopping code by MCU CS616

FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a

class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

COMPANY CONTACT

Beijing Jia An Electronic Technology Co.,Ltd.

Add: No.19 Gu Cheng west street, Shi Jing Shan District, Beijing 100043,
CHINA

TEL: +86-10-6888 9971 / 6888 9972 / 6888 9973

FAX: +86-10-6888 9905