

### Important Information about the Sagemcom "F@ST 3896" :

#### Installation and Safe Usage Instructions:

1. Place the router in a vertical orientation on a flat surface.
2. Connect the manufacturer supplied AC to DC power adapter. The F@ST 3896 xxx router requires the use of a 12VDC, 3.5A power adapter. Only use a manufacturer supplied and approved power adapter and Ethernet cable.
3. Connect the power adaptor of "F@ST 3896" to the AC mains in accordance with the installation instructions in this booklet, and the markings on the identification label (voltage, current, and frequency of electricity network).
4. Connect a coaxial cable to the port labeled "COAX" on one end and to a working cable wall outlet or splitter on the other end.
5. For connection of a computer with an Ethernet cable use one of the RJ45 ports on the product marked "1", "2", "3", or "4". Then connect the other end of the Ethernet Cable to the Ethernet port of a computer. Repeat as necessary with the other available Ethernet ports.

When using this device, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons including the following:

1. Do not use this product near water and avoid contact with moisture. For example, does not use near a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool. Care should be taken so that liquids are not spilled on this equipment.
2. This equipment is for indoor use only, do not place or install in an outdoor location.
3. Place your product on a firm, solid surface, no obstacle at a minimum distance of 20cm (0.65ft). If you put it on something unsteady, it may fall and be damaged. If you place it on a soft surface, such as rug, sofa or cushion, the vents may be blocked, causing the product to overheat.
4. Never insert objects into the vents of this equipment as this can result in the risk of electrical shock or fire.
5. As the power adapter is the only way to connect to the electrical network, the product must be installed near an easily accessed power outlet.
6. This equipment should only be operated with the type of power supply (Voltage and Current) indicated on the marking label.
7. Do not overload wall outlets or extension cords. Doing so can result in the risk of fire or electrical shock.
8. Avoid blocking any vent openings or exhaust exits on this equipment. Do not place equipment in a built-in installation such as a cabinet that may impede the flow of air through the ventilation openings.
9. The equipment should be situated away from heat sources such as radiators, heat registers, stoves, or other heat producing appliances and equipment.
10. Care should be taken to ensure that the power cord is routed, so it is not likely to be walked on or pinched by items placed upon or next to it.
11. Unplug this equipment before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning only.
12. This equipment is not user serviceable and is to be serviced by qualified personnel only. Do not disassemble this equipment. If service is required, disconnect all power from the equipment and consult qualified service personnel.
13. To disconnect this equipment from AC power, unplug the power supply from the AC wall socket.
14. Connect only to in house equipment (SELV interface). It is not allowed to connect to public cable distribution or cable television network.
15. Use the product in the environment specified as below:
  - Air temperature between 0°C (32 F) and +40°C (104 F).
  - Relative humidity between 20% and 90% non-condensing.
  - Altitude: 2743 meters (9000ft) maximum.

#### Save these Instructions!

#### Federal Communications Commission (FCC) Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### Modifications:

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC Responsible Party: Sagemcom USA  
14651 N. Dallas Parkway  
Suite 900  
Dallas, TX 75254  
Phone: 972-674-4100

#### Radio Frequency Interference Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device produces radio frequency energy in the 2.4GHz and 5GHz spectrum. The antenna must be positioned to keep a minimum distance of 45cm (1.48ft) from the radiating element to any nearby person.

### Industry Canada Statements

This Class B digital apparatus complies with Canadian ICES-003 and CS-03.

This product meets the applicable Industry Canada technical specifications.

F@ST 3896 complies with Canadian RSS-247.

This device complies with RSS-247 of the Industry Canada Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

### IMPORTANT NOTE:

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

### Radiation Exposure Statement:

This equipment complies with "Industry Canada RSS-102 for radiation exposure limits set forth for an uncontrolled environment".

This equipment should be installed and operated with minimum distance 30cm (0.98ft) between the radiator and your body.

**North American Cable Installer:** This reminder is provided to call your attention to Article 820.93 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

### Wall Mounting (Optional)

While many users place their **F@ST 3896** product on their desk, it can be optionally wall mounted.

The number of the screw: 2 pcs.


Dimension for the screw: 4.5–5.0 mm.

Length of the thread is 9.4–10mm.

Thickness of the screw head is 1.85–2.15mm.

There are 2 slots on the underside of the modem that can be used for wall mounting.

You will need 2 suitable screws which screw diameter would be 4.5–5.0 mm to wall mount the **F@ST 3896**

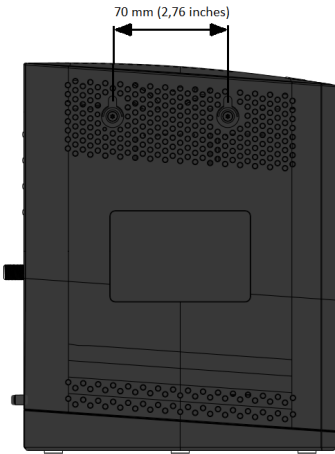

Note: When wall mounting the unit, ensure that it is within reach of the power outlet.

To wall mount the unit:

1. Ensure that the wall you use is smooth, flat, dry and sturdy and use the 2 screw holes which are 70mm (2.76 inch) apart from each other.
2. Fix the screws into wall, leaving their heads 3 mm (0.12 inch) clear of the wall surface.
3. Remove any connections to the unit and locate it over the screw heads. When in line, gently push the unit on to the wall and move it downwards to secure.

Issued by Sagemcom Broadband SAS  
Sagemcom  
250, route de l'Empereur - 92500 RUEIL MALMAISON

© Sagemcom Broadband SAS 2019  
All rights reserved. Subject to availability.  
Rights of modifications reserved.  
[www.sagemcom.com](http://www.sagemcom.com)