 



802.11a - Ant 3

Channel 97 (6435MHz)

The Reference Level

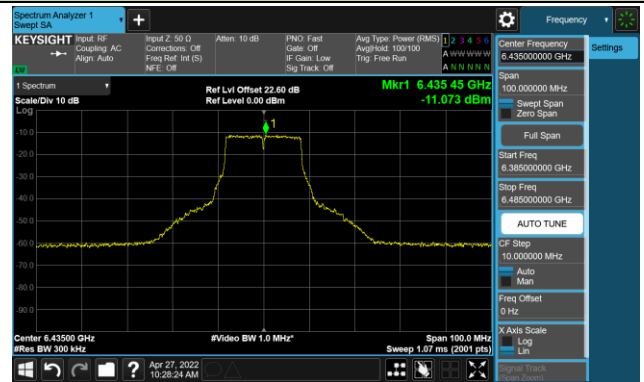


 The Mask Data

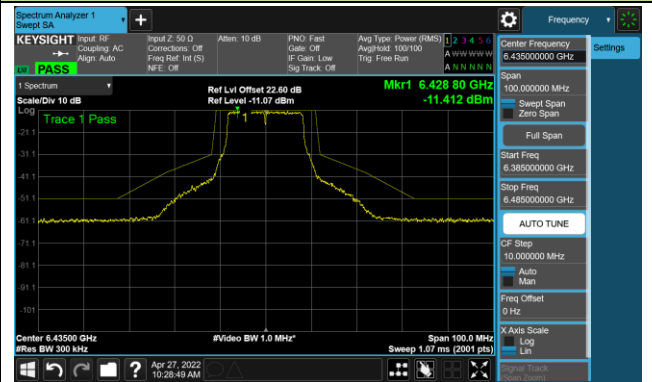


Channel 105 (6475MHz)

 The Reference Level

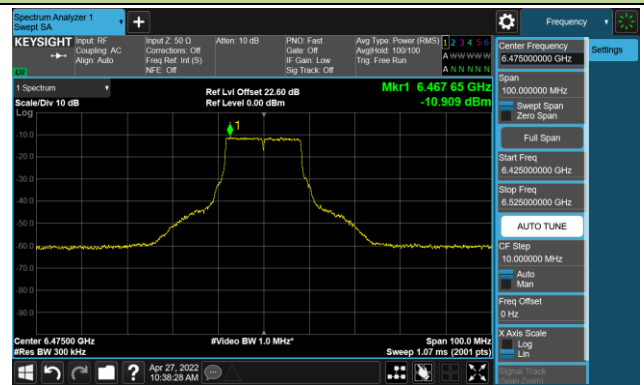


The Mask Data

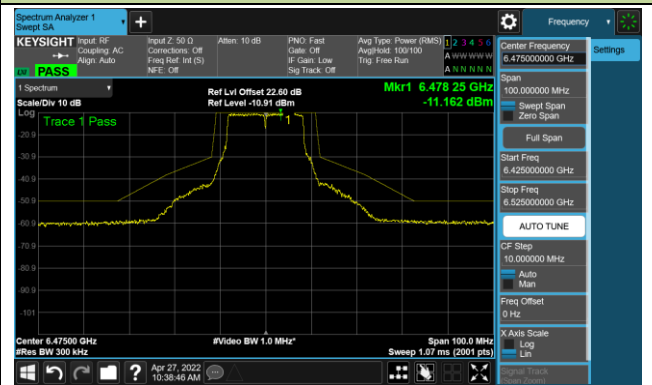 


Channel 113 (6515MHz)

 The Reference Level

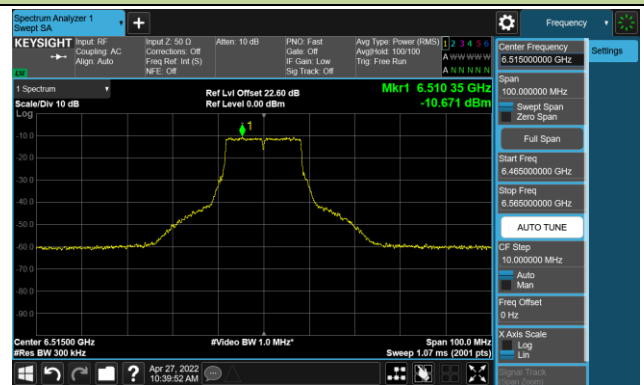


The Mask Data

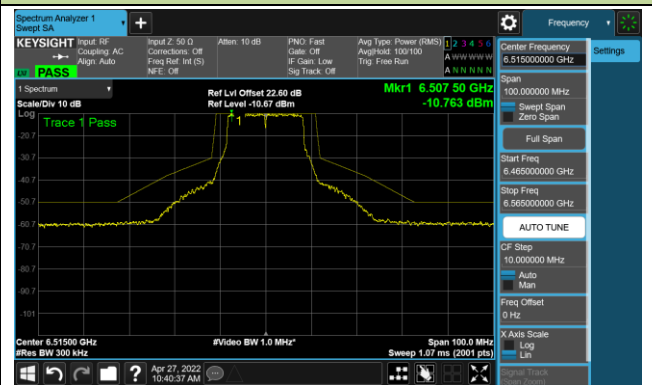 


802.11a - Ant 3

Channel 117 (6535MHz)

 The Reference Level

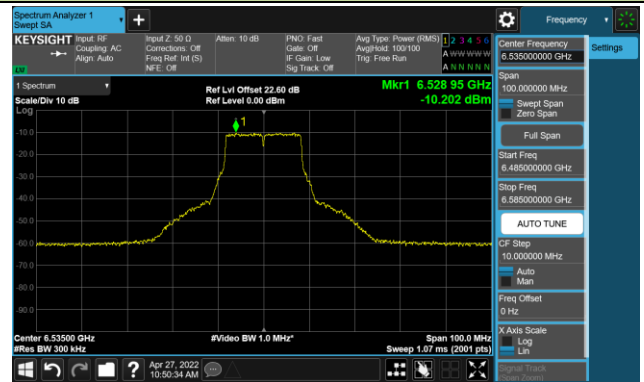


The Mask Data

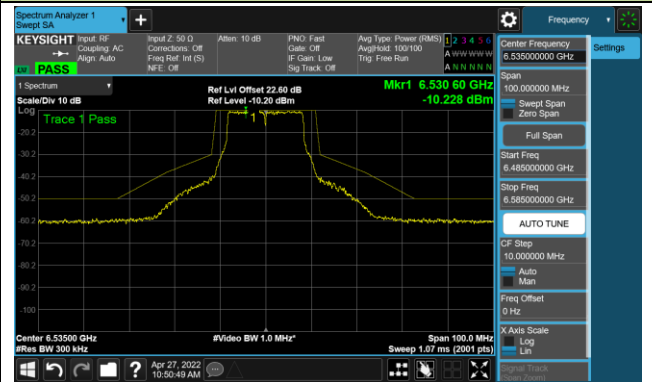 


Channel 149 (6950MHz)

 The Reference Level

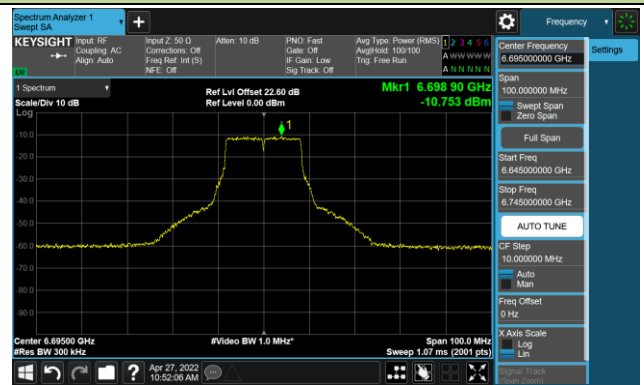


The Mask Data

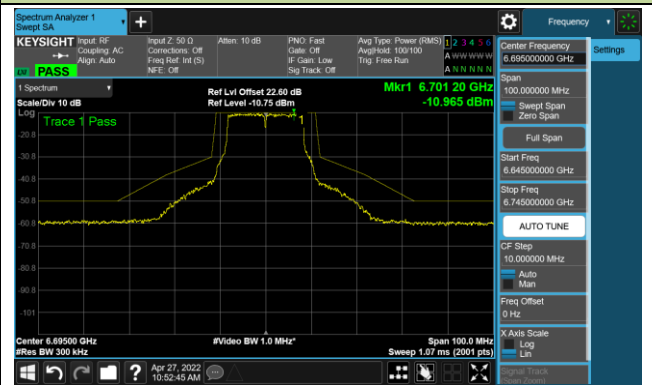 


Channel 181 (6855MHz)

 The Reference Level

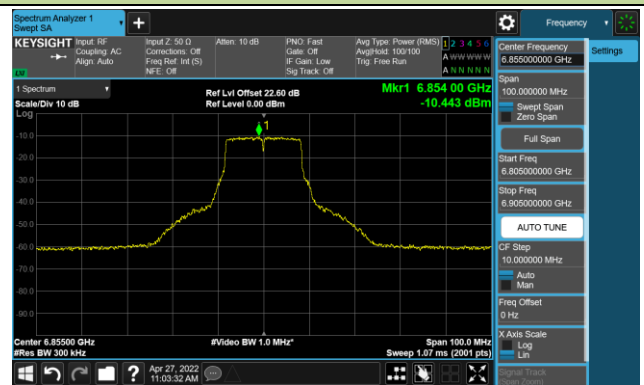


The Mask Data

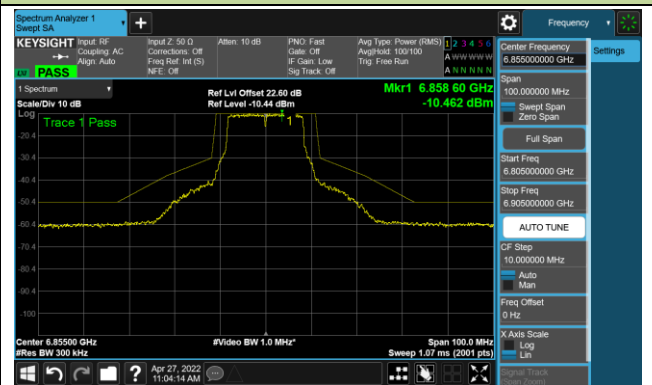 


802.11a - Ant 3

Channel 185 (6875MHz)

 The Reference Level

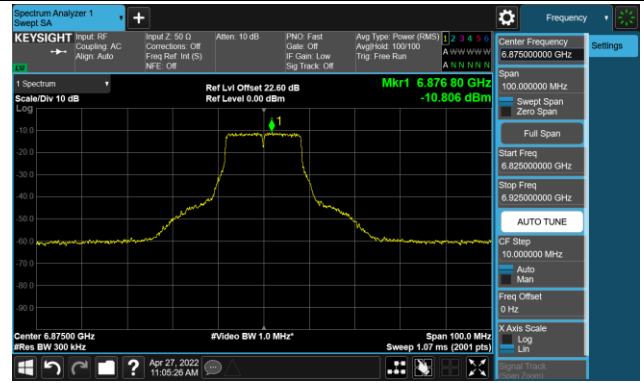


The Mask Data

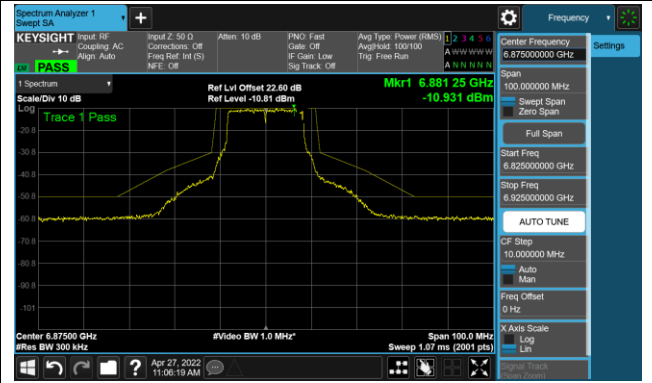 


Channel 189 (6895MHz)

 The Reference Level

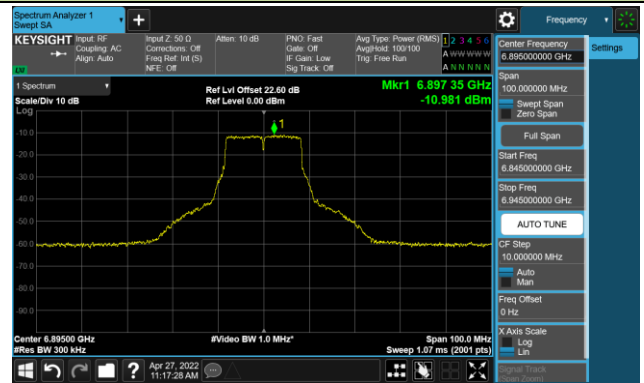


The Mask Data

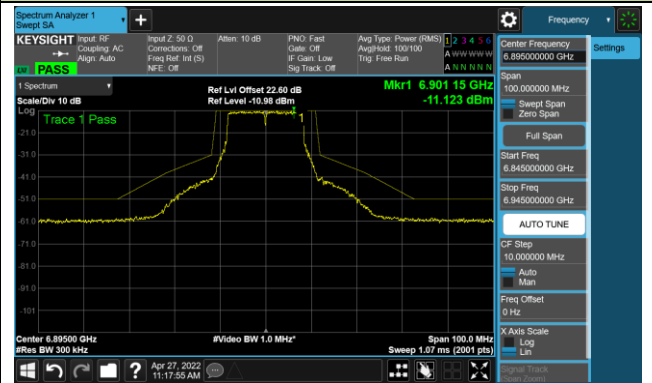 



Channel 209 (6995MHz)

 The Reference Level

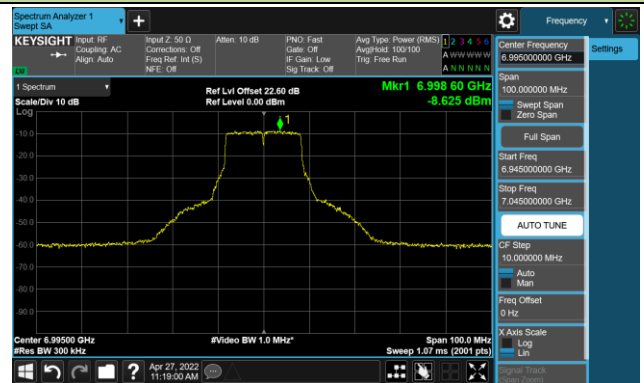

The Mask Data

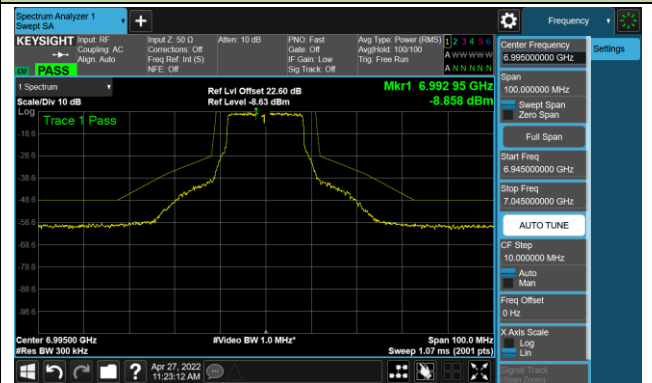 


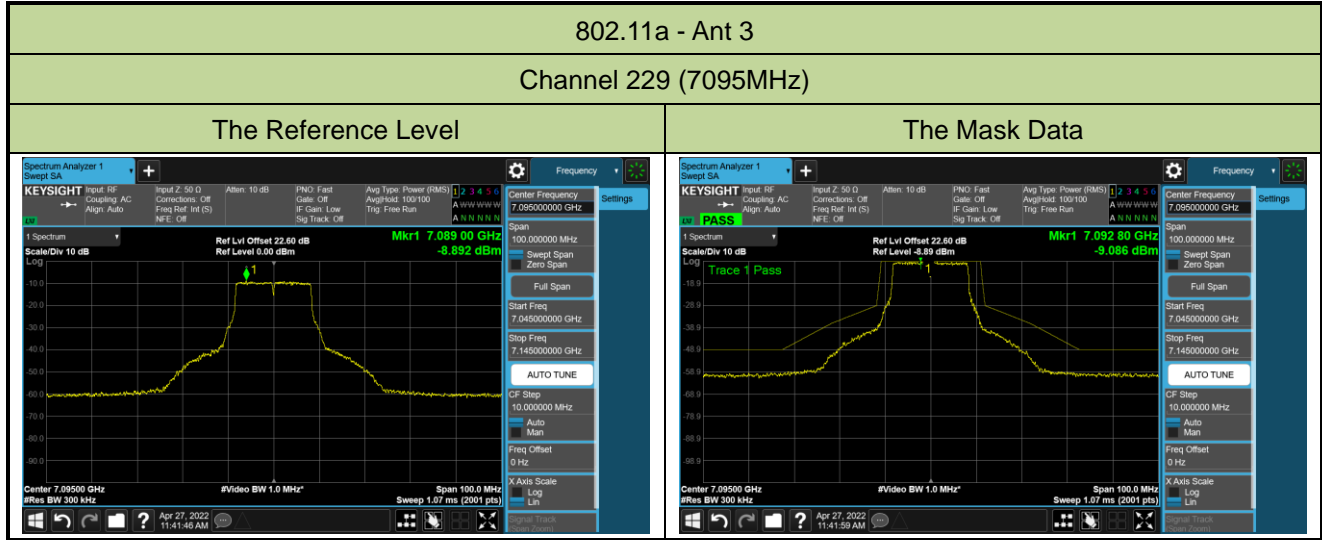 


802.11ax-HE20 – Ant 3

Channel 01 (5955MHz)

 The Reference Level

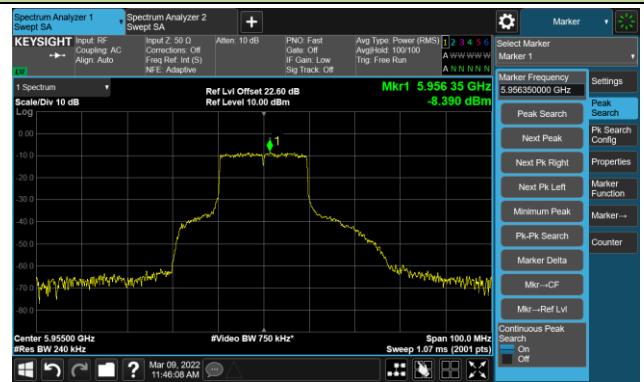

The Mask Data

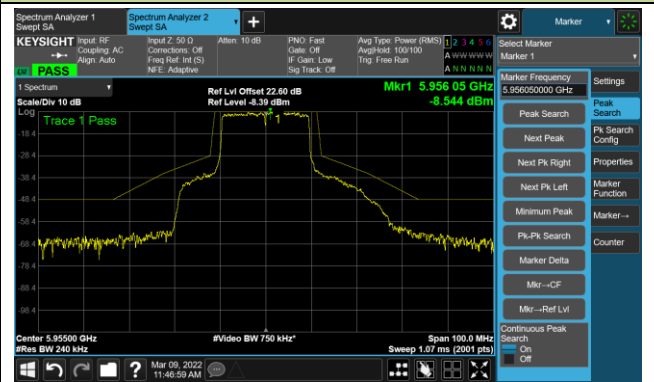 


Channel 49 (6195MHz)

The Reference Level




 The Mask Data

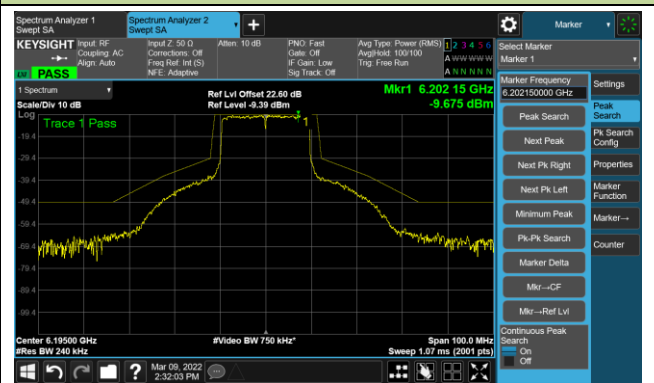


Channel 93 (6415MHz)

 The Reference Level

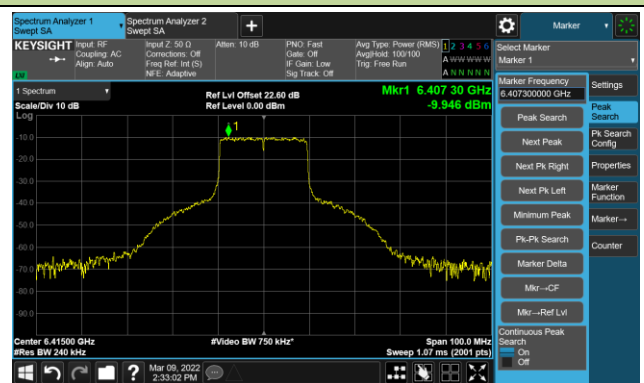


The Mask Data

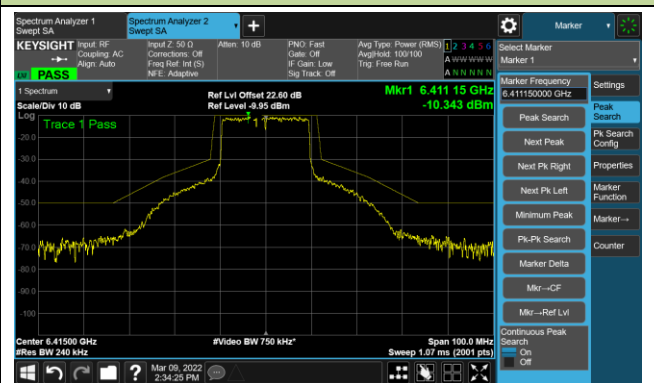 


802.11ax-HE20 Ant 3

Channel 97 (6435MHz)

 The Reference Level

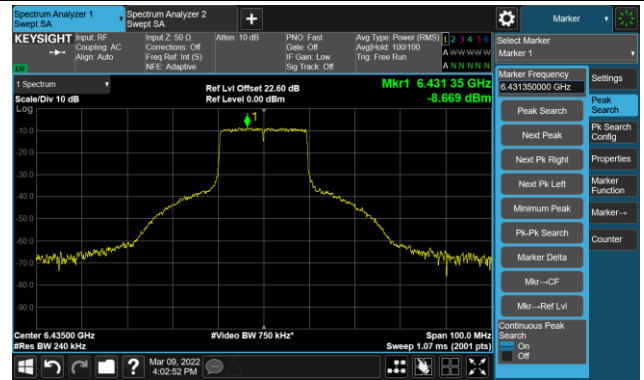


The Mask Data

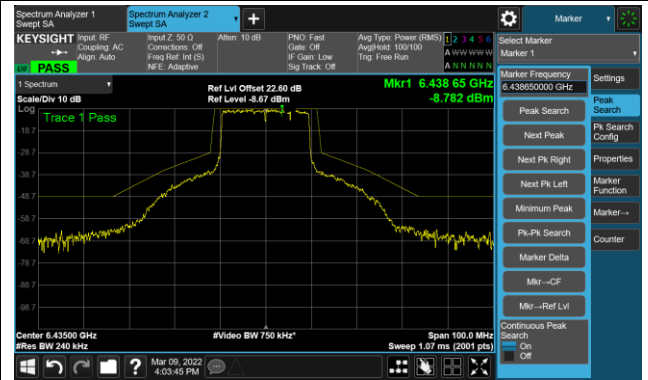 


Channel 105 (6475MHz)

 The Reference Level

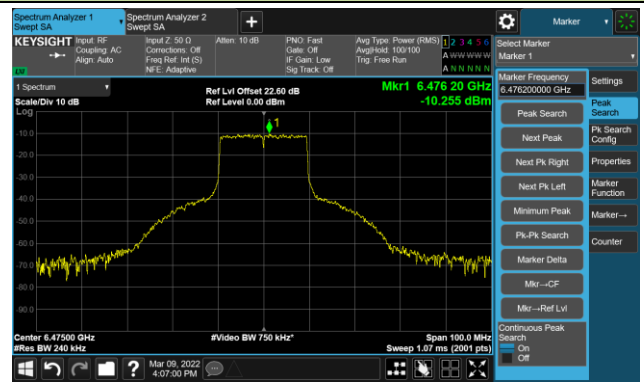


The Mask Data

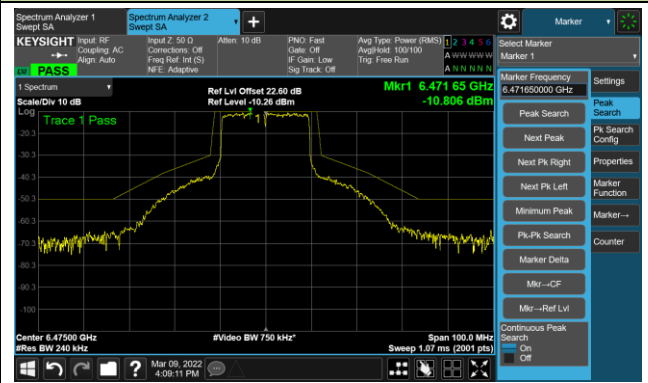 

Channel 113 (6515MHz)

 The Reference Level

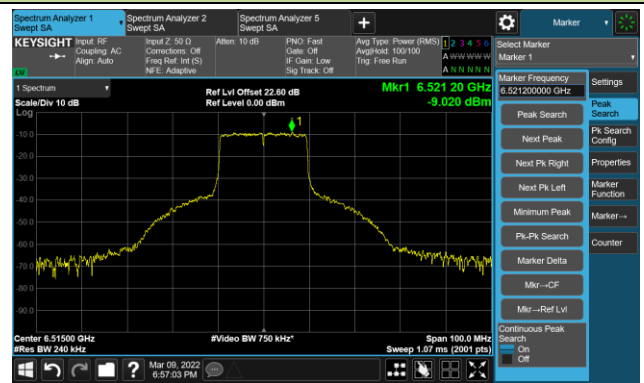


The Mask Data




802.11ax-HE20 Ant 3

Channel 117 (6535MHz)

 The Reference Level

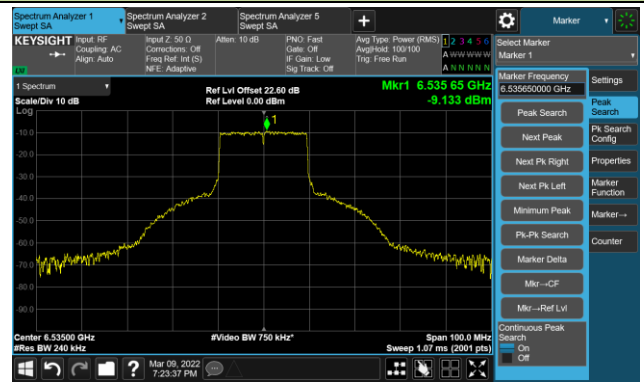


The Mask Data

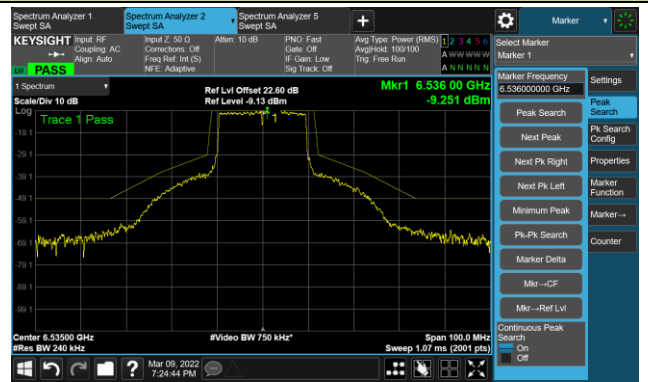 


Channel 149 (6695MHz)

 The Reference Level

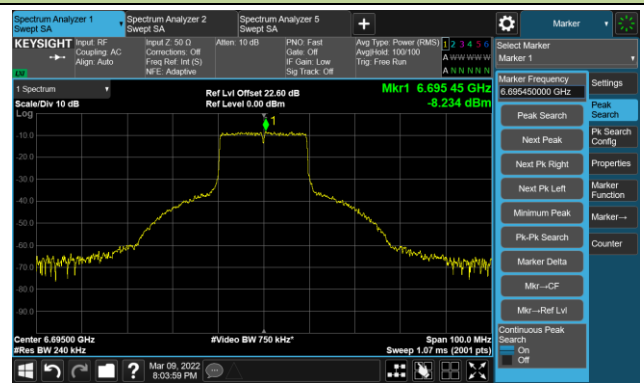


The Mask Data

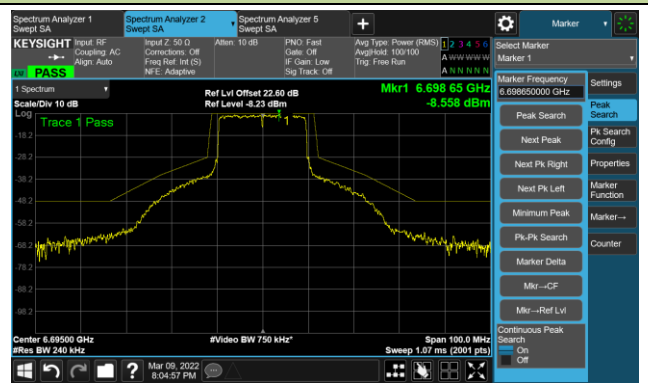 


Channel 181 (6855MHz)

 The Reference Level

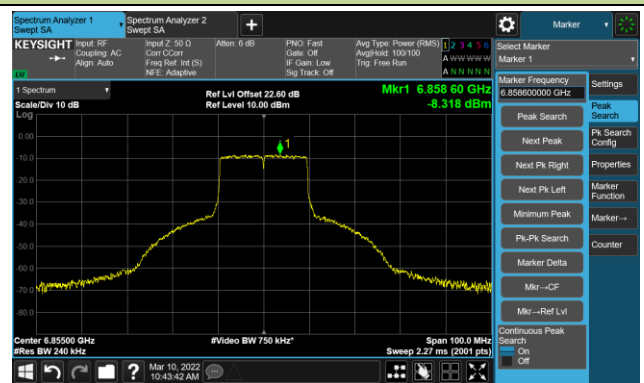


The Mask Data

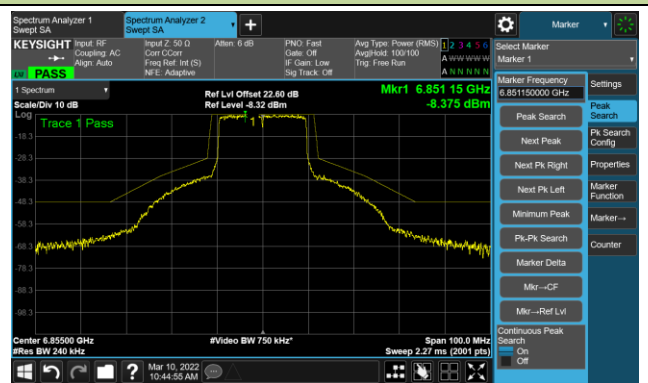 


802.11ax-HE20 Ant 3

Channel 185 (6875MHz)

 The Reference Level

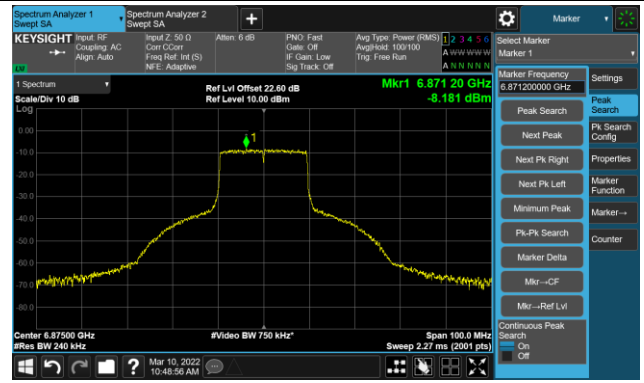


The Mask Data

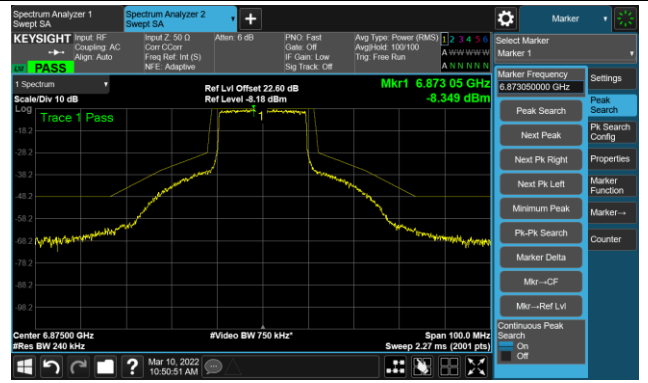 


Channel 189 (6895MHz)

 The Reference Level

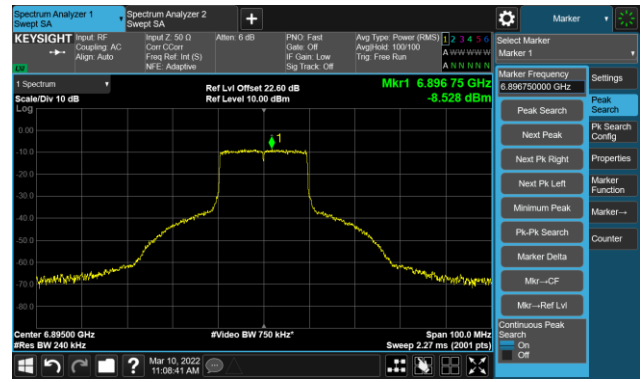


The Mask Data

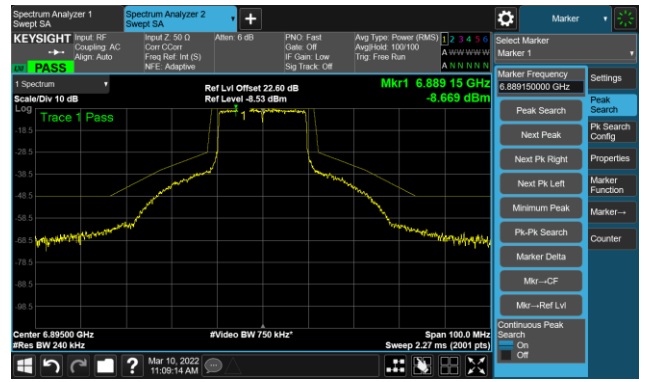 


Channel 209 (6995MHz)

 The Reference Level

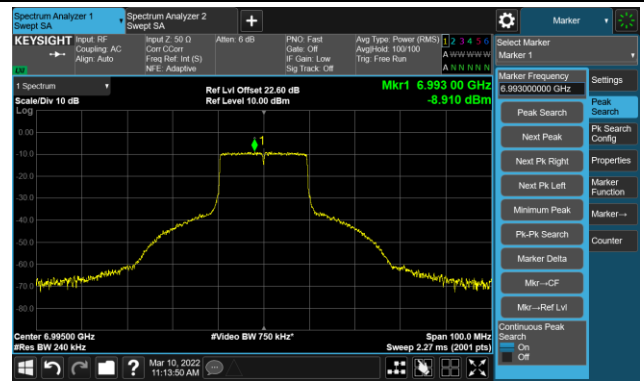

The Mask Data

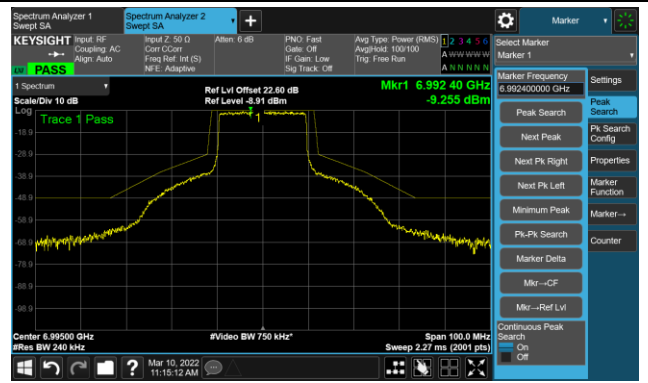 





802.11ax-HE20 Ant 3

Channel 229 (7095MHz)

 The Reference Level

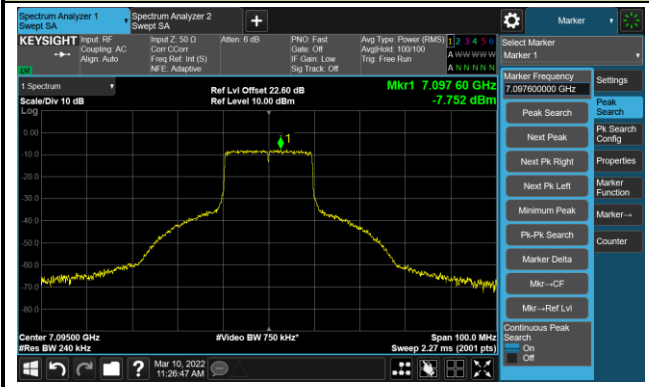


The Mask Data

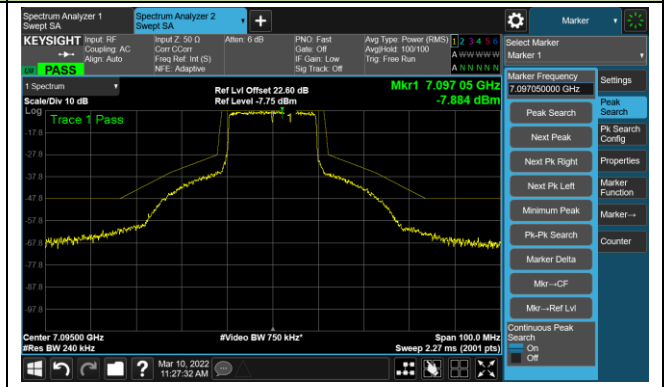 


802.11ax-HE40 Ant 3

Channel 03 (5965MHz)

 The Reference Level

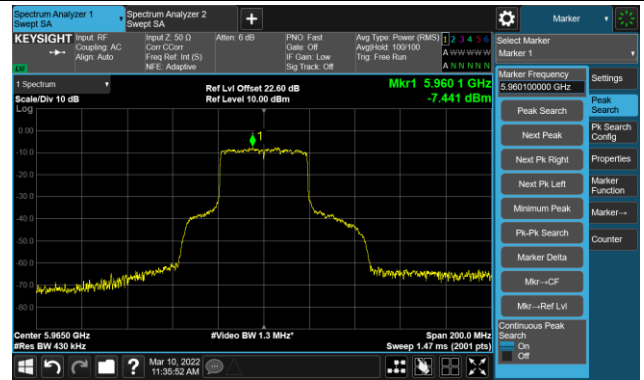


The Mask Data

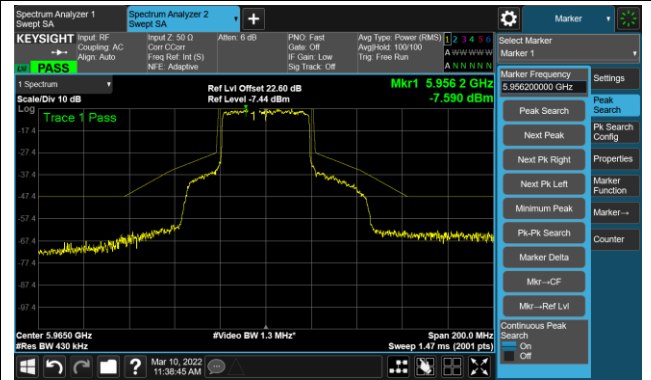 


Channel 51 (6205MHz)

 The Reference Level

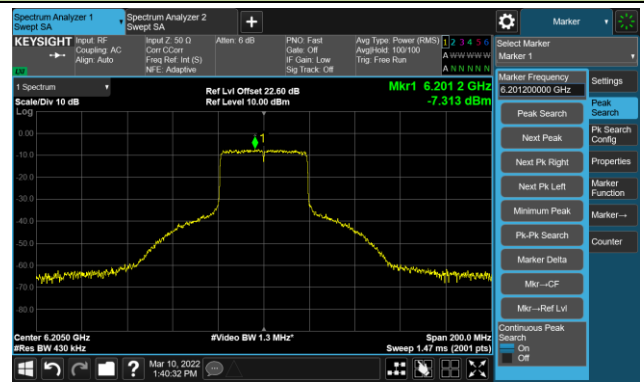


The Mask Data

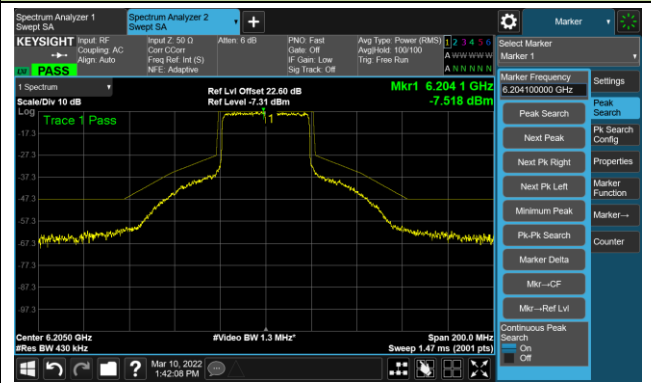 


Channel 91 (6405MHz)

 The Reference Level

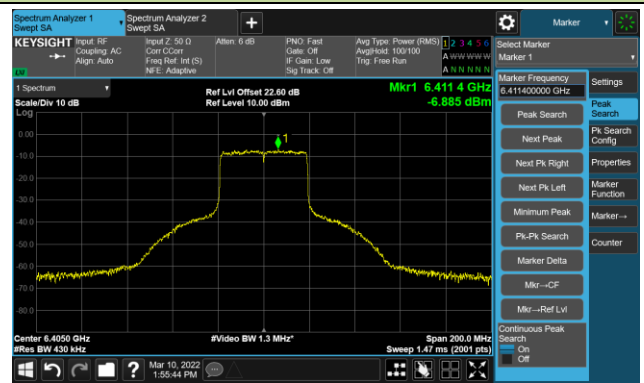


The Mask Data

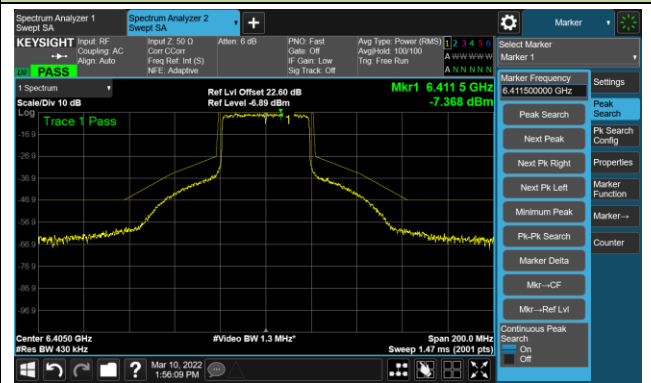 


802.11ax-HE40 Ant 3

Channel 99 (6445MHz)

 The Reference Level

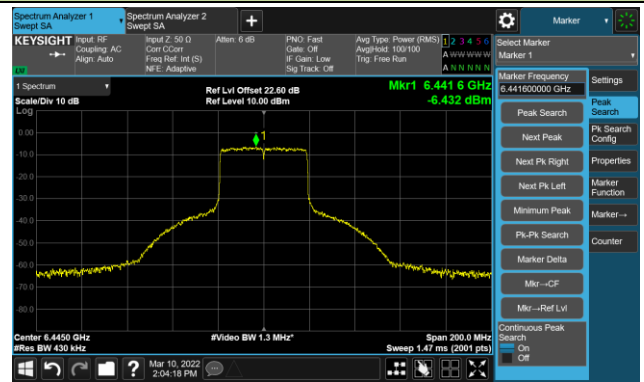


The Mask Data

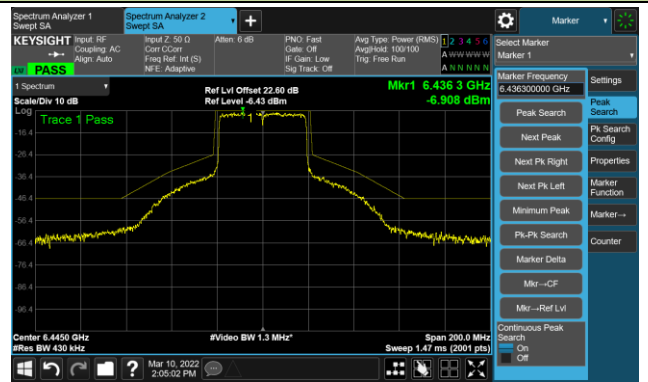 


Channel 107 (6485MHz)

 The Reference Level

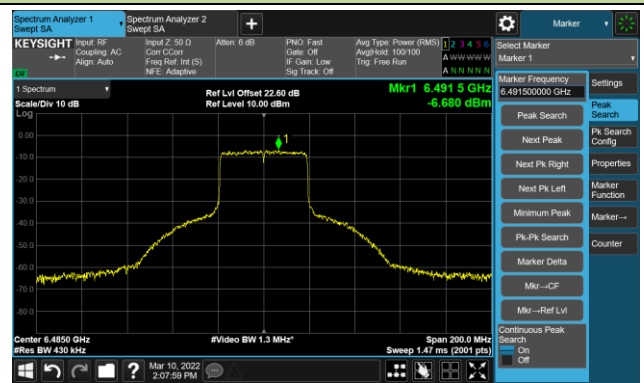


The Mask Data

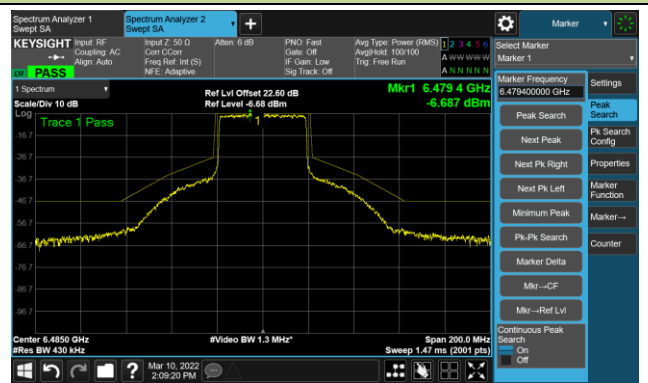 


Channel 115 (6525MHz)

 The Reference Level

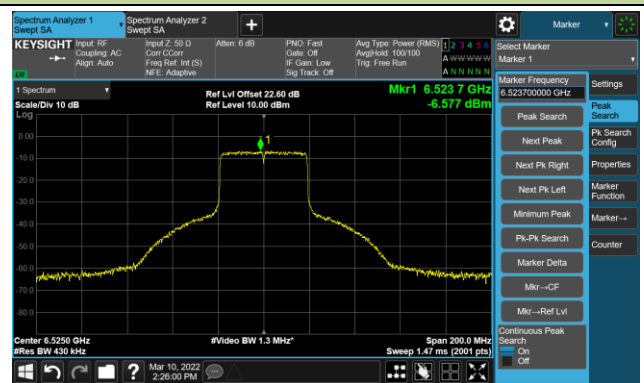


The Mask Data

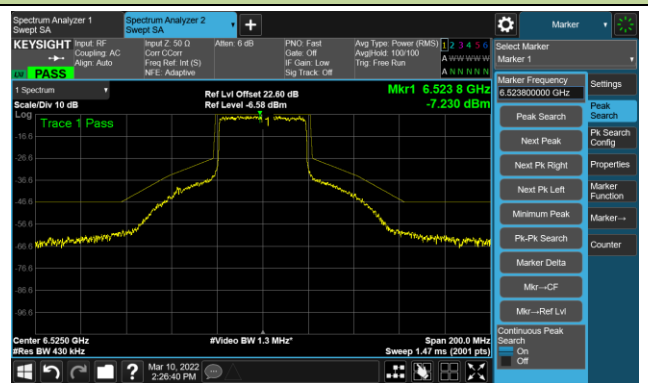 


802.11ax-HE40 Ant 3

Channel 123 (6565MHz)

 The Reference Level

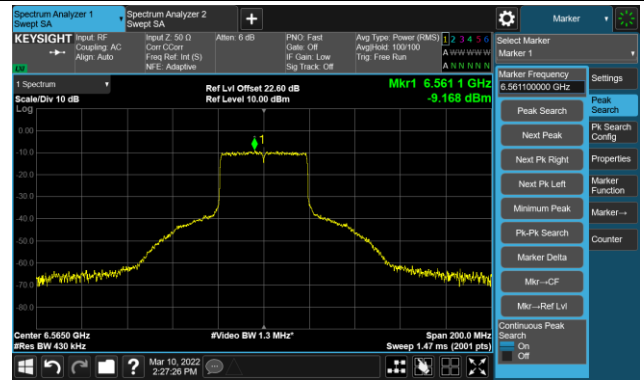


The Mask Data

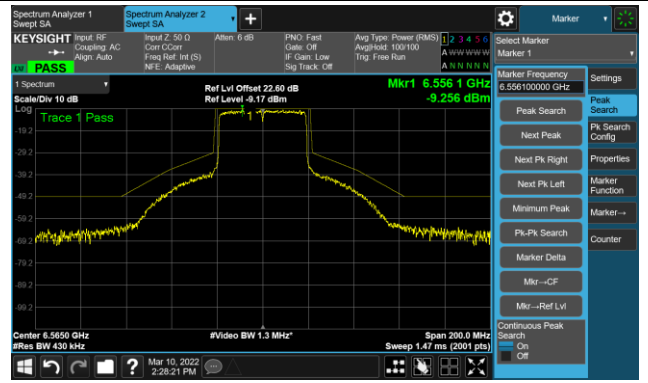 


Channel 147 (6685MHz)

 The Reference Level

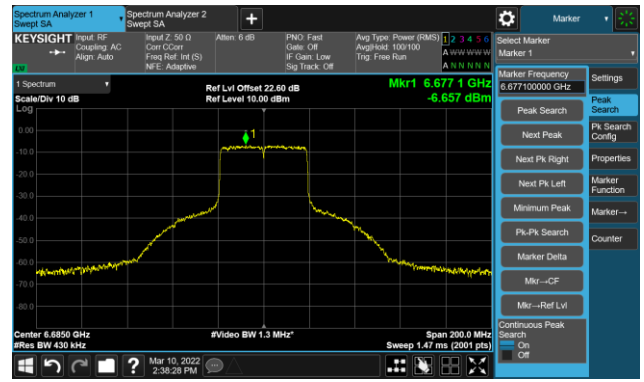


The Mask Data

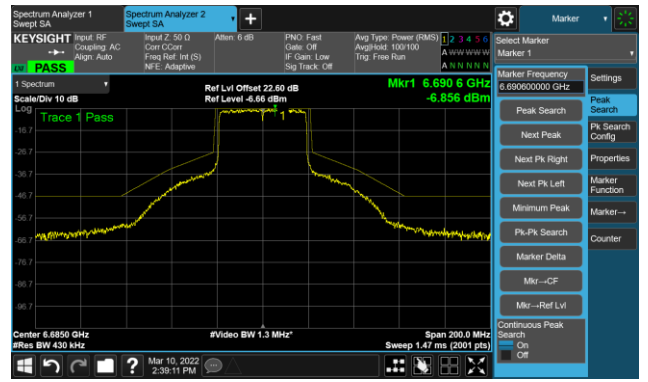 


Channel 187 (6885MHz)

 The Reference Level

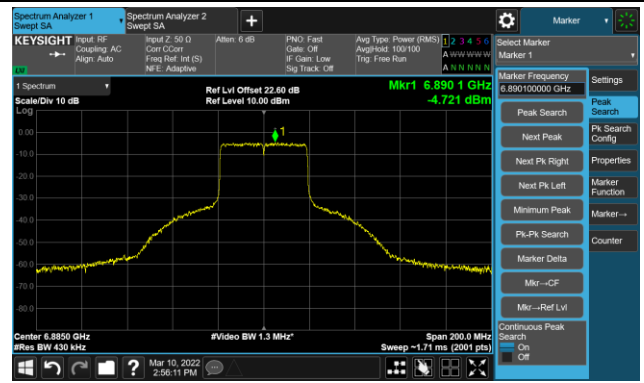


The Mask Data

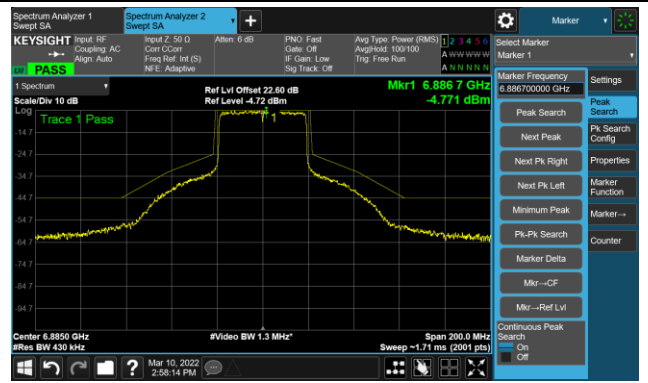 


802.11ax-HE40 Ant 3

Channel 195 (6925MHz)

 The Reference Level

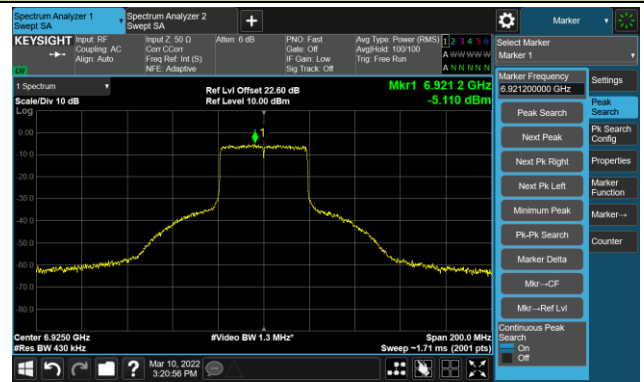


The Mask Data

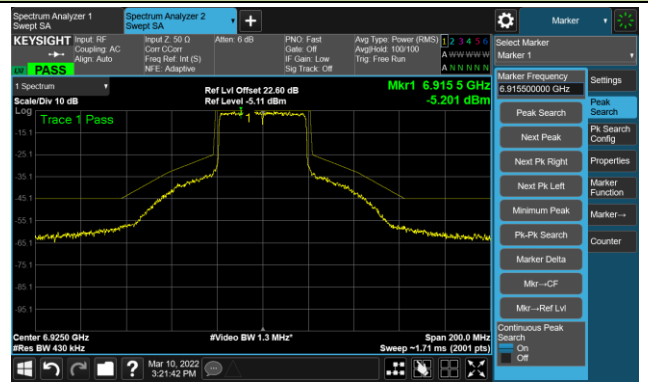 


Channel 211 (7005MHz)

 The Reference Level

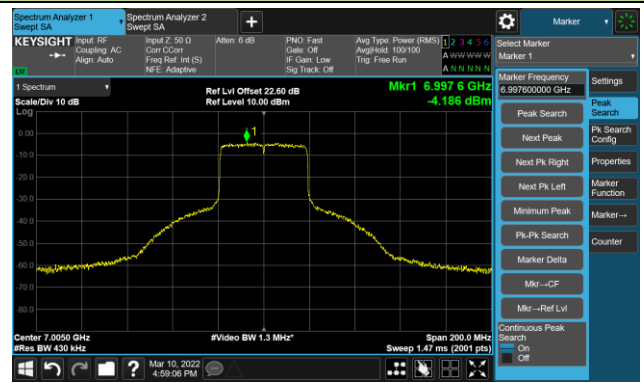


The Mask Data

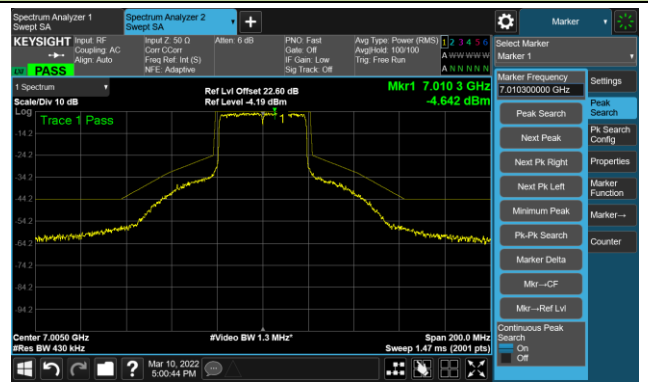 


Channel 227 (7085MHz)

 The Reference Level

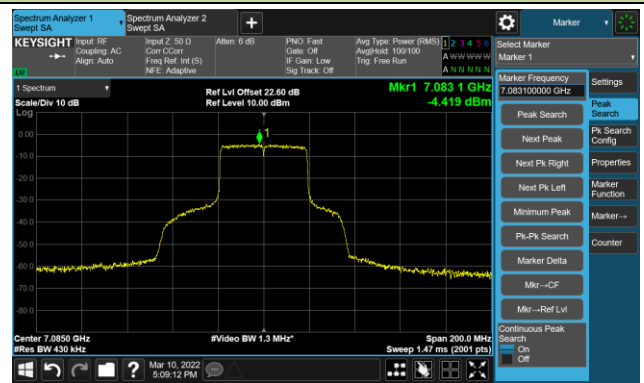


The Mask Data

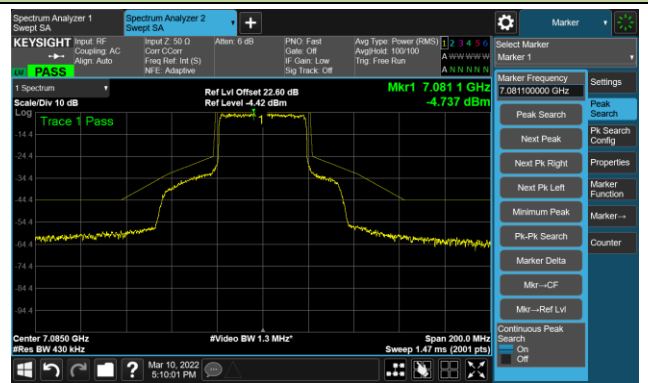 


802.11ax-HE80 Ant 3

Channel 07 (5985MHz)

 The Reference Level

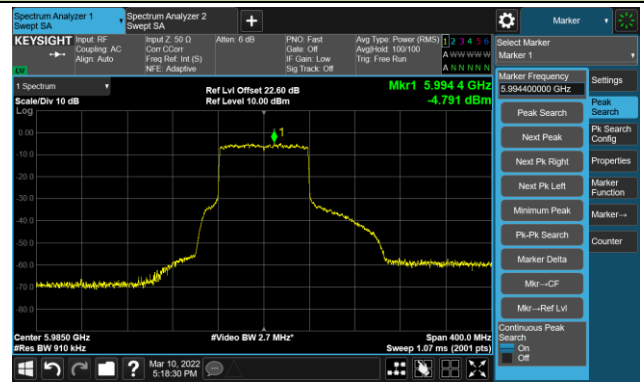


The Mask Data

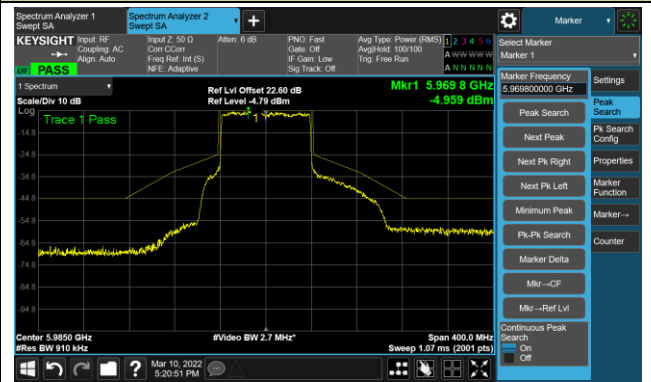 


Channel 55 (6225MHz)

 The Reference Level

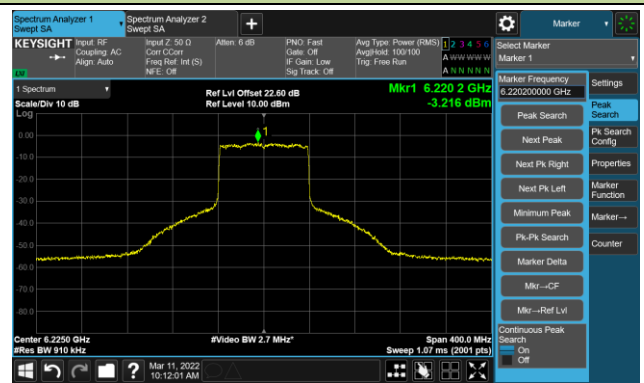


The Mask Data

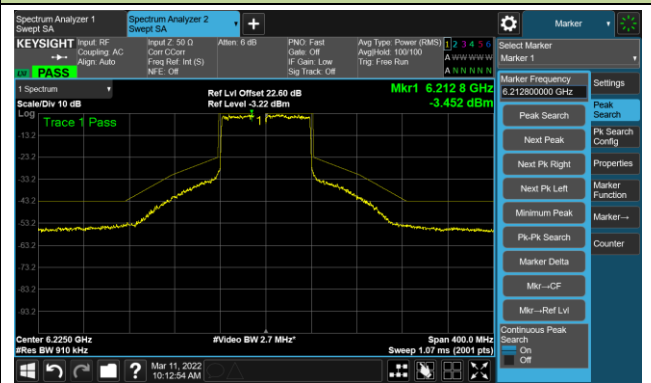 

Channel 87 (6385MHz)

 The Reference Level

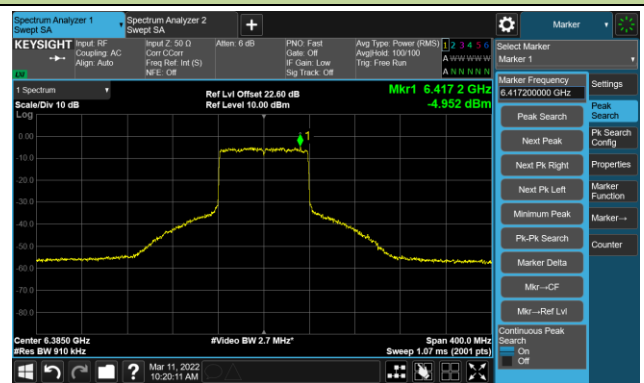

The Mask Data

