 



802.11ax-HE160 Ant 0

Channel 15 (6025MHz)

The Reference Level

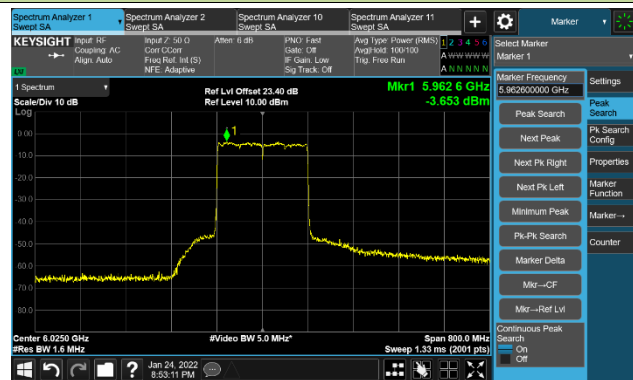


 The Mask Data

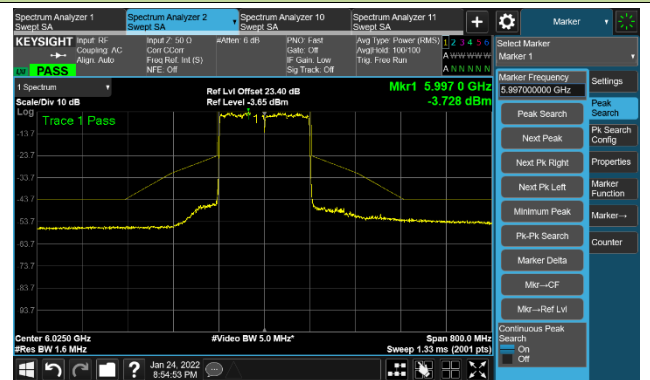


Channel 47 (6185MHz)

 The Reference Level

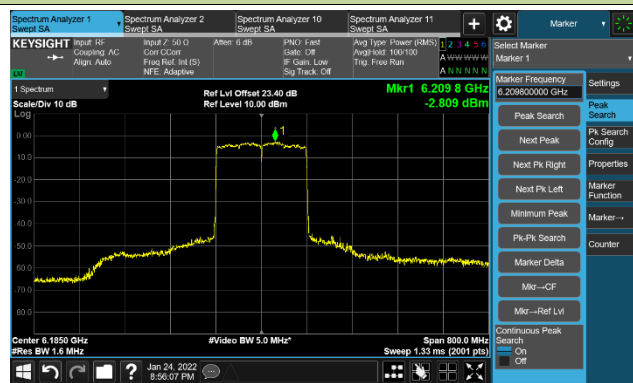


The Mask Data

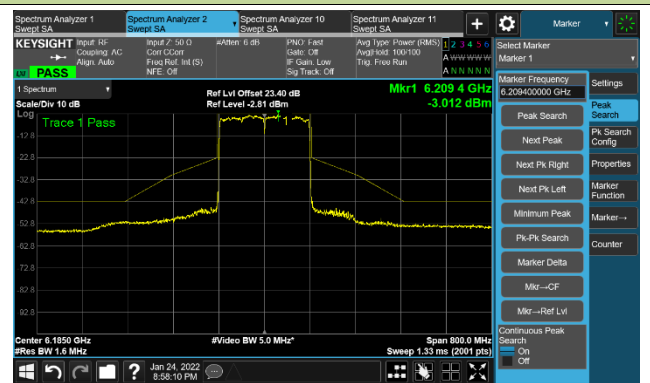 


Channel 79 (6345MHz)

 The Reference Level

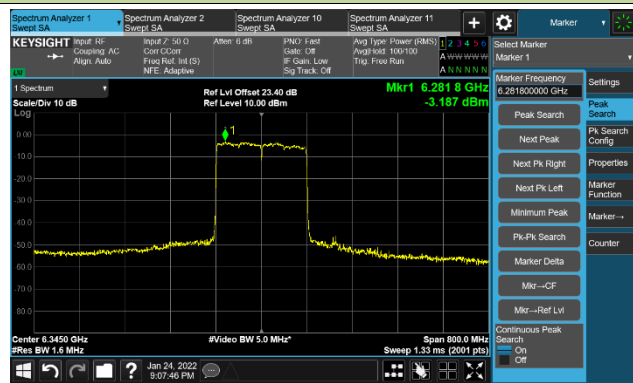


The Mask Data

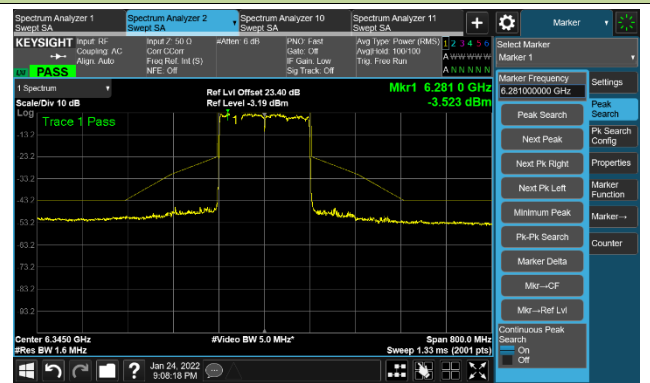 


802.11ax-HE160 Ant 0

Channel 111 (6505MHz)

 The Reference Level

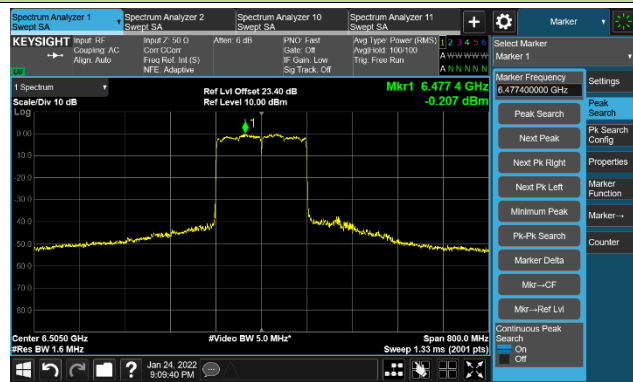


The Mask Data

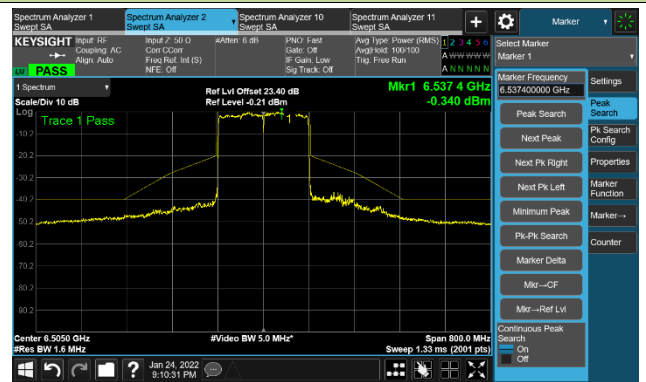 


Channel 143 (6665MHz)

 The Reference Level

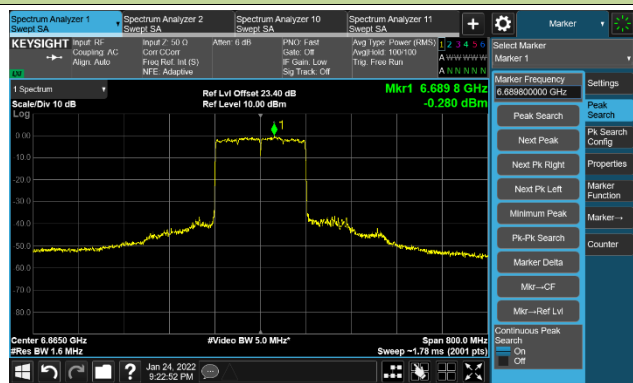


The Mask Data

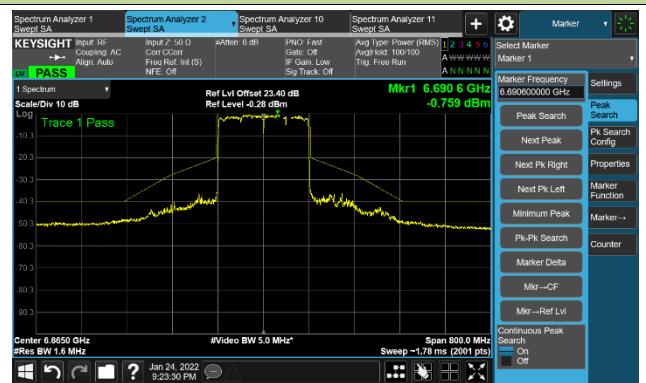 


Channel 175 (6825MHz)

 The Reference Level

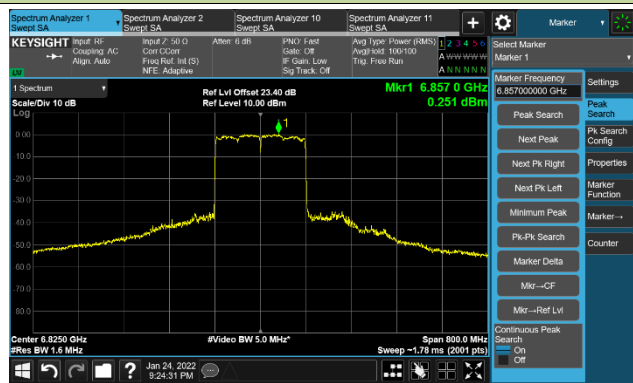


The Mask Data

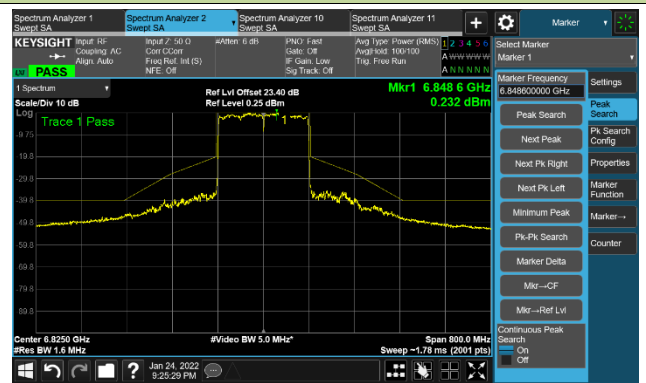 


802.11ax-HE160 Ant 0

Channel 207 (6985MHz)

 The Reference Level

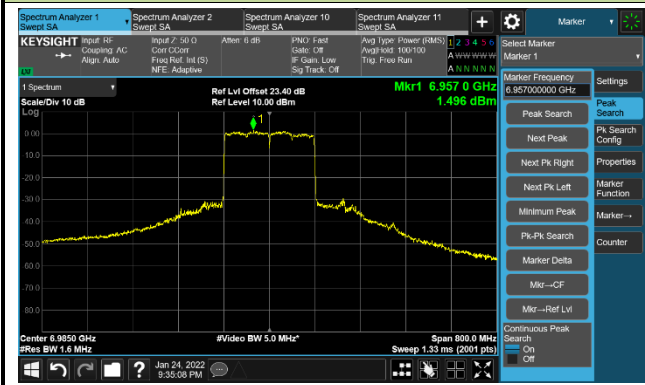


The Mask Data

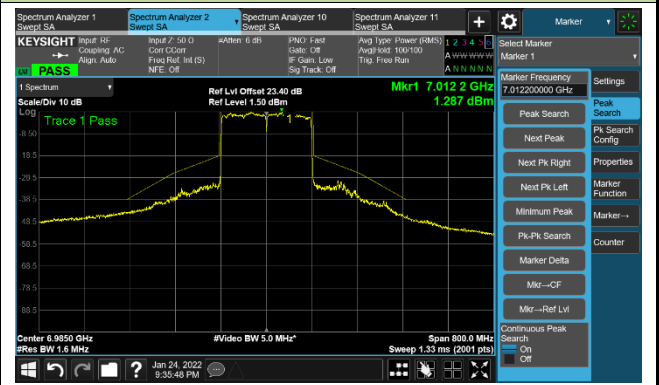 


802.11a - Ant 1

Channel 01 (5955MHz)

 The Reference Level

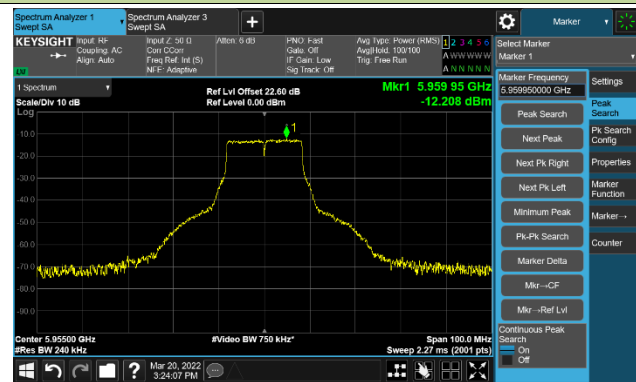


The Mask Data

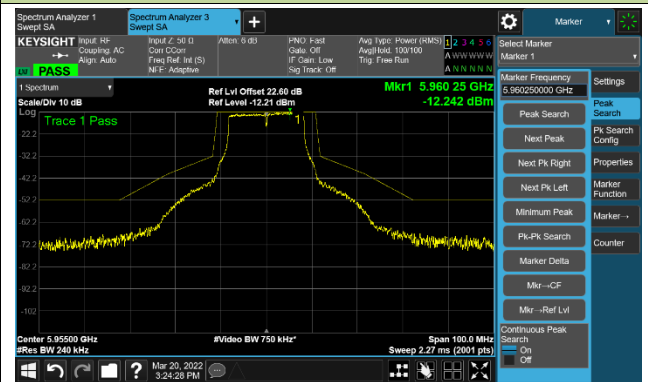 


Channel 49 (6195MHz)

 The Reference Level

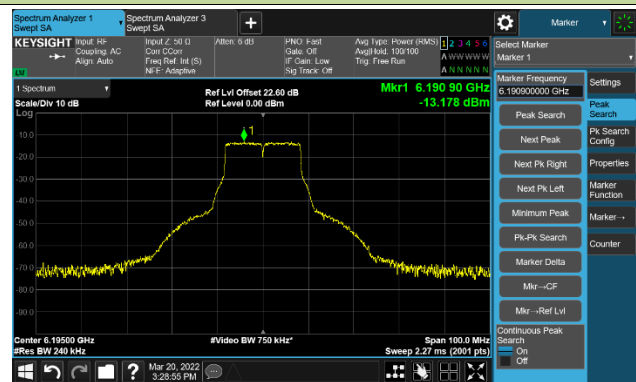


The Mask Data

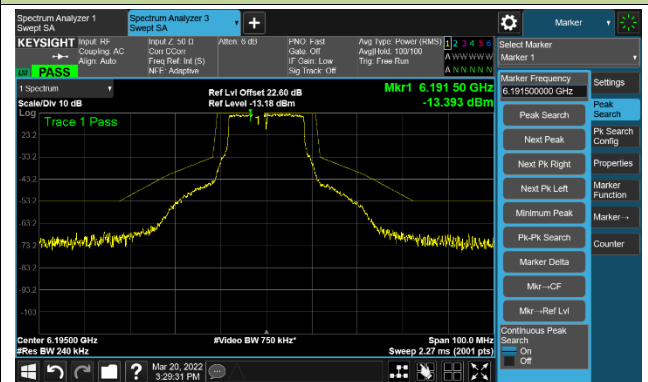 


Channel 93 (6415MHz)

 The Reference Level

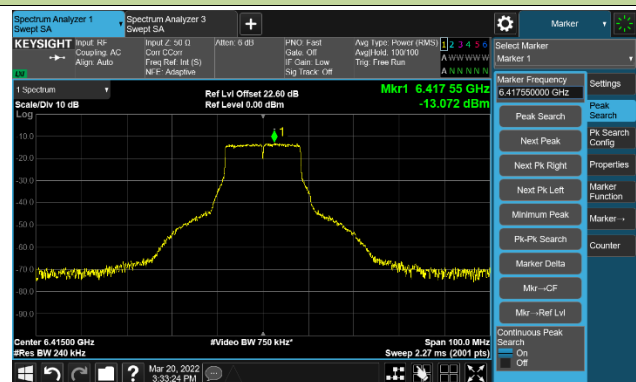


The Mask Data

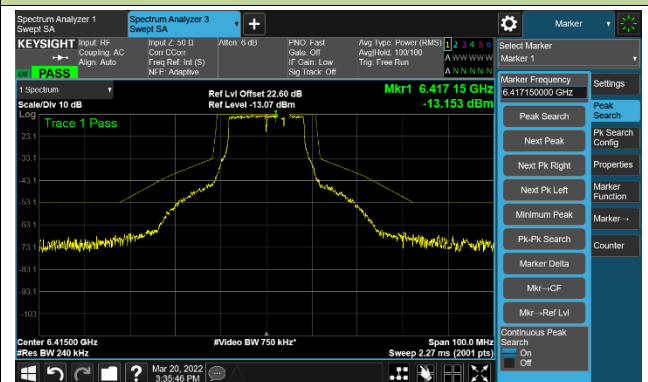 


802.11a - Ant 1

Channel 97 (6435MHz)

 The Reference Level

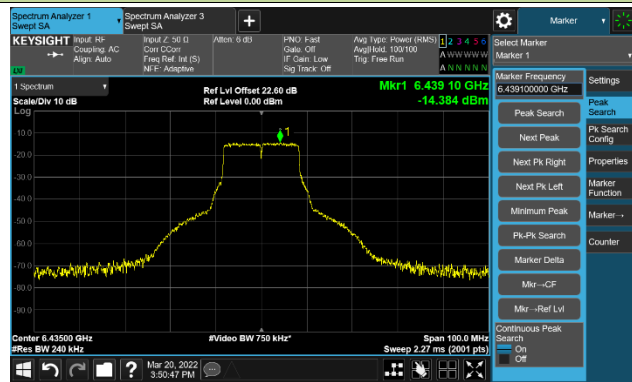


The Mask Data

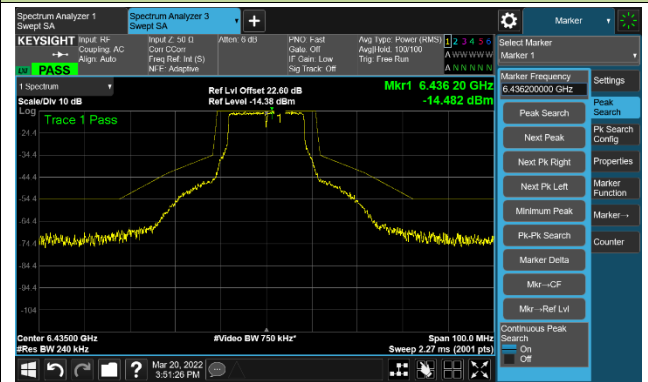 


Channel 105 (6475MHz)

 The Reference Level

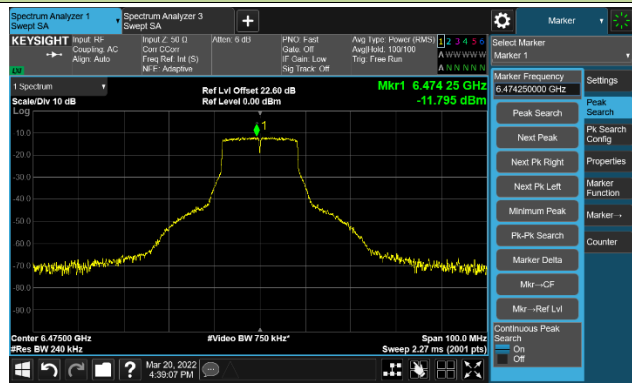


The Mask Data

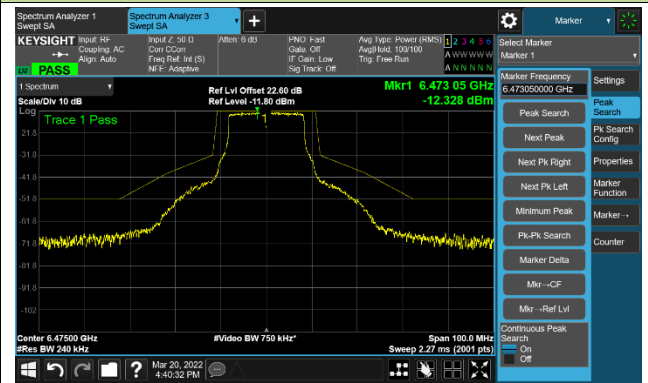 


Channel 113 (6515MHz)

 The Reference Level

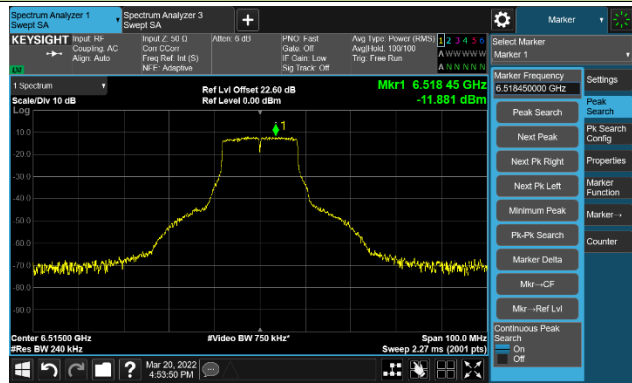


The Mask Data

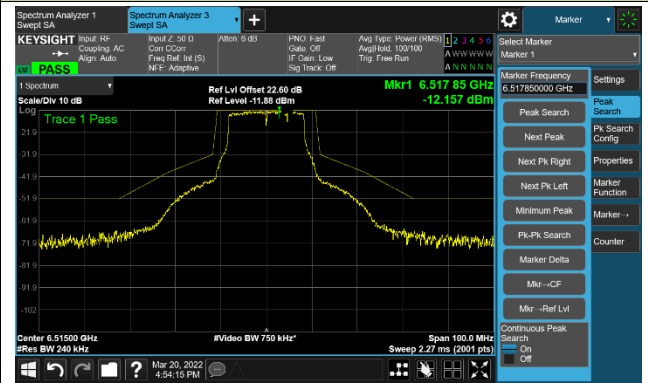 


802.11a - Ant 1

Channel 117 (6535MHz)

 The Reference Level

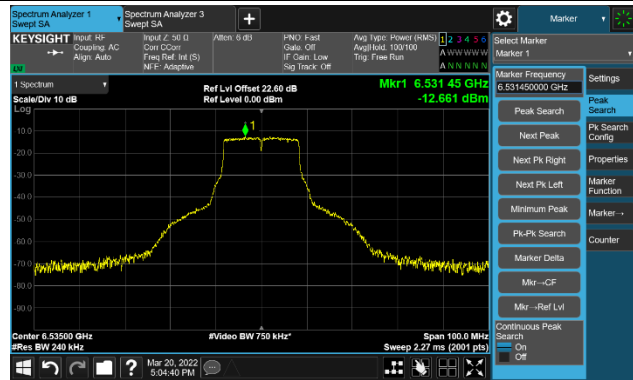


The Mask Data

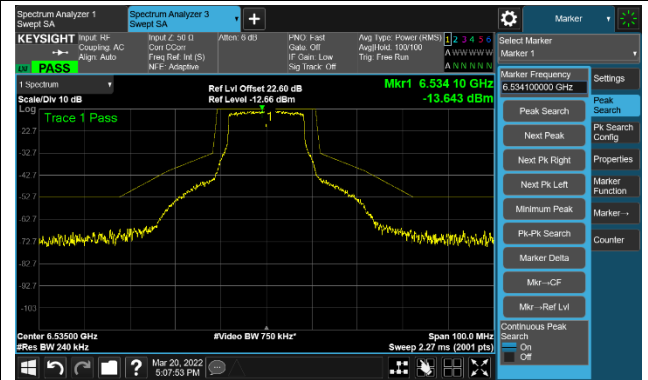 


Channel 149 (6695MHz)

 The Reference Level

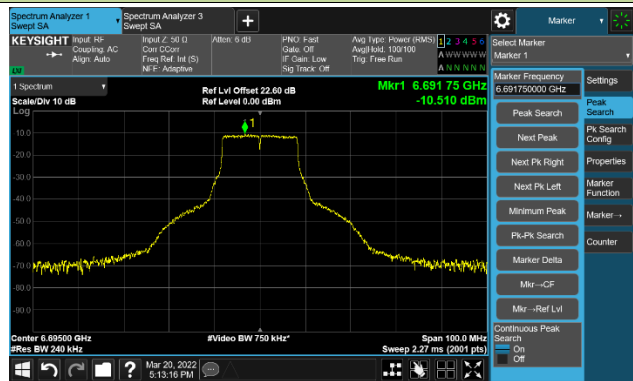


The Mask Data

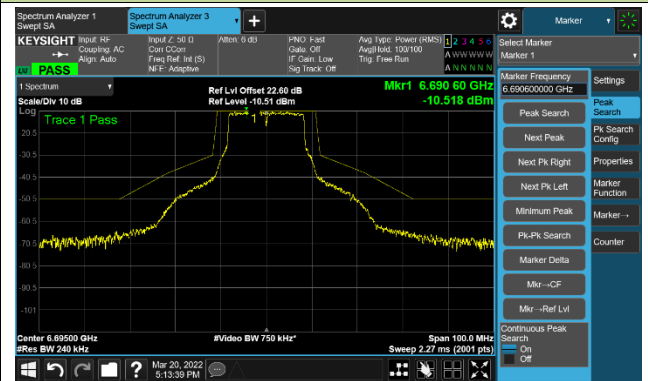 


Channel 181 (6855MHz)

 The Reference Level

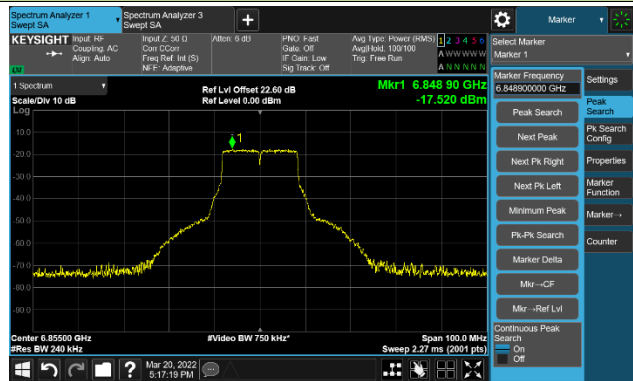


The Mask Data

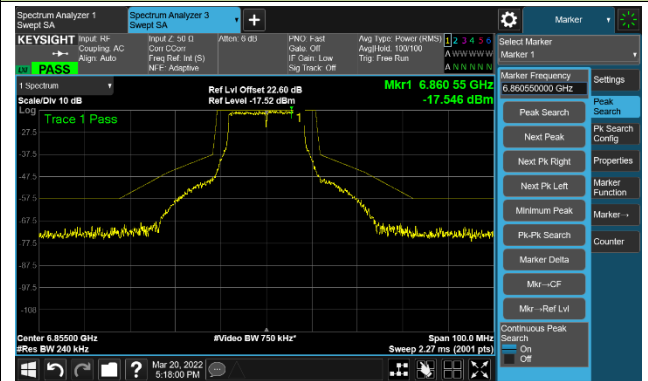 


802.11a - Ant 1

Channel 185 (6875MHz)

 The Reference Level

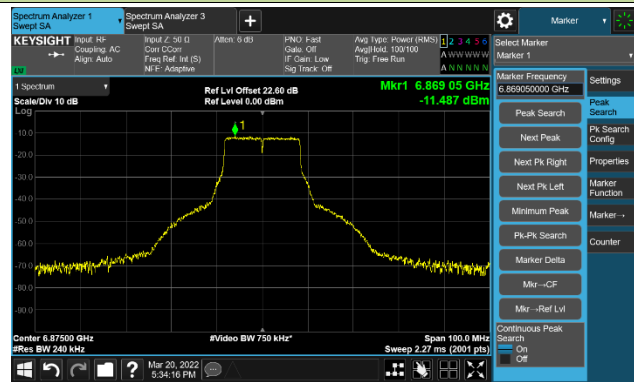


The Mask Data

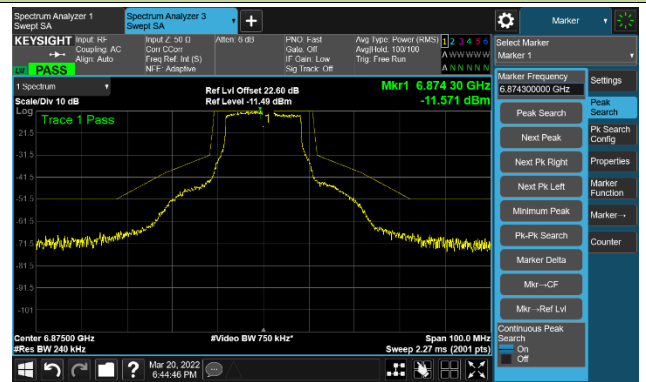 


Channel 189 (6895MHz)

 The Reference Level

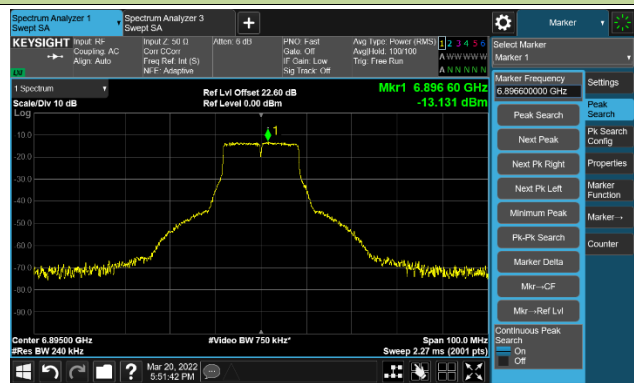


The Mask Data

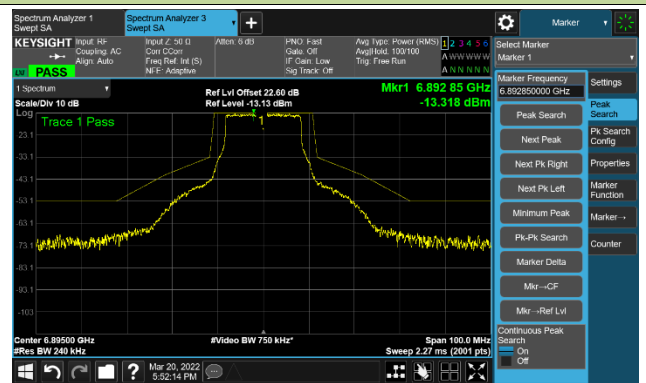 


Channel 209 (6995MHz)

 The Reference Level

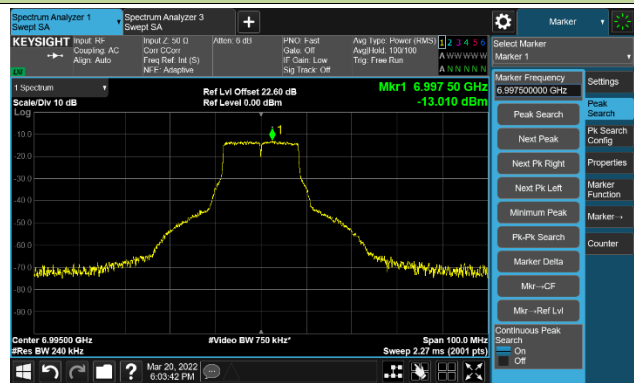


The Mask Data

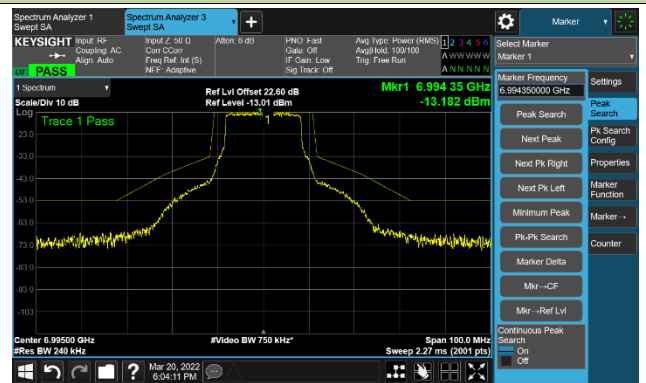 


802.11a - Ant 1

Channel 229 (7095MHz)

 The Reference Level

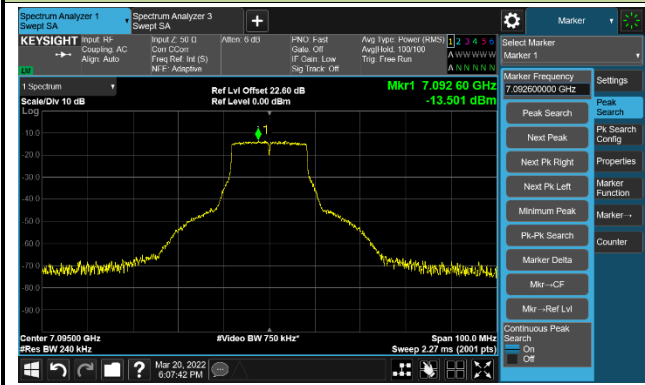

The Mask Data

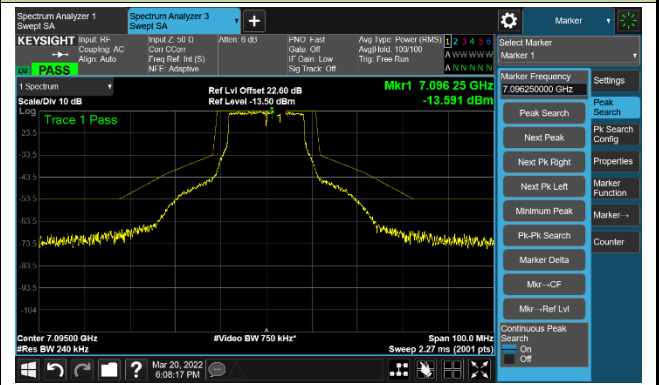 





802.11ax-HE20 - Ant 1

Channel 01 (5955MHz)

 The Reference Level

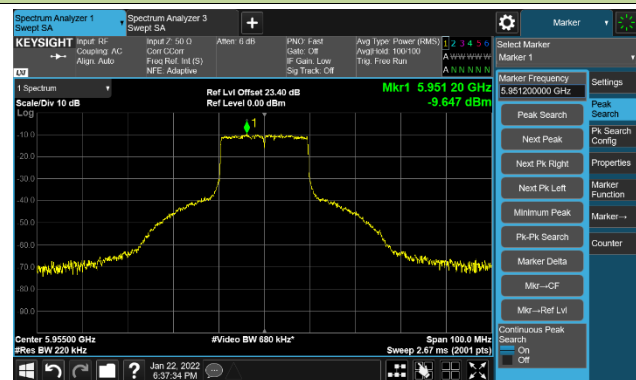

The Mask Data

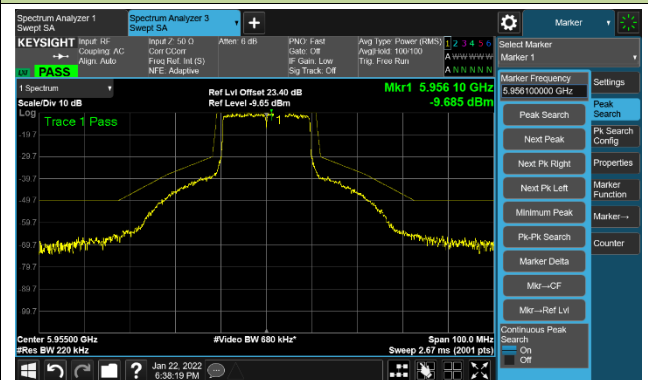 


Channel 49 (6195MHz)

The Reference Level




 The Mask Data

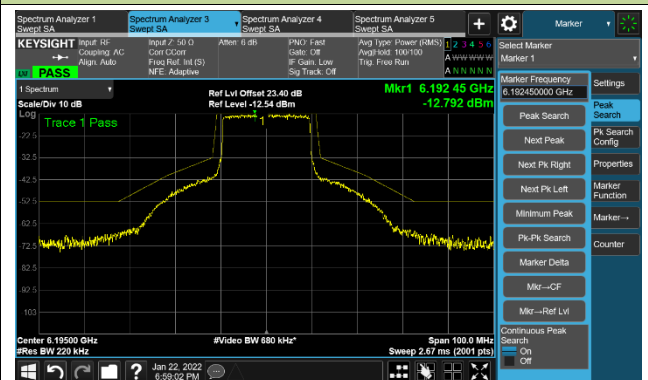


Channel 93 (6415MHz)

 The Reference Level

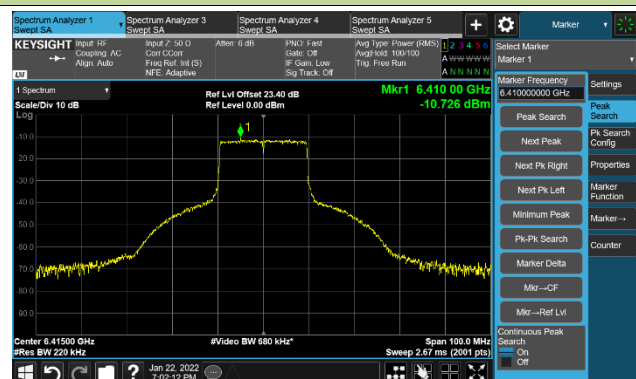

The Mask Data

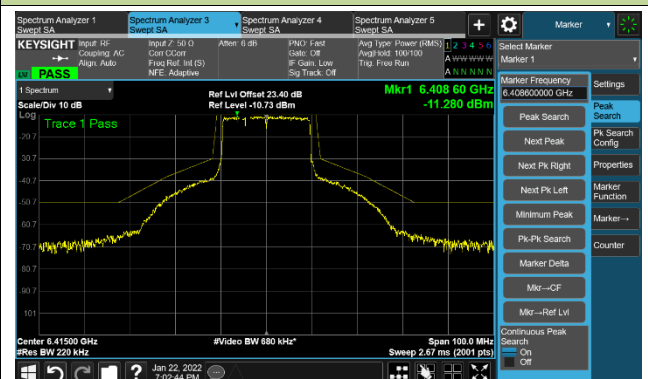 


802.11ax-HE20 Ant 1

Channel 97 (6435MHz)

The Reference Level




 The Mask Data

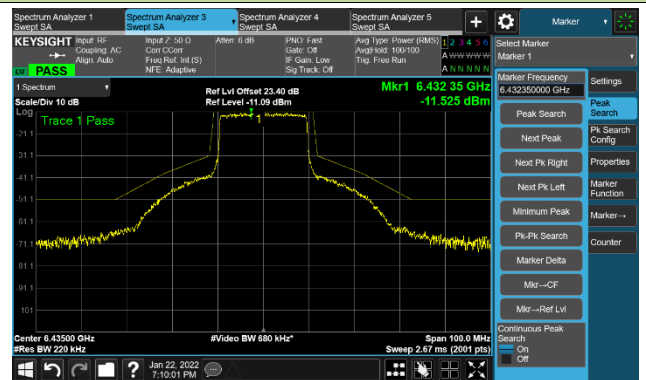


Channel 105 (6475MHz)

 The Reference Level

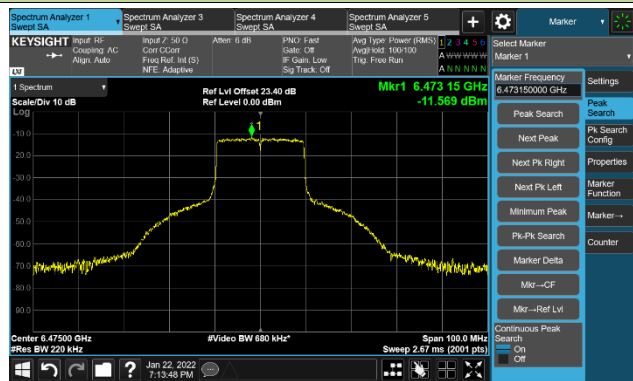

The Mask Data

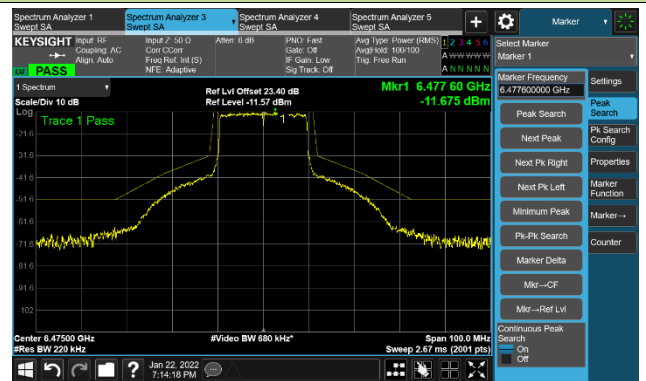 


Channel 113 (6515MHz)

The Reference Level



 The Mask Data

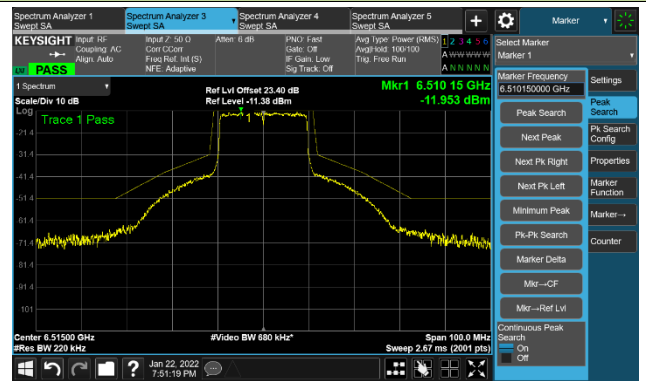


802.11ax-HE20 Ant 1

Channel 117 (6535MHz)

The Reference Level




 The Mask Data

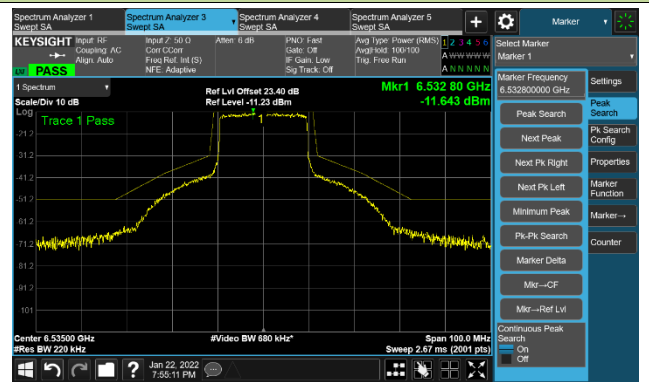


Channel 149 (695MHz)

 The Reference Level

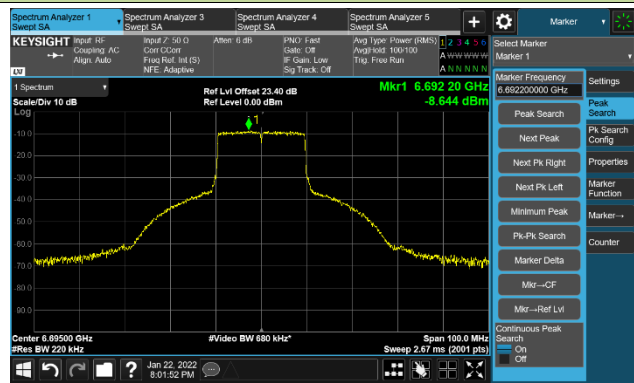


The Mask Data

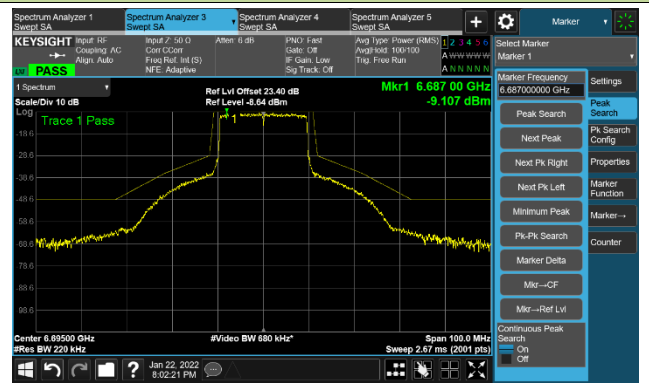 


Channel 181 (685MHz)

 The Reference Level

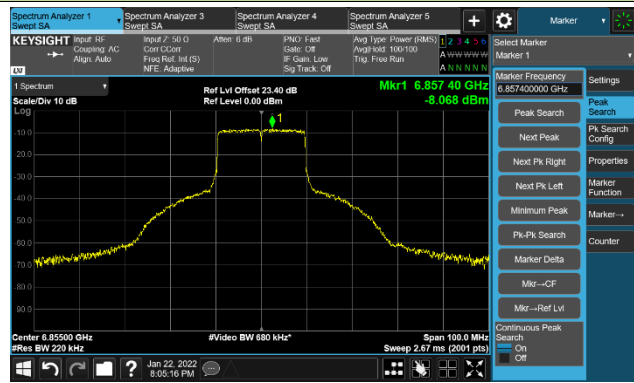


The Mask Data

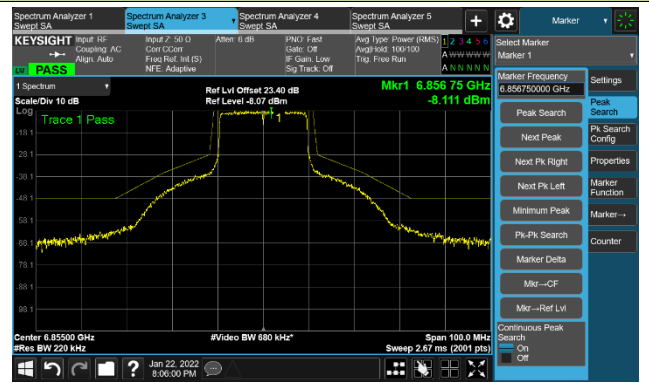 


802.11ax-HE20 Ant 1

Channel 185 (6875MHz)

 The Reference Level

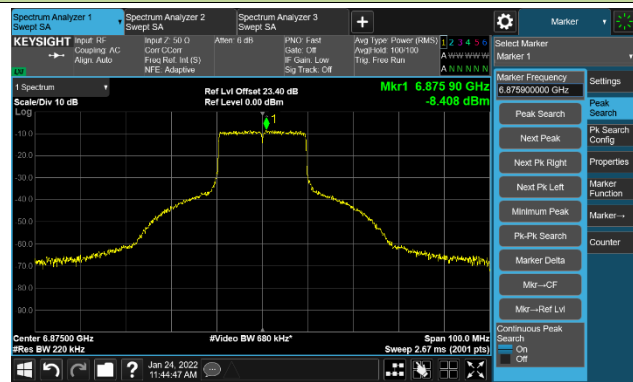


The Mask Data

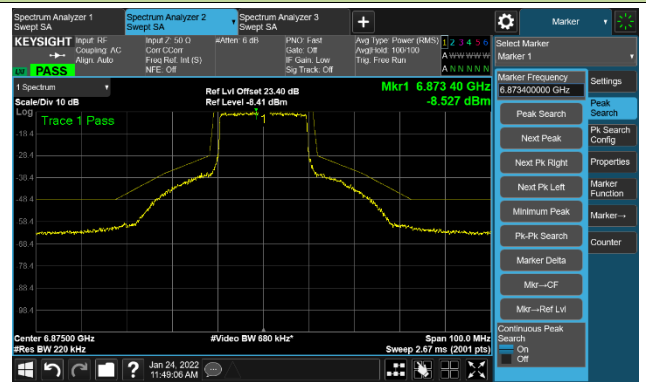 


Channel 189 (6895MHz)

 The Reference Level

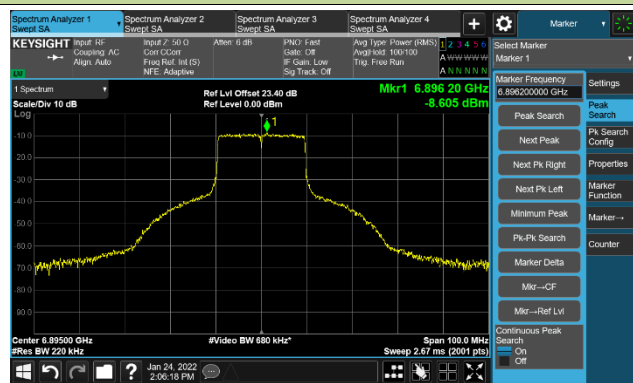


The Mask Data

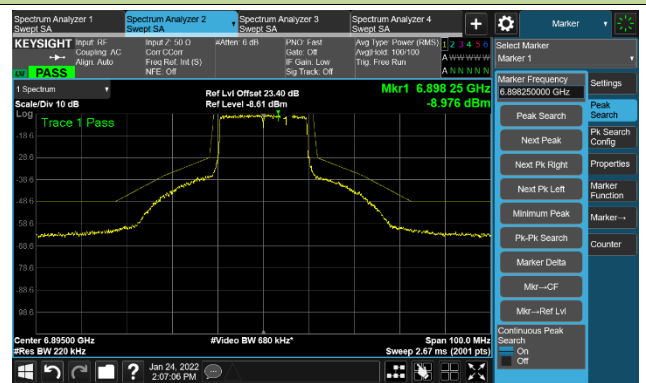 


Channel 209 (6995MHz)

 The Reference Level

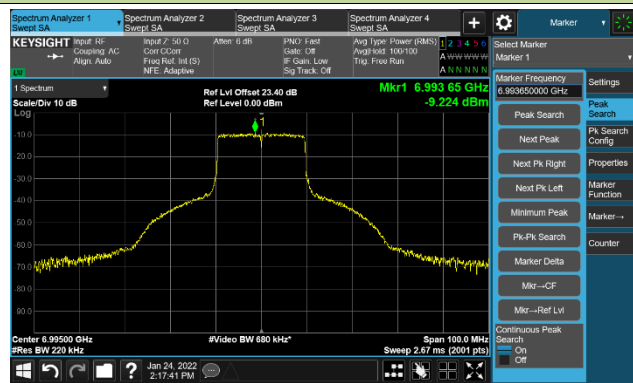


The Mask Data

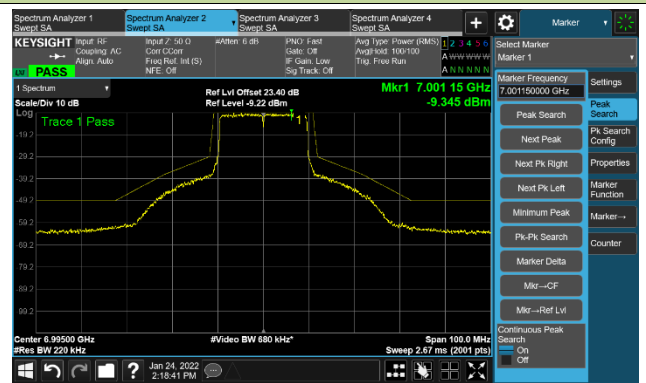 


802.11ax-HE20 Ant 1

Channel 229 (7095MHz)

 The Reference Level

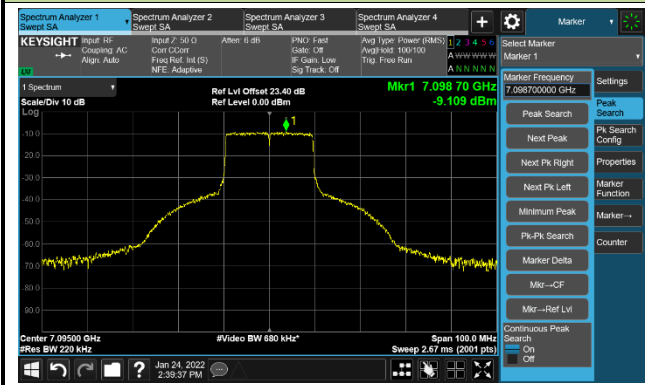


The Mask Data

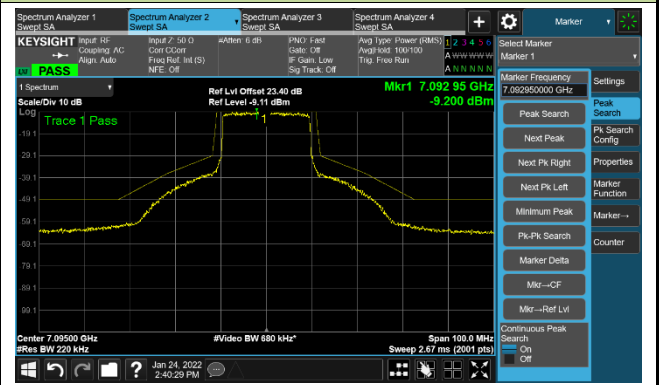 


802.11ax-HE40 Ant 1

Channel 03 (5965MHz)

 The Reference Level

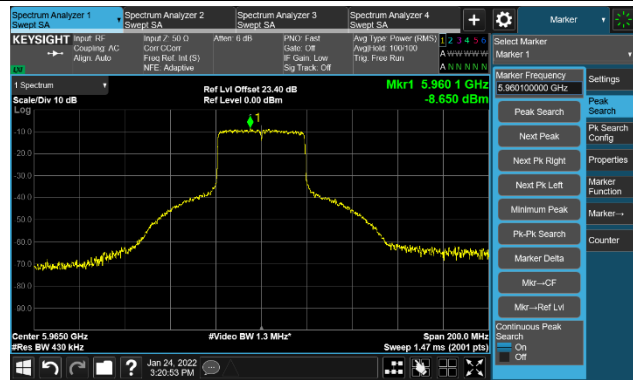


The Mask Data

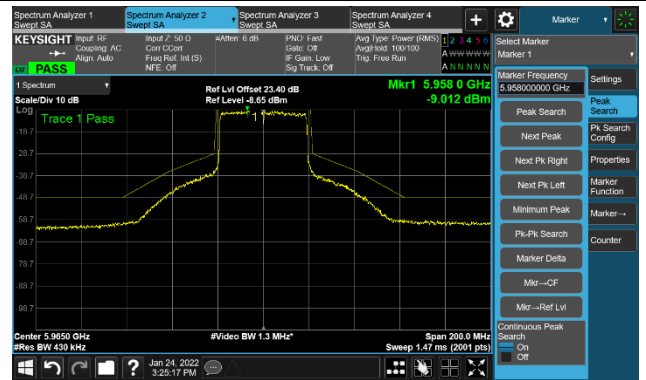 


Channel 51 (6205MHz)

 The Reference Level

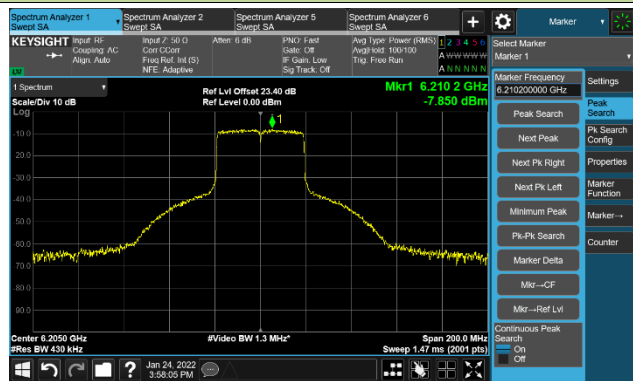


The Mask Data

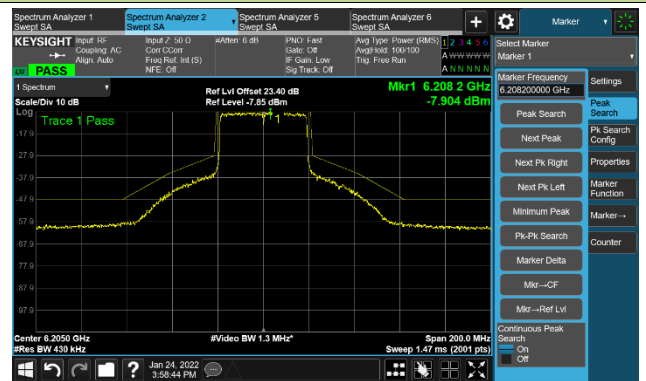 


Channel 91 (6405MHz)

 The Reference Level

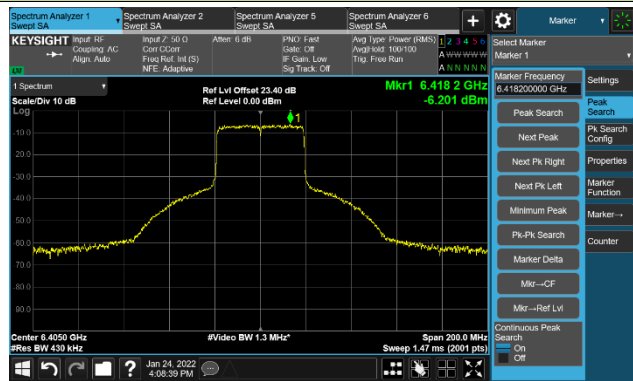


The Mask Data

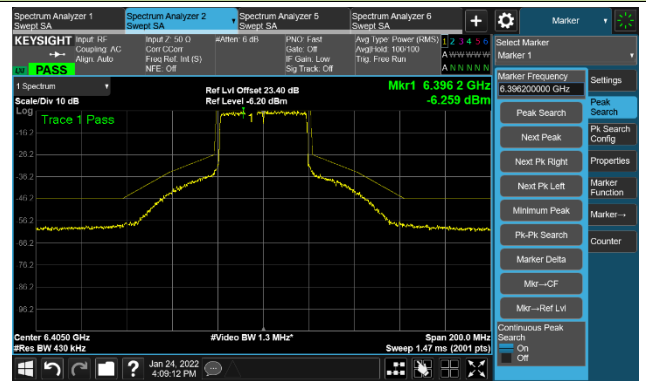 


802.11ax-HE40 Ant 1

Channel 99 (6445MHz)

 The Reference Level

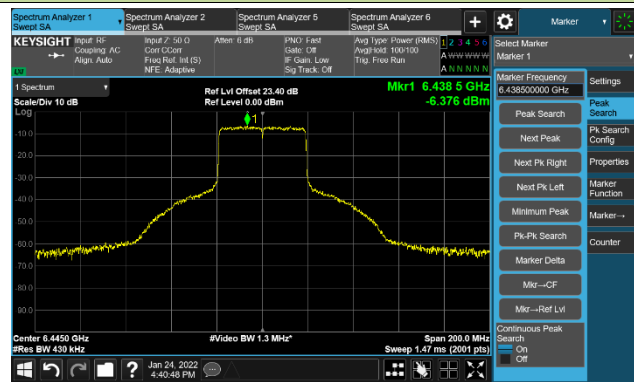


The Mask Data

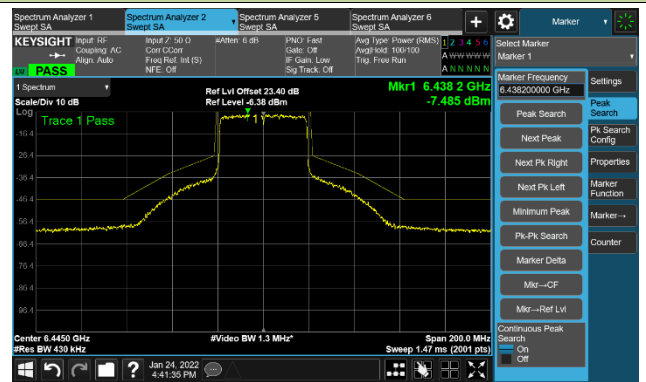 


Channel 107 (6485MHz)

 The Reference Level

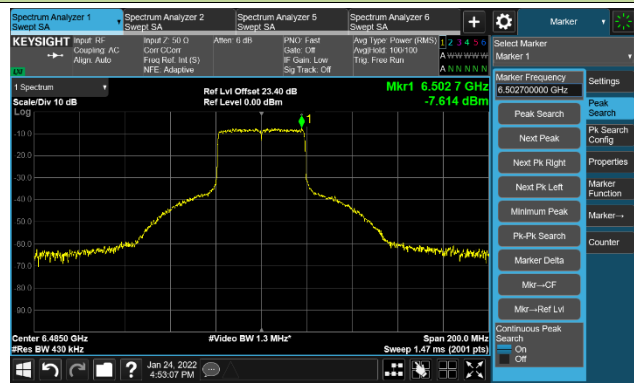


The Mask Data

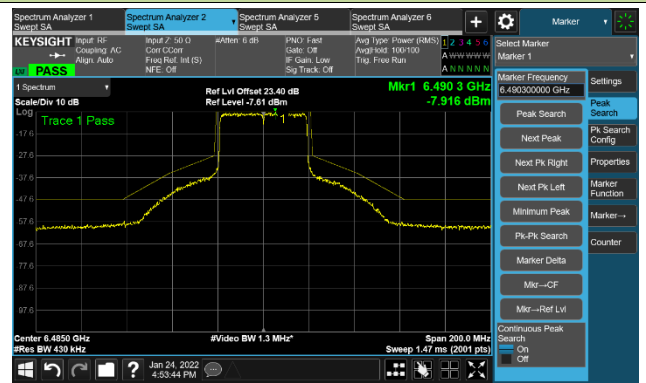 

Channel 115 (6525MHz)

 The Reference Level

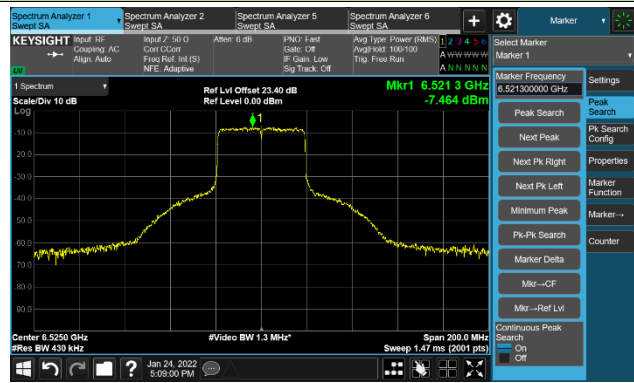

The Mask Data

