

Bluetooth SERIES




KW-B25BT

User Manual

Bluetooth Speaker

Safety Instructions

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of None Use** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
14. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
15. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
16. When not in use and during movement, please take care of the power cordset, e.g. tie up the power cordset with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cordset. When put into use again, please make sure the power cordset being not damaged, If any damages found, please look for the service person to replace the power cordset specified by the manufacturer or have the same characteristics as the original one.
17.  **Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Safety Instructions

18. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


This Transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

Controls


TOP PANEL

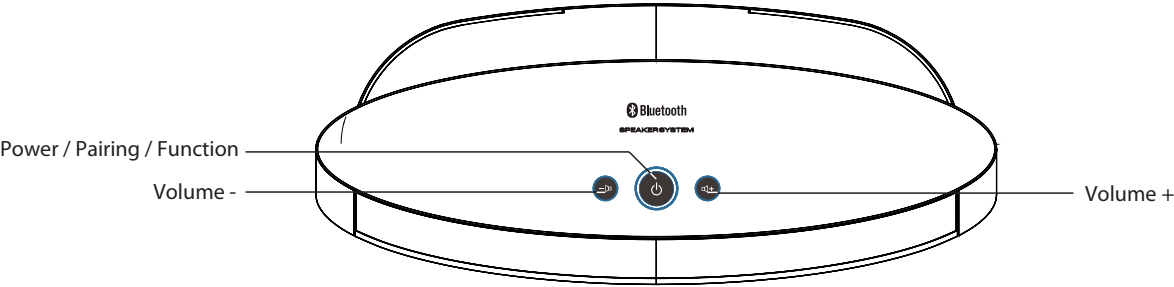


FRONT PANEL

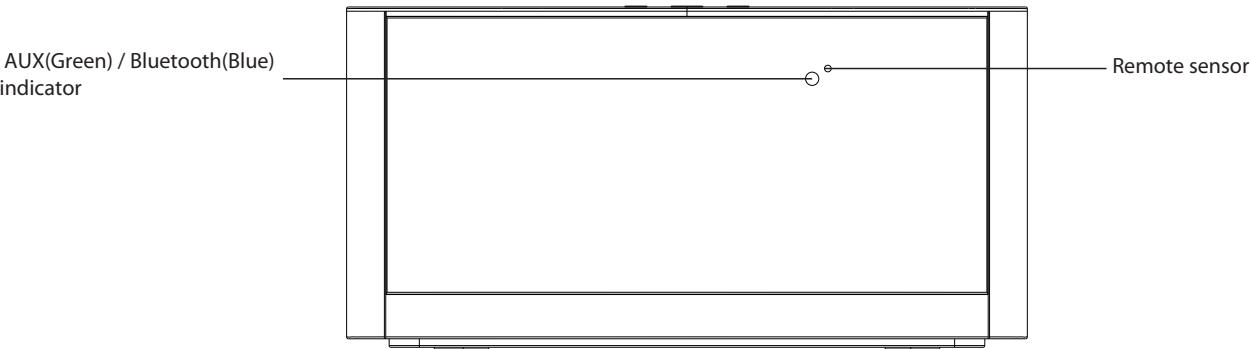 

REAR PANEL

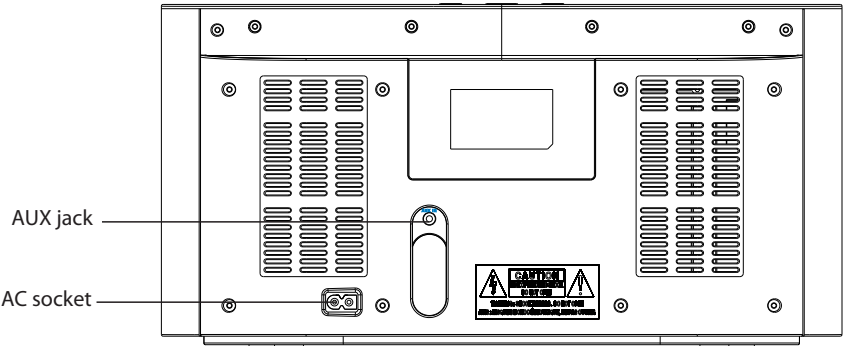 


REMOTE CONTROL

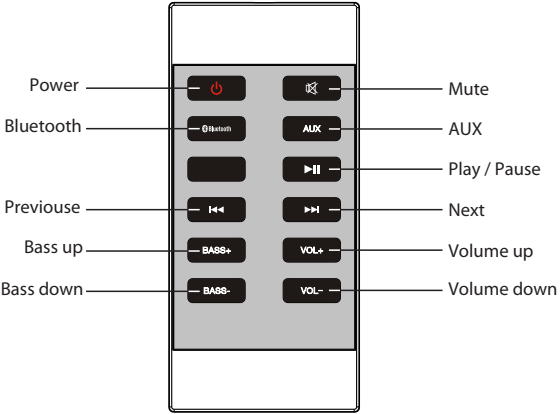 

Remote control batteries

 1. Open the batter door with the with the side the arrowhead pointed.
2. Fit the battery observing polarity as shown with the same CR2025 type specified.

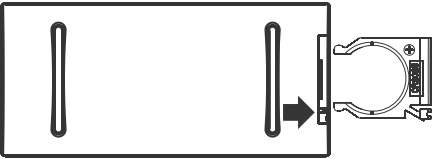

Quick Start

 
Powering your player ON

To power the player ON:

- 1 Plug **AC cord** into **AC jack**, and plug into a live AC wall outlet.
 - 2 Press the **Power/Pairing/Function** button on the top panel or the **Power** button on the remote control to switch the player to ON mode.
 - 3 Press and hold the **Power/Pairing/Function** button on the top panel for 2 to 5 seconds or press the **Power** button on the remote control to switch the player to Standby mode.
- ! Note: To save power, the player will enter Standby mode from ON mode automatically if there is no audio input for 30 minutes.

Line in connection

- 1 Connect a sound sources with a Line or headphone analogue output to play through your player as below hookup diagram shown.
- 2 Press the **Power/Pairing/Function** button on the top panel or press the **AUX** button to select the AUX mode. Green light indicates.
- 3 Set your personal audio player/ computer to PLAY.

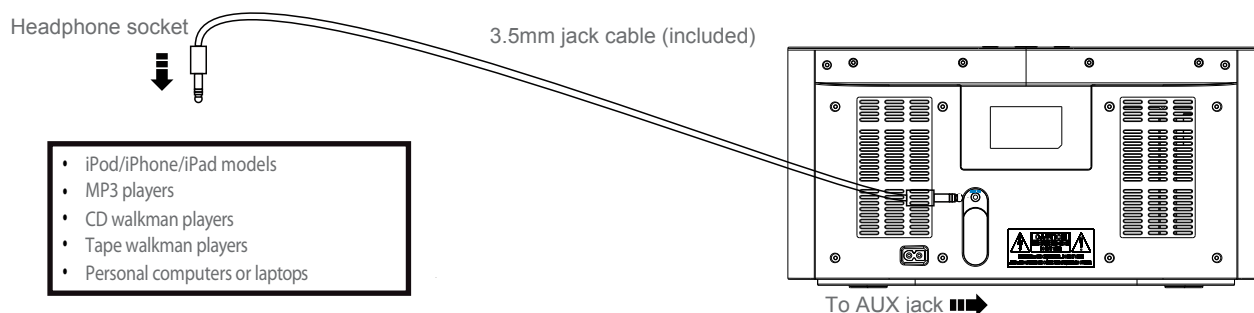

Music Connectivity

Using Bluetooth: Paring Your Device

Before your start

Your Bluetooth device (cellphone, MP3 player, computer, ect.) must support the A2DP Bluetooth profile (Commonly known as stereo audio profile) to work with the player. Many of the latest mobile phones and PCs with built-in Bluetooth functionality will support this profile. For accurate information about your product, please refer to your bluetooth device's user manual for details on the bluetooth profiles it supports and on how to set the device's Bluetooth pairing/searching/setup mode.

Pairing your Bluetooth device with the player

1. Press and hold the **Power/Pairing/Function** button for 5 seconds at ON mode until blue light flashes to begin pairing operation.
2. Activate Bluetooth on your device according to the device's user manual to link to the player. Typically, Bluetooth controls are found on the device's tools or settings menu. Turn on Bluetooth connectivity and make your device "discoverable".
3. Search the device name "DKS999" on your bluetooth device listed and select it as your audio speaker.
4. Once paired with a device, the Blue light will stop flashing and glow steadily.
5. Pairing remains intact when the player or the Bluetooth device is powered off or is taken out of link range. The player will auto link with the last linked device when that device is in range.

Note: Connecting to a bluetooth device may take up to 5 minutes. If the pairing is unsuccessful repair your bluetooth device with the player and repeat the above steps.

Pairing your other Bluetooth device

To restart the current connection from player for select the other bluetooth device, press and hold the **Power/Pairing/Function** button for 5 seconds and repeat the above steps for pairing your other Bluetooth.

Playing Bluetooth Music

1. Once your device and the player are linked you can start to play Bluetooth music through the player.
2. Turn on the player and press the **Power/Pairing/Function** button on the top panel or press the **Bluetooth** button on the remote control to select the Bluetooth mode. Blue light indicates for Bluetooth mode.
3. Press the **▶||** button on the remote control to play your Bluetooth-enable device. (Depending on the Bluetooth device you are using, you may need to manually go into media player mode on your device to make it work properly)
4. Press the **▶▶** button on the remote control to skip the next track.
5. Press the **◀◀** button on the remote control to skip back to the beginning of the track currently play. Press the button again immediately to skip the previous track.
6. Press the **▶||** button on the remote control again to pause play; Press again to resume it.
7. Press the **Volume +/-** button on the top panel or remote control to adjust the system volume.

Please remember to turn off Bluetooth device manually.

Trouble Shooting

There is no power to the player

- Ensure that the Power Switch of wall socket is physically set to the ON position.
- Ensure that the AC plug is securely connected to the player and proper wall outlet.

Trouble pairing device/computer with the player

- Make sure you have the latest firmware for your iPhone/iPad/iPod.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
- Make sure your device supports the A2DP and AVRCP Bluetooth profiles before linking/pairing. The player defaults to the last linked device, so a new device may need to be linked by press and hold the Power/Pairing/Function button for pairing other device.

Specification

Power supply	: AC 100-240V, 50/60Hz
Output power	: 180W RMS
Power consumption	: 140W
AUX in jack	: 3.5mm (included)