

Wii Contactless Charger

User Manual

Model No: Wii 07

Contents

Chapter 1 Introduction.....	1
Chapter 2 Names of the Parts.....	1
Chapter 3 Explanation of Indicator Light.....	3
Chapter 4 Instruction of Installation and Operation.....	3
Chapter 5 Specifications of the Product.....	6
Specifications of Wii Contactless Charger's AC Adapter.....	6
Specifications of Wii Contactless Charger.....	6
Specifications of Wii Contactless Charger's Re-chargeable Battery.....	6
Guarantee of the Product.....	7

 
Please read the owner's manual and follow the instructions before using this product

Chapter 1 Introduction


Product Name: Wii Contactless Charger
Explanation: Contactless Charger for Wii Controllers
Instruction: Remove existing battery cover and replace with the enclosed one before using Wii Contactless Charger, then place Wii Controllers into the charging sockets.
Date of Manufacture: 2007

Chapter 2 Names of Parts

Charger Base
Front

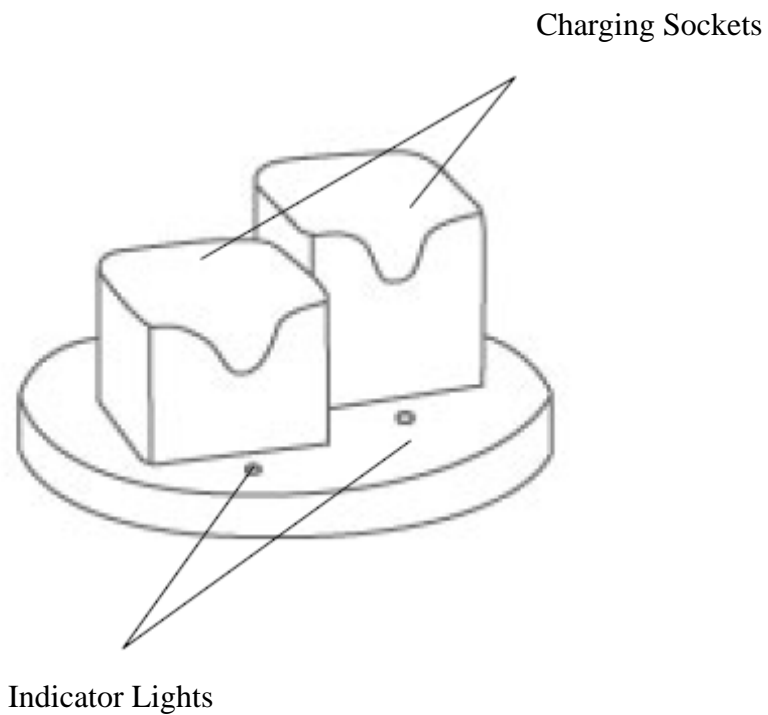


Back

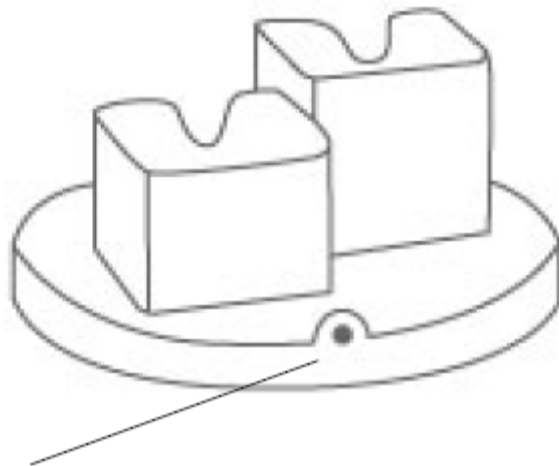 


AC Adapter Jack

 Wii Controller

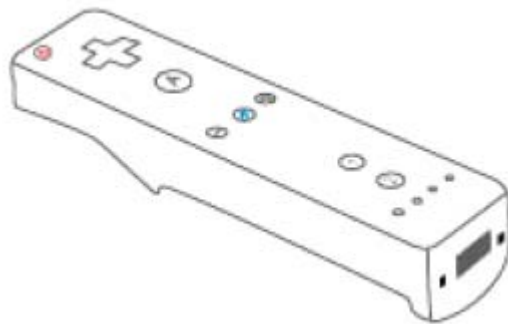

Wii Controller Battery Cover

 Top of the Cover

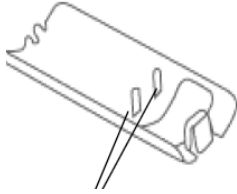


Contact Pins

Bottom of the Cover

AC Adapter

 Charger Base Connector

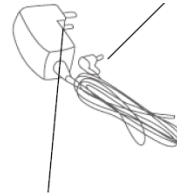

Adapter Plug

Chapter 3 Explanation of Indicator Light

Red Light On:	Not Charging
Red Light Flashing:	Error
Green Light on:	Charging Complete
Green Light Flashing:	Charging

Chapter 4 Instruction of Installation and Operation

Instruction of Installing Wii Controller

1. First remove the original battery cover, place re-chargeable batteries, then replace with enclosed battery cover, as shown below.



a. Remove the original battery cover.



b. Install re-chargeable batteries.



c. After installing the batteries, slide in the top of the enclosed battery cover.

Note: Please make sure that the pins match the metal connector.



d. Press down the enclosed battery cover.

2. Instruction of AC adapter

- a. Connect AC Adapter into the Wii Contactless Charger Jack.
- b. Connect adapter plug into the power outlet.



Note

For your own safety and to avoid damaging the product, please follow the rules below:

1. Make sure that you have changed to **the re-chargeable batteries** before use.
2. Make sure that you have changed to **the enclosed battery cover** before use.
3. Whenever using the product, do not let it come in contact with any liquid.
4. For your own safety, do not disassemble or damage the product in any way.
5. For your own safety and the efficiency of the product, keep it away from any metal objects.



Warning

1. Keep the product out of direct sun light and away from heat and fire.
2. For use by children age 12 or above and then only under the supervision of an adult.
3. This product can only be used with **the enclosed battery cover** and **re-chargeable batteries**.
4. Please take note of the indicator light signal, especially if the red light is flashing which means error, please stop using immediately and check the instructions in the owner's manual.

Chapter 5 Specifications of the Product

Specifications of Wii Contactless Charger's AC Adapter

Rated Input Capacity: 100V~240V/50~60Hz
Rated Output: DC6.0V 1.0A 6.0W MAX

Specifications of Wii Contactless Charger

Power source: DC6V/1A
Radio Frequency: 250KHz
Power Consumption: Not charging approx. 1W ; Charging approx. 5W
Operating Temperature: 0~55°C
Operating Humidity Range: 20~80%
External Dimensions: 120 x 55mm(Diameter/Height)
Weight: Approx. 180g

Specifications of Wii Contactless Charger's re-chargeable Battery

Battery Type: AA 1.2V 1800mA (Two)
Charging Time: Approx. 4.5 hours
Battery Duration: Approx. 25 hours

Guarantee of the Product

If the product fails to operate under normal usage, please send it back to be repaired according to the references below:

1. Enclose the guarantee card when you send the product.
2. Keep the guarantee card safe, the guarantee card will not be reissued if lost.
3. Malfunction during the guarantee period, will be repaired free of charge.
4. Under the following circumstances, a fee will be charged accordingly:
 - a. Malfunction caused by using incorrectly or disassembling personally.
 - b. Malfunction caused by dropping accidentally after purchasing.
 - c. Malfunction caused by natural disasters such as fire, gas explosion, power surge... etc.
 - d. Failure to return the guarantee card when returning the product.
 - e. The information on the guarantee card is not correctly written or has been changed in any way.

Purchaser:	Retailers' Stamp:
Date of Purchase:	
Address:	
Telephone:	
Name of the Product:	Serial number:

Federal Communication Commission Interference Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice:

- (1) A Unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
- (2) Use only shielded cables to connect I/O devices to this equipment.
- (3) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.