

1.5. EUT Exercise Software

1	Setup the EUT and simulators as shown on 1.4.
2	Turn on the power of all equipment.
3	Boot the PC from Hard Disk.
4	Data will communicate between personal computer and partner personal computer through EUT.
5	The personal computer's monitor will show the transmitting and receiving characteristics when the communication is success.
6	Repeat the above procedure (4) to (5).