


Quick Reference guide

1. Each keypad on the Navigation

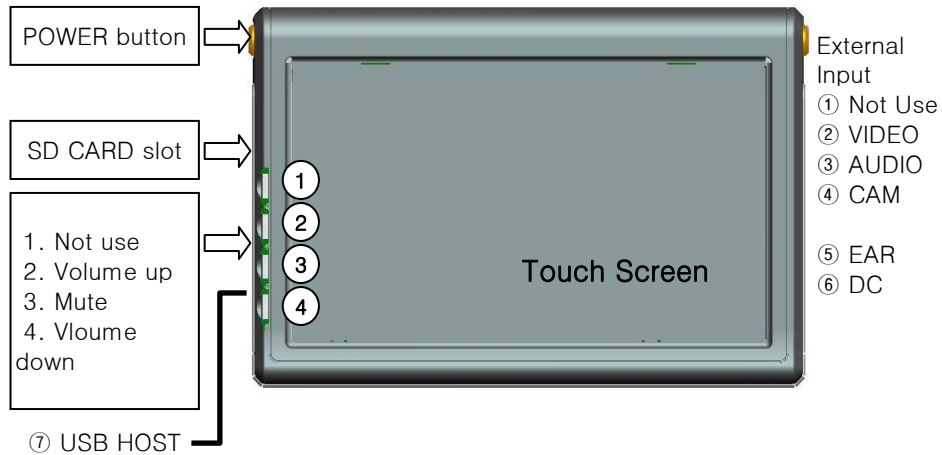

- 1. Not use
- 2. Volume up
- 3. Mute
- 4. Volume down

Button Explanation

POWER	Press power button for 2 second to power off/ for less than 1 second to go back to launcher menu
VOLUME UP	Volume up
MUTE	Volume off
VOLUME DOWN	Volume down

Explanation of external input

Not Use	Not use
VIDEO	VIDEO Input.
AUDIO	AUDIO Input.
CAM	REAR CAMERA Input
EAR	EARPHONE output
DC	DC CIGA JACK input (DC 12V)
USB HOST	UST HOST

* When putting into reverse gear, the rearview camera view is displaying..

2. Explanation of Main Menu



1) NAVIGATION	Go to Navigation to activate it.
2) MOVIE	Go to moving play to watch moving play
3) MP3	Go to MP3 to listen to music
4) MULTIMEDIA	Go to multimedia: Text View/Photo album/ Memo
5) AUX	Go to Aux mode
6) SYSTEM	Go to System Setup
7) LCD OFF	LCD BACKLIGHT OFF

3. SPECIFICATION

LCD Size	7 inch TFT LCD
Resolution	800 X RGB X 480
PIP	MP3 / MOVIE BACKGROUND PLAY
Audio	2 W SPEAKER
External input	1 AV INPUT (1 VIDEO / STERO AUDIO input) Rear view CAMERA input
Multimedia function	Moving play MP3 play Photo album Memo TEXT VIEW

FM TRANSMITTER OPERATING DESCRIPTION

Wireless Audio Link Module

DWT5-300C

DWT5-300A(C) is a FM stereo transmitter Module that transmits simple configuration. The Module consists of a stereo modulator for generating stereo composite signals and a FM transmitter fo broadcasting a FM signal on the air.

The stereo modulator generates a composite signal which consists of the MAIN, SUB . and pilot signal from a 38kHz oscillator.

The FM transmitter radiates FM wave on the air by modulating the carrier signal with a composite signal.

Operation

1) POWER ON

2) The Module set Broadcasting frequency. (90.0MHz ~ 91.9MHz step 100kHz)

3) The FM radio receiver set frequency and listening by Car Aodio.