 



Note to Adults

CAUTION-ELECTRICALLY OPERATED PRODUCT Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Periodically examine the adapter for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the product should not be used until properly repaired. To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.


Battery and Antenna Installation-Transmitter and Vehicle

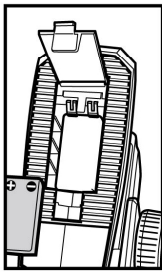

 
Install one 9V battery with polarity (+/-) as shown inside battery compartment (not included)

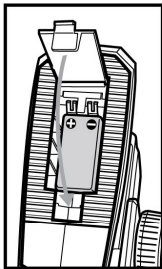

 
Follow the arrow to close the battery cover.

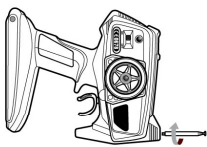

 Tighten the antenna into the transmitter.

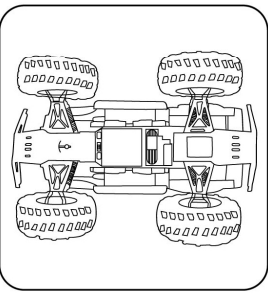

 Install 6 V battery with polarity (+/-) as shown inside battery compartment and then turn locking device to lock the battery compartment as shown in picture above.

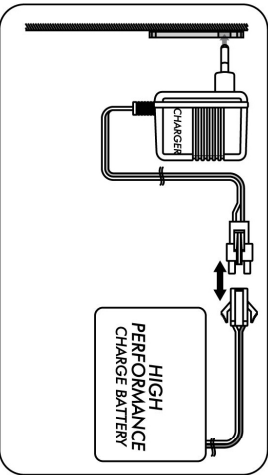

1. Charge the 9.6V Ni-CD 700mAh battery before using.
2. Rechargeable battery, each charge time should be 6 hours.
3. Do not over charge the battery.
4. Make sure the battery pack is full discharged so that the battery is dead before charging. NiCD battery packs have a memory and fully discharging the battery pack before re-charging it will help extend the life of the battery.
5. Run time is approximately 11 minutes on a fully charged battery

Battery safety Information

 
Batteries may leak fluids that can cause damage to your toy. To avoid battery leakage:
 -Do not mix old and new batteries or batteries of different types: alkaline, standard(carbon-zinc) or rechargeable (nickel- cadmium).
 -Insert batteries as indicated inside the battery compartment.
 -Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy.
 -Do not dispose of batteries in a fire. The batteries may explode or leak.
 -Never short-circuit the battery terminals.
 -Use only batteries that are the same or equivalent of those that are required on the box package.
 -Do not charge non-rechargeable batteries.
 -Remove rechargeable batteries from the toy before charging.
 -If rechargeable batteries are used, they should be charged according to manufacturer's specifications and under adult supervision.

Battery performance Note


For best performance, use alkaline batteries. Battery life will vary according to brand.

Transmitter and Vehicle Operation

ON/OFF
 Please make sure the power switch is in the ON position when you operate, and OFF position when not in use.

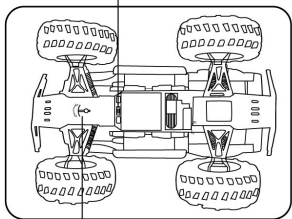

 LEVER
 If the car does not run in a straight line, adjust the angle with this lever

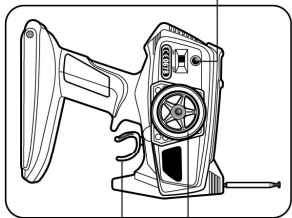

STEERING WHEEL LEFT/RIGHT

TRIGGER FORWARD/ REVERSE

Safety tips

- NEVER operate your vehicle on the street, thru water, sand, snow, thick carpet, or in the rain. If your vehicle gets wet, discontinue use until completely dry.
- DO NOT pick up vehicle while in motion.
- DO NOT store either unit near a source of heat or in direct sunlight for extended period.
- DO NOT operate the vehicle on the table top or other elevated surface.
- Keep fingers, hair and loose clothing away from the wheels.
- Adult supervision is recommended when this vehicle is being operated.
- AVOID running vehicle into objects.
- To avoid accidental operation, leave the power switch in the OFF position and remove all batteries when not in use.

Quick Tips

- When your vehicle begins to lose performance, power or function, it may be time to replace the batteries.
- Radio interference may cause your vehicle to run poorly. In the event of interference, you may need to operate the vehicle in another location.
- Your vehicle's performance may vary depending on the driving surface.
- Point your transmitter antenna up, not downward toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Smart Circuitry
 If your vehicle gets stalled or stuck during play, a special circuit will cut power to protect it. Release your transmitter and wait 15 minutes or more (reposition you vehicle if necessary), and the vehicle will be ready to operate again.

Manufacturer is not responsible for any damages or accidents caused by modification alteration or improper use of these models. Models colors of the content may vary from those of illustrated

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the user experiences interference, it is recommended that the user be encouraged to try to correct the interference by one or more of the following measures:
 -Reorient or relocate the receiving antenna.
 -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -Consult the dealer or experienced radio/TV technician for help.

Input: 120V AC 60MHZ 35mA
Output: 7.2V DC 250mA

Made in Shantou, Guangdong, China

STOP PLEASE DO NOT RETURN PRODUCT TO STORE

For US Customer Service And To Order Parts Please Call 610-018-4700 Or Visit Us At www.extrememachinesrc.com



MADE IN CHINA

Manufactured By Xin Yu Arts Toys Co., Ltd

www.xq-toys.com