



Use instruction

Thank you for choosing our toy R/C car. To ensure correct and pleasing operations, please read through the following use instruction and have enough understanding of the product before use.

CAUTION:

ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.


ADULT SUPERVISION REQUIRED

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Contents: VehicleX1, TransmitterX1, AntennaX1, Charger X1, Rechargeable battery packX1, 9 Volt batteryX1

How to recharge the Battery pack?

1. The new Ni-CD or Ni-MH Battery pack is Not charged prior to shipping.
2. Plug the Charger into a standard indoor electrical outlet. Insert the joint of the Battery pack in the Charger's joint.
3. Allow battery pack to be charged for a minimum of 8 hours for the first and second charges, subsequent charges require 5-6 hours. Do not over charge the Battery pack. Charging the battery pack for a longer period will not increase the Battery charge life.
4. Battery charger used with the toy are to be regularly examined. For damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charger until the damage has been repaired.

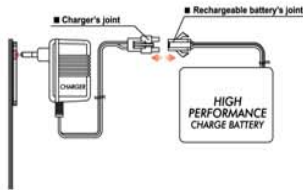

Transmitter and Vehicle operation

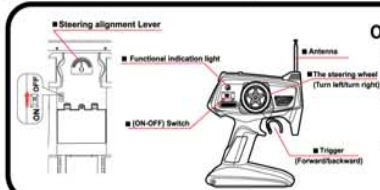


Operations Tips:

- Please make sure the power switch is in the ON position when you operate, and OFF position when not in use.
- If the car direction goes left, please adjust Steering alignment Lever to right until the car goes straight.
- If the car direction goes right, please adjust Steering alignment Lever to left until the car goes straight.

Battery and Antenna Installation- Transmitter and Vehicle

1. Install one 9V battery with polarity (+/-) as shown inside batter compartment.(see the picture 1)
2. Follow the arrowhead to close the remote control's battery cover.
3. Locate the antenna mount on the top of controller. Insert the antenna into the mount opening and rotate in a clockwise direction until snug.(see the picture 2)
4. Install rechargeable battery pack inside the battery compartment.(see the picture 3)
5. Tighten battery door with a Philips head screwdriver.

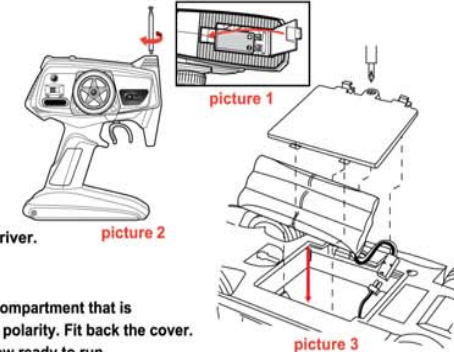

How to play?

1. Install the rechargeable battery inside the battery compartment that is underneath the chassis, taking care to observe the polarity. Fit back the cover.
2. Insert 9V battery inside the controller. The car is now ready to run.
3. Turn the two switches located on both the car and the controller to the "ON" position and then operate the car.
4. If the car does not run in a straight line adjust the steering alignment lever located beneath the chassis.
5. When the light in the controller begins to dim, it may be time to replace the 9V battery.
6. When your R/C model car begins to lose performance, power or function, it may be time to recharge the rechargeable battery.

Battery Safety Information

1. Don't short-circuit terminals.
2. Don't recharge non-rechargeable batteries.
3. Rechargeable batteries may only be charged under the supervision of an adult.
4. Remove all batteries if vehicle will not be used for a long period of time.
5. Dispose of batteries safely. Don't dispose of batteries in fire as they may explode.
6. The battery charger used should be regularly examined for damage to the cord, plug, enclosure and other parts. In the event of damage do not use it until it has been repaired.
7. Exhausted batteries are to be removed from the toy.
8. Keep these instructions for future reference: they contain important information.
9. Packaging has to be kept since it contains important information.

Care and Maintenance

1. Always remove batteries from the toy when it is not being used for a long period of time.
2. Wipe the toy gently with a clean damp cloth.
3. Keep the toy away from direct sunlight and/or direct heat.
4. Do not submerge the toy into water that can damage the electronic assemblies.



© 2010 Xin Yu Arts Toys Co., Ltd.

For more information, visit www.xq-toys.com & www.extrememachinesrc.com



For U.S. Customer Service And To Order Parts Please Call (530) 638-9700 Or Visit Us At www.extrememachinesrc.com

Made in China