


Front View of the EUT as Configured to Interface Host for Testing

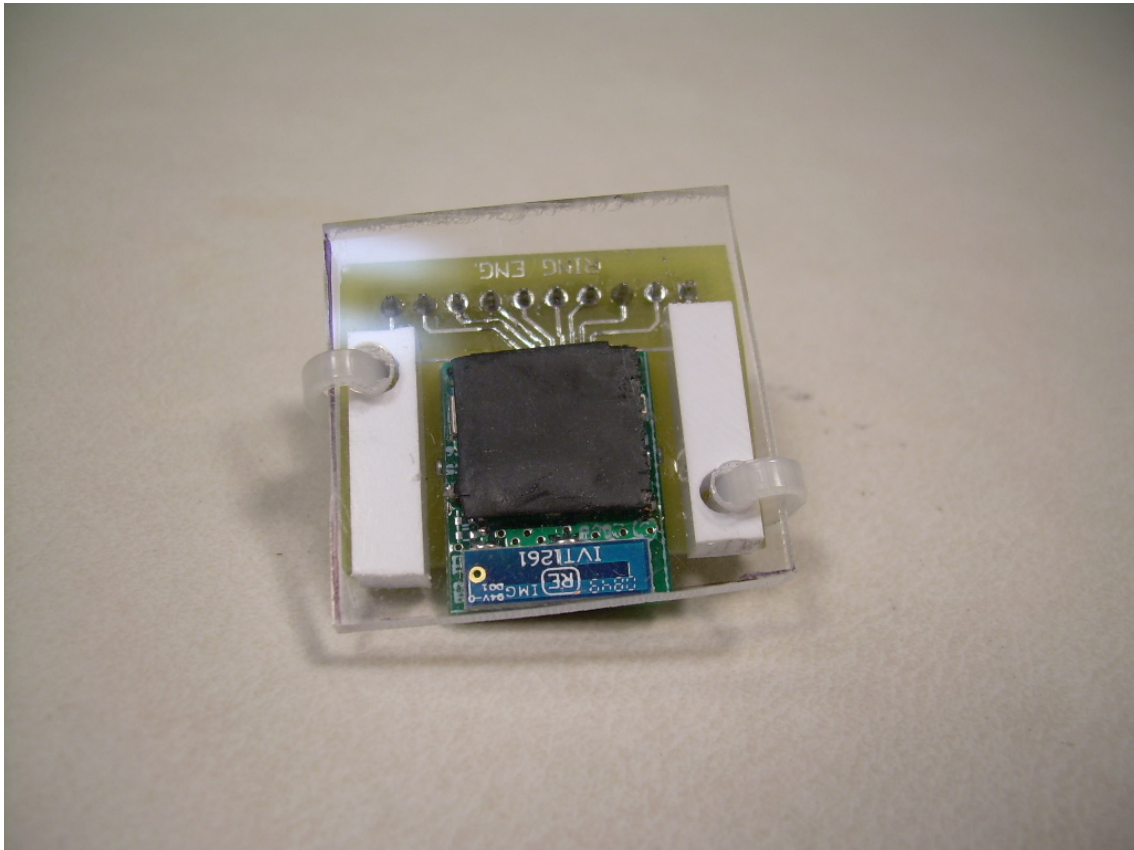

Back View of the EUT as Configured to Interface Host for Testing



View of the EUT Installed in Typical Host

