



**Bluetooth Low Energy Channels [2 MHz bandwidth]**

Channel 0	2402 MHz	Channel 14	2430 MHz	Channel 28	2458 MHz
Channel 1	2404 MHz	Channel 15	2432 MHz	Channel 29	2460 MHz
Channel 2	2406 MHz	Channel 16	2434 MHz	Channel 30	2462 MHz
Channel 3	2408 MHz	Channel 17	2436 MHz	Channel 31	2464 MHz
Channel 4	2410 MHz	Channel 18	2438 MHz	Channel 32	2466 MHz
Channel 5	2412 MHz	Channel 19	2440 MHz	Channel 33	2468 MHz
Channel 6	2414 MHz	Channel 20	2442 MHz	Channel 34	2470 MHz
Channel 7	2416 MHz	Channel 21	2444 MHz	Channel 35	2472 MHz
Channel 8	2418 MHz	Channel 22	2446 MHz	Channel 36	2474 MHz
Channel 9	2420 MHz	Channel 23	2448 MHz	Channel 37	2476 MHz
Channel 10	2422 MHz	Channel 24	2450 MHz	Channel 38	2478 MHz
Channel 11	2424 MHz	Channel 25	2452 MHz	Channel 39	2480 MHz
Channel 12	2426 MHz	Channel 26	2454 MHz		
Channel 13	2428 MHz	Channel 27	2456 MHz		

**Bluetooth Channels [1 MHz bandwidth]**

Channel 0	2402 MHz	Channel 27	2429 MHz	Channel 54	2456 MHz
Channel 1	2403 MHz	Channel 28	2430 MHz	Channel 55	2457 MHz
Channel 2	2404 MHz	Channel 29	2431 MHz	Channel 56	2458 MHz
Channel 3	2405 MHz	Channel 30	2432 MHz	Channel 57	2459 MHz
Channel 4	2406 MHz	Channel 31	2433 MHz	Channel 58	2460 MHz
Channel 5	2407 MHz	Channel 32	2434 MHz	Channel 59	2461 MHz
Channel 6	2408 MHz	Channel 33	2435 MHz	Channel 60	2462 MHz
Channel 7	2409 MHz	Channel 34	2436 MHz	Channel 61	2463 MHz
Channel 8	2410 MHz	Channel 35	2437 MHz	Channel 62	2464 MHz
Channel 9	2411 MHz	Channel 36	2438 MHz	Channel 63	2465 MHz
Channel 10	2412 MHz	Channel 37	2439 MHz	Channel 64	2466 MHz
Channel 11	2413 MHz	Channel 38	2440 MHz	Channel 65	2467 MHz
Channel 12	2414 MHz	Channel 39	2441 MHz	Channel 66	2468 MHz
Channel 13	2415 MHz	Channel 40	2442 MHz	Channel 67	2469 MHz
Channel 14	2416 MHz	Channel 41	2443 MHz	Channel 68	2470 MHz
Channel 15	2417 MHz	Channel 42	2444 MHz	Channel 69	2471 MHz
Channel 16	2418 MHz	Channel 43	2445 MHz	Channel 70	2472 MHz
Channel 17	2419 MHz	Channel 44	2446 MHz	Channel 71	2473 MHz
Channel 18	2420 MHz	Channel 45	2447 MHz	Channel 72	2474 MHz
Channel 19	2421 MHz	Channel 46	2448 MHz	Channel 73	2475 MHz
Channel 20	2422 MHz	Channel 47	2449 MHz	Channel 74	2476 MHz
Channel 21	2423 MHz	Channel 48	2450 MHz	Channel 75	2477 MHz
Channel 22	2424 MHz	Channel 49	2451 MHz	Channel 76	2478 MHz
Channel 23	2425 MHz	Channel 50	2452 MHz	Channel 77	2479 MHz
Channel 24	2426 MHz	Channel 51	2453 MHz	Channel 78	2480 MHz
Channel 25	2427 MHz	Channel 52	2454 MHz		
Channel 26	2428 MHz	Channel 53	2455 MHz		

**Wi-Fi Channels [20 MHz bandwidth]**

Channel 1	2412 MHz	Channel 5	2432 MHz	Channel 9	2452 MHz
Channel 2	2417 MHz	Channel 6	2437 MHz	Channel 10	2457 MHz
Channel 3	2422 MHz	Channel 7	2442 MHz	Channel 11	2462 MHz
Channel 4	2427 MHz	Channel 8	2447 MHz		