

Portable System With Bluetooth Connection




VP-168B

INSTRUCTION MANUAL



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

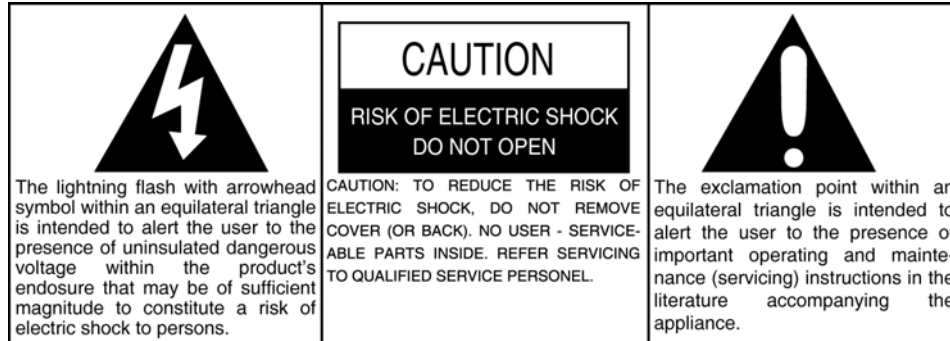

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions
2. Keep these instructions
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with these instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has



been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.

16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Do not overload wall outlet. Use only power source as indicated.

19. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.

20. Caution marking and nameplate are located on back of product

FCC Statement :

This device complies with Part of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Location of controls

- 1) Skip up▶▶ button
- 2) Power LED indicator
- 3) Bluetooth indicator
- 4) FM stereo LED indicator
- 5) BT Disconnect button
- 6) Play/pause ▶| button
- 7) Tuning knob
- 8) Handle
- 9) Level meter
- 10) Dial scale
- 11) Treble knob
- 12) Skip down◀◀ button
- 13) Bass knob
- 14) 3.5 mm headphone jack
- 15) Aux in jack
- 16) Off/functions selector
- 17) Band switch
- 18) Volume button
- 19) FM wire antenna
- 20) Battery Compartment
- 21) AC socket

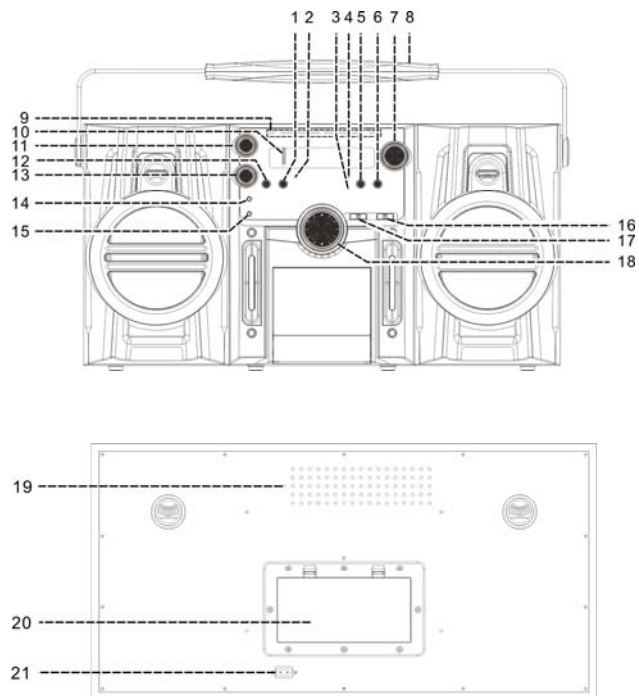

Caution:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

Precautions for use

Installation

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.

AC Connection

1. Connect the one end of the detachable power cord to the AC socket (21) and the other end to the AC outlet.
2. When you first plug the unit into the mains, the unit was ready to play music.
3. Turn on the unit by Off/function selector (16), the POWER LED indicator (2) will light up.

Battery installation

1. Open the battery door at the rear side of the unit to install the battery.
2. Follow the engraved marking in the compartment to install 8pcs "D" size / UM1 battery with the correct direction to the battery compartment (20). Then cover the battery door.
3. Disconnect the AC cord from AC outlet and remove it from AC socket (21) during battery operation.

Listening to radio

Manual tuning

1. Set the Off/function selector (16) to select TUNER position.
2. Select the desired band by Band switch (17).
3. Tune to the required station by turning the tuning knob (7).
4. Press volume button (18) to the adjust volume level.

FM-stereo reception

- The FM-stereo LED indicator (4) will light up when FM stereo program is receiving.

Hints for best reception:-

- FM : the receiver has a built-in FM wire antenna (19) hanging at the rear cabinet. This wire should be totally unraveled and extended for best reception.
- AM : the receiver has a built-in am bar antenna. If am reception is weak, slightly rotate or re-positioning of the unit will usually improve the am reception.

1

Bluetooth connecting and Playback

1. Select the Off/function selector (16) to AUX/BLUETOOTH position.
2. The Bluetooth LED indicator (3) will flashing, it means the Bluetooth in non connection / searching mode.
3. Switch on the Bluetooth feature of your Bluetooth device (such as mobile phone) and select "Goldsound" Bluetooth equipment to connecting.
4. Once the connecting was finish and connect successfully, the Bluetooth LED (3) will change to light up.
5. Start to playback your Bluetooth device and enjoy the music by the main unit.
6. To re connect to another Bluetooth device conveniently, just press the BT disconnect button (5) once, the system will disconnect with the existing Bluetooth directly, then repeat step 3 to re connect another one Bluetooth device.

Remark : Due to Bluetooth and Aux design in same channel of this unit, once the Aux in jack (15) plugged by any 3.5mm stereo plug, the function will change to Aux in automatically and the Bluetooth LED indicator (3) will goes off. Made sure the Aux In jack (15) without plugged by anything before playing Bluetooth.

Aux-in connection with mobile holder

Connect another audio device, e.g. (portable) CD player, MP3 player, to this system via a provided cord with 3.5mm dia plug. Connect one end of this cord to the 3.5mm dia. headphone jack on the external device and the other end to the Aux-in jack (15) on the top of the unit. Set the Off/function selector (16) to AUX/BLUETOOTH position. When connected in this way it is possible to play back the music already on the connected device.

Treble and Bass control

You can enjoy the adjustable bass and treble sound by rotate the Treble knob (11) and Bass knob (13).

2