

Hisense Pulse with Google TV Remote Control

CY-G124008-1

Warning

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Industry Canada Notice

This device complies with industry Canada license-exempt RSS standards(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any

Hisense Pulse with Google TV Remote Control

interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie

Hisense Pulse with Google TV Remote Control

Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

FCC RF Safety Caution Statement

To satisfy FCC RF exposure requirements for mobile and base station transmission devices, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance, operation at closer than this distance is not recommended. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Statement for Canada

Notice: To satisfy IC RF exposure requirements for mobile and

Hisense Pulse with Google TV Remote Control

base station transmission devices, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance, operation at closer than this distance is not recommended. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Avis: Pour répondre à la IC d'exposition pour les besoins de base et mobiles dispositifs de transmission de la station, sur une distance de séparation de 20 cm ou plus do it être maintenue entre l'antenne de cet appareil et les personnes en cours de fonctionnement. Pour assurer le respect, l'exploitation de plus près à cette distance n'est pas recommandée. L'antenne (s) utilisé pour cet émetteur ne doit pas être co-localisés ou fonctionner conjointement avec une autre antenne ou transmetteur.

Introduction

The Pulse features an easy to use wedge shape, dual-sided remote control.

Hisense Pulse with Google TV Remote Control

Functions

● Mouse Function

The front side of the remote control has an integrated touchpad. Use the touchpad by dragging your finger lightly across it. This controls the cursor on screen. Wherever your finger goes, the cursor follows. You can pick your finger up and set it down in the middle again if you run out of room to move the cursor. Tap twice, firmly and quickly, on the touchpad when your cursor is over a link or button you want to click on. This is the same as double clicking with a regular mouse. Along the bottom and right edges of the touchpad are horizontal and vertical scroll bars for convenient navigation on web pages.

● Keyboard Function


The back side of the remote control has a full keyboard. Use the keyboard for alphanumeric entry.

● Navigation Function

A D-Pad (directional pad) with Up | Down | Left | Right and OK is found on both the front and back side of the remote control.

Hisense Pulse with Google TV Remote Control

Product Function

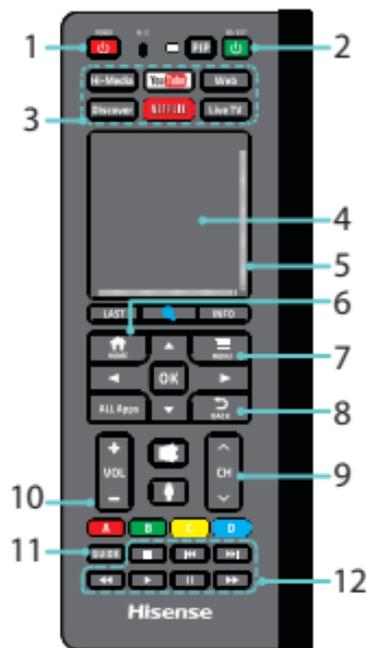

1. Getting Started-ON/STANDBY: Turns the player on or off.
2. ON/STANDBY(BD/EXT): Turns on or off the TV/AV Receiver.
3. Hi-Media: Launch the Multi-Media player .
YouTube: Launch the YouTube application.
Web: Launch the web browser.
Discover: Browse TV and Movies on live TV.
NETFLIX: Launch the Netflix application.
Live TV: Displays the live TV.
4. Touch pad with mouse cursor and click.
5. Scroll vertically for web browser.
6. Opens the home screen.
7. Displays special options associated with each feature.
8. Returns to the previous display, or exits the application.
9. Selects the next/previous channel.


Hisense Pulse with Google TV Remote Control

Available only when the player is connected to a set top box.

10.Turns the volume up or down.

11.Displays the TV program guide.

12.Multi-Media control functions for playing videos, music or pictures.

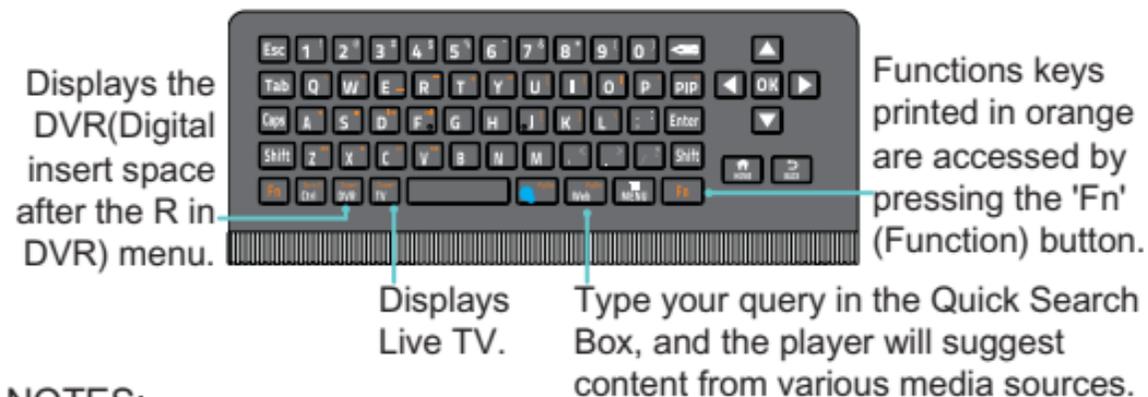

NOTES:

GUIDE and TV are available only when the player is connected to a Set Top Box.


DVR is available only when the player is connected to a Set Top Box with the DVR function.

Other functions reference the User Manual of the Hisense Pulse.

Hisense Pulse with Google TV Remote Control

Setup and Use

Pairing the remote with the Pulse

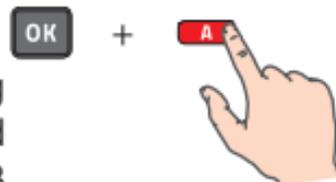

- After connecting the Pulse to your TV and turning on the power, press and hold the red color "A" and "OK" remote control keys simultaneously for 3 seconds. When the green LED lights, release the keys and wait for the Pulse to pair with the remote. The green LED on the remote control will flash three times when the pairing is successfully completed.
- If the remote failed to automatically pair with the Pulse, you can manually pair the devices by following the steps below:
 - 1) Press Home key.
 - 2) Use left (<) or right (>) arrow keys to highlight All Apps and press OK key.
 - 3) Use down (v), left (<) or right (>) arrow key to highlight Settings and press OK key.
 - 4) Use up (^) or down (v) arrow keys to highlight Network and press OK key.
 - 5) Use up (^) or down (v) arrow keys to highlight Bluetooth settings and press OK key.

Hisense Pulse with Google TV Remote Control

- 6) Use up (Λ) or down (∨) arrow keys to highlight Hisense Pulse Remote Control (if the remote had been previously paired) or Find nearby devices (if the remote has not previously been paired) and press OK key.

Green LED indicator

- The LED on the remote control will blink with each key press and while the touchpad is in use.
- In pairing mode, the LED will light continuously for ~60-seconds.
- When pairing is complete, the LED will flash three times.
- The LED light will blink continuously when the battery is low.
- Sleep Mode To conserve battery life, the remote control will automatically go into sleep mode thirty seconds after the last key press. Any movement or key press will immediately wake up the remote.

Battery Specification

AAA 1.5V *3 , Alkaline battery

条形码10.5x3.5
边框不做印刷