

**Hisense**

INNOVATION IS LIFE

F55T39EGWD



# USER MANUAL

Before using the TV, please read this manual thoroughly and retain it for future reference.

[www.hisense-usa.com](http://www.hisense-usa.com)  
[service@hisense-usa.com](mailto:service@hisense-usa.com)

*English*

ES-J114405

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## FCC Statement

---

### NOTE:

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio Communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID Number WiFi Module:WWMN421V1

The WiFi Module complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

### WARNING:

**The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority.**

## Energy Star

---

Your Hisense TV is ENERGY STAR® qualified in the "Home" mode. It meets strict energy efficiency guidelines set by the U.S. Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of these government agencies, designed to promote energy efficient products and practices. Changes to certain features, settings, and functionalities of this TV (i.e. TV Guide, Picture, Sound) can increase or change the power consumption. Depending upon such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification in the "Home" mode.



**Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.**

# CHILD SAFETY:

It Makes A Difference How and Where  
You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



## THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

## THIS MANUFACTURER CARES!

- The consumer electronics industry is committed to making home entertainment enjoyable and safe.

## TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.



## WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.



 
# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus.
16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
17. Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
18. Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.



S3125A

19. If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

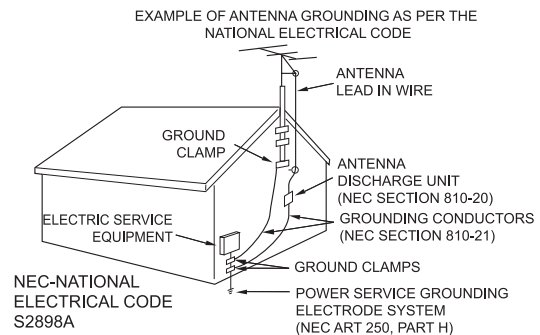

20. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
22. When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.
23. Sudden high volume sound may cause hearing or speaker damage. When you use headphones, (if the unit is equipped with a headphone jack) keep the volume at a moderate level. If you use headphones continuously with high volume sound, it may cause hearing damage.

## CONDENSATION

Moisture will form in the operating section of the unit if the unit is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, unit's performance will be impaired. To prevent this, let the unit stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the unit is exposed to the breeze from an air conditioner. In such cases, change the location of the unit.

# Important Safety Instructions

## HOW TO HANDLE THE LCD PANEL

- Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.  
If the liquid gets in your mouth, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

## Possible Adverse Effects on LCD Panel:

If a fixed (non-moving) pattern remains on the LCD Panel for long periods of time, the image can become permanently engrained in the LCD Panel and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your LCD Panel on for long periods of time while it is displaying the following formats or images:

- Fixed Images, such as stock tickers, video game patterns, TV station logos, and websites.
- Special Formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a widescreen (16:9) display (black bars on left and right sides of screen).

**The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.**

- LCD Panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
- Do not install the LCD Panel near electronic equipment that produces electromagnetic waves. Some equipment placed too near this unit may cause interference.
- Effect on infrared devices – There may be interference while using infrared devices such as infrared cordless headphones.

## Declaration of Conformity

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

## End of life directives

---

Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at [www.eia.org](http://www.eia.org) to find a recycler in your area.

## Non-active pixels

---

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed black (in the case of a dead pixel), blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

## Power source

---

### TO USE AC POWER

1. The power cord is attached to the TV at the factory.
2. Connect the AC cord into an AC outlet.

### WARNING:

Do not connect this unit to the power using any device other than the supplied AC cord. This could cause fire, electrical shock, or damage.  
Do not use with a voltage other than the power voltage specified. This could cause fire, electrical shock, or damage.

### CAUTION:

When this unit is not used for a long time, (e.g., away on a trip) in the interest of safety, be sure to unplug it from the AC outlet.  
Do not plug/unplug the AC cord when your hands are wet. This may cause electrical shock.

## Important Safety Instructions

**Disclaimer:** Hisense USA companies ("Hisense"). A wired or wireless Internet connection is required for certain features and is not included with the television; please contact a local Internet Service Provider for assistance. Content suppliers may require a subscription to activate or use their services which is not included with the television and is sold separately. The Hisense TV web browser supports a variety of multimedia platforms however it does not support all players nor does it support every player version, therefore, access to certain web content may be limited or unavailable.

**INTERNET CONNECTION, ACCEPTANCE OF END USER LICENSE AGREEMENT (EULA) AND REGISTRATION OF YOUR HISENSE TELEVISION SERIAL NUMBER IS REQUIRED. YOU MUST BE AT LEAST 13 YEARS OF AGE TO REGISTER ONLINE. HISENSE MAY ADD, DELETE, MODIFY, OR TERMINATE ONLINE SERVICES WITHOUT NOTICE.**

**Consent to Use of Data:** To facilitate the provision of software updates, any dynamically served content, product support and other services you agree that Hisense and its affiliates may collect, use, store and transmit technical and related information that identifies your television (including an Internet Protocol Address), its operating system, application software and any connected devices. Hisense and its affiliates may also use this information in the aggregate, in a form which does not personally identify you, to improve our products and services and we may share anonymous aggregate data with our third party service providers.

**Internet Performance Issues:** A broadband Internet connection is required for access to Internet Apps and Content. To avoid poor performance while accessing Internet Apps and Content, be sure other devices on the same Internet connection are not running file sharing applications, streaming audio or video content and are not logged in to chat-rooms. These applications may consume your connection's bandwidth, causing lag or other undesirable effects. This television uses TCP and UDP port(s) to access Internet Apps and Content. Please consult your router or personal firewall documentation for information on how to allow access to these ports. If you are installing this television on a corporate Internet connection, contact your network administrator for information and assistance.

**Liability:** The HICAST@ portal may be linked to other sites on the World Wide Web or Internet which are not under the control of or maintained by Hisense. Such links do not constitute an endorsement by Hisense. You acknowledge that Hisense is providing these links to you only as a convenience; you further agree that Hisense is not responsible for the content of such sites.

**INFORMATION ACCESSED OR OBTAINED VIA HICAST@ IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OF NONINFRINGEMENT. SOME JURISDICTIONS DO NOT ALLOW FOR THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSIONS MAY NOT APPLY TO YOU.**

Access to certain areas of the HICAST@ portal is restricted and requires a password for entry. If you are an authorized password holder, you agree that you are entirely responsible for the confidentiality of your password and account information, and agree to notify Hisense immediately if your password is lost, stolen, disclosed to an unauthorized third party, or otherwise may have been compromised. You agree that you are entirely responsible for any and all activities which occur under your account, including any fees which may be incurred under your password protected account whether or not you are the individual who undertakes such activities. You agree to immediately notify Hisense of any unauthorized use of your account or any other breach of security in relation thereof known to you.

You acknowledge that HICAST@ may include certain inaccuracies or typographical errors which may affect the quality of materials and third-party content. You acknowledge that the materials or any third-party content have not been independently verified or authenticated in whole or in part by Hisense, and agree that Hisense does not warrant the accuracy or timeliness of materials or the third-party content, and further agree that Hisense has no liability for any omissions in the materials and content, whether provided by Hisense or any third-party

To the maximum extent permitted by applicable law, Hisense shall not be liable to you or a third-party claiming through you for any damage suffered as a result of your displaying, copying or downloading information or material accessed or obtained via HICAST@. In no event shall Hisense be liable to you or any third-party for any indirect, extraordinary, exemplary, punitive, special incidental or consequential damages (including loss of data, revenue, profits or other economic advantage) however arising, whether for breach or in tort even if HISENSE has previously advised of the possibility of such possible damage.

**Technical Support:** If you have questions regarding installation, configuration or operation of this product, please telephone a Hisense Customer Care representative who will be happy to assist you with any difficulties you may be experiencing. Dial 1-888-935-8880 (Toll Free) | Email [service@hisense-usa.com](mailto:service@hisense-usa.com)

# Contents

## Getting Started

Accessories list .....	2
Installing the Stand .....	2
Installing a Wall-mount Bracket .....	3
Viewing the Control Panel .....	4
Viewing the Remote Control .....	5
Installing Batteries into the Remote Control .....	6
Making Connections .....	7

## Basic Features

Turning the TV On for the First Time .....	11
Turning your TV On or Off .....	11
Selecting the Input Source .....	12
Changing Channels/ Volume .....	12
Shortcuts Instructions .....	13
To Use the Menu .....	14
Using the Picture Menu .....	14
Using the Audio Menu .....	15
Using the Screen Menu .....	15
Using the Channels Menu .....	15
Using the Settings Menu .....	16
Using the Lock Menu .....	17

## Advanced Features

Network Connection .....	18
Connecting to a Wireless Network .....	20
DLNA Settings .....	22
Media Share Settings in computer .....	22
Setting to Share Files .....	23
Network Function .....	24
VUDU HD Movies .....	26
VUDU Apps .....	27
Netflix .....	28
Opera .....	28
Others .....	30
View the Shared Files on TV .....	31
Digital Media Player .....	31
Enjoy Video Files .....	31
Enjoy Music Files .....	32
Browse the Pictures .....	32
Browse the Text Files .....	33

## Other Information

Trouble Shooting .....	34
General .....	36

### NOTE

Specifications and pictures are subject to change without notice.

# Getting Started

## Accessories list



User's Manual



Quick Setup Guide



Warranty Card



Remote Control



Battery x 2



Spacer x 4



Screw A (M4 x L12) x 2



Screw B (ST4 x L14) x 2



Screw C (M5 x L12) x 4



Screw D (M6 x L25) x 4

## Installing the Stand

### NOTE

1. The LCD display is very fragile, and must be protected at all times when removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.
2. For tabletop use, the TV must be attached to the provided stand as shown on this page.
3. To wall-mount, brackets (not provided) must be attached to the TV as shown in on page 3.

### WARNING

Be sure to disconnect the AC power cord before installing a stand or wall-mount brackets.

### CAUTION

Use a covered table or bench to lay the TV on and handle the TV carefully to prevent damage to the TV screen or cabinet during assembly.

Follow the illustrations below to complete the installation steps:

1. Connect Bracket 1 and Bracket 2 as shown in Figure 1.
2. Insert screws A (M4 x L12) into the brackets and secure tightly. See Figure 2.
3. Insert screws B (ST4x14) into front side of Bracket 1 and secure tightly. Be sure the stand is steady. See Figure 3.

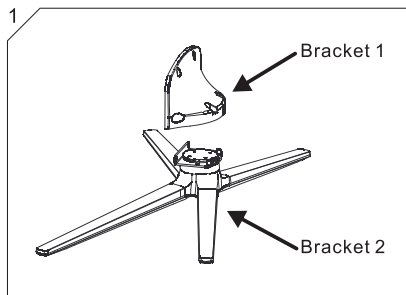 


Figure 1

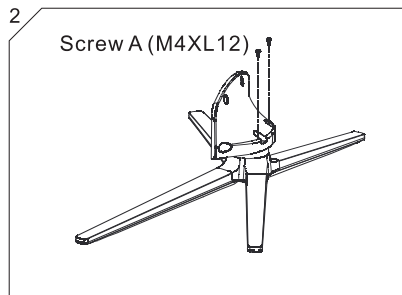 


Figure 2

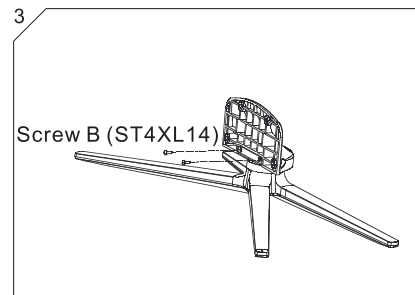 


Figure 3



## Getting Started


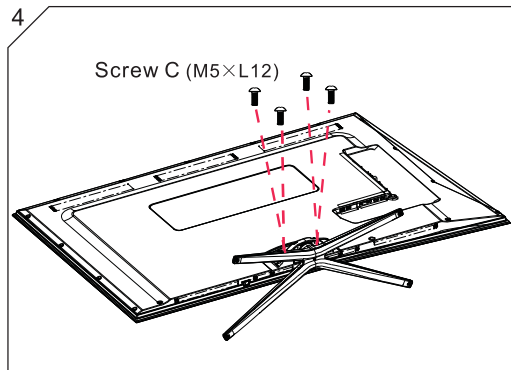 


Figure 4


- Please make sure to place a soft cushioned material (such as a pillow or thick piece of foam) beneath the TV screen. Lay the TV down on a flat cushion surface with the back side facing up. To install the base stand, slide the base stand in the designated area until the screw holes are aligned. Secure the base with the screws C (M5 x L12) tightly. See Figure 4.

## Installing a wall-mount bracket

 If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached (see Step 1).

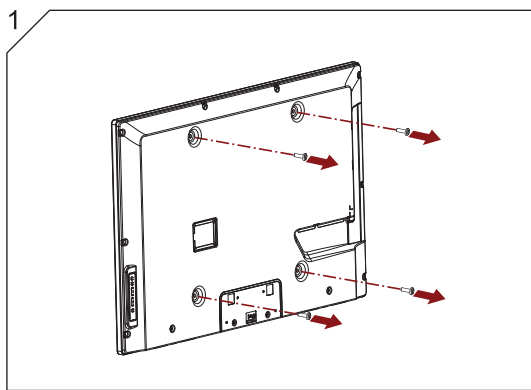

 
- Make sure the TV is laid face-down on a clean, safe, and cushioned space, remove the original screws in the bracket holes on the TV back over.

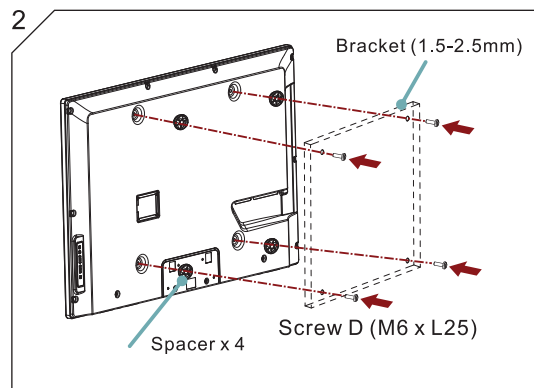

- Place the provided spacers in the corresponding bracket holes. Attach purchased bracket (1.5mm to 2.5mm thickness) on the TV with 4 screws D (M6 x L25) which in accessories bag. Follow instructions provided with the wall bracket.

# Getting Started
 
## Viewing the Control Panel

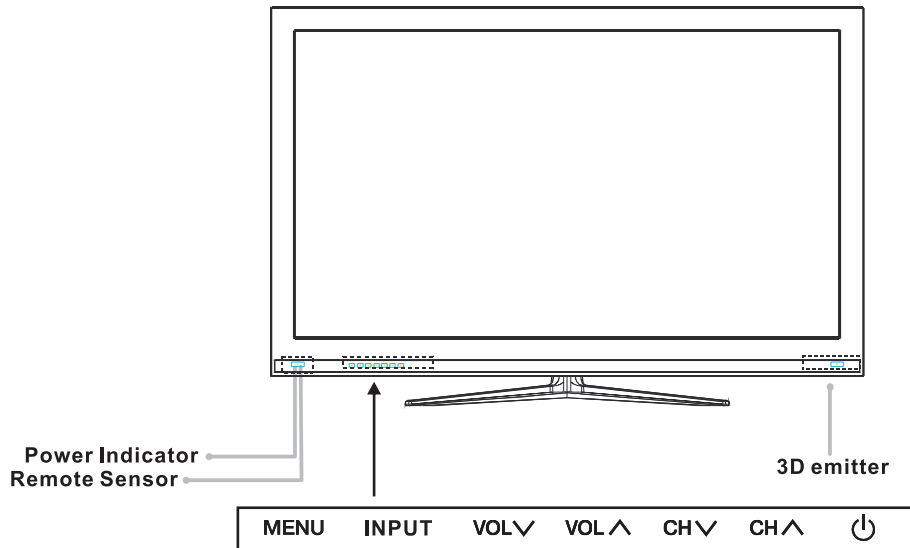


Item	Description
Remote sensor	Receives remote signals from the remote control. Do not put anything near the sensor, as its function may be affected.
Power Indicator	During startup the light flashing alternately red and blue, it is blue when turned on, and it is red in standby mode.
MENU	Display an on-screen menu to setup your TV's features.
INPUT	Select among the different input signal sources.
VOL V / VOL A	Adjust the volume. Select sub-menu and adjust settings in on-screen menus.
CH V / CH A	Adjust the channel. Select items in on-screen menus.
⏻	Press to turn on the TV or put the TV in standby mode. <b>Caution:</b> The TV continues to receive power even in standby mode. Unplug the power cord to disconnect power.
3D emitter	Sends signals to 3D glasses during playback of 3D movies and TV shows. Do not put anything near the sensor, as its function may be affected.

### NOTE

 The figures are for reference only, please refer to the actual set.

# Getting Started

## Viewing the Remote Control

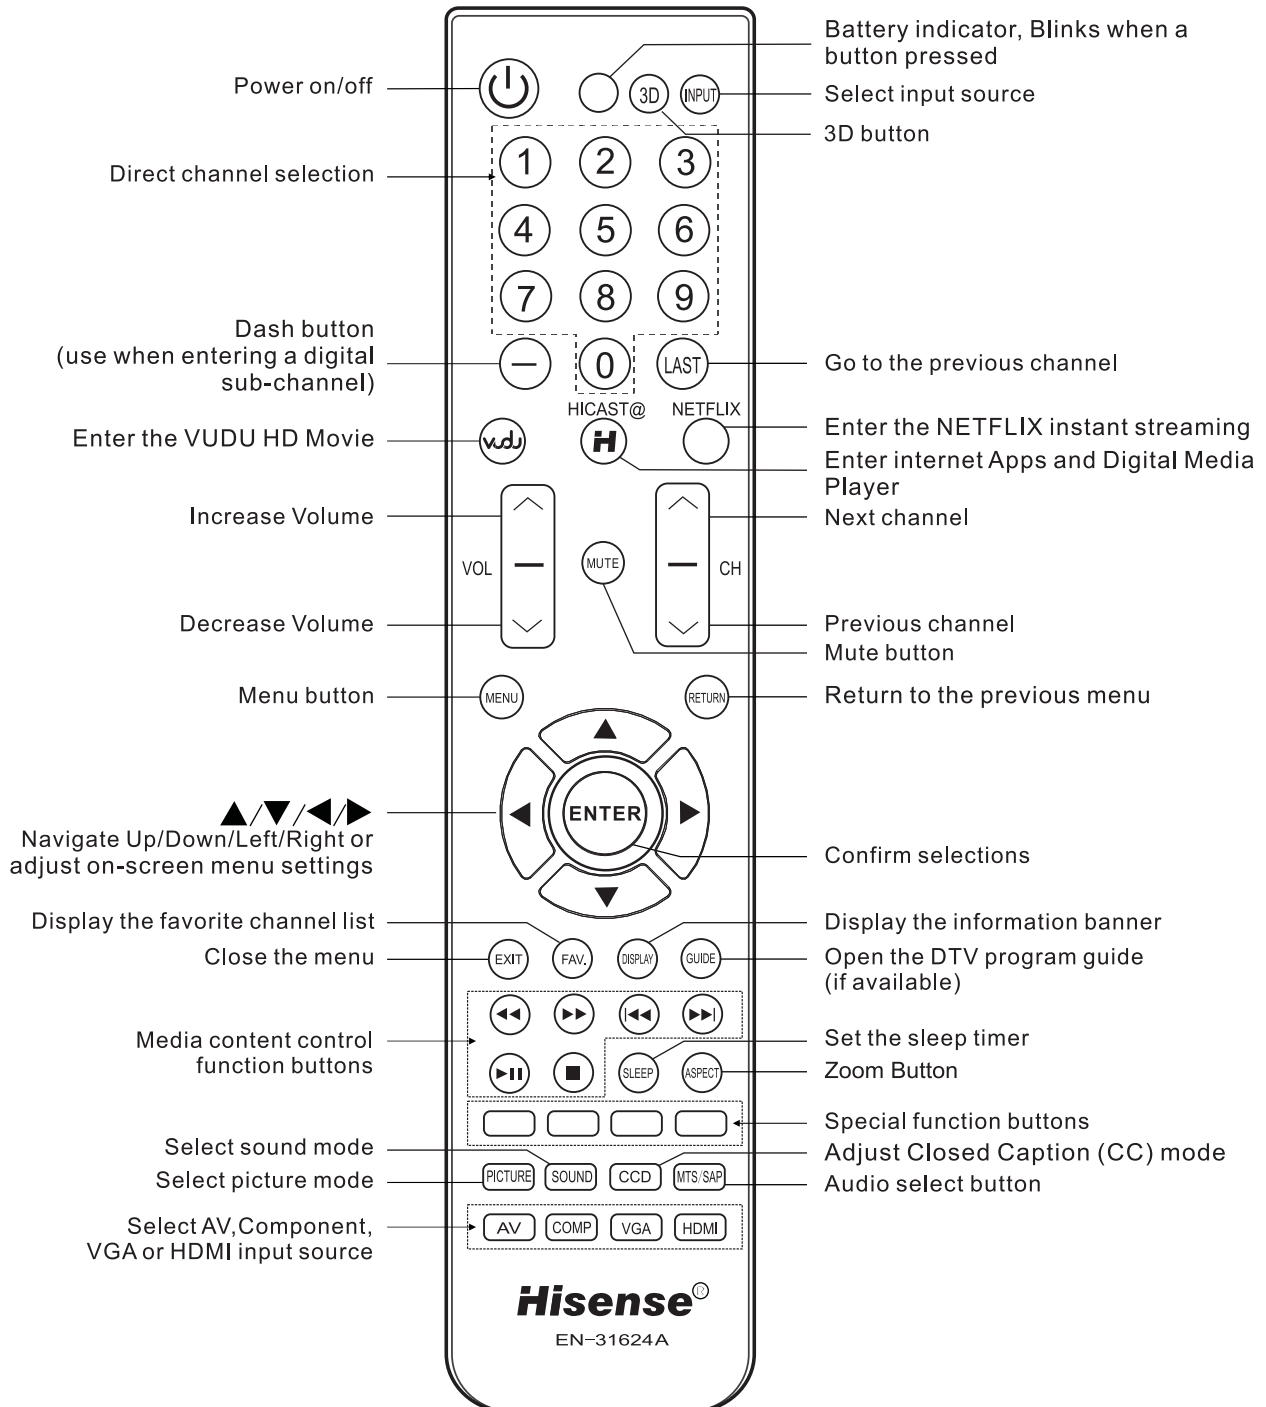

### NOTE

 
1. Illustrations are for your reference only.
2. Red/Green/Yellow/Cyan buttons are used for Electronic Program Guide (EPG). After pressing the [GUIDE] button when viewing digital channels, the same color buttons will appear with explanations in the on-screen display (OSD). Follow the steps shown in the OSD.

# Getting Started


## Installing Batteries in the Remote Control

1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.


❶ Gently push and slide



❷ Insert the batteries

 

❸ Gently push and slide

 

### ☑ NOTE

1. Dispose of your batteries in a designated disposal area. Do not throw the batteries into a fire.
2. Do not mix battery types or combine used batteries with new ones.
3. Remove depleted batteries immediately to prevent battery acid from leaking into the battery compartment.
4. If you do not intend to use the remote control for a long time, remove the batteries.
5. Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
6. Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
7. Do not mix old and new batteries.
8. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Program Your Universal Cable or Satellite Remote Control to Operate Your New Hisense Television!

If you would like to program your other household remote controls to your new Hisense television, please consult the User's Manual supplied by your Cable or Satellite provider. The Cable or Satellite providers' User's Manuals should include instructions on how to program their remote to your television.

Below is a list of Hisense codes for the most common Cable and Satellite providers. Use the Hisense code that is associated with your Cable or Satellite provider (if applicable).

 
DIRECTV.....	0178 or 10019
Time Warner Cable.....	386 or 0178
Comcast.....	0178
Cox Communications.....	0178
Dish Network.....	627 or 505

If the Hisense code associated with your Cable or Satellite provider is not listed above, if the code above does not work, or if you cannot locate the instructions for programming your household remote to your television, call your local Cable or Satellite provider's customer service center.

If your Cable or Satellite provider does not have an Hisense code available, please visit <http://www.hisense-usa.com> for additional codes.

# Getting Started

## Making Connections

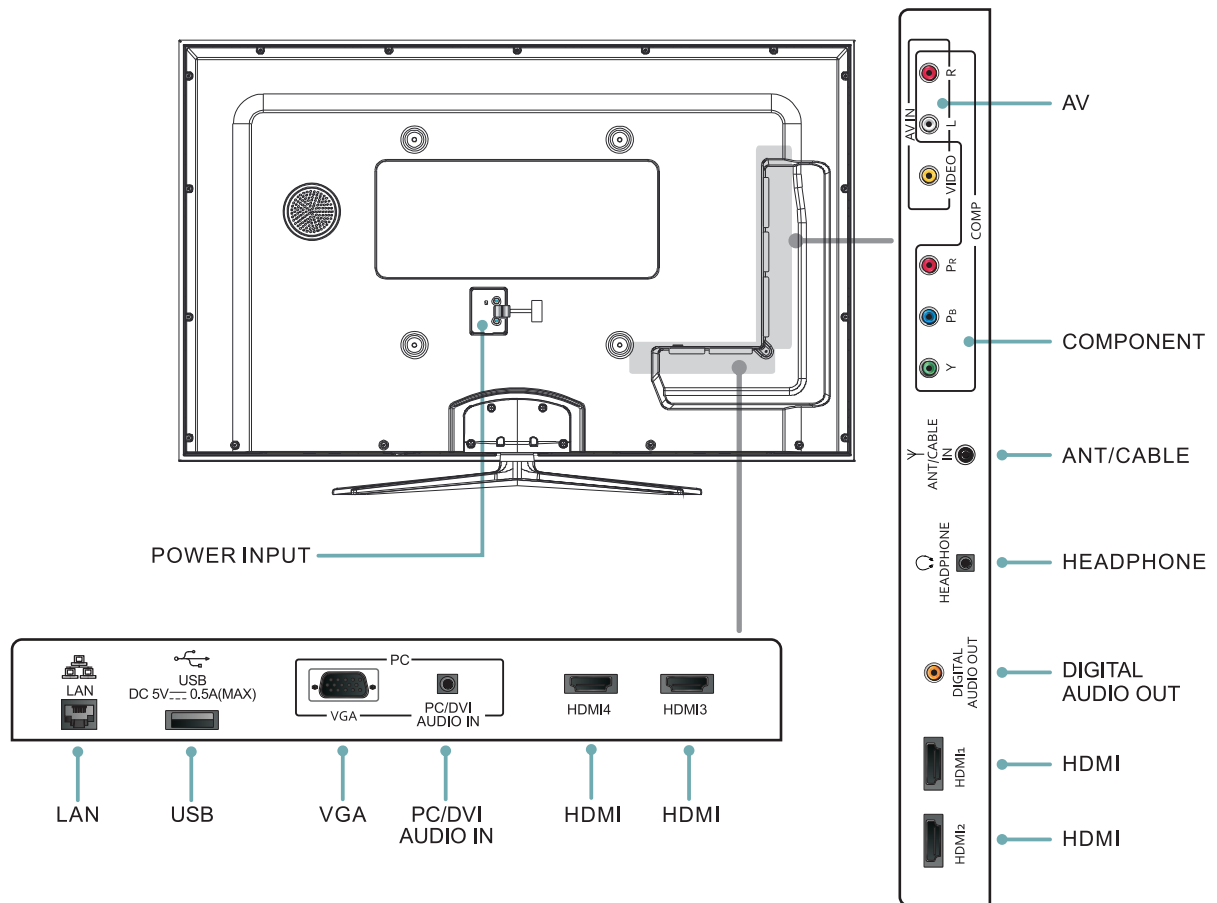

Item	Description
<b>HDMI</b>	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all digital audio/video interface between this TV and any HDMI-device, such as a set-top box, Blu-ray disc player, or A/V receiver.
<b>COMPONENT</b>	Connect to a DVD player, Digital Set-Top-Box, or other A/V devices with component (YPbPr) video and audio output jacks.
<b>VGA PC/DVI AUDIO IN</b>	Connect to a PC or other devices with a VGA interface.
<b>ANT/CABLE</b>	Connect an antenna or cable TV to this jack.
<b>USB</b>	Port for Digital Media Player.
<b>DIGITAL AUDIO OUT</b>	Connect to an external digital audio device.
<b>HEADPHONE</b>	Connect headphone for private listening.
<b>VIDEO/AUDIO(L,R)</b>	Connect to the composite video and audio (L/R) output jacks on external video devices.
<b>LAN</b>	Connect an ethernet cable to access a network or the Internet.

# Getting Started

 
## Making Connections

### NOTE

1. Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
2. Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
3. Always unplug the power cord when connecting external equipment.


### Connecting an antenna, cable or cable/satellite box

1. Turn off the TV before connecting the antenna.
2. Connect one end of a coaxial cable (not included) to the RF OUT jack on the antenna, cable or cable/satellite box. If you are using an antenna with twin-lead cable, you may need a 300-75 ohm adapter (not provided) to connect it to the back of your TV. Likewise, if you are using several antennas, you may need a combiner (not provided).
3. Connect the other end of the cable to the ANT/CABLE IN jack on the side of your TV.

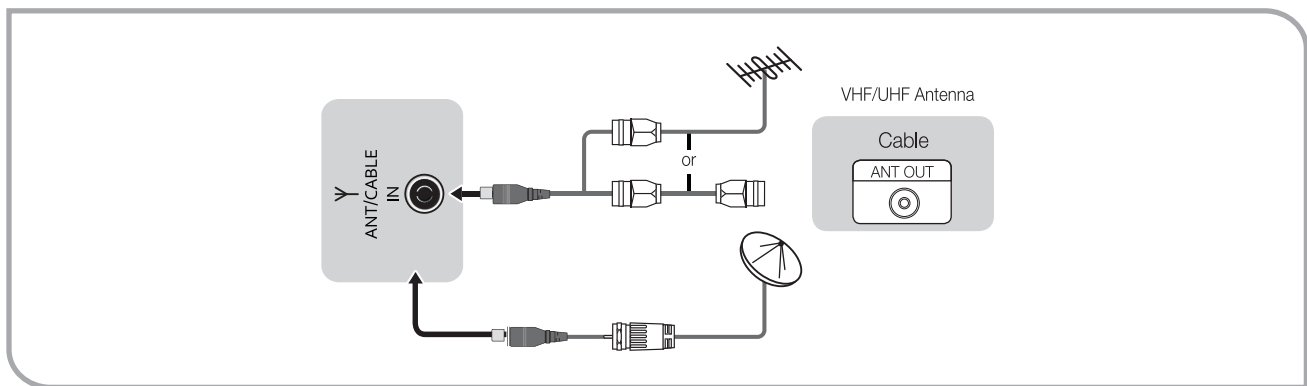

### Connecting an A/V Device with Composite Cable

 
1. Use the audio and video cables to connect the external A/V device's composite video/audio jacks to the TV's jacks. (Video = yellow, Audio Left = white, and Audio Right = red)
2. Plug the connected devices into the mains socket before switching on the TV.
3. Select the corresponding source from the TV.

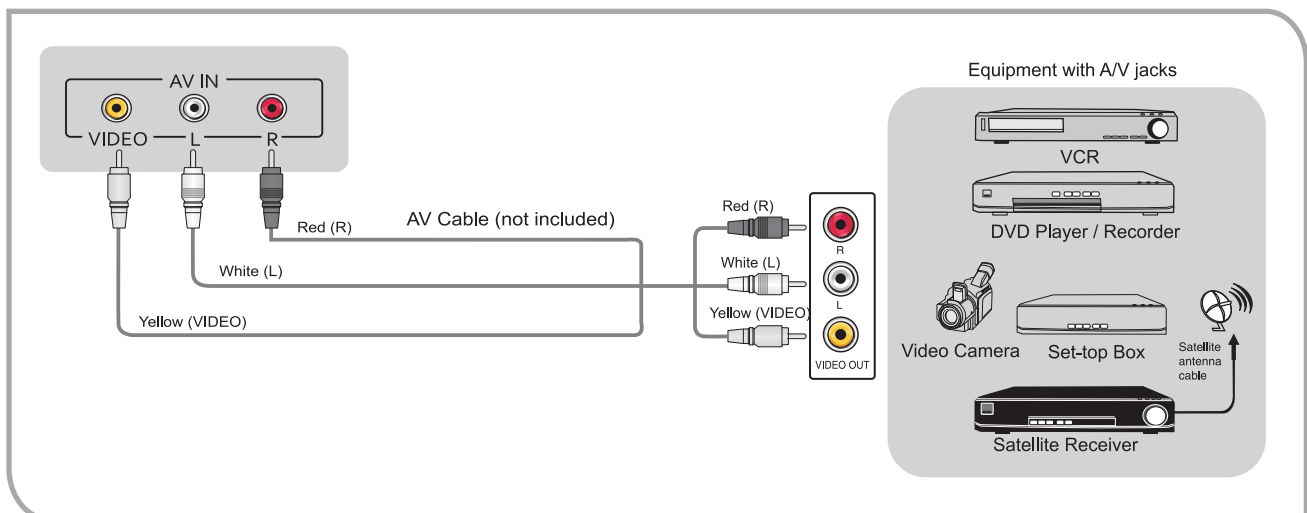

# Getting Started

## Connecting an A/V Device with Component (YPbPr) Cable

 
1. Use a component cable to connect the external A/V device's component output jacks to the TV's YPbPr jacks. Use an audio cable to connect the external A/V device's component audio jacks to the TV's AUDIO (L/R) jacks.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Select the corresponding source from the TV.

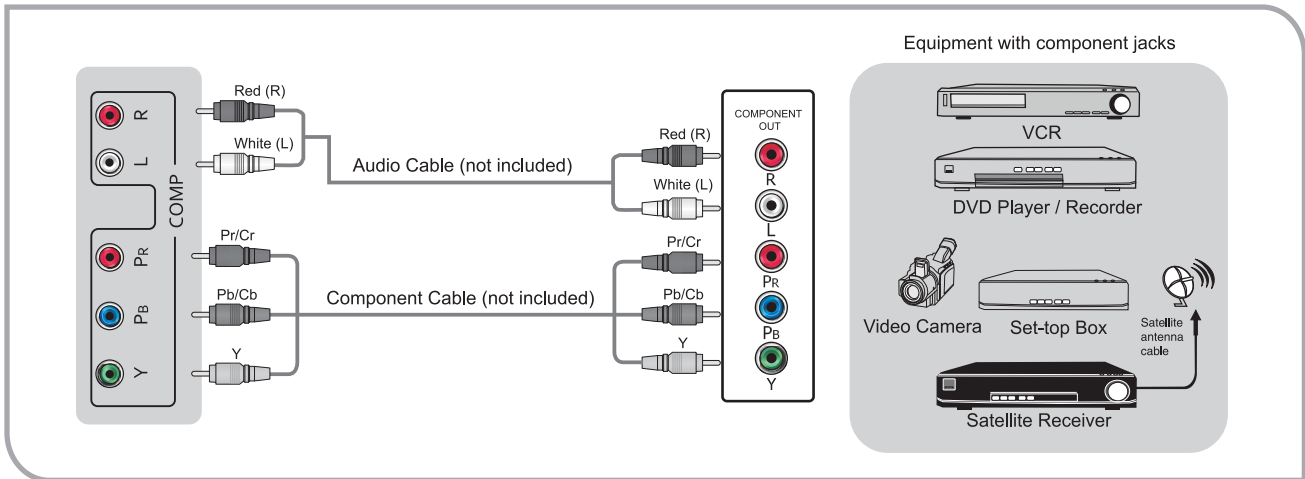

## Connecting an A/V Device with HDMI Cable

- Support digital connections between HDMI - enabled AV devices such as PVR, DVD, Blu-Ray, AV receiver and digital devices.
- Some devices such as PVR or DVD player require HDMI signal to be set to output in the device's settings.
- Please consult your device user manual for instructions.

 1. Use an HDMI cable to connect the A/V device's HDMI output jack to the TV's HDMI jack.
2. Plug the connected devices into the mains socket before switching on the TV .
3. Select the corresponding source from the TV.

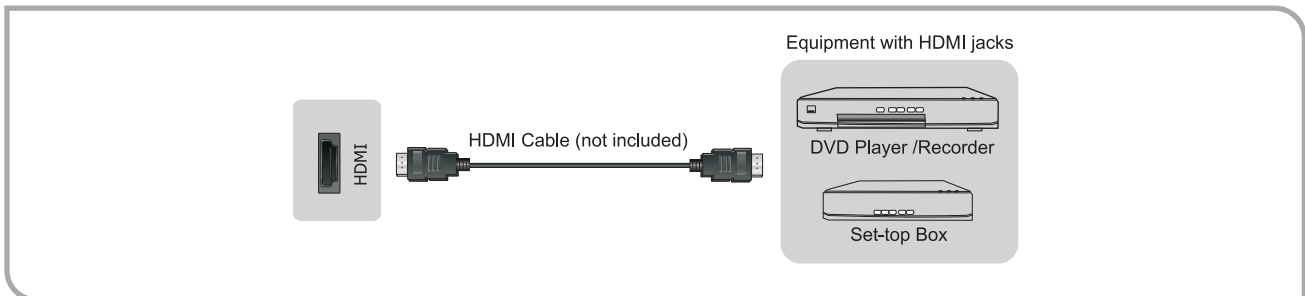


### NOTE

The HDMI connector provides both video and audio signals, it's not necessary to connect the audio cable.

## Connecting a headphone

 
Headphones can be connected to the HEADPHONE output on your set. (While the headphone is connected, the sound from the built-in speakers will be disabled.)

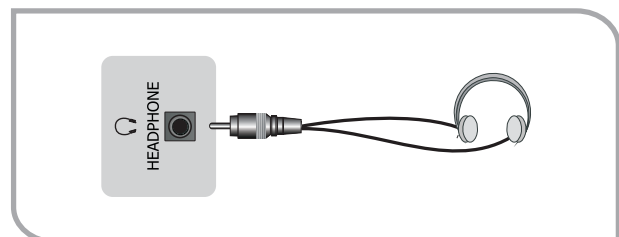

# Getting Started

## Connecting a PC with VGA Cable

 1. Use a VGA cable to connect the PC's VGA output jack to the TV's VGA jack. Use an audio cable to connect the PC's audio output jack to TV's PC/DVI AUDIO IN jack.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Select the corresponding source from the TV.

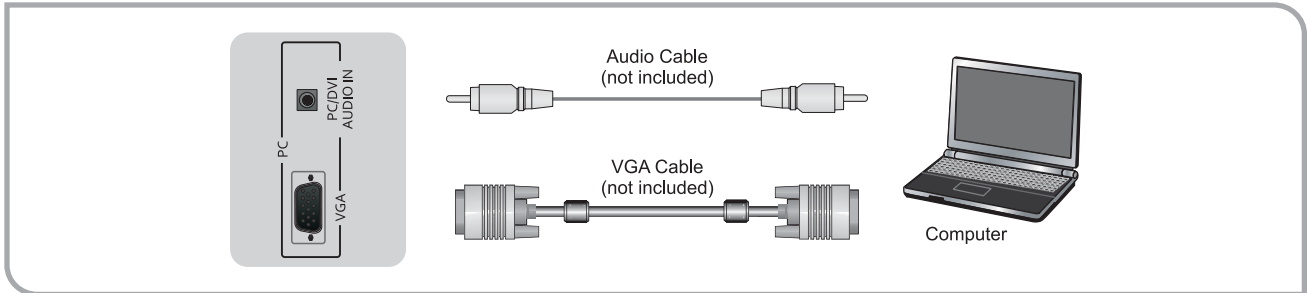


### NOTE

- Primarily this unit is intended for use as an LCD TV. If you want to use it as a monitor, please contact the manufacturer of the PC Video/Graphic's card for further support. Perfect compatibility is not guaranteed.
- The VGA cable will not supplied with the product.
- We strongly recommend to use VGA cable with 2 ferrite cores as shown in the figure.

## Connecting an Audio Receiver with Digital Audio out cable

 1. Use a coaxial cable to connect the A/V device's digital audio in jack to the TV's DIGITAL AUDIO OUT jack.
2. Plug the connected devices into the mains socket before switching on the TV.
3. Select the corresponding source from the TV.

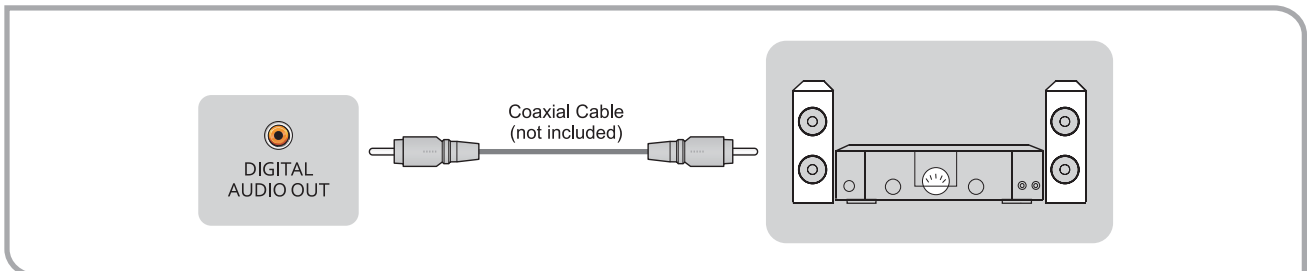


### NOTE

- When a digital audio system is connected to the DIGITAL AUDIO OUT (COAXIAL) jack, decrease the volume of both the TV and the system.
- 5.1 CH (channel) audio is available when the TV is connected to an external device supporting 5.1 CH.
- When the receiver (home theater) is set to on, you can hear sound output from the TV's digital audio out jack. When the TV is receiving a DTV signal, the TV will send 5.1 CH sound to the home theater receiver. When the source is connected to the TV via HDMI, only 2 CH audio will be heard from the home theater receiver. If you want to hear 5.1 CH audio, connect the digital audio out jack from your DVD / Blu-ray player / cable box / STB satellite receiver directly to an amplifier or home theater.

## Connecting an ethernet cable to access a network or the Internet

 Connect an ethernet cable to access a network or the Internet. TV also features wireless connectivity.

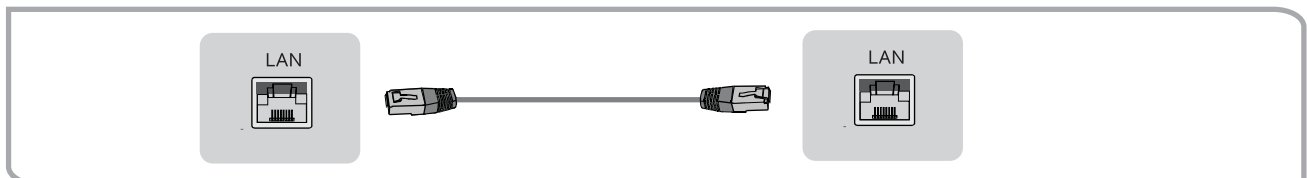




# Basic Features

## Turning the TV On for the First Time


The Setup Wizard menu appears the first time you turn on the TV. It will assist you to specify the menu language, time zone, picture mode, Internet connection, tuner mode and channel installation.

**IMPORTANT: Make sure that the antenna or cable is connected and a wired or wireless Internet connection is available.**

 
1. Make sure that you have:
  - Installed the remote control batteries.
  - Connected an antenna or cable.
  - Connected the power cord.
2. Press [POWER] (⏻) to turn on your TV. The **Setup Wizard** menu displays.
3. Press [▲ / ▼] to select your menu language: English, Spanish or French, press [ENTER] button to confirm.

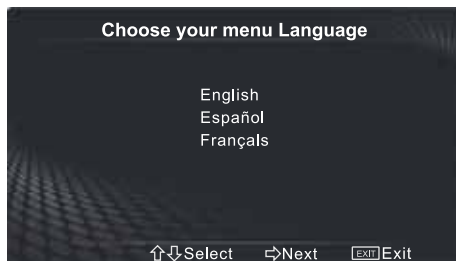

 4. Press [▲ / ▼] to select your picture mode: Home Mode or Retail Mode, press [ENTER] button to confirm. Retail mode is not an energy saving mode.

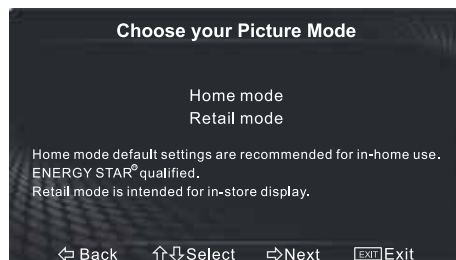


 
5. Press [▲ / ▼] to select your tuner mode: Antenna or Cable, press [ENTER] button to confirm.

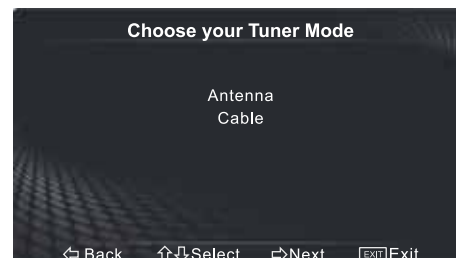

### NOTE

If you are using a cable or satellite box and you have connected it to the TV using a Coaxial (RF) cable, you should select the cable option. If you use a cable or satellite box, you do not need to scan for channels.

  6. Press [▲ / ▼] to set the channel installation: Scan or Skip Scan, press [ENTER] button to confirm.

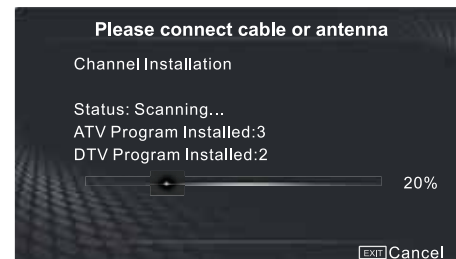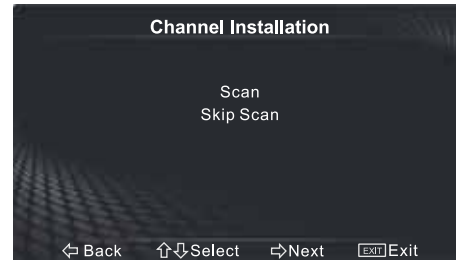

- If you select “Scan”, your TV automatically starts **Channel Installation** available in your viewing area.
- If you select “Skip Scan”, your TV does not scan for channels.
- Depending on the reception condition, it may take up to 25 minutes or more to complete memorizing channels. Please allow the process to complete without interruption.

## Turning your TV on or off

To turn your TV on or off (standby mode):

1. Plug the power cord into an AC power outlet.
2. Press [POWER] button. Your TV turns on.
3. Press [POWER] button again to turn off your TV. When you turn off your TV, it goes into standby mode.

### WARNING

When your TV is in standby mode, it is still receiving power. To completely disconnect power, unplug the power cord.

### NOTE

If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

## Selecting the Input Source

The first time you turn on your TV, you must select the TV signal source. Your TV stores this information, so you do not need to change the TV signal source unless it changes. For example, you change from an outside antenna to cable TV.

### To select the video input source:

1. Turn on your TV, then press [INPUT] button on the remote or on the TV. The **Input Source** menu opens.
2. Press [▲ / ▼] button to highlight the input source, then press [ENTER] button.



## Changing Channels/ Volume

1. Press [CH▲ / V] button on the remote control, you can change the channels. (Press [VOL▲ / V] button to raise or lower the volume).
2. Press [CH▲ / V] button on the back panel of the TV set, you can also change the channels. (Press [VOL▲ / V] button to raise or lower the volume).
3. Press the numeric buttons on the remote control to display the corresponding channels.

### NOTE

 
Changing the channels can also be achieved by directly entering the channel number using the numeric keys on the remote control. If you are entering a two or three digit channel number, the time between key presses should be less than 3 seconds.

# Basic Features


## Shortcuts Instructions

**Aspect** - Select the screen aspect ratio from Normal, Wide, Zoom and Cinema.


**Normal:** The original 4:3 aspect ratio (1.33:1 signal) is preserved, so black bars are added to the left and right of the image. Standard TV broadcasts are displayed with a 4:3 aspect ratio.

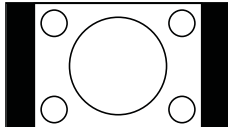

 
**Wide:** When watching a standard broadcast or full-frame movie in this mode, the display image is stretched proportionately to fill the TV screen. When watching a widescreen (1.78:1 signal) program or movie, the display image fills the TV screen.

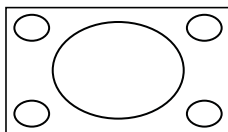

 **Zoom:** Stretch the 4:3 aspect ratio image vertically and horizontally to fill the screen at 1:1.78 aspect ratio.

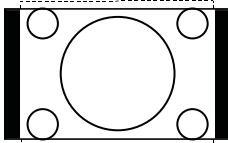

 **Cinema:** Stretch the 4:3 aspect ratio image vertically and horizontally to fill the screen at 1:2.35 aspect ratio.

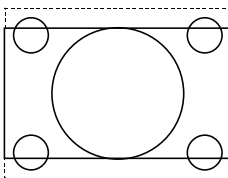


**VUDU** – VUDU is an on-demand, pay-per-view, service that offers high-definition movies on the Web. You can access the VUDU service by pressing this key.

**HICAST@** – Press to browse the Apps in HICAST Dock. The Apps in the HICAST Dock let you watch movies, TV shows, listen to music, and much more.

**NETFLIX** – Pressing this key opens the Netflix interface. Netflix is an online DVD and Blu-ray Disc

rental service, offering instant access to movies and TV shows to Netflix members. Netflix unlimited membership required.

 **Fav.** – Display your Favorite List. You can add or delete channels to create your favorite list.

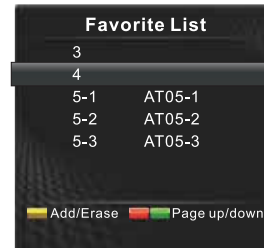


**Cursor up/down:** Press [▲/▼] button to select the option.


**Add/Erase:** Press [YELLOW] button to add or delete the channel from Favorite List.

**Page up/down:** Press [RED/GREEN] button to page up or down.

 **DISPLAY** – Display the information banner. The information including channel number, channel name, current system time, tuner mode, audio stream, video format, audio language, closed caption mode, parental locks rated, program details, etc.

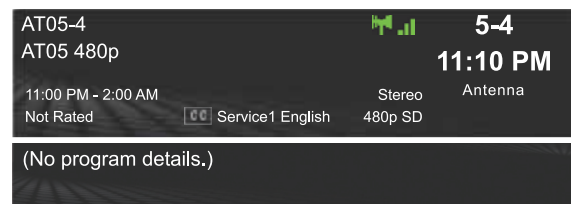

 **GUIDE** – Open the DTV program guide. The program guide information is provided by the broadcasting company.

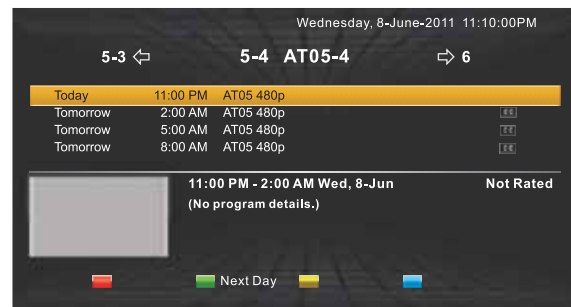


# Basic Features

## To Use the Menu

- 1 Press the [MENU] button to open the main menu.
- 2 Press the [▲/▼] button to select a menu option, then press the [▶/ENTER] to enter the menu.
- 3 In the menu, you can:  
press the [▲/▼] to select an item,  
press the [◀/▶] to adjust the value, or  
press the [▶/ENTER] to enter a submenu.
- 4 Press the [MENU] button to return to the previous menu or press the [EXIT] button to exit the menu.

### NOTE

 The menus in the user's manual may vary slightly from the actual screen.

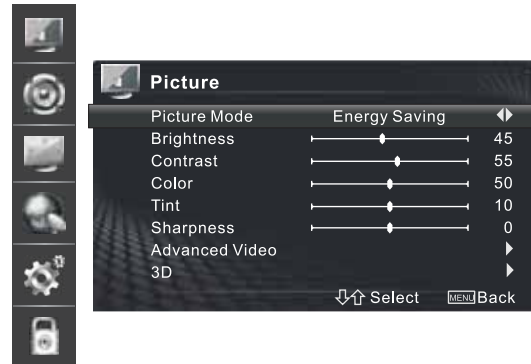

## Using the Picture Menu

### You can adjust:

**Picture Mode** – Select a preset picture mode: Energy Saving, Standard, Vivid or Custom.

**Brightness** – Increase or decrease the brightness of the picture. Increasing the brightness can add more light to dark areas of the picture, while decreasing the brightness can add more darkness to light areas of the picture.

**Contrast** – Increase or decrease the contrast of the picture. Increase the contrast to adjust the white areas of the picture or decrease the contrast to adjust the black areas of the picture.

**Color** – Adjust the level of color in the picture.

**Tint** – Adjust flesh tones so they appear natural.

**Sharpness** – Change the sharpness level.

**Advanced Video** – Access advanced video settings such as Color Temperature, Noise Reduction and Adaptive Contrast.

**Color Temperature:** Change the color temperature. Select a preset color temperature: Cool, Standard and Warm.

**Noise Reduction:** Optimize the picture quality by filtering signal interference; select: Off, Low, Medium and High.

 
**Adaptive Contrast:** Automatically adjusts the contrast level of the selected input source.

**120Hz Smooth Motion:** Effect (Open or adjust the 120Hz Smooth Motion), Demo Partition (All, Right, Left), Demo.

**3D** – Enables playback of 3D movies and TV shows. (requires compatible 3D glasses; sold separately)

### NOTE

- When 3D video is watched under the fluorescent lamp(50-60HZ) or tri-band fluorescent tube, there may be slight flicker, so please adjust the illumination downward or switch off the light.
- Certain functions, such as Zoom, are not available when watching 3D movies and TV shows.
- Other brands 3D glasses may not be supported.
- Sit upright facing the TV when watching 3D movies and TV shows.
- This TV supports automatic identification of common 3D formats when connected to HDMI V1.4 compatible sources. Other 3D sources require manual setup.
- 3D glasses are not included with your TV. In order to purchase Hisense 3D glasses, please contact customer service at 1-800-935-8880 for details and purchase.

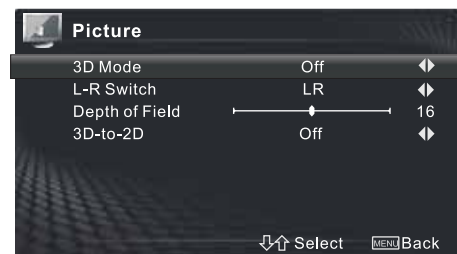

### You can adjust:

**3D Mode** – Format may be set to: 2D-to-3D, Side-by-Side, Top-and-Bottom, Off.

### NOTE

- When 3D signal format is Frame Packing, the image will be displayed according to the resolution of the incoming signal.  
For example: when the input signal is 1280×720, a 720p image will be displayed. A 1920 x 1080 input signal will be displayed in 1080p.
- When 3D signal format is Side-by-Side, Top-and-Bottom, the image is displayed full screen in half resolution (960 x 1080 or 1920 x 540 respectively).

# Basic Features

**L-R Switch** – flips the left and right frames in Side-by-Side format.

**Depth of Field** – Adjusts the range of distance (focus) that appears acceptably sharp in a 3D image.

**3D-to-2D** – Disables automatic identification of 3D format during playback; forces 2D playback using only the Left or Right frame.

## Using the Audio Menu

 


**You can adjust:**

**Sound Mode** – Select the Sound Mode: Standard, Speech, User or Music.

**Balance** – Adjust the volume of the left and right speakers.

**Equalizer** – Soften or enhance the sound at specific frequency points.

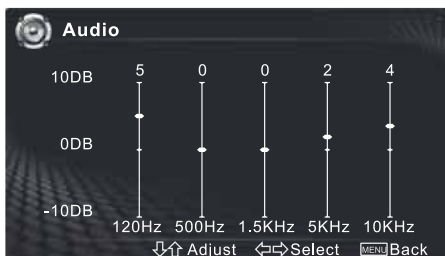

**Sound Surround** – Simulates surround sound and enhances bass response.

**SPDIF Type** – Send digital audio to an external audio system. You can select PCM, RAW or Off.

**PCM:** PCM outputs two channel audio regardless of the input format.


**RAW:** Passes through (output = input) the incoming audio signal without decoding. E.g. incoming Dolby Digital, DTS or PCM data stream is simply output as it is without any processing.

**Auto Volume Control** – Automatically adjusts volume to a consistent level; attenuates loud passages.

## Using the Screen Menu

 **NOTE**

Only available in VGA mode.

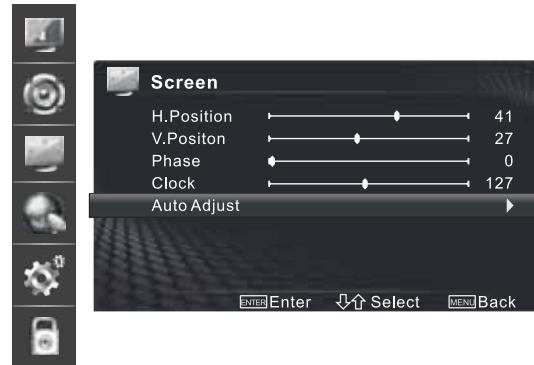

**You can adjust:**

**H.Position** – Move the image right or left.

**V.Position** – Move the image up or down.

**Phase** – Adjust the focus of stable images.

**Clock** – Adjust the sample frequency.

**Auto Adjust** – Detects input signal clock, phase and position and adjusts TV display accordingly.

 
## Using the Channels Menu



**You can adjust:**

**Tuner Mode** – Select TV source: Antenna or Cable.

**Auto Channels Search** – Scans for channels that have signals and stores the channels information in the channel list.

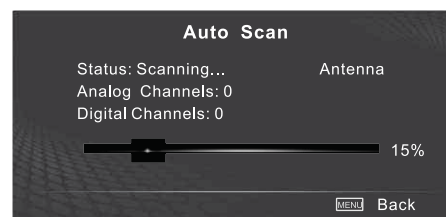

# Basic Features

**Channel Skip** – You can cancel a channel stored in the channel list.

 **NOTE**

When you press [CHA / V] button, your TV skips the channel you cancelled. You can still tune to the channel using the number buttons on the remote control.

**Favorite List** – Add or delete channels to create a favorite list. You can press [FAV] button to display your Favorite List.

**MTS** – Select the default audio stream: Mono, Stereo or SAP.

**Audio Language** – Select the audio language: English, Spanish or French.

 **NOTE**

Only available in digital TV signal.

## Using the Settings Menu



**You can adjust:**

**Language** – You can select the menu's language to English, Spanish or French.

**Menu Settings** – Set the timeout.

**Timeout:** Select the display time of the menu: 10-20-...-60 seconds.

**Time Setup** – Set the time zone, daylight saving, time and sleep timer.

**Time Zone:** Select your local time zone: Eastern Time, Hawaii, Alaska, Arizona, Indiana, Mountain Time, Central Time or Pacific Time.

**DayLight Saving:** Set the Daylight Saving time for your area.



**Time:** You can set time manually or select automatic if the TV is connected to an antenna or cable source.

- **Auto Synchronization:** Select "On" to for automatic date and time setting using information from broadcast stations in your area.
- **Date:** Set the current year/month/day.
- **Time:** Set the current time.
- **Power On Timer:** When "On", you can set the time when the TV turns on automatically.
- **Timer:** Set the desired time for the TV to turn on automatically.
- **Power Off Timer:** When "On", you can set the time when the TV turns off automatically.
- **Timer:** Set the desired time for the TV to turn off automatically.

**Sleep Timer:** Specify the amount of time before your TV automatically turns off: off-10-...-120 minutes.

**Network** – You can setup the network configuration in this menu. For more information, see "Network Connection" and "Network Setup".

**Demo Mode** – Displays a banner at the bottom of the screen which describes the key features of the TV.

**Version Info** – Display the software version information. You may need to reference this information when contacting Customer Care or upgrading the firmware online.

**Reset Default** – Restores the TV configuration to factory settings. You will need to complete the setup for such things as Tuner/Channel settings, Network connection, Date/Time and other user preferences.