

1 ACCESSORIES LIST

- User Manual • Quick Setup Guide • Warranty Card • Remote Control • Battery x 2
- TV • Base Plate • Stand Cover • Spacer x 4 • Stick Spacer x 2
- For S8T880UW
- Screw (M5 x 16mm) x 6 • Screw (S75 x 14 mm) x 2
- Wall-mounted screw (M6 x 25mm) x 4
- For S8T880UW
- Screw (M5 x 16mm) x 10 • Wall-mounted screw (M6 x 25mm) x 4

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.

1 CAUTION: Please check foam for accessories before discarding.

2 Secure the stand cover to the base plate vertically with the 2 screws (S75 x 14) for S5T880UW or 4 screws (M5 x 16) for S8T880UW.

3 Carefully place your TV on a soft, cushioned surface to prevent damage to the screen.

4 Slide 2 spacers onto the positions as illustration.

5 Take out the stand accessories. Insert the stand cover into the base plate, and secure them with 2 screws (M5 x 16).

6 Align the base stand with the screw holes on the bottom of TV back, secure the base stand to the TV with the 4 screws (M5 x 16) tightly.

3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached (see Step 1).

Make sure the TV is laid face-down on a clean, safe, and cushioned space, remove the original screws in the bracket holes on the TV back.

Note: These 4 screws which get from back cover mount hole could not be used any more.

Place the provided spacers in the corresponding bracket holes. Attach purchased bracket (1.5mm to 2.5mm thickness) on the TV with 4 screws which are in the accessories bag. Follow instructions provided with the wall-mount bracket.

Follow instructions provided with the Wall-Mount bracket.

- If you are not sure of your ability to do complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to misinstalling or incorrect assembly.
- The selected screws are 9.5 ~ 11.5 mm in length when measured from the attaching surface of the TV's rear cover. The diameter and length of the screws differ depending on the Wall-Mount Bracket model.

Wall-Mount hole pattern VESA (mm)	400 × 400
Wall-Mount screw size (mm)	M6

4 REMOTE CONTROL

Remote sensing window

Power on/off

Select input source

ASPECT button

Open the DTV program guide (if available)

Direct channel selection

Go to the previous channel

Close the menu

Special function buttons (see Notes)

Go to the previous channel

Close the menu

Confirm selections

Display the information banner

MENU button

Next channel

Previous channel

Launch YouTube App

Launch Netflix

Media content control function buttons

Adjust Closed Caption (CCD) mode

Auto select button

Select sound mode

Select picture mode

HMedia (Digital Media Player)

Select VGA / HDMI source

Enter TV source

NOTE:

1. Illustrations are for your reference only.
2. Red/Green/Yellow/Gray buttons are used for Electronic Program Guide (EPG). After pressing the [GUIDE] button when viewing digital channels, the same color buttons will appear with explanations in the on-screen display (OSD). Follow the steps shown in the OSD.
3. Match the remote control with TV, please see the label on remote control or the Troubleshooting in the USER MANUAL.

5 MAKING CONNECTIONS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

- ▶ **ANT** Connect an outdoor VHF/UHF antenna.
- ▶ **VGA & AUDIO** Connect a VGA cable and an audio cable from the PC.
- ▶ **LAN** Connect an ethernet cable to access a network or the Internet. TV also features wireless connectivity.

▶ HDMI / COMP / AV Connect an HDMI cable or Comp/AV Adapter from an external AV equipment.

Video Effect:

- BEST (HDMI)**
- BETTER (COMPONENT)**
- GOOD (AV)**

- ▶ **DIGITAL AUDIO OUT** Connect an optical cable from an external digital audio system.
- ▶ **USB** Connect a USB device for browsing photos, music and movies.
- ▶ **HEADPHONE** Connect Headphone for audio out of the TV.
- ▶ **DEBUG** Just for factory used, it can't be inserted any equipment.

6 TURNING THE TV ON FOR THE FIRST TIME

MENU OPERATIONS

- Language setting**
 - Please press [ENTER] to start the wizard, then press [▲▼] button to select your language: English, Spanish or French, select [Next] to confirm enter the Welcome screen.
 - In the Welcome screen introduced the available input devices and interfaces.
- Country setting**
 - Please press [▲▼] button to select the country where you will operate the TV.
 - Select the local time zone according to your region.
 - Daylight Saving: Set the Daylight Saving time for your area.
- Use Mode**
 - Select your Mode Setting: Home Mode or Retail Mode.
 - If you select Retail Mode, a message appears "Are you sure to change to retail mode?" Select "OK" to continue, or select "No" to change your selection.
 - Home Mode is the recommended setting which offers full functionality of the television. If you selected Retail Mode, Energy Saving is not realized.
- Select Network**
 - The Select Network: Connect your TV to access the network.
 - When the Network Setting menu opens, Hisense Service Terms and Conditions will appear. Press [◀▶] to scroll through the pages. Please read it carefully. If you want to access the internet, press the [Agree] button to set your TV's network connections. Otherwise, press the [Disagree] button to enter the Channel search menu.
 - You can setup the network configuration in this menu. For more information, please refer to the section titled "Network Connection" and "Network Setup" in the user manual.
- Channel Search**
 - Press [▲▼] to select your "Tuner Mode: Antenna or Cable, press [ENTER] button to confirm.
 - Press [▶] to set the Channel Installation: Scan or Skip Scan, press [ENTER] button to confirm. If you select "Scan", your TV automatically starts Channel Installation available in your viewing area. If you select "Skip Scan", your TV does not scan for channels. Depending on the reception condition, it may take up to 30 minutes or more to complete memorizing channels. Please allow the process to complete without interruption.
 - After scan, you will enter the complete interface. It will display all informations that you set just now and then you can press "Go" to exit the wizard.

Note: If you are using a cable or satellite box and you have connected it to the TV using a Coaxial cable, you should select the cable option. Be sure the cable or satellite box is turned on before starting the channel scan. If you use a cable or satellite box connected to A/V, Component or HDMI, you don't need to scan for channels.

7 SPECIFICATIONS

Model Name	S5T880UW	S8T880UW
Dimension	Without Stand Width: 48.58 inches (1234 mm) Height: 28.35 inches (720 mm) Depth: 2.38 inches (60 mm)	Width: 51.18 inches (1300 mm) Height: 29.69 inches (754 mm) Depth: 2.32 inches (59 mm)
	With Stand Width: 48.58 inches (1234 mm) Height: 29.37 inches (746 mm) Depth: 11.89 inches (302 mm)	Width: 51.18 inches (1300 mm) Height: 31.9 inches (785 mm) Depth: 13.98 inches (345 mm)
Weight	Without Stand 58.42 lbs (26.5 kg)	63.93 lbs (29 kg)
	With Stand 66.14 lbs (30 kg)	79.37 lbs (36 kg)
LCD Panel Minimum size (diagonal)	54.6 inches	57.5 inches
Screen resolution	3840 × 2160	3840 × 2160
Audio power	10 W × 10 W	10 W × 10 W
Power supply	120 V ~ 60 Hz	120 V ~ 60 Hz
Receiving systems	Analog NTSC	NTSC
	Digital ATSC / QAM	ATSC / QAM
Receiving channels	VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125 Digital Terrestrial Broadcast (8VSB): 2 ~ 69 Digital cable (4Q/256 QAM): 1 ~ 133	VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125 Digital Terrestrial Broadcast (8VSB): 2 ~ 69 Digital cable (4Q/256 QAM): 1 ~ 133
	Tuner type	Frequency synthesized
Environmental conditions	Temperature: 41°F ~ 95°F (5°C ~ 35°C) Humidity: 20% ~ 80% RH Atmospheric pressure: 86 kPa ~ 106 kPa	Temperature: 41°F ~ 95°F (5°C ~ 35°C) Humidity: 20% ~ 80% RH Atmospheric pressure: 86 kPa ~ 106 kPa
	Component Input	480 I/60 Hz, 480 P, 480 P, 720 P/60 Hz, 1080 I/60 Hz, 1080 P/60 Hz
VGA Input	VGA (640×480/60 Hz), SVGA (800×600/60 Hz), XGA (1024×768/60 Hz)	VGA (640×480/60 Hz), SVGA (800×600/60 Hz), XGA (1024×768/60 Hz)
HDMI Input	RGB / 60 Hz (640×480, 800×600, 1024×768) YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P) 3840x2160/24Hz, 3840x2160/25Hz, 3840x2160/30Hz (only for UHD port)	RGB / 60 Hz (640×480, 800×600, 1024×768) YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P) 3840x2160/24Hz, 3840x2160/25Hz, 3840x2160/30Hz (only for UHD port)

Note: Sources of UHD (4K) content must be connected to the HDMI 1 input. For the moment digital television channels do not deliver UHD content. Features, appearance and specifications are subject to change without notice.

8 HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips. If the problem cannot be resolved, please contact Hisense for additional assistance 1-855-344-7367.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	<ul style="list-style-type: none"> • Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. • Attempt to power on unit using the power button on both the TV and the Remote.
Picture is normal, but no sound	<ul style="list-style-type: none"> • Check the volume settings. • Check if Mute mode is set "on".
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"> • Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
Network connection fail.	<ul style="list-style-type: none"> • Check network physical connection, make sure connection is correct. • Enter "Menu", "Network", "Configuration", make sure configuration is correct according to your network service provider. • Enter "Menu", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.
Connect Netflix fail.	<ul style="list-style-type: none"> • Check network physical connection, make sure connection is correct. • Enter "Menu", "Network", "Configuration", make sure configuration is correct according to your network service provider. • Enter "Menu", "Network", "Applications", "Netflix", "Deactivation" to reset "Netflix" account.
How do I get easy IPTV to work on my TV?	<ul style="list-style-type: none"> • You need a broadband (high speed) Internet service with a speed of no less than 1.5 Mbps. • Connect the TV to the internet through your router by an Ethernet Cable or wireless. If connection fails, check with your internet service provider or router manufacturer to determine if there is a firewall, content filter, or proxy settings that may block the TV from accessing the internet. • Before calling for service, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn it on again. • Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.