## Hisense

Remote Control

Secure the stand column to the base with 3 screws

Secure the stand cover to the stand column with 1

Screws M5×12

After pre-installing the stand, secure the stand to the



# **QUICK START GUIDE**

**4** THE REMOTE CONTROL

Direct channel selection \_\_\_\_\_ 4 5

Dash button

MUTE button —

Increase volume —

Decrease volume ——

Enter TV source \_\_\_\_

Launch Netflix -

Media content control function buttons

Select picture mode -

Select sound mode

Set the sleep timer

**5** MAKING CONNECTIONS

MENU button —

Launch Vudu HD Movies -

▲/▼/ ◆/▶ − Navigate Up / Down / Left / Right or adjust OSD settings

Return to the previous menu -

Display the favorite channel list -

1. Illustrations are for your reference only.

display. Follow the steps shown in the OSD.

6 SPECIFICATIONS

(Diagonal)

Audio power

Power supply

uner type

VGA Input

HDMI Input

Screen resolution

Power consumption

Receiving Analog

nvironmental conditions

systems Digital

Select a digital sub-channel

7 8 9

\_\_ () LAS1

MUTE /

OL HiMedia

✓ TV

4 P H P

►II ■ ASPECT DISPLAY

PICTURE SOUND MTS/SAP CCD

SLEEP FAV VGA HDMI


Hisense

2. Red/Green/Yellow/Cyan buttons are available when the same color buttons shown with explanations in the on-screen


#### 1 PACKAGE CONTENTS

- User Manual
   Quick Start Guide Warranty Card Power Cord
- Battery × 2Screw (M5×12)×8
- 2 INSTALLING THE STAND


Follow the illustrations below to complete the installation steps.

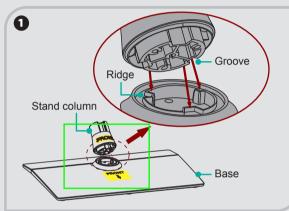

Align the front of the stand column with the front of the base, then insert the stand column into the base making sure that the groove in the stand column aligns with the ridge in the base.

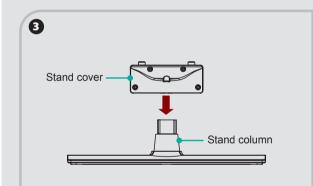


Align the stand cover with the stand column. Make sure that the bottom of the stand cover is flush against the top of the stand column.

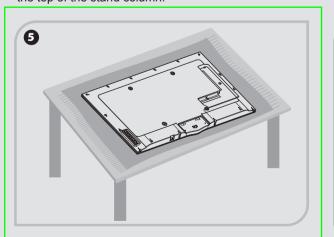


Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to

## 3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is

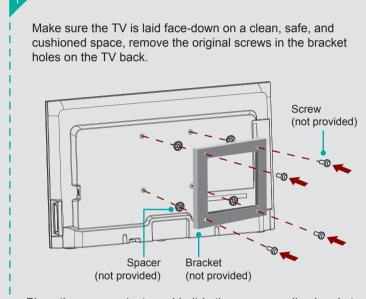

attach the bracket on the TV.

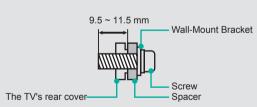

Wall-Mount screw size


400 × 400 (for 48" 50")

 If you are not sure of your ability to do complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or incorrect

 The selected screws are 9.5 ~ 11.5 mm in length when the Wall-Mount Bracket model.


**NOTE** Product image is only for reference, actual product may vary in appearance.

pre-attached.

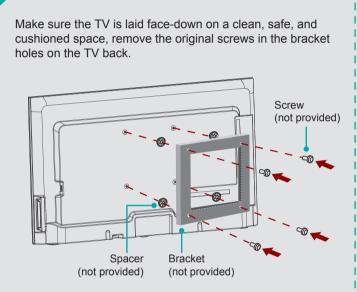

Place the spacers (not provided) in the corresponding bracket Follow the instructions provided with the wall-mount bracket to

To prevent internal damage to the TV and ensure the TV is mounted securely, be sure to use fixing screws (not provided) which are 9.5 mm to 11.5 mm in length when measured from the attaching surface of the mounting hook.

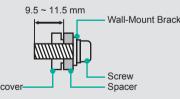

200 × 200 (for 40")

Follow instructions provided with the Wall-Mount bracket.

measured from the attaching surface of the TV's rear cover. The diameter and length of the screws differ depending on

## 7 TV CONNECTORS

- Infra-red transmitter

Select input source

Next channel

Previous channel

Close the menu

(if available)

(see Notes)

- ASPECT button

Confirm selections

Launch YouTube App

Go to the previous channel

HiMedia (Digital Media Player)

Open the HiSmart Home Menu

Open the DTV program guide

Display the information banner

TV Side View

3.1 inches (79.9mm)

33.1 lbs (15 kg)

39.7 lbs (18 kg)

49.5 inches

1920 × 1080

10 W + 10 W

36.39 inches (924.3mm) 42.9 inches (1091mm) 44.4 inches (1129mm)

36.39 inches (924.3mm) 42.9 inches (1091mm) 44.4 inches (1129mm)

480 I / 60 Hz, 480 P / 60 Hz, 720 P / 60 Hz, 1080 I / 60 Hz, 1080 P / 60 Hz

VGA (640×480 / 60 Hz), SVGA (800×600 / 60 Hz), XGA (1024×768 / 60 Hz)

11.1 inches (282mm) 11.1 inches (282mm)

23.82 inches (605mm) | 27.7 inches (704mm) | 28.5 inches (725mm)

33.1 lbs (15 kg)

39.7 lbs (18 kg)

47.6 inches

1920 × 1080

8 W + 8 W

Without Stand 21.46 inches (545mm) | 25.1 inches (637mm) | 26.3 inches (667mm)

3.33 inches (84.5mm) 3.3 inches (85mm)

VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125

Temperature: 41°F ~ 95°F (5°C ~ 35°C)

Atmospheric pressure: 86 kPa ~ 106 kPa

RGB / 60 Hz (640×480, 800×600, 1024×768)

YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P)

Digital Terrestrial Broadcast (8VSB): 2 ~ 69 Digital cable (64/256 QAM): 1 ~ 135

.86 inches (225mm)

Without Stand 22.05 lbs (10 kg)

With Stand 25.35 lbs (11.5 kg)

40 inches

1920 × 1080

W + 7 W

ATSC / QAM

Power consumption 120 V ~ 60 Hz

Frequency synthesized


Humidity: 20% ~ 80% RH

Adjust Closed Caption (CCD) mode
Audio select button
Select VGA / HDMI source

Special function buttons


Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

▶ ANT Connect an outdoor VHF/UHF antenna.

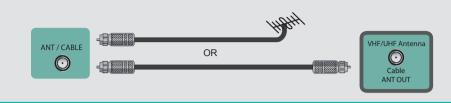

► HDMI / COMP / AV Connect an HDMI cable or Comp/AV Adapter from an external AV equipment.


**Video Effect:** 

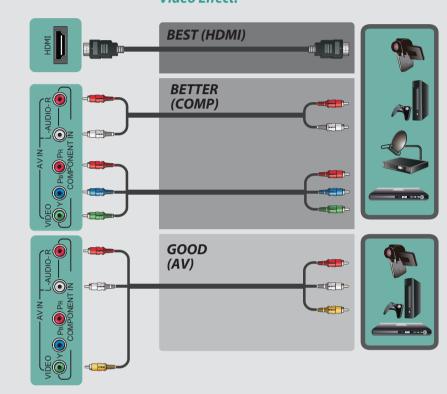


**VGA & VGA AUDIO** Connect a VGA cable and an audio cable from the PC.




▶ LAN Connect an ethernet cable to access a network or the Internet. TV also features wireless connectivity.

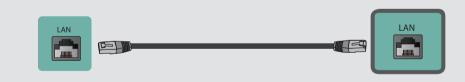

▶ DIGITAL AUDIO OUT Connect an optical cable from an external digital audio system.

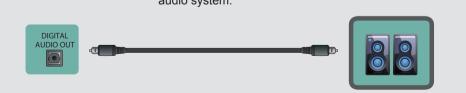

▶ **HEADPHONE** Connect Headphone for audio out of the TV.

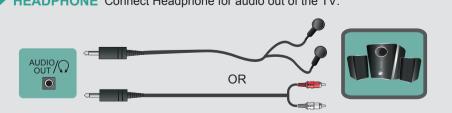



▶ USB Connect a USB device for browsing photos, music and movies.



### 8 TURNING THE TV ON FOR THE FIRST TIME

OPERATIONS

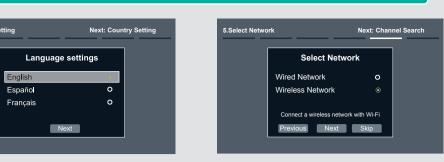

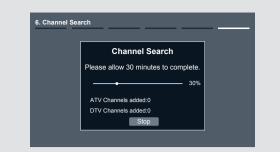

MENO	OPERATIONS
Language setting	<ul> <li>Please press [ENTER] to start the wizard, then press [▲/▼] button to select your language: English, Spanish or French, select [Next] to confirm enter the Welcome screen.</li> <li>In the Welcome screen introduced the available input devices and interfaces.</li> </ul>
Country setting	• Please press [▲/▼] button to select the country where you will operate the TV.
Time zone setting	Select the local time zone according to your region.     Daylight Saving: Set the Daylight Saving time for your area.
Use Mode	<ul> <li>Select your Mode Setting: Home Mode or Retail Mode.</li> <li>If you select Retail Mode, a message appears "Are you sure to change to retail mode?" Select "OK" to continue, or select "No" to change your selection.</li> <li>Home Mode is the recommended setting which offers full functionality of the television. If you selected Retail Mode, Energy Saving is not realized.</li> </ul>
Select Network	The Select Network : Connect your TV to access the network.

Select Network	<ul> <li>The Select Network: Connect your TV to access the network.</li> <li>When the Network Setting menu opens, Hisense Service Terms and Conditions will appear. Press [◄/▶] to scroll through the pages. Please read it carefully. If you want to access the internet, press the [Agree] button to set your TV's network connections. Otherwise, press the [Disagree] button to enter the Channel search menu.</li> <li>You can setup the network configuration in this menu. For more information, please refer to the section titled "Network"</li> </ul>
Channel Search	<ul> <li>Connection" and "Network Setup" in the user manual.</li> <li>Press [▲/▼] to select your Tuner Mode: Antenna or Cable, press [ENTER] button to confirm.</li> <li>Press [◄/▼] to set the Channel Installation: Scan or Skip Scan, press [ENTER] button to confirm. If you select "Scan", you TV automatically starts Channel Installation available in your viewing area; If you select "Skip Scan", your TV does not scan</li> </ul>

· After scan, you will enter the complete interface. It will display all informations that you set just now and then you can press "Go" to exit the wizard.

for channels; Depending on the reception condition, it may take up to 30 minutes or more to complete memorizing channels.

9 TROUBLESHOOTING TIPS

on before starting the channel scan. If you use a cable or satellite box connected to AV, Component or HDMI, you don't need t o scan for channels.

Please allow the process to complete without interruption.

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips. If the problem cannot be resolved, please contact Hisense for additional assistance.

If you are using a cable or satellite box and you have connected it to the TV using a Coaxial cable, you should select the cable option. Be sure the cable or satellite box is turned

#### **POSSIBLE SOLUTIONS SYMPTOMS** • Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. No sound or picture • Attempt to power on unit using the power button on both the TV and the Remote. · Check the volume settings. Picture is normal, but no sound · Check if Mute mode is set "on" . I have connected an external · Check for the correct output connection on the external source and for the correct input connection on the TV. source to my TV and I get no • Make sure you have made the correct selection for the input mode for the incoming signal. picture and/or sound. • Check network physical connection, make sure connection is correct. Network connection fail. • Enter "Menu", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful. Check network physical connection, make sure connection is correct. • Enter "Menu", "Network", "Configuration", make sure configuration is correct according to your network service provider. Connect Vudu/Netflix fail.

#### • Enter "Menu" , "Network" , "Configuration" , make sure configuration is correct according to your network service • Enter "Menu", "Network", "Applications", "VUDU/Netflix", "Deactivation" to reset "VUDU/Netflix" account. You need a broadband (high speed) Internet service with a speed of no less than 1.5 Mbps. • Connect the TV to the internet through your router by an Ethernet Cable or wireless. If connection fails, check How do I get easy IPTV to work with your internet service provider or router manufacturer to determine if there is a firewall, content filter, or on my TV? proxy settings that may block the TV from accessing the internet. • Before calling for service, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn it on again. Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.

TV with the 4 screws (M5×12).

screw (M5×12).