

Hisense

K20D Series QUICK SETUP GUIDE

1 ACCESSORIES LIST

- User Manual • Quick Start Guide • Remote Control • Power Cord
- Battery x 2 • Screw (M5 x 12) x 4 • Screw (S74 x 10) x 4

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.



Align column of the stand column with the corresponding hole on the base making sure that the groove in the stand column aligns with the ridge in the base.




To install the base stand, slide in the base stand until the screw holes are aligned.

EF NOTE Product image is only for reference, actual product may vary in appearance.

3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket (no provided), you should first remove the stand to pre-secure it.

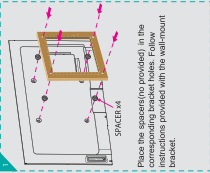


Place the spacer(s) into the corresponding bracket holes. Follow the instructions provided with the full-mount bracket.

5 REMOTE CONTROL

EF NOTES

The full battery pack is available for this model.

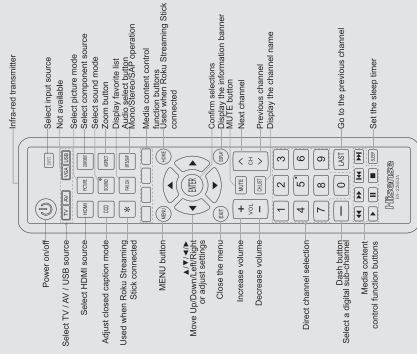

CHANGE THE BATTERIES

- Slide the back cover to open the battery compartment of the remote control.
- Insert two AAA-size batteries. Make sure to match the (+) and (-) signs of the batteries with the (+) and (-) signs indicated in the battery compartment.
- Close the battery compartment cover.



6 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.


ANT

Connect an outdoor VHF/UHF antenna.




8 TURNING THE TV ON FOR THE FIRST TIME

Home Language

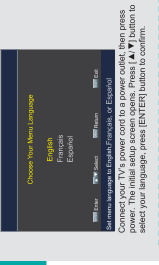

Set the initial settings screen appears. Press [AV] button to select your language, press [ENTER] button to confirm.


Picture Mode

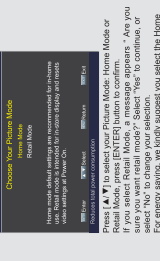

Press [M] to select your TV Source: Antenna or Cable. If you select Retail More, a message appears: Are you sure? Press [ENTER] button to confirm. Press [M] to select 'No' to change your selection. For energy savings, we kindly suggest you select the Home Mode.


When you select a cable or satellite box connected to the TV using a Coaxial cable, you should select the cable option. If you use a cable or satellite box connected to an AV Component or HDMI, you don't need to scan for channels.

Time Setting

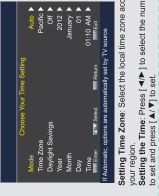

Time Zone: Select the local time zone according to your location. Press [M] to select the number you want to use and press [M] to set.

TV Source

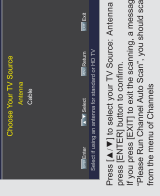

Press [M] to select your TV Source: Antenna or Cable. If you select Retail More, a message appears: Are you sure? Press [ENTER] button to confirm. Press [M] to select 'No' to change your selection. For energy savings, we kindly suggest you select the Home Mode.

When you select a cable or satellite box connected to the TV using a Coaxial cable, you should select the cable option. If you use a cable or satellite box connected to an AV Component or HDMI, you don't need to scan for channels.

9 HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips.

SYMPTOMS

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	<ul style="list-style-type: none"> Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. Attempt to power on unit using the power button on both the TV and the Remote. Check the volume settings. Check Mute/DeMute is set "Off".
Picture is normal, but no sound	<ul style="list-style-type: none"> Check for correct output connection on the external source and for the correct input connection on the TV. Make sure you have made the correct selection for the input mode for the incoming signal.
I have connected an external source to my TV and get no picture and/or sound.	<ul style="list-style-type: none"> If black and white picture first is blank and repop after 60 seconds. Check Color Setting if picture is blank and white.
Sound but no picture on black and white picture.	<ul style="list-style-type: none"> An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance further away from TV.
Sound and picture distorted or appear wavy.	<ul style="list-style-type: none"> Adjust the direction of your antenna or east of the line the channel. If using an external antenna, check the direction, position and connection of the antenna.
Sound and picture is blurry or cuts out momentarily.	<ul style="list-style-type: none"> After switching to Cable, please auto program the channels. The TV will "remember" all the channels then the TV will allow you to surf the channels with [CHV] buttons.
[GM/V] don't work when I set the Channel to Cable? They work with the Air setting?	<ul style="list-style-type: none"> Confirm that TV still has power and is operational. Check the batteries are correctly installed. Clean the front of the remote control (LED window). If using a universal remote, be sure to select the TV mode on the remote. Remove and re-install the batteries correctly to reset the remote or install new batteries. Press the Power button turn on the TV. With a universal remote if you have reset or changed the batteries Check if there is an obstruction between the remote control and the TV.
Remote control does not work.	<ul style="list-style-type: none"> TIP: If you have a digital camera / camera phone, you can aim the front of the remote at camera lenses (at this time the camera should set on camera mode, not play mode). Observe the camera screen while the remote is pointed at the camera. If you observe the camera screen while the remote is pointed at the camera, the remote control is not working. You need to repair or replace the remote control.

7 SPECIFICATIONS

Model Name	K20D0C
Dimension	Without Stand: 44.4 x 26.3 x 3.1 inches (1129 x 667 x 79.9 mm) With Stand: 44.4 x 27.1 x 7.7 inches (1129 x 689 x 195 mm)
Weight	Without Stand: 33.1 lbs (15kg) With Stand: 37.9 lbs (17.2kg)
Active Screen Size (Diagonal)	86 Inches
Screen Resolution	1920 x 1080
Audio power	8 W x 8 (8W)
Power supply	120 V ~ 60 Hz
Receiving systems	NTSC
Digital Tuning	ATSC 3.0, ATSC 1.0, DVB-T2, DVB-T, DVB-C, DVB-S2, DVB-S
Receiving channels	Digital Terrestrial Broadcast (8/68); 2 - 69 Digital cable (DVB-CAM); 1 - 138
Tuner type	Temperature: 41°F ~ 95°F (5°C ~ 35°C) Humidity: 20% ~ 80% RH
Environmental conditions	Atmospheric pressure: 98 kPa ~ 106 kPa Altitude: 0 ~ 10000 ft (0 ~ 3048 m)
Compatible Input	RGB: 60 Hz (640x480, 800x600, 1024x768) Y/V: 60 Hz (800 L, 480 P, 720 P, 1080 I, 1080P)
HDMI Input	