


Basic operation

Parental control

1. Press **MENU** to open the OSD option
2. Press **▲** or **▼** to highlight **Parental**, then press **▶** to enter the **Parental** menu.

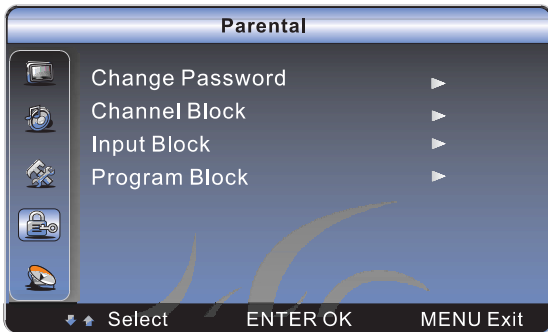

When you first use this function, the default password is [0000]. Once you input this password, you can:

3. Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can adjust:
 - **Channel Block** - This function will let you block any channel you want.
 - Program Block - A. Rating Enable is on
 - B. U.S. TV Ratings: You can choose TV ratings according to the illustration on the screen.
 - C. The settings for U.S. Movie Ratings, Canada (English) Ratings and Canada (French) Ratings follow Step B.

If you want to block the unrated program, please turn on this function.

Following is the description of these ratings.

About TV PG Rating:

The TV ratings are divided into two groups: age-based and content-based.

Age	Defined as
TV-Y	All children
TV-Y7	Directed to older children
TV-G	General audience
TV-PG	Parental Guidance suggested
TV-14	Parents Strongly cautioned
TV-MA	Mature Audience only

Contents	Defined as
FV	Fantasy Violence
D	Suggestive dialogue
L	Strong language
S	Sexual situations
V	Violence

Basic operation

About MPAA Rating:

The Motion Picture Association of America(MPAA) uses a rating system to qualify motion picture content. Television broadcasters employ a rating system to qualify the content of television programs as well. The MPAA and TV ratings work with the V-CHIP feature and allow you to block out programming above the rating limits you determine.

Rating	Defined as
G	General audience
PG	Parental Guidance suggested
PG-13	Parents strongly cautioned
R	Restricted
NC-17	No one 17 and under admitted
X	Adult audience only

About Canada (French)

Rating	Description
G	General
8 ans+	8+General; Not recommended for young children
13 ans+	Programming may not be suitable for children under the age of 13
16 ans+	Programming is not be suitable for children under the age of 16
18 ans+	Programming restricted to adults

About Canada (English)

Rating	Description
C	Children
C8+	Children eight years and older
G	General Programming, suitable for all audiences
PG	Parents Guidance
14+	Viewers 14 years and older
18+	Adult programming

NOTE: As you block rating, all rating higher than the ones you select are blocked as well. For example, if you choose to block the MPAA rating R, the higher ratings, NC-17 and X, are automatically blocked too .

Basic operation

- **Input Block** - You can block the input source with this function. For example, if you want to block AV input, just highlight [**AV**] and press [**ENTER**]. The AV input will not be seen in the screen.
- **Change Password** - The first time you use this function, use the default password. If you want to change it, first enter the new password then enter the same password again.
- **Clean All** - This function will let you clean all the channels stored on this TV.
Note: If you choose this function, all the programs you preset will be lost.

TV settings

1. Press **MENU** to open the OSD option
2. Press **▲** or **▼** to highlight TV, then press **▶** to enter the TV menu.



3. Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can adjust:
 - **Tuner Mode** - Select the TV signal source. You can select **Antenna** or **Cable**.
 - **Channel Scan** - Scans for channels that have signals and stores the channels information in memory. When you press **◀** or **▶**, your TV skips any channels that do not have a signal.
 - **Channel Skip** - Deletes a channel stored in memory. When you press **CH+** or **CH-**, your TV skips the channel you deleted. You can still tune to the channel using the number buttons on the remote control.
 - **MTS** - Selects the sound mode. You can select Mono, Stereo, or SAP (second audio program).
 - **Audio Language**-Selects the audio language for a program.

Appendix

Cleaning and care

WARNING: Do not try to remove the cabinet from the back. Refer servicing to qualified service technicians.

To clean the TV screen:

1. Unplug the TV to avoid possible shock hazard.
2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean the TV screen and trim. Do not use too much water as water spilled into the cabinet can cause damage to the TV.
3. Wipe off any excess moisture with a clean dry cloth.
4. Polish the cabinet with a quality furniture polish to maintain the finish and appearance of the cabinet.

Caution: Never use strong solvents such as thinner, benzene, or other chemicals on or near the cabinet. These chemicals can damage the finish of the cabinet.

Appendix

Troubleshooting

Before calling a service technician, please check the following table for a possible cause of the problem and some solutions.

Customer important notice: If the TV can not be operated, please unplug the power and restart .

Symptoms	Possible Solutions
TV will not turn on	<ul style="list-style-type: none">▪ Make sure the power cord is plugged in, then press Power (Standby).▪ The remote control batteries may be dead. Replace the batteries.▪ Unplug the VGA wire and plug the power wire again.
No picture, no sound	<ul style="list-style-type: none">▪ Check if you have set the timer off.▪ Check the antenna/cable connections.▪ Press [Display] to see if you have selected the right signal source.
No sound, picture OK	<ul style="list-style-type: none">▪ The sound may be muted. Press [VOL+] on the remote control.▪ The station may have broadcast difficulties. Try another channel.▪ Check the speakers cable connections.
Poor sound, picture OK	<ul style="list-style-type: none">▪ The station may have broadcast difficulties. Try another channel▪ Check the speakers cable connections.
Poor picture, sound OK	<ul style="list-style-type: none">▪ Check the antenna connections.▪ The station may have broadcast difficulties. Try another channel.▪ Adjust the picture from the menu.
Unable to select a certain channel	<ul style="list-style-type: none">▪ The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control.
Poor colour or no colour	<ul style="list-style-type: none">▪ The station may have broadcast difficulties. Try another channel.▪ Adjust Saturation in the Video settings menu.
The remote control does not operate	<ul style="list-style-type: none">▪ There may be an obstruction between the remote control and the remote control sensor.▪ The batteries may be installed with a wrong polarity.▪ The remote control batteries may be dead. Replace the batteries.
Disorder display at power on	<ul style="list-style-type: none">▪ This may be caused because of a very short interval between POWER OFF and ON.▪ Unplug the power and restart.

Appendix

Specifications

Model	40LE45S	
Diagonal display size	40 inches	
Television system	American TV standard ATSC /NTSC system	
Audio multiplex	BTSC system	
Channel coverage	VHF: 2~13 UHF: 14~69 CATV:1~125 Digital Terrestrial Broadcast (8VSB): 2~69 Digital cable (64/256 QAM): 1~135	
PC mode	640×480/60Hz,800×600/60Hz,1024×768/60Hz	
YPbPr/YCbCr mode	480I/60Hz,480P/60Hz,720P/60Hz,1080I/60Hz	
HDMI mode	480I/60Hz,480P/60Hz,720P/60Hz,1080I/60Hz ,1080P/60Hz	
Resolution	1920 × 1080	
Power source	AC 120 V , 60 Hz	
Power consumption	230W	
Audio power	7W+7W	
Connection Interface	RF input	Cable/ Antenna ×1
	Video input	VideoX2 S-VideoX1 ComponentX2 HDMIX3
	Graphic input	Analog RGB 15pin ×1
	Audio input	AV Audio X 2 Component Audio X 2 VGA Audio Input X 1
	Audio output	AV Audio X 1 Optical Audio out x 1 Headphone audio out x 1
Dimensions	Length: 39.1 inches Width: 12.2 inches Height: 28.3 inches	
Weight	55.1 lbs	
Environmental conditions	Temperature 5°C~35°C (41F~95F) Humidity:20%-80%RH, Atmospheric pressure:86kPa-106kPa	
Supplied accessories	Remote control, AC cord, Batteries, User Manual, Warranty Card, QSG, Remote Control Guide, Warranty Registration card	

Design and specifications are subject to change without notice.

CUSTOMER NOTICE: Use carefully when operating to prevent damage to the screen.